



3 1761 06706296 8






Wavy





# HYDRO-ELECTRIC PRACTICE



Digitized by the Internet Archive  
in 2007 with funding from  
Microsoft Corporation





TEH  
S

94

914a

# HYDRO-ELECTRIC PRACTICE

A PRACTICAL MANUAL OF THE DEVELOPMENT OF WATER  
POWER, ITS CONVERSION TO ELECTRIC ENERGY,  
AND ITS DISTANT TRANSMISSION

BY

H. A. E. C. VON SSCHON

CIVIL AND HYDRAULIC ENGINEER; MEMBER OF THE AMERICAN SOCIETY OF CIVIL ENGINEERS



PHILADELPHIA & LONDON

J. B. LIPPINCOTT COMPANY

1908

104159  
11/7/10

hydro  
12

COPYRIGHT, 1908  
By J. B. LIPPINCOTT COMPANY

*Printed by J. B. Lippincott Company  
The Washington Square Press, Philadelphia, U. S. A.*



## PREFACE

THE economical transmission of electric energy to distances great and small, the rapidly increasing utilization of electro-motive power in industrial establishments, and the advent of the electric interurban railroads are responsible for the marked movement of impressing water-powers to the service of generating electric current; and now water-power, which had been almost relegated to obscurity by the perfection of the steam-engine, is not only regaining but even exceeding its former importance as an economical prime power source.

It is entirely within the facts to state that a normally conditioned hydro-electric power plant can successfully compete with the most refined steam-power plant and the lowest priced fuel, natural gas.

No wonder then that water-powers are to-day being sought after with feverish activity, and that some remarkable successes have been achieved, but also that many disastrous failures must be recorded.

Hydro-electric power development is a much more complex undertaking than a large majority of the promoters of such enterprises realize when the subject is first approached, but which is most forcibly impressed upon them when the carrying out of the project is seriously attempted. Unfortunately, the most dangerous pitfalls are encountered at the beginning of the undertaking, and unless these are properly guarded against the finished work may disclose some incurable defects.

Developments of the important natural resources of mines, of forests, and of manufacturing and transportation projects are rarely undertaken except upon the findings of recognized authorities on these respective subjects; not so, however, with hydro-electric power propositions, which are most frequently begun in a hap-hazard sort of fashion, with the stream and a fall as assumed assets, while the market, constancy of output, cost of product, riparian rights, and numerous other controlling features remain undetermined until some later day. Hence promoters of hydro-electric projects have not found the investing public at all eager to take their securities, because of the general and well-grounded impression that their presentations are not entitled to the same degree



of confidence as other undertakings command, nor can there be any hope for a tide in their favor until such confidence be inspired.

Publicity of the realities of a subject will always carry conviction of merit, if such there be; and much of the reluctance of capital to recognize the indubitable value of investments in hydro-electric power plants is no doubt due to the paucity of the proper sort of educating literature on this subject.

This at least is the judgment of the author, born of the experience gained by some fifteen years of exclusive hydro-electric power practice, and this is the reason and purpose of this volume,—to place within reach of the promoter, investor, and practitioner an analytical treatment of hydro-electric practice in all its phases from inception to realization.

This subject is treated in two parts; the first is entitled "Analysis of a Hydro-electric Project," and is written for the layman, being devoid of technical treatment, and may therefore be characterized as the commercial essence of the subject. The author believes that an intelligent perusal of this first part will insure the reader against those errors of commission and omission which cause most of the failures in these projects. No engineering training or experience is required clearly to follow and fully to appreciate and understand the presentation of the analysis, which covers the topic as completely as can be done without the introduction of the technic.

CHAPTER I. treats of the market of electric current, where it may be found and how its value is readily determined. This is purely a commercial subject and ranks first in importance in the analysis.

CHAPTER II. discusses the power opportunity, how the available flow can be ascertained and the fall, and from these the power output on which the project may be safely based.

CHAPTER III. relates to the feasibility and practicability of the development. It treats of questions of riparian rights, Federal and State control of streams, economical limitations and of the investment balance.

CHAPTER IV. gives a non-technical synopsis of the cost of such a project, with general reference to the separate features of the required works and equipment; and

CHAPTER V., which closes the analysis, reviews the value of the project as an investment and suggests its proper presentation.



In this part are incorporated sixteen diagrams, from which the reciprocals of hydraulic, mechanical, and electrical power, horse-power and kilowatts, the flow over spillways and from reservoirs, fixed charges of and revenues from hydro-electric plants, and the approximate quantities for dams, foundations, power houses, embankments, bulkheads, and transmission lines may be readily ascertained. Other subjects, such as drainage areas, precipitation belts, and report and plans, are suitably illustrated.

PART II., "Designing and Equipping the Plant," is written for the student and practitioner. The arrangement is in the logical sequence of the pursuance of the plan. The aim of the author has been to render the treatment complete in all its phases, with the exception of presupposing a knowledge of the principles of surveying and the rudiments of hydraulics, hydrostatics, and dynamics.

Each subject involving static or dynamic principles is analyzed from its basic functions, and all formulas are developed in elementary progression; wherever practicable without complexity of methods or deductions, the useful constants are reduced to diagrammatical forms, which become available for ready reference in application. All features of importance are illustrated by sketches or views from existing plants, chiefly such as have been designed and constructed by the author, and the quantities of materials for all structures are given, for useful units, in tables or diagrams.

CHAPTER VI. treats of the surveys, embracing examination of maps, reconnaissance, topographic, stadia and photo-topographic operations, triangulation and levelling, flow measurements by different methods and deductions of run-off from precipitation and evaporation.

CHAPTER VII. deals with *development programmes*. This discussion covers the many possibilities presented by various conditions, with illustrated examples of the most important and frequent occurrences.

CHAPTER VIII. embraces *structural types*, beginning with definition of terms and methods, including the theory and constants of concrete-steel construction, methods of *coffering* preparatory to dam and power-house construction, with tables of quantities for dikes, cribs, sheet pile and wall curtains, and the various types of *cut-off* structures.

The treatment of *dams* and *spillways* is introduced by an exhaustive analysis of the basic theories of pressure and resistance and of all the underlying principles, with original determinations of practical constants

for a variety of designs, and their detailed parts, such as foundation, substructures and superstructures, and appurtenant features. The various phenomena influencing the design of dams, such as overflow, backswell, and the control of flood discharge, are fully analyzed. Especial attention has been given to this topic of dam designs; it is rudimentary from start to finish, with some original conclusions, it is believed.

The concrete-steel *gravity dam* design is fully detailed as to theory and practical execution; so are several types of the open spillway, flashboards, sluices, gates, fishways, and log chutes. Timber spillways are likewise treated, with stability discussion and quantity tables. The retaining wall theory is presented in connection with abutments, as are embankments, bulkheads, and reservoir structures of various forms.

*Diversion works* embrace open channels, flumes, pipe lines of concrete, steel plate and wood stave, with theories of flow, slope, and velocities fully analyzed and development of practical constants tabulated for all the different ranges entering this subject.

*Power station* follows, with all the practicable variations fully illustrated and described and with tabulated quantities. This subject is treated also in detail of foundation, pits, penstocks, and operating floor, and considerable space is devoted to their full description and to illustration of existing plants. *The submerged power station*, which represents the most recent developments in hydro-electric practice,—that is, the location of all power equipment in the interior of a hollow concrete-steel spillway,—is described and profusely illustrated by views of the first of this kind of plant recently completed.

CHAPTER IX. treats of the *power equipment*, with theory of turbine designs and efficiencies, dimensions and output constants, the latter being reduced to diagrams. This treatment of turbines has been compiled with especial care, for the purpose of conveying a clear conception of this most important topic of hydro-electric practice. Hydraulic governors are also described and illustrated.

*Electric equipment* follows, with a brief treatment of the magneto-electric theories, current symptoms, design and efficiencies of dynamos and their regulation. Dimensions and output of generators are reduced to diagrams. *Transmission* of electric current is introduced by an analytical theory of current transformation and conversion, determination of line capacity, and the designs of line supports, wire fastenings, and insulators.



CHAPTER X. closes Part II. with a brief generalization on the preparation of plans, estimates, specifications, and of the engineering control of constructions.

The author fully realizes that many features relating to hydro-electric practice are herein treated on the surface only, and he hopes to present them in exhaustive detail in a future work. This refers principally to the maintenance and operation of hydro-electric power plants and such detail subjects as the operation of the generating, transmission, and distributing plants, with chapters on underwashing of foundations, embankments, and retaining walls, and repair methods; flood rises, head fluctuations, anchor and slush ice formation and practical safeguards; trash-rack functions, gate operations, pipe-line defects, maintenance and repairs; turbine regulation and management; electric generating plant phenomena and their practical solution; transmission accidents and remedies; substation practice for lighting, industrial, and traction power and electric heating service; commercial rates and business management; valuations of various electric properties, such as light plants and railroads, and statistical facts of operating costs and earnings compiled from existing plants located in various sections and of different capacities.

The author has drawn freely upon standard works for the various topics covered by this subject, especially *Hydraulics and Water Supply*, by J. T. Fanning, C.E., *Hydraulics*, by M. Merriman, C.E., *Hydraulics and Hydraulic Motors*, by Julius Weisbach, Ph.D., *Hydraulic Motors*, by G. R. Bodmer, A.M., *Electric Motors*, by S. P. Thompson, D.S.C., and *Electric Transmission*, by Louis Bell, Ph.D.

In closing, the author wishes to give expression of his full appreciation of the services rendered by Mr. K. Asker, C.E., who prepared all the drawings.

H. A. E. C. VON SCHON.

DETROIT, MICH., June, 1908.





# TABLE OF CONTENTS

## PART I.

### ANALYSIS OF A HYDRO-ELECTRIC PROJECT

#### CHAPTER I.

	PAGE
THE MARKET.....	1
Article 1. Lighting Service.....	1
Article 2. Industrial Service.....	2
Article 3. Special Service.....	4
Article 4. Traction Service.....	4
Article 5. Highest Remunerative Service.....	4
Article 6. Current Market Analysis.....	4

#### CHAPTER II.

POWER OPPORTUNITY.....	8
Article 7. The Flow.....	8
Article 8. Drainage Area.....	9
Article 9. Drainage Area, Topography.....	26
Article 10. Drainage Area, Geology.....	27
Article 11. Drainage Area, Flora and Culture.....	28
Article 12. Precipitation.....	29
Article 13. Stream Flow, Determination.....	30
Article 14. Evaporation.....	32
Article 15. Flow Deduction.....	36
Article 16. Flow Measurements.....	37
Article 17. Fall, Available.....	40
Article 18. Power Output.....	40

#### CHAPTER III.

FEASIBILITY AND PRACTICABILITY.....	47
Article 19. Government Control.....	47
Article 20. Riparian Titles.....	53
Article 21. Practicability of Development.....	54
Article 22. Investment Balance.....	55

#### CHAPTER IV.

COST OF DEVELOPMENT.....	61
Article 23. Cost of Dam.....	61
Article 24. Cost of Diversion Works.....	67
Article 25. Cost of Power House.....	67
Article 26. Cost of Reservoir Embankments.....	68
Article 27. Cost of Power Equipment.....	70
Article 28. Cost of Transmission Line.....	70
Article 29. Cost of Development.....	74

## TABLE OF CONTENTS

CHAPTER V.		PAGE
VALUE OF PROJECT AND PRESENTATION.....		75
Article 30. Report on a Hydro-electric Project.....		75
Article 31. Value of a Hydro-electric Opportunity.....		88

## PART II.

## DESIGNING AND CONSTRUCTING THE DEVELOPMENT

CHAPTER VI.		
THE SURVEY.....		90
Article 32. Examination of Maps.....		90
Article 33. Reconnaissance.....		91
Article 34. Triangulation.....		92
Article 35. Elevations.....		93
Article 36. Topography.....		94
Article 37. Phototopography.....		94
Article 38. Detail Surveys.....		99
Article 39. Borings.....		100
Article 40. Stream Gaugings.....		100
Article 41. Stream Gaugings, Reductions.....		103
Article 42. Stream Discharge Curve.....		103
Article 43. Weir Measurement.....		107
Article 44. Flow Deduced from Precipitation and Evaporation.....		108
Article 45. A Typical Case of Flow Determination.....		109
Article 46. Reservoir Sites.....		115
Article 47. Floating Timber.....		115

CHAPTER VII.		
DEVELOPMENT PROGRAMME.....		116
Article 48. The Direct Development.....		116
Article 49. The Short Diversion Programme.....		117
Article 50. The Distant Diversion Programme.....		117
Article 51. Development Scope.....		129

CHAPTER VIII.		
STRUCTURAL TYPES.....		131
Article 52. Foundation Function.....		131
Article 53. Terms, Materials, and Methods.....		135
Article 54. Coffering.....		143
Article 55. Foundation Design.....		144
Article 56. Foundation Construction.....		147
Article 57. Superstructure.....		148
Article 58. The Length of Spillway.....		159
Article 59. Pressure and Resistance.....		160
Article 60. Sliding of Spillway.....		169
Article 61. Overturning of Spillway.....		170
Article 62. Crushing or Rupturing of Spillway.....		170
Article 63. Safety Factor in Spillway Design.....		174
Article 64. Spillway Design, Theoretical.....		176
Article 65. Spillway Design, Practical.....		180



# TABLE OF CONTENTS

xi

	PAGE
Article 66. Spillway Crest, Shape of.....	185
Article 67. Gravity Spillways.....	186
Article 68. Open Spillway.....	194
Article 69. Determining the Spillway Type.....	202
Article 70. Timber Spillways.....	205
Article 71. Spillway to Part Height.....	209
Article 72. Abutments of Spillway.....	209
Article 73. Reservoir Dams.....	221
Article 74. Appurtenances of Spillways and Dams.....	227
Article 75. Diversion Works.....	235
Article 76. Power House.....	254
Article 77. Appurtenances to the Power House.....	264
Article 78. Submerged Power-House Design.....	266

## CHAPTER IX.

EQUIPMENT.....	276
Article 79. Hydraulic Equipment, Theory.....	276
Article 80. Classification of Turbines.....	285
Article 81. Mixed Flow Reaction Turbine, Description.....	287
Article 82. Central Discharge Reaction Turbine, Description.....	294
Article 83. American Impulse Turbine, Description.....	296
Article 84. Draft Tube Theory.....	296
Article 85. Turbine Efficiency, Theory of Deduction.....	298
Article 86. Typical Turbine Installations.....	300
Article 87. Reaction Turbine Output.....	314
Article 88. Reaction Turbine Design.....	318
Article 89. Output of Tangential Impulse Turbine.....	320
Article 90. Turbine Output Constants, Summary of.....	322
Article 91. Turbine Equipment, Determining Same.....	322
Article 92. Turbine Governors.....	326
Article 93. Electric Equipment, Magneto-dynamic Theory.....	330
Article 94. Some Current Symptoms.....	333
Article 95. Dynamo Parts, their Purpose and Design.....	337
Article 96. Current Reorganization.....	342
Article 97. Current Transformation.....	343
Article 98. Current Transmission.....	345
Article 99. Current Regulation.....	348
Article 100. Electric Generating Plant.....	350
Article 101. Transmission Plant, Equipment.....	358
Article 102. Auxiliary Power Plant.....	364

## CHAPTER X.

CONSTRUCTING THE PLANT.....	368
Article 103. Plans.....	368
Article 104. Estimates.....	369
Article 105. Specifications.....	369
Article 106. Engineering Control.....	371

## TABLE OF CONTENTS

TABLES.		PAGE
1. Drainage Areas and Low Monthly Flow.....		10
2. Evaporation from Water Surface.....		33
3. Watercourses under Government Control.....		50
4. Concrete Characteristics.....		140
5. Reinforcing Steel Characteristics.....		141
6. Concrete-Steel Beams.....		141
7. Values for Concrete-Steel Beam Designs.....		141
8. Coffier Structures, Quantities.....		144
9. Cut-off Walls, Quantities.....		147
10. Characteristics of Normal Solid Spillway Section.....		185
11. Gravity Spillway, Bending Moments.....		191
12. Gravity Spillway, Dimensions.....		192
13. Gravity Spillway, Material Bill.....		192
14. Gravity Spillway, Characteristics of Design.....		194
15. Timber Spillway, Quantities.....		208
16-24. Flow in Open Channels, Characteristics.....		238-241
25-29. Flow in Pipes, Characteristics.....		249-251
30. Permeability of Field Magnet Metal.....		339
31. Copper Wire Characteristics.....		340
32. Standard Generators, Characteristics.....		355
33. Aluminum Wire, Characteristics.....		359



# LIST OF ILLUSTRATIONS

## CHARTS

	PAGE
1. Drainage Area of Green River, Ky., above Glenmore.....	11
2. Cumberland River Drainage Area above Nashville, Tenn.....	29
3. General Distribution of Precipitation.....	30

## DIAGRAMS

1. Horse-power and Kilowatts.....	3
2. Discharge over Flat-crested Spillway.....	39
3. Water-power and Electric Power.....	43
4. Continuous Flow from Reservoirs.....	45
5. Fixed Charges for Plants of 500-1000 H. P.....	57
6. Fixed Charges for Plants of 1000-5000 H. P.....	58
7. Fixed Charges for Plants of 5000-10,000 H. P.....	59
8. Current Rates for Horse-power and Kilowatt.....	60
9. Masonry Dams, Dimensions and Quantities.....	63
10. Concrete-steel Dams, Quantities.....	64
11. Cost of Concrete.....	65
12. Dam Foundation and Abutment Quantities.....	66
13. Power House, Quantities.....	69
14. Earth Embankment, Quantities.....	71
15. Reservoir Bulkhead, Quantities.....	72
16. Transmission Line, Weight of Line Wire.....	73
17. Surface to Mean Velocity.....	104
18. Rod to Mean Velocity.....	105
19. Typical Discharge Curve.....	106
20-25. Backswell, Slope.....	152-157
26-29. Pressure Moment, Solid Spillway.....	165-168
30. Comparative Cost of Timber and Concrete Spillway.....	211
31-33. Retaining Wall, Pressure Moments.....	215-217
34. Vertical Turbines, Cased; Dimensions of.....	303
35. Horizontal Turbines, Drowned, Dimensions of.....	307
36. Single Horizontal Turbines, Drowned, Dimensions of.....	311
37. Horizontal Turbines, Cased, Dimensions of.....	317
38. Reaction Turbines, Maximum Efficiency Output.....	319
39. Tangential Impulse Turbine, Maximum Efficiency Output.....	323
40. Generator Dimensions.....	357

## FIGURES

1. Base Benches; Base Supporting Brackets.....	92
2. Tripod and Target.....	93
3-6. Phototopography.....	94
7. Detail Surveys.....	99
8. Borings to ascertain Character of Soil at Sites of Dam, Diversion Works, etc.....	100
9-11. Stream Gaugings.....	101

FIG.	PAGE
12. Dike.....	135
13. Timber Sheet.....	136
14. Steel Piling.....	136
15, 16. Log Crib and Timber Crib.....	137
17. Concrete Piles.....	138
18. Triple-lap Sheet Pile.....	139
19. Sheet Pile Dike.....	143
20-41. Spillway Sections.....	161-183
42. Solid Spillway, Crest and Toe.....	187
43-45. Diagrams illustrating Pressure and Resistance Factor.....	189, 190
46. Gravity Spillway.....	193
47-49, 55. Overflow and Underflow Sluices.....	195, 197, 200
50-54. Stop-logs, Needles, Valves, Gates, and Shutters.....	197-200
56. Movable Wier.....	202
57. Timber Spillways.....	207
58-61. Spillway Abutments (Diagrams).....	210-212
62. Retaining Crib.....	213
63. Gravity Retaining Wall.....	218
64, 65. Concrete Steel Retaining Wall.....	219, 220
66. Reservoir Embankment.....	223
67. Reservoir Bulkhead.....	225
68-71. Discharge through Submerged Orifices.....	227-229
72. Fish-ladders.....	232
73. Flashboards.....	233
74. Wells and Galleries in Solid Spillways.....	235
75-77. Diversion Canals.....	236, 245
78. Canal Headgate.....	247
79. Flumes and Trestles.....	249
80. Pipe Line and Details.....	253
81. Intake Gate Valve and Trash Rack.....	254
82. Power-house Substructure.....	256
83. Power-house Turbine Bays.....	257
84. Power-house, Low Head, Vertical Turbines, Drowned.....	259
85. Power-house, Low Head, Horizontal Turbines, Drowned in Forebay.....	261
86. Power House for Low Head and Horizontal Turbines, Drowned.....	262
87. Power House, Fluctuating Head, Serial Turbines.....	263
88. Power House for Low Head and Double Vertical Turbines, Drowned.....	265
89. Power House, Medium Head, Horizontal Turbines, Cased.....	267
90. Trash Rack and Details.....	268
91. Power Spillway.....	271
92-101. Hydro-dynamic Energy (Diagrams).....	281-285
102-106. Reaction Turbine Runner.....	288
107. Wicket-Gate Guide-Wheel.....	288
108. Sections of Guide-Vanes and Shutters.....	289
109. Reaction Turbine, Wicket Gate.....	291
110. Reaction Turbine, Cylinder Gate.....	293
111. Double Turbine Draft-Chest.....	294
112. Assembled Twin Turbines.....	294
113. Reaction Turbine for High Head.....	295
114. Impulse Wheel.....	297
115. Vertical Turbines, Paired and Drowned, Geared Connections.....	302
116. Vertical Turbines, Paired and Cased, Geared Connections.....	305
117. Horizontal Turbines, Paired and Drowned.....	306



# LIST OF ILLUSTRATIONS

XV

FIG.	PAGE
118. Horizontal Turbines, Three in Line, Drowned.....	309
119. Horizontal Turbines, Four in Line, Drowned.....	312
120. Horizontal Turbines, Paired, Cased, with Top or Side Supply.....	313
121. Horizontal Turbine, Cased, with End Supply.....	315
122. Lombard Governor.....	326
123. Sturgess Governor.....	327
124. Woodward Governor.....	328
125. Lombard-Replogle Governor.....	329
126, 127. Field of a Magnet.....	330, 331
128, 129. Generating Current by Revolving Loop.....	334
130. Two- and Three-phase Current Waves.....	335
131. Watt-less Current (Diagram).....	337
132. Alternate Current (Diagram).....	337
133. Alternate Current Transformation.....	343
134. Transmission Line Towers and Poles.....	363
135. Transmission Line Insulators and Pins.....	365
136, 137. Sectional Armature and Revolving Field of a Three-phase, Thirty-cycle Alternator.....	366
138. Continuous-current Dynamo coupled to the Turbine Shaft.....	366
139, 140. General View of Partial Generator Installation; Rotary Converter.....	367

## PLANS

1-6. Sandusky River, Ohio, Drainage Basin and Topography.....	77-83
8, 9. Direct Development in Alluvial Location.....	118, 119
10, 11. Short Diversion Development.....	120, 122
12, 13. Direct Development in Rock Gorge.....	123, 124
14-16. Distant Diversion Development.....	125-127
17. Divided Development.....	128
18. Foundation Design.....	145
19. Upper Pool, with Contour Lines showing Elevations of Banks.....	151

## PROFILES

1. Precipitation and Run-off, Green River, Ky.....	35
2. Ground-flow Diagrams.....	113

## VIEWS

1. Breakwater.....	142
2. Timber Crib.....	142
3. Log Crib Coffor.....	143
4. Sheet Pile Dike.....	143
5. Steel Pile Coffor (U. S. Steel Pile).....	144
6. Steel Pile Coffor (Friestedt Channel Bar).....	145
7. Canal in Rock, Excavating and Channelling.....	244
8. Canal in Rock, with Channelled Sides, Completed.....	244
9, 10. Canal in Earth, Timber Lined.....	245
11. Canal in Earth, Timber Lined, Completed.....	246
12-14. Canal Headgates.....	246, 247
15. Power House Foundation.....	256
16. Power House Substructure, Upstream View.....	256
17. Power House Substructure, Downstream Elevation.....	257
18. Power House Superstructure, Upstream Elevation.....	257
18a. Power House, Upstream View.....	257
19. Power House Superstructure, Downstream Elevation.....	257
20. Turbine Bay.....	257
21-32. Submerged Power House.....	272-275





# HYDRO-ELECTRIC PRACTICE

---

## PART I

### ANALYSIS OF A HYDRO-ELECTRIC PROJECT

WHEN it is desired to examine an undeveloped water-power for the purpose of producing electric current as a commercial commodity, experience has taught that it is best to ascertain first where the product will find its market, and to follow up a satisfactory showing at that end by determining the power capacity of the source, the feasibility of harnessing the same, and the cost of accomplishing this. Observing this programme, which is really that adopted in any commercial enterprise, is found to insure a reliable conclusion.

---

## CHAPTER I

### THE MARKET

THE MARKET of electric current is to be found in any community. The commercial unit is the product of quantity of current and time of service; the measures are one electric horse-power, or one kilowatt, and the year and hour. The horse-power-year is the basis of mill and factory power contracts, while the kilowatt-hour is most generally adopted for lighting, shop, and traction service, because of the greater fluctuations from continuous operations.

*Diagram 1* gives converted values of the horse-power and kilowatt.

Electric current finds its market for lighting, industrial, and traction service.

ARTICLE 1.—*Lighting* service consists of arc and incandescent lights. *Arc lights* are chiefly used for street, store, and hall illumination, and they generally require 550 watts. *Diagram 1* shows relative current and power for any number of arcs.


Arc service is either of all-night or moonlight schedule, and the rates are most frequently per lamp per year, ranging from \$50 up, the price depending solely upon local conditions. Occasionally arc-lighting service is per lamp-hour. This branch of current service is generally remunerative, and grows with the community if the service is at all satisfactory. Large stores and public halls, railroad depots, freight yards, and shipping docks are all light customers.

*Incandescent lights* are principally of 16-candle power, requiring 55 watts, or one-tenth of the arc-lamp current. *Diagram 1* serves to find relative power. The rates of incandescent lighting are either per lamp per month, being denominated the "flat rate," or per kilowatt-hour, mostly of a sliding scale, the price lowering as total monthly consumption increases; this is termed the "meter rate." In cities incandescent-light service may be estimated at 700 hours per year per lamp, representing about 38 kilowatt-hours; in rural districts it is somewhat less. Meter rates range from 8 cents per kilowatt-hour up, depending entirely upon conditions of supply. The field for this business is in every dwelling, store, shop, mill, factory, and public institution and gathering place; the number of incandescent lamps which can be placed may generally be taken as equal to one-half the population.

ARTICLE 2.—*Industrial service* comprises the motive power used in shops, mills, and factories; the current is furnished as horse-power per year or month to industries operating for regular periods and with full loads, and on kilowatt-hour measure where periods and loads fluctuate. This service reaches every industry; for instance, the laundries and printing-shops, barbers, hotels, and all places using pumps, fans, and elevators, saw-mills and turning-shops, grist- and flouring-mills, machine-shops, textile, woollen, cotton, and knitting-mills, pulp and paper industries, wagon, buggy, automobile, furniture, piano, organ-factories, and, in fact, every class and kind of industry, none of which are too small to use power in some form or other. The power quantity used depends upon the character and size of the industry; a laundry may use 10 horse-power, printing-shops about 5 horse-power per press, wood-working shops 5 horse-power and metal shops 10 horse-power per machine, grist-mills one-half horse-power and flour-mills one-third horse-power per barrel capacity, ground wood-pulp mills 75 horse-power, sulphite-pulp 13 horse-power, paper-mills 18 horse-power per ton output.

ARTICLE 3.—There is also a *special class of manufactures* in which



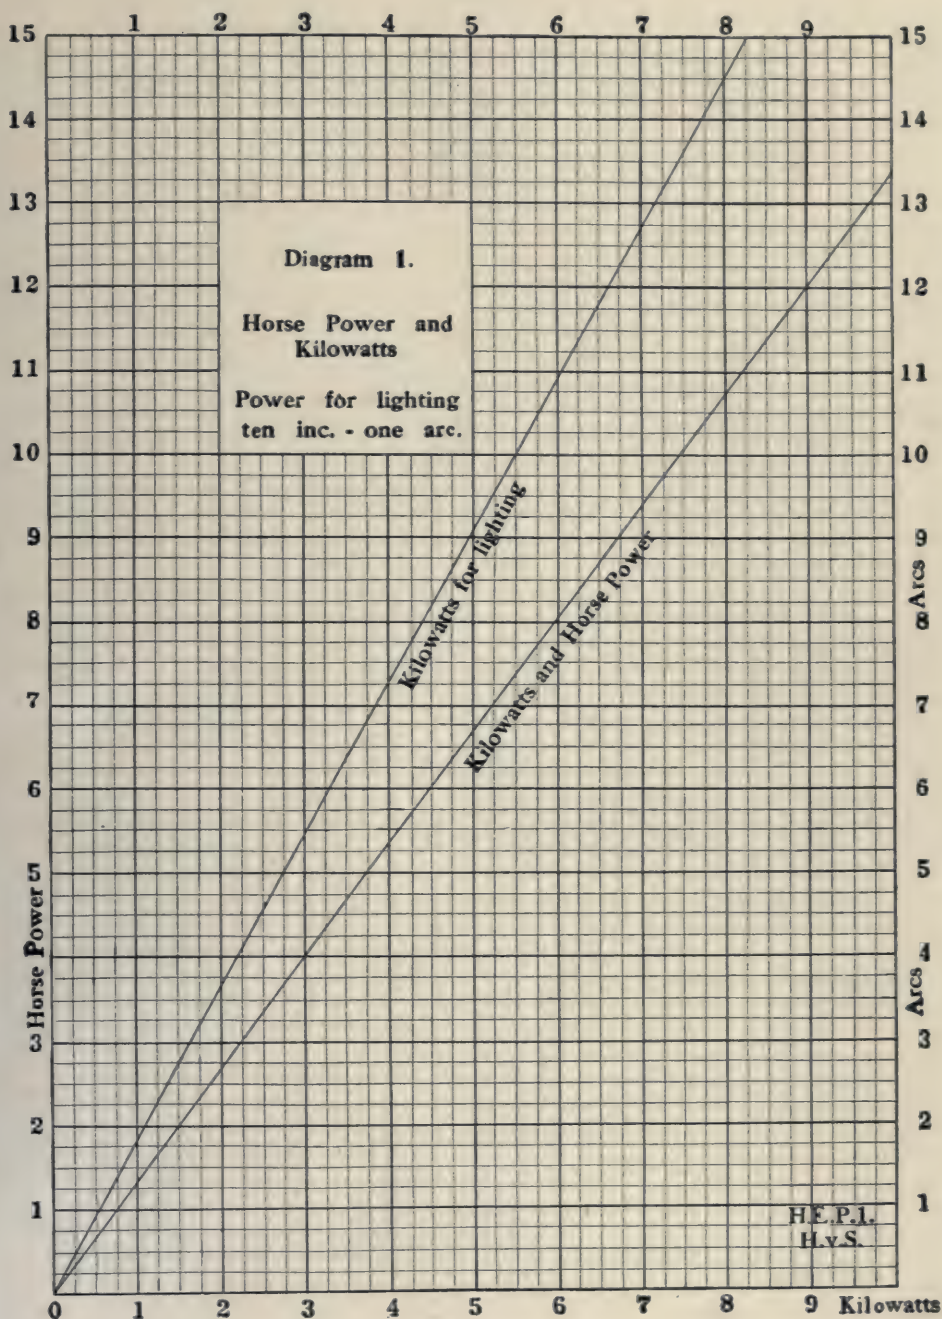

electricity, in its heating or decomposing capacity, forms the most important part and cost of the process, such as the production of calcium carbide, carbolite, carborundum, and glass; the group which requires such intense heat as  $4000^{\circ}$  to  $7000^{\circ}$  F., which can be obtained more economically from the electric current than from any other source; also the manufacture of soda ash, bleaching powders, and aluminum, which are produced by electro-chemical processes. These seek locations where electric current can be supplied cheaply, provided they have satisfactory transportation facilities. The proximity of the raw materials from which these products are manufactured is desirable, but secondary to the current supply; these raw materials are limestone free from clays and magnesium, anthracite or good coking coal, sand high in silica, salt, and clay high in aluminum. The amount of current required by them is large,—250 horse-power per ton of carbide or carbolite, 450 horse-power per ton of carborundum, and 1400 horse-power per ton of aluminum.

ARTICLE 4.—*Traction* is the third class of current service, and concerns street and suburban railroad systems. A street car is generally equipped with two 25 horse-power, an interurban car with four 50 horse-power motors; but the full amount of this power is required only for the starting of a loaded car on an up grade, while a going car on the level requires but from 10 to 50 horse-power, depending upon the speed; the amount of power current used, therefore, fluctuates greatly and constantly. The service period covers from 16 to 18 hours. This service is supplied by a variety of schedules, from the horse-power-year to the kilowatt-hour, with more or less supplemental conditions regarding maximum and minimum supply; the rates are from three-fourths to one and one-half cent per kilowatt-hour.

ARTICLE 5.—*The highest remunerative value* of current service is found in ten-hour (day service) industrial power of the smaller units but steady loads, together with the arc and incandescent lighting; such a service combination practically doubles the output,—that is, each horse-power performs double service, with some provision for the lapping of the two separate duties for a short period in the evening. It is not uncommon that the earning per horse-power with such a market will be between \$50 and \$60 per year.

ARTICLE 6. *Analysis of the Current Market.*—For the purpose of furnishing data to be considered in connection with weighing the commercial possibilities of a hydro-electric project, something better than



general information regarding power consumption should be secured, by making a personal canvass and ascertaining from each power user, if possible, what type of power plant furnishes the service, its capacity and general condition, fuel consumption, and other items of operating cost; also as to the use of the power, its application to the machinery, the periods of operation and fluctuations of loads. When all this information is tabulated and a general expression obtained from the power users as to their willingness to entertain the substitution of electric current at a certain rate, or under the condition that the electric power will be supplied at a price which represents a material reduction from the cost of the steam power, an analysis of the existing power conditions and the value of the market for the hydro-electric project can be made.

Such a canvass was taken in the city of Fremont, Ohio, in 1906, which will serve to illustrate the above and furnish all the material from which market conclusions must be generally drawn.

Fremont, Ohio, has a population of 12,000. Real property on 33.3 per cent. valuation aggregates \$2,040,000.00. Personal property on 40 per cent. valuation aggregates \$1,022,000.00. Tax rate is 32 mills on the dollar valuation. The banking capital (four banks) totals \$275,000.00. The deposits are \$3,350,000.00.

Three steam roads and one interurban electric line enter the city, and other suburban roads are projected; an electric street railroad is in operation.

The present source of power in Fremont is from 38 private steam plants, ranging in units from 5 to 300 horse-power capacity, with a total of about 2800 horse-power; and from the Fremont Gas and Electric plant, dispensing about 250 horse-power

The price of steam coal is from \$2.15 to \$3.00 per ton.

#### POWER USERS TABULATED.

No.	Concern.	Age of Steam Plant.	Horse-power.	Operates, Hours.	Load Factor.	Will contract for Current.
1.	City water works.....	10	300	18	X	
2.	Light plant.....	15	250	..	X	
3.	Sugar factory.....	5	200	24	Sept.-Jan.	
4.	Carbon factory (enlarging) .....	20	200	10	80	
5.	Cutlery factory (enlarging).....	22	70	10	80	Yes
		..	70	12	80	
		..	40	20	60	
6.	Street railway.....	10	160	18	X	
7.	Knife and shear works.....	10	150	10	80	Yes

No.	Concern.	Age of Steam Plant.	Horse-power.	Operates, Hours.	Load Factor.	Will contract for Current.
8.	Carriage forgings.....	25	150	10	75	
9.	Sash and door mill.....	30	150	10	80	
10.	Furniture works.....	15	100	10	80	Yes
11.	Engine and boiler works.....	40	75	10	75	
12.	Ladies' underwear.....	17	75	10	75	Yes
13.	Malt-extract plant.....	25	75	10	75	
14.	Sash and door mill.....	5	75	10	80	Yes
15.	Agricultural implements.....	20	70	10	60	Yes
16.	Flouring mill, 3 months.....	20	65	10	100	Yes
	9 months.....		65	24	100	
17.	Flour mill.....	W. P.	60	10	100	
18.	Cutlery works.....	5	50	10	75	Yes
19.	Grain elevator.....	5	50	X	X	
20.	Stove works.....	3	40	10	75	Yes
21.	Stove works (building).....		40	10	75	
22.	Cutlery works (enlarging).....	10	30	10	75	Yes
23.	Grain elevator.....	18	30	X	X	Yes
24.	Marble works.....	15	30	10	80	Yes
25.	Wood-turning shop.....	20	30	10	75	Yes
26.	Mitten and glove works.....	5	30	10	75	
27.	Flour mill.....	20	25	10	100	
28.	Feed shop.....	15	25	X	X	Yes
29.	Print shop (enlarging).....	5	20	10	80	
30.	Print shop.....	10	20	10	80	
31.	Account file works.....	5	20	10	80	
32.	Organ works.....	20	15	10	75	
33.	Cutlery works.....	5	15	10	80	Yes
34.	Brewery (enlarging).....	25	10	10	100	Yes
35.	Newspaper.....	30	6	10	75	Yes
36.	Printing shop.....	10	5	10	75	Yes
37.	Laundry.....	20	5	10	80	
38.	Laundry.....	10	5	10	80	

"X" represents fluctuating conditions.

The information found from this inventory is:

Total horse-power now in use .....	2,911 H.P.
Total horse-power in use 5 years ago.....	2,371 H.P.
Total horse-power in use 10 years ago.....	1,701 H.P.

And this comparison of growth may be extended.

Total horse-power used for lighting service.....	250 H.P.
Total horse-power used for industrial service.....	2,501 H.P.
Total horse-power used for traction service.....	160 H.P.
Industrial power of constant 10-hour duty.....	1,656 H.P.
Industrial power of constant 12-hour duty.....	70 H.P.
Industrial power of constant 18-hour duty.....	460 H.P.
Industrial power of constant 20-hour duty.....	40 H.P.
Industrial power of constant 24-hour duty.....	
Industrial power of intermittent duty.....	685 H.P.

Every power user was solicited to express his willingness to take hydro-electric current, with the result that tentative agreements for power service were made with these concerns for power, service and at rates as follows:

No.	Concern.	Power, H. P.	Service, Hours.	Rate.	Annual Value at 100 per cent. Load.
5.	Cutlery factory.....	240	10 12 20	\$35.00 per H.P.	\$8,400.00
7.	Knife factory.....	150	10	1½c. Kw. h.	6,860.00
10.	Furniture works.....	100	10	1½c. Kw. h.	4,575.00
12.	Ladies' underwear.....	75	10	2c. Kw. h.	4,575.00
14.	Sash and door mill.....	75	10	2c. Kw. h.	4,575.00
15.	Agricultural implements.....	70	10	2c. Kw. h.	4,270.00
16.	Flour mill.....	65	10 24	2c. Kw. h.	8,177.00
18.	Cutlery works.....	50	10	2c. Kw. h.	3,050.00
20.	Stove works.....	40	10	3c. Kw. h.	3,660.00
22.	Cutlery works.....	30	10	3c. Kw. h.	2,745.00
23.	Grain elevator.....	30	X	3c. Kw. h.	2,745.00
24.	Marble works.....	20	10	4c. Kw. h.	2,440.00
25.	Wood-turning shop.....	30	10	3c. Kw. h.	2,745.00
28.	Feed shop.....	25	10	3c. Kw. h.	2,187.00
33.	Cutlery works.....	15	10	3c. Kw. h.	1,372.00
34.	Brewery.....	30	10	3c. Kw. h.	2,745.00
35.	Newspapers.....	6	10	5c. Kw. h.	915.00
36.	Printing shop.....	5	10	6c. Kw. h.	915.00
To these were added sundry prospective customers using fans and other small motors, aggregating 100 H. P. for 10 hrs. @ 4c.....					12,200.00

No agreement could then be reached with the city for its power service, nor with the electric-light and railway company.

The total horse-power in sight for immediate contracts aggregated 1056 horse-power with a 100 per cent. load factor revenue of \$79,156.00, of which an estimate covering a horizontal load factor of 70 per cent. and a corresponding revenue of \$55,000.00 was accepted as being representative of the current business which could be secured, being a gross income per horse-power of \$45.00.

The investment involved in this project was.....	\$175,000.00
The output.....	2,200 H.P.
Fixed charges (see Report, Art. 30)	
Total charge.....	30,240.00
Surplus.....	23,814.00

This example is typical of a large number of power markets and of the analysis which should be secured of it.



## CHAPTER II

### POWER OPPORTUNITY

WATER-POWER is the physical effect of the weight of falling water. One cubic foot of water weighs 62.5 pounds, and when this mass falls one foot the resultant energy is 62.5 foot-pounds, when it falls ten feet it is 625 foot-pounds.

The unit of power is the energy which lifts 550 pounds one foot in one second, being termed one horse-power, and water-power is therefore expressed by the product of the weight of water and height of its fall divided by 550, the period of time being one second,—*i.e.*,

$$H. P. = Q \text{ (flow per second)} \times 62.5 \times h \text{ (fall)} \div 550.$$

The components of the power product are, consequently, flow and fall.

The horse-power equivalent of the product of a hydro-electric development is *electric horse-power*, being so much of the original water-power energy as remains available for work in the shape of electric current.

ARTICLE 7.—*The flow* is the volume which passes a given point continuously.

*Precipitation* is the prime source of stream flow; it is the only source, excepting of rivers in the Arctic region which are yet glacier fed.

Rain, dew, snow, hail—all these are embraced under *precipitation*.

When rain falls upon the ground, its greater part sinks into the soil; the other portion runs off the surface into the catchment basin, or remains for a time on the surface if it be level. The quantity which passes into the ground depends upon the conformation of its surface, the porosity, depth, and degree of saturation of the material comprising it; this is the *ground water*; the portion flowing off the surface is the *storm run-off*.

Ground water continues to sink down and to move laterally by force of gravity as rapidly as the voids and frictional resistances of the material through which it passes permit, and finally finds its way to its destination, the nearest stream valley; but part of the ground water is retained by the roots of vegetation, rises through them up the stems and tree trunks, is converted into cellular fibre or exhaled as vapor from

vegetation, or from the surface, into the atmosphere, to be collected and again precipitated.

Precipitation falling on water partially flows toward the destination and part of it is vaporized.

All the water which is consumed by vegetation and which is vaporized is *evaporation*; all that portion which finds its way into the stream is the *run-off*.

As precipitation is the source, so is ground water the sustenance of stream flow, and the storage capacity of the ground is the key by which the flow characteristics must be sought; in other words, while precipitation is essential as the source of flow, its quantity is not necessarily an index of proportionate flow; ground storage and the constancy with which it feeds the stream are the criteria to be applied when stream flow is studied.

It becomes first necessary to measure the drainage area and examine its topography, geology, flora, and culture.

ARTICLE 8.—*The drainage area* comprises all that country which drains into the system of the stream above the point under investigation.

A topographical map shows the *water-shed*, height of land, or divide along which the drainage separates, passing down in opposite directions into the feeders of adjacent streams, and its demarcation will give the correct boundary of the drainage area. Topographical maps are not always procurable, nor do such exist excepting for limited areas to which the operations of Federal or State surveys have been extended. When such a map is not available, the drainage area may be found from State or County maps by marking its boundary as passing midway between the apparent heads of tributaries or parallel watercourses draining into neighboring stream systems. This method will result in a very close approximation of the correct drainage area. The unit measure to be applied to the marked area is the square mile as per scale of the map utilized. Care must be taken in this operation, especially when the map scale, as is frequently the case, is fractional; when enlargement is made by pantagraph, the ratio must be verified from a standard unit and multiples of it. State and County maps of Northern, Western, and Middle States show the section and township lines, marking the areas of one and of thirty-six square miles, respectively. This is not the case in the Eastern and Southern States,—that is, in the territory of the original colonies,—in which geographical subdivision boundaries pay no heed to meridians



and parallels. The Rand & McNally State maps are probably the best for this purpose, when topographical plans cannot be had; railroad maps are not reliable.

*Chart 1* shows the demarcation of the drainage area of the Green River, Ky., above the United States lock No. 5, and *Table 1* gives the drainage areas of some of the streams in the United States and Canada as appearing in Federal and State survey records, and others computed by the author; from this table a close approximation can be made of drainage areas for points not therein quoted, and without actually projecting them, by comparison with a greater or smaller one on the same stream.

TABLE 1.—RIVERS' DRAINAGE AREAS AND LOW MONTHLY FLOW, MEASURED TO DATE, FROM FEDERAL AND STATE SURVEY RECORDS.

(Drainage areas in square miles; flow in cubic second feet.)

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Alabama.....	Mobile.....	15,400	0.35	'04-'05	Selma.....	Ala.
Alcovy.....	Ocmulgee.....	395	0.638	'06	Stewart.....	Ga.
Alleghany.....	Ohio.....	1,643	0.196	'06	Redhouse.....	N. Y.
Alleghany.....	Ohio.....	8,688	0.238	'06	Kittanning.....	Pa.
Alleghany.....	Ohio.....	11,107	.....	.....	mouth	.....
Lower Ammonoosuc.....	Connecticut.....	388	0.797	'06	mouth.....	Vt.
Androscoggin.....	.....	1,500	0.867	'06	Shelburne.....	N. H.
Androscoggin.....	.....	2,090	0.612	'06	Rumford Falls.....	Me.
Androscoggin.....	.....	2,230	0.812	'06	Dixfield.....	Me.
Androscoggin.....	.....	3,120	.....	.....	Lewiston.....	Me.
Androscoggin.....	.....	3,700	.....	.....	Brunswick.....	Me.
Animas.....	San Juan.....	812	0.3	'05	Durango.....	Colo.
Antietam.....	Potomac.....	293	0.5	'04-'05	Sharpsburg.....	Md.
Apalachee.....	Oconee.....	440	0.25	'04-'05	Buckhead.....	Ga.
Apple.....	St. Croix.....	427	.....	.....	mouth.....	Wis.
Appomatox.....	James.....	745	0.25	'04-'05	Mattoax.....	Va.
Appomatox.....	James.....	1,565	.....	.....	mouth.....	Va.
Arkansas.....	Mississippi.....	3,060	0.1	'05	Canyon City.....	Colo.
Arkansas.....	Mississippi.....	4,600	0.06	'05	Pueblo.....	Colo.
Arkansas.....	Mississippi.....	24,960	0.004	'05	Syracuse.....	Kas.
Arkansas.....	Mississippi.....	34,000	0.004	'04-'05	Hutchinson.....	Kas.
Arkansas.....	Mississippi.....	188,000	.....	.....	mouth	.....
Aroostook.....	St. John.....	2,230	0.097	'03-'04	Ft. Fairfield.....	Me.
Arroyo Seco.....	.....	215	0.04	'06	Soledad.....	Cal.
Ashuelot.....	Connecticut.....	422	.....	.....	.....	N. H.
Asotin Creek.....	.....	171	0.17	'06	Asotin.....	Wash.
Auglaize.....	Maumee.....	2,541	.....	.....	Tiffin.....	Ohio
Au Sable.....	.....	1,425	0.75	'02-'05	Bamfield.....	Mich.
Bad.....	.....	636	.....	.....	mouth.....	Wis.
Bald Eagle Cr.....	Susquehanna.....	725	.....	.....	mouth.....	N. Y.
Bannister.....	Dan.....	500	.....	.....	mouth.....	Va.
Batten Kill.....	Hudson.....	457	.....	.....	.....	Vt., N. Y.
Bear.....	.....	263	0.1	'06	Wheatland.....	Cal.
Bear.....	.....	3,940	.....	.....	Soda Springs.....	Ida.
Bear.....	.....	4,500	0.045	'05	Preston.....	Ida.





River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Bear.....		6,000	0.004	'04	Collinston.....	Ida.
Beaver.....	Ohio.....	3,030	.....	.....	mouth.....	Pa.
Belle Fourche.....	Cheyenne.....	4,270	0.027	'05	Belle Fourche.....	S. Dak.
Big Blackfoot.....	Missoula.....	2,465	0.165	'05	Bonner.....	Mont.
Big Blue.....	Kansas.....	9,574	.....	.....	mouth.....	Nebr.
Big Cottonwood.....	Minnesota.....	1,000	.....	.....	mouth.....	Minn.
Big Horn.....	Missouri.....	8,184	0.025	'05	Thermopolis.....	Wyo.
Big Horn.....	Missouri.....	20,720	0.07	'05	Fort Custer.....	Mont.
Big Muddy.....	Mississippi.....	2,374	.....	.....	mouth.....	Miss.
Big Sandy.....	Ohio.....	3,950	.....	.....	mouth.....	Ohio
Big Sioux.....	Missouri.....	7,880	.....	.....	mouth.....	Dak.
Big Tarkio.....	Missouri.....	543	.....	.....	mouth.....	Iowa
Big Thompson.....	South Platte.....	305	.....	.....	Arkins.....	Colo.
Big Thompson.....	South Platte.....	862	.....	.....	mouth.....	Colo.
Bitterroot.....	Missoula.....	1,550	0.03	'05	Grantsdale.....	Mont.
Bitterroot.....	Missoula.....	3,260	0.17	'04	Missoula.....	Mont.
Blackfoot.....	Missoula.....	1,016	0.09	'05	Presto.....	Ida.
Blackfoot.....	Missoula.....	2,465	.....	.....	Bonner.....	Mont.
Black.....	White.....	8,810	.....	.....	mouth.....	Mo.
Black.....	White.....	417	0.026	'04	Elyria.....	Ohio
Blacklick.....		403	0.44	'06	Blacklick.....	Pa.
Black.....		810	.....	.....	Lyons Falls.....	N. Y.
Black.....		1,851	0.643	'06	Felts Mills.....	N. Y.
Black.....	Mississippi.....	2,272	.....	.....	mouth.....	Wis.
Blackstone.....	Providence.....	458	.....	.....	Providence.....	R. I.
Black Warrior.....	Tombigbee.....	1,020	.....	.....	Palos.....	Ala.
Black Warrior.....	Tombigbee.....	1,900	0.25	'04-'05	Cordova.....	Ala.
Black Warrior.....	Tombigbee.....	4,900	.....	.....	Tuscaloosa.....	Ala.
Black Warrior.....	Tombigbee.....	6,500	.....	.....	mouth.....	Ala.
Blue.....	Kansas.....	9,490	0.1	'04-'05	Manhattan.....	Kas.
Boardman.....	Kansas.....	295	.....	.....	Traverse City.....	Mich.
Boise.....	Snake.....	2,450	.....	.....	Boise City.....	Ida.
Boise.....	Snake.....	2,614	0.22	'05	Highland.....	Ida.
Boise.....	Snake.....	3,360	.....	.....	Caldwell.....	Ida.
Bois Brule.....	Menominee.....	1,013	.....	.....	mouth.....	Mich.
Boulder Creek.....	South Platte.....	936	.....	.....	mouth.....	Colo.
Boyle.....	Missouri.....	1,123	.....	.....	mouth.....	Mo.
Brazos.....		30,750	0.01	'05	Waco.....	Tex.
Brazos.....		44,000	0.04	'04-'05	Richmond.....	Tex.
Broad.....	Savannah.....	762	0.45	'04-'05	Carlton.....	Ga.
Broad.....	Savannah.....	1,500	.....	.....	mouth.....	Ga.
Broad.....	Congaree.....	4,610	1.05	'06	Alston.....	S. C.
Bruneau.....	Snake.....	1,800	.....	.....	Grandview.....	Ida.
Bully Creek.....		650	0.005	'06	Vale.....	Oregon
Cache Creek.....	Sacramento.....	500	0.16	'06	Lower Lake.....	Cal.
Cahaba.....	Alabama.....	1,040	0.20	'04-'05	Centreville.....	Ala.
Cahaba.....	Alabama.....	1,950	.....	.....	.....	Ala.
East Canada Cr.....	Mohawk.....	256	0.453	'05	Dolgeville.....	N. Y.
East Canada Cr.....	Mohawk.....	283	.....	.....	mouth.....	N. Y.
West Canada Cr.....	Mohawk.....	364	0.821	'05	Twin Rock Bridge.....	N. Y.
West Canada Cr.....	Mohawk.....	518	.....	.....	Middleville.....	N. Y.
West Canada Cr.....	Mohawk.....	548	.....	.....	Herkimer.....	N. Y.
West Canada Cr.....	Mohawk.....	569	.....	.....	mouth.....	N. Y.
Canadian.....	Arkansas.....	46,000	.....	.....	.....	N. Mex.
Cannon Ball.....		3,650	0.002	'05	Stevenson.....	N. Dak.
Cape Fear.....		4,493	.....	.....	Fayetteville.....	N. C.
Cape Fear.....		8,400	.....	.....	.....	N. C.

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Carrabassett.....	Kennebec.....	340	0.602	'05	North Anson.....	Me.
Carson.....		988	0.11	'06	Empire.....	Nev.
Carson.....		988	0.006	'05	Empire.....	Nev.
Carson, East Fork.....		381	0.18	'04-'05	Gardnerville.....	Nev.
Carson, East Fork.....		414			Rodenbahs.....	Nev.
Carson, West Fork.....		70	0.34	'05	Woodfords.....	Cal.
Cashe Creek.....		1,280	0.13	'06	Yolo.....	Cal.
Catawba.....	Santee.....	758	0.54	'04-'05	Morganton.....	N. C.
Catawba.....	Santee.....	1,514	0.79	'04	Catawba.....	S. C.
Catawba.....	Santee.....	2,635	0.77	'05	Camden.....	S. C.
Catawba.....	Santee.....	2,987			Rockhill.....	S. C.
Catawba.....	Santee.....	5,225				N. C., S. C.
Catskill Creek.....		263	0.068	'05	South Cairo.....	N. Y.
Cedar.....	White.....	6,317	0.19	'04-'05	Cedar Rapids.....	Iowa
Cedar.....	White.....	7,715				Minn., Iowa
Cedar.....		170	1.26	'06	Ravensdale.....	Wash.
Chama.....		2,300			Abiquin.....	N. Mex.
Chariton.....	Missouri.....	2,900				Iowa, Mo.
Chattahoochee.....	Appalachicola.....	1,170	0.70	'05	Norcross.....	Ga.
Chattahoochee.....	Appalachicola.....	3,300	0.37	'04-'05	West Point.....	Ga.
Chattahoochee.....	Appalachicola.....	9,100				Ga.
Cheat.....	Monongahela.....	886			Rowlesburg.....	W. Va.
Cheat.....	Monongahela.....	1,375			Uneva.....	W. Va.
Cheat.....	Monongahela.....	1,559				W. Va.
Chelan.....		950	1.00	'06	Chelan.....	Wash.
Chemung.....	Susquehanna.....	2,500	0.084	'06	Chemung.....	N. Y.
Chenango.....	Susquehanna.....	1,540	0.248	'06	Binghamton.....	N. Y.
Chewaucan.....		272	0.12	'06	Paisley.....	Oregon
Cheyenne.....	Missouri.....	7,350	0.0008	'06	Edgemont.....	S. Dak.
Chippewa.....	Mississippi.....	6,740	0.45	'04-'05	Eau Claire.....	Wis.
Chippewa.....	Mississippi.....	9,573				Wis., Mich.
Choccolocco.....		272	0.88	'06	Jenifer.....	Ala.
Chowan.....	Albemarle.....	4,870				Va., N. C.
Cimarron.....		5,200			Arkalon.....	Kas.
Clackamas.....		800	1.11	'06	Barton.....	Oregon
Clarion.....	Allegheny.....	865			Clarion.....	Pa.
Clark Fork.....		1,550	0.09	'06	Grantsdale.....	Mont.
Clark Fork.....		5,960	0.18	'06	Missoula.....	Mont.
Clealum.....		205	1.43	'06	Roslyn.....	Wash.
Clear Creek.....	South Platte.....	345	0.38	'06	Forkscreak.....	Colo.
Clyde.....		729			Lyons.....	N. Y.
Clyde.....		807			Clyde.....	N. Y.
Clyde.....		869			mouth.....	N. Y.
Colorado.....		138,600	0.06	'05	Hardyville.....	Ariz.
Colorado.....		225,000	0.025	'04-'05	Yuma.....	Ariz.
Colorado.....		37,000	0.006	'06	Austin.....	Tex.
Colorado.....		40,000	0.02	'04-'05	Columbus.....	Tex.
Columbia.....		81,133				Wash.
Conasauga.....		723				N. Y.
Conecuh.....		1,290	0.163	'04-'05	Beck.....	Ala.
Conemaugh.....	Allegheny.....	711			Johnstown.....	Pa.
Conemaugh.....	Allegheny.....	1,403			Saltsburg.....	Pa.
Congarree.....	Santee.....	7,965				S. C.
Connecticut.....		3,305	0.485	'06	Orford.....	N. H.
Connecticut.....		7,700	0.575	'06	Sunderland.....	Mass.
Connecticut.....		8,660			Holyoke.....	Mass.
Connecticut.....		10,234			Hartford.....	Conn.



River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Connecticut.....		10,924	.....	.....	N. H., Vt., Mass., Conn.	
Contoocook.....	Merrimac.....	410	0.400	'06	West Hopkinton.....	N. H.
Contoocook.....	Merrimac.....	766	.....	.....	.....	N. H.
Coosa.....	Alabama.....	4,006	0.30	'04-'05	Rome.....	Ga.
Coosa.....	Alabama.....	7,053	.....	.....	Lock No. 4.....	Ala.
Coosa.....	Alabama.....	7,065	0.970	'06	Riverside.....	Ala.
Coosa.....	Alabama.....	7,648	.....	.....	Lock No. 5.....	Ala.
Coosawattee.....	Coosa.....	531	2.02	'06	Carters.....	Ga.
Croton.....		339	0.521	'01-'04	old Croton Dam.....	N. Y.
Croton.....		360	.....	.....	new Croton Dam.....	N. Y.
Crow Creek.....	Mississippi.....	3,085	.....	.....	.....	Colo.
Crow Wing.....	Mississippi.....	3,560	.....	.....	.....	
Cumberland.....	Ohio.....	13,987	.....	.....	Lock "A".....	Tenn.
Cuyahoga.....		698	0.57	'05	Independence.....	Ohio
Dakota.....	Missouri.....	22,000	.....	.....	.....	Dak.
Dan.....	Roanoke.....	2,750	0.39	'04-'05	South Boston.....	Va.
Dan.....	Roanoke.....	3,700	.....	.....	.....	Va., N. C.
Dan.....	Roanoke.....	3,798	.....	.....	Clarksville.....	Va.
Dead.....	Kennebec.....	870	0.198	'02-'05	The Forks.....	Me.
Dead.....	Kennebec.....	1,000	.....	.....	.....	Me.
Deep.....	Cape Fear.....	1,110	.....	.....	Cumnoek.....	N. C.
Deep.....	Cape Fear.....	1,350	.....	.....	.....	N. C.
Deep.....	Cape Fear.....	1,400	.....	.....	Moncure.....	N. C.
Deerfield.....	Connecticut.....	646	0.611	'06	Deerfield.....	Vt., Mass.
Delaware, East Branch.....		920	0.407	'06	Hancock.....	N. Y.
Delaware.....		1,604	.....	.....	junction E. and W. branches	
Delaware.....		2,580	.....	.....	Pa. State line	
Delaware.....		3,252	.....	.....	Port Jervis.....	N. Y.
Delaware.....		3,600	.....	.....	mouth of Neversink	
Delaware.....		4,176	.....	.....	Delaware Gap.....	N. J.
Delaware.....		6,855	.....	.....	Lambertville.....	N. J.
Delaware.....		10,100	.....	.....	.....	N. Y., Pa., N. J.
Delaware.....		11,895	.....	.....	Wilmington.....	Del.
Delaware, West branch.....		519	.....	.....	Deposit.....	N. Y.
Delaware, West branch.....		685	.....	.....	mouth	
Deschutes.....	Columbia.....	9,900	.....	.....	Moro.....	Oregon
Deschutes, East Fork.....	Columbia.....	196	0.19	'06	Odell.....	Oregon
Deschutes, West Fork.....		360	2.40	'06	Lava.....	Oregon
Deschutes.....		880	0.12	'06	Lava.....	Oregon
Deschutes.....		1,240	1.06	'06	West's Ranch.....	Oregon
Deschutes.....		9,180	0.59	'06	Biggs.....	Oregon
Des Moines.....	Mississippi.....	6,462	0.13	'04-'05	Des Moines.....	Iowa
Des Moines.....	Mississippi.....	14,290	0.173	'06	Keosauqua.....	Iowa
Des Plaines.....	Illinois.....	633	.....	.....	Riverside.....	Ill.
Eau Claire.....	Chippewa.....	899	.....	.....	.....	Wis.
Elk.....	Mississippi.....	1,700	0.50	'06	Elkmond.....	Ala.
Elkhorn.....	Platte.....	2,474	.....	.....	Norfolk.....	Nebr.
Elkhorn.....	Platte.....	5,980	.....	.....	Arlington.....	Nebr.
Elkhorn.....	Platte.....	6,732	.....	.....	.....	Nebr.
Enoree.....	Broad.....	730	.....	.....	.....	N. and S. C.
Escanaba.....		800	0.514	'06	Escanaba.....	Mich.
Etowah.....	Coosa.....	930	0.46	'04	Canton.....	Ga.
Etowah.....	Coosa.....	1,854	0.23	'04	Rome.....	Ga.
Fall.....		390	1.10	'06	Fremont.....	Ida.
Fall.....	Snake.....	390	0.96	'05	Fremont.....	Ida.
Fall.....	Snake.....	594	.....	.....	5 miles above mouth.....	Ida.
Fall.....	Snake.....	913	.....	.....	mouth.....	Ida.

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Feather.....		506	1.20	'05	Prattville.....	Cal.
Feather.....		3,640	0.36	'05	Oroville.....	Cal.
Farmington.....	Connecticut.....	584			.....	Mass. and Conn.
Flambeau.....		2,120	0.55	'06	Ladysmith.....	Wis.
Flint.....		2,700	0.42	'05	Montezuma.....	Ga.
Flint.....	Chattahoochee ..	988	0.20	'04-'05	Woodbury.....	Ga.
Flint.....	Chattahoochee ..	5,000	0.40	'04-'05	Albany.....	Ga.
Flint.....	Chattahoochee ..	8,420			.....	Ga.
Floyd.....	Missouri.....	1,014			.....	Iowa
Fox.....	Wisconsin.....	2,697			.....	Wis.
French Broad.....		325	0.79	'04	Horseshoe.....	N. C.
French Broad.....	Tennessee.....	987	0.88	'05	Asheville.....	N. C.
French Broad.....	Tennessee.....	1,737	0.45	'04-'05	Oldtown.....	Tenn.
French Broad.....	Tennessee.....	5,133			mouth.....	Tenn.
Gallatin.....		1,620	0.14	'05	Logan.....	Mont.
Gasconade.....	Missouri.....	2,725	0.25	'04-'05	Arlington.....	Mo.
Gasconade.....	Missouri.....	3,667			.....	Mo.
Genesee.....		143			below Cryder Cr.....	N. Y.
Genesee.....		211			Chenunda Cr.	
Genesee.....		323			Vandemarsh Cr.	
Genesee.....		346			Knights Cr.	
Genesee.....		405			Phillips Cr.	
Genesee.....		466			Van Campens Cr.	
Genesee.....		563			Angelica Cr.	
Genesee.....		585			White Cr.	
Genesee.....		627			Upper Black Cr.	
Genesee.....		649			Crawford Cr.	
Genesee.....		714			Caneadea Cr.	
Genesee.....		786			Cold Cr.	
Genesee.....		822			Rush Cr.	
Genesee.....		942			Wiscoy Cr.	
Genesee.....		994			Wolf Cr.	
Genesee.....		1,060			Silver Lake Cr.	
Genesee.....		1,070	0.25	'03-'05	Mount Morris.....	N. Y.
Genesee.....		1,142			Coshaqua Cr.	
Genesee.....		1,407			Canaseraga Cr.	
Genesee.....		1,464			Beards Cr.	
Genesee.....		1,644			Conesus Cr.	
Genesee.....		1,939			Honeoye Cr.	
Genesee.....		2,145			Allens Cr.	
Genesee.....		2,365	0.222	'06	Rochester.....	N. Y.
Genesee.....		2,380			Black Cr.....	N. Y.
Genesee.....		2,496			.....	Pa. and N. Y.
Gila.....	Colorado.....	2,450	0.066	'05	Cliff.....	N. Mex.
Gila.....	Colorado.....	13,460	0.00062	'04	San Carlos.....	Ariz.
Gila.....	Colorado.....	17,834			Buttes.....	Ariz.
Gila.....	Colorado.....	71,050	0.00075	'05	Dome.....	Ariz.
Grand.....		1,230	0.28	'05	North Lansing.....	Mich.
Grand.....		4,900	0.57	'05	Grand Rapids.....	Mich.
Grand.....	Colorado.....	2,380	0.20	'06	Kremmling.....	Colo.
Grand.....		4,520	0.14	'06	Glenwood Springs.....	Colo.
Grand.....		2,380	0.13	'05	Kremmling.....	Colo.
Grand.....		4,523	0.13	'04	Glenwood Springs.....	Colo.
Grand.....		8,546	0.21	'05	Palisades.....	Colo.
Grand.....	Missouri.....	7,932			.....	Iowa and Mo.
Grande Ronde .....		1,350	0.04	'06	Elgin.....	Oregon
Great Kanawha.....	Ohio.....					

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Great Miami	Ohio	5,400	.....	.....	.....	Ohio
Great Pee Dee	.....	498	0.76	'04	North Wilkesboro	N. C.
Great Pee Dee	.....	3,399	0.45	'04-'05	Salisbury	N. C.
Great Pee Dee	.....	17,000	.....	.....	.....	N. and S. C.
Green	Colorado	7,450	0.075	'05	Greenriver	Wyo.
Green	Colorado	26,620	0.026	'04	Jensen	Utah
Green	Colorado	38,200	0.042	'05	Greenriver	Utah
Green	Ohio	.....	.....	.....	.....	.....
Greenbrier	.....	1,575	.....	.....	.....	Va.
Greenbrier	.....	1,344	0.15	'04-'05	Alderson	W. Va.
Guadalupe	.....	5,100	0.102	'06	Cuero	Tex.
Gunnison	Grand	2,298	.....	.....	Iola	Colo.
Gunnison	Grand	3,844	0.12	'05	Cimarron	Colo.
Gunnison	Grand	5,233	0.09	'04-'05	Cory	Colo.
Gunnison	Grand	7,868	0.11	'04-'05	Whitewater	Colo.
Haw	Cape Fear	1,675	.....	.....	.....	N. C.
Heart	.....	1,250	0.0012	'04-'05	Richardton	N. Dak.
Hiwassee	.....	410	0.59	'04-'05	Murphy	N. C.
Hiwassee	.....	1,180	0.54	'04-'05	Reliance	Tenn.
Hiwassee	.....	2,297	.....	.....	Charleston	Tenn.
Hiwassee	.....	2,698	.....	.....	mouth	Tenn.
Holston	.....	3,060	0.32	'05	Austins Mill	Tenn.
Holston	.....	3,790	.....	.....	mouth	Tenn.
Holston, South Fork	.....	828	0.27	'04-'05	Bluff City	Tenn.
Hood	.....	370	1.92	'06	Winans	Oregon
Hoosic	Hudson	579	0.370	'06	Buskirk	N. Y.
Hoosic	Hudson	710	.....	.....	.....	Mass., Vt., and N. Y.
Housatonic	.....	1,020	0.484	'05	Gaylordsville	Conn.
Housatonic	.....	1,933	.....	.....	.....	Mass. and Conn.
Hudson	.....	1,092	.....	.....	Hadley	N. Y.
Hudson	.....	2,800	0.794	'05	Fort Edward	N. Y.
Hudson	.....	4,500	0.583	'04-'05	Mechanicsville	N. Y.
Hudson	.....	8,000	.....	.....	Troy	N. Y.
Hudson	.....	13,368	.....	.....	.....	N. Y.
Humboldt	.....	5,014	0.0068	'05	Palisade	Nev.
Humboldt	.....	10,780	0.000025	'05	Golconda	Nev.
Humboldt	.....	13,800	0.00014	'05	Oreana	Nev.
Humboldt, North Fork	.....	1,020	0.00051	'05	Elburz	Nev.
Humboldt, South Fork	.....	1,150	0.00	'05	Elko	Nev.
Huron	.....	775	0.110	'06	Geddes	Mich.
Illinois	Mississippi	6,480	1.08	'04	Minooka	Ill.
Illinois	Mississippi	13,250	0.50	'06	Peoria	Ill.
Illinois	Mississippi	29,013	.....	.....	.....	.....
Indian Creek	.....	740	0.072	'06	Crescent Mills	Cal.
Iowa	Mississippi	3,317	0.11	'04-'05	Iowa City	Iowa
Iowa	Mississippi	12,519	.....	.....	.....	Iowa
James	.....	2,058	0.20	'04-'05	Buchanan	Va.
James	.....	3,027	.....	.....	Balcony Falls	Va.
James	.....	6,232	0.25	'04-'05	Cartersville	Va.
James	.....	9,700	.....	.....	.....	Va.
Jefferson	.....	8,984	0.07	'04-'05	Sappington	Mont.
Jefferson	.....	9,400	.....	.....	Three Forks	Mont.
John Day	.....	7,800	0.04	'06	McDonald	Oregon
Juniata	W. Susquehanna	3,223	.....	.....	.....	.....
Juniata	W. Susquehanna	3,476	0.40	'04-'05	Newport	Pa.
Kalamazoo	.....	847	.....	.....	below Battle Creek	Mich.
Kalamazoo	.....	1,471	0.405	'06	Allegan	Mich.



## POWER OPPORTUNITY

17

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Kalamazoo.....		2,064	.....	.....	mouth.....	Mich.
Kankakee.....	Illinois.....	5,300	.....	.....	.....	Ill. and Ind.
Kansas.....	Missouri.....	58,550	0.07	'04-'05	Lecompton.....	Kas.
Kansas.....	Missouri.....	59,750	.....	.....	mouth	
Kaskaskia.....	Mississippi.....	5,876	.....	.....		
Kaweah.....		520	0.23	'06	Three Rivers.....	Cal.
Kennebec.....		1,250	.....	.....	Moosehead Lake.....	Me.
Kennebec.....		1,670	0.403	'06	The Forks.....	Me.
Kennebec.....		2,570	.....	.....	below Dead River.....	Me.
Kennebec.....		2,880	0.437	'06	North Anson.....	Me.
Kennebec.....		2,900	.....	.....	Carritunk Falls.....	Me.
Kennebec.....		3,330	.....	.....	Madison.....	Me.
Kennebec.....		4,030	.....	.....	Norridgewock.....	Me.
Kennebec.....		4,380	.....	.....	Somerset Mills.....	Me.
Kennebec.....		4,410	.....	.....	above Sebasticook River.....	Me.
Kennebec.....		5,470	0.403	'05	Waterville.....	Me.
Kennebec.....		5,770	.....	.....	Augusta.....	Me.
Kennebec.....		6,400	.....	.....	mouth.....	Me.
Kentucky.....	Ohio.....		.....	.....	Little Hickman.....	Ky.
Kentucky.....	Ohio.....	7,870	.....	.....	mouth.....	Ky.
Kern.....		2,345	0.089	'05	Bakersfield.....	Cal.
Kings.....		1,742	0.108	'05	Sanger.....	Cal.
Kings.....		1,775	.....	.....	Red Mountain.....	Cal.
La Mine.....	Missouri.....	2,700	.....	.....	mouth.....	Mo.
Laramie.....	North Platte.....	3,179	.....	.....	Uva.....	Wyo.
Laramie.....	North Platte.....	4,076	.....	.....	Ft. Laramie.....	Wyo.
Lehigh.....	Delaware.....	1,330	.....	.....		Pa.
Licking.....	Ohio.....	696	0.143	'04	Pleasant Valley.....	Ohio
Licking.....	Ohio.....	3,870	.....	.....		Ohio
Little Bighorn.....		1,276	0.06	'05	Crow Agency.....	Mont.
Little Blue.....	Big Blue.....	3,461	.....	.....		
Little Colorado.....	Colorado.....	6,000	0.0048	'05	Woodruff.....	Ariz.
Little Colorado.....	Colorado.....	17,630	0.0044	'05	Holbrook.....	Ariz.
Little Kanawha.....	Ohio.....	2,290	.....	.....		
Little Missouri.....		600	0.0017	'05	Alzada.....	Mont.
Little Missouri.....		1,900	0.004	'06	Camp Crook.....	S. Dak.
Little Missouri.....		5,785	0.0014	'05	Medora.....	N. Dak.
Little Muddy.....		800	0.0085	'05	Williston.....	N. Dak.
Little Nemaha.....	Missouri.....	990	.....	.....		
Little Sioux.....	Missouri.....	4,223	.....	.....		Minn.
Little Tennessee.....		682	0.66	'04-'05	Judson.....	N. C.
Little Tennessee.....		2,470	0.73	'05	McGhee.....	Tenn.
Little Wood.....	Snake.....	1,270	.....	.....	Toponis.....	Ida.
Locust Fork of Black Warrior.....		1,020	0.22	'04-'05	Palos.....	Ala.
Logan.....	Bear.....	218	0.44	'06	Logan.....	Utah
Loup.....	Platte.....	13,540	0.193	'06	Columbus.....	Nebr.
Loup.....	Platte.....	15,553	.....	.....		Nebr.
Luis Rey.....		318	0.01	'06	Pala.....	Cal.
North Loup.....		4,024	.....	.....	St. Paul.....	Nebr.
Machias, East and West.....		465	0.465	'04	Whitneyville.....	Me.
Machias, East and West.....		800	.....	.....	mouth.....	Me.
Mackinaw.....	Illinois.....	1,182	.....	.....		Ill.
Mad.....		290	0.445	'05	Springfield.....	Ohio
Madison.....		2,085	0.53	'05	Norris.....	Mont.
Madison.....		2,420	.....	.....	Threeforks.....	Mont.
Mahoning.....		958	0.174	'06	Youngstown.....	Ohio
Malade.....	Snake.....	2,190	.....	.....	Toponis.....	Ida.

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Malade.....	Snake.....	3,550	.....	.....	Bliss.....	Ida.
Malheur.....	.....	4,860	0.01	'06	Vale.....	Oregon
Maple.....	.....	459	.....	.....	Maple Rapids.....	Mich.
Maple.....	.....	919	.....	.....	mouth.....	Mich.
Marias.....	.....	2,610	0.09	'04-'05	Shelby.....	Mont.
Mattawamkeag.....	Penobscot.....	1,510	0.123	'05	Mattawamkeag.....	Me.
Mattawamkeag.....	Penobscot.....	1,533	.....	.....	.....	Me.
Maumee.....	.....	2,190	0.13	'05	Sherwood.....	Ohio
McCloud.....	.....	608	2.27	'06	Gregory.....	Cal.
McKenzie.....	.....	960	2.30	'06	Springfield.....	Oregon
Medicine.....	Arkansas.....	1,300	.....	.....	Kiowa.....	Kas.
Meherrin.....	Chowan.....	1,675	.....	.....	.....	Va. and N. C.
Menominee.....	.....	2,415	0.77	'02-'05	Iron Mountain.....	Mich.
Menominee.....	.....	4,113	.....	.....	.....	Mich. and Wis.
Meramee.....	.....	340	0.44	'04	Meramee.....	Mo.
Meramec.....	Mississippi.....	3,497	0.27	'04-'05	Eureka.....	Mo.
Meramec.....	Mississippi.....	3,914	.....	.....	.....	Mo.
Merced.....	.....	1,090	0.057	'05	Merced Falls.....	Cal.
Merrimac.....	.....	1,460	0.774	'06	Franklin Junction.....	N. H.
Merrimac.....	.....	4,553	0.390	'06	Lawrence.....	Mass.
Merrimac.....	.....	4,916	.....	.....	.....	N. H. and Mass.
Methow.....	.....	1,710	0.25	'06	Pateros.....	Wash.
Miami.....	Ohio.....	2,450	0.140	'06	Dayton.....	Ohio
Michigamme.....	Menominee.....	756	.....	.....	.....	Mich.
Middle Loup.....	.....	6,849	.....	.....	St. Paul.....	Nebr.
Milk.....	Missouri.....	7,300	0.0001	'06	Havre.....	Mont.
Milk.....	Missouri.....	14,040	0.00036	'05	Malta.....	Mont.
Milk, North Fork.....	.....	1,422	0.13	'06	Chinook.....	Mont.
Minnesota.....	Mississippi.....	13,400	0.099	'05	Mankato.....	Minn.
Minnesota.....	Mississippi.....	16,000	.....	.....	.....	Minn.
Mississippi.....	.....	12,400	0.211	'05	Sauk Rapids.....	Minn.
Mississippi.....	.....	36,085	.....	.....	St. Paul.....	Minn.
Missoula.....	.....	5,960	0.14	'05	Missoula.....	Mont.
Missouri.....	Mississippi.....	14,500	.....	.....	Townsend.....	Mont.
Missouri.....	Mississippi.....	15,036	.....	.....	Canyon Ferry.....	Mont.
Missouri.....	Mississippi.....	17,615	.....	.....	Craig.....	Mont.
Missouri.....	Mississippi.....	18,295	0.11	'05	Cascade.....	Mont.
Missouri.....	Mississippi.....	492,000	0.05	'05	Kansas City.....	Mo.
Missouri.....	Mississippi.....	527,155	.....	.....	.....	Mont.
Mohawk.....	Hudson.....	1,306	0.755	'03-'05	Little Falls.....	N. Y.
Mohawk.....	Hudson.....	3,440	0.331	'06	Dunsbach Ferry Bridge.....	N. Y.
Mohawk.....	Hudson.....	3,493	.....	.....	.....	N. Y.
Mokelumme.....	.....	642	0.30	'06	Clements.....	Cal.
Molalla.....	.....	220	0.35	'06	Molalla.....	Oregon
Monongahela.....	Ohio.....	2,324	.....	.....	Fairmont.....	W. Va.
Monongahela.....	Ohio.....	2,749	.....	.....	Morgantown.....	W. Va.
Monongahela.....	Ohio.....	4,574	.....	.....	Greensboro.....	Pa.
Monongahela.....	Ohio.....	5,427	.....	.....	Lock No. 4.....	Pa.
Monongahela.....	Ohio.....	7,625	.....	.....	.....	W. Va.
Montreal.....	.....	.....	.....	.....	.....	Wis.
Moose.....	Black.....	349	0.624	'00-'05	Moose River.....	N. Y.
Moose.....	Kennebec.....	680	0.174	'02-'05	Rockwood.....	Me.
Mouse.....	.....	8,400	0.0019	'06	Minot.....	N. Dak.
Muskegon.....	.....	1,764	.....	.....	above Big Rapids.....	Mich.
Muskegon.....	.....	2,352	0.389	'06	Newaygo.....	Mich.
Muskegon.....	.....	2,663	.....	.....	mouth.....	Mich.
Muskingum.....	Ohio.....	5,828	0.329	'06	Janesville.....	Ohio

## POWER OPPORTUNITY

19

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Muskingum.....	Ohio.....	7,740	.....	.....	.....	Ohio
Naches.....	.....	636	0.42	'06	Nile.....	Wash.
Naches.....	.....	1,120	0.06	'06	North Yakima.....	Wash.
Nashua.....	Merrimac.....	773	.....	.....	Nashua.....	Mass.
Nashua, South Branch.....	.....	119	0.543	'97-'05	Clinton.....	Mass.
Neches.....	.....	8,200	0.03	'04-'05	Evadale.....	Tex.
Nemaha.....	Missouri.....	1,924	.....	.....	.....	Kas. and Nebr.
Neosho.....	.....	3,670	.....	.....	Iola.....	Kas.
Neosho.....	.....	12,746	.....	.....	.....	Kas. and I. T.
Neuse.....	.....	5,300	.....	.....	.....	N. C.
New.....	.....	1,100	.....	.....	Oldtown.....	Va.
New.....	.....	2,725	0.44	'04-'05	Radford.....	Va.
New.....	.....	4,523	.....	.....	ab. Greenbrier River.....	W. Va.
New.....	.....	5,600	.....	.....	Hinton.....	W. Va.
New.....	.....	6,200	0.173	'04	Fayette.....	W. Va.
Niobrara.....	Missouri.....	6,070	0.13	'05	Valentine.....	Nebr.
Niobrara.....	Missouri.....	6,300	0.104	'06	Ft. Niobrara.....	Nebr.
Niobrara.....	Missouri.....	13,200	.....	.....	.....	.....
Nishnabotona.....	Missouri.....	3,100	.....	.....	.....	Iowa
Nodaway.....	Missouri.....	1,886	.....	.....	.....	Iowa
Nolichucky.....	.....	640	.....	.....	ab. Tenn. State line	.....
Nolichucky.....	.....	817	.....	.....	Chucky Valley.....	Tenn.
Nolichucky.....	.....	1,099	0.44	'04-'05	Greenville.....	Tenn.
Nottaway.....	Blackwater.....	1,650	.....	.....	.....	Va.
Ocmulgee.....	Oconee.....	1,500	0.22	'04-'05	Jackson.....	Ga.
Ocmulgee.....	Oconee.....	2,425	0.17	'04-'05	Macon.....	Ga.
Ocmulgee.....	Oconee.....	6,000	.....	.....	.....	Ga.
Oconee.....	Altamaha.....	1,100	0.33	'05	Greensboro.....	Ga.
Oconee.....	Altamaha.....	1,346	.....	.....	Carey.....	Ga.
Oconee.....	Altamaha.....	4,182	0.19	'04-'05	Dublin.....	Ga.
Oconee.....	Altamaha.....	5,400	.....	.....	mouth.....	Ga.
Oconto.....	.....	1,017	.....	.....	mouth.....	Wis.
Ogeechee.....	.....	4,720	.....	.....	.....	Ga.
Ohio.....	Mississippi.....	23,820	0.358	'06	Wheeling.....	W. Va.
Ohio.....	Mississippi.....	214,000	.....	.....	.....	.....
Ohoopee.....	.....	1,280	0.06	'05	Reidsville.....	Ga.
Okoe.....	.....	374	2.28	'06	McCays.....	Tenn.
Oneida.....	Oswego.....	1,313	0.563	'05	Euclid.....	N. Y.
Oneida.....	Oswego.....	1,421	.....	.....	.....	N. Y.
Oostenaula.....	Coosa.....	1,614	0.51	'06	Resaca.....	Ga.
Oostenaula.....	Coosa.....	2,190	.....	.....	Rome.....	Ga.
Osage.....	Missouri.....	15,300	.....	.....	.....	Mo. and Kas.
Oswegatchie.....	.....	1,580	0.50	'05	Ogdensburg.....	N. Y.
Oswego.....	.....	4,916	.....	.....	Fulton.....	N. Y.
Oswego.....	.....	4,990	0.797	'04-'05	Battle Island.....	N. Y.
Oswego.....	.....	5,002	.....	.....	mouth.....	N. Y.
Otter Creek.....	Lake Champlain.....	615	0.68	'06	Middlebury.....	Vt.
Ottertail.....	.....	1,310	0.40	'06	Fergus Falls.....	Minn.
Ouachita.....	Red River.....	19,000	.....	.....	.....	Ark.
Owyhee.....	.....	9,875	0.0006	'05	Owyhee.....	Oregon
Palouse.....	.....	2,210	0.007	'06	Hooper.....	Wash.
Palouse.....	.....	2,460	.....	.....	mouth.....	Wash.
Pascagoula.....	.....	8,350	.....	.....	.....	Mo.
Passaic.....	.....	360	.....	.....	Two Bridges	.....
Passaic.....	.....	960	.....	.....	.....	N. J.
Patapsco.....	.....	251	0.46	'04	Woodstock.....	Md.
Patapsco.....	.....	350	.....	.....	mouth.....	Md.



## HYDRO-ELECTRIC PRACTICE

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Paw Paw.....	St. Joseph.....	429	.....	.....	Horseshoe Bend.....	Mich.
Payette.....	.....	2,240	0.383	'06	Pera.....	Ida.
Pea.....	.....	1,180	0.15	'04	Jackson.....	Ala.
Pearl.....	.....	3,120	0.17	'05	.....	Miss.
Pearl.....	.....	8,670	.....	.....	.....	Miss.
Pembina.....	.....	2,940	0.038	'06	Neché.....	N. Dak.
Pemigewasset.....	Merrimac.....	615	0.276	'86-'04	Plymouth.....	H. H.
Penobscot.....	.....	1,880	0.225	'05	Millinocket.....	Me.
Penobscot.....	.....	3,160	.....	.....	below mouth East branch	.....
Penobscot.....	.....	6,630	0.387	'05	West Enfield.....	Me.
Penobscot.....	.....	7,240	.....	.....	Oldtown.....	Me.
Penobscot.....	.....	7,910	.....	.....	Bangor.....	Me.
Penobscot.....	.....	8,500	.....	.....	.....	Me.
Penobscot, East Branch.....	.....	1,130	0.196	'05	Grindstone.....	Me.
Pepacton.....	Delaware.....	1,919	.....	.....	.....	N. Y.
Peshtigo.....	.....	1,123	.....	.....	mouth.....	Wis.
Piscataquis.....	Penobscot.....	280	0.283	'05	Foxcroft.....	Me.
Piscataquis.....	Penobscot.....	380	.....	.....	Dover.....	Me.
Piscataquis.....	Penobscot.....	750	.....	.....	Sibec Lake	.....
Piscataquis.....	Penobscot.....	1,500	.....	.....	mouth	.....
Pit.....	Sacramento.....	1,500	0.004	'05	Canby.....	Cal.
Pit.....	Sacramento.....	2,948	0.004	'05	Bieber.....	Cal.
Platte.....	Missouri.....	2,487	.....	.....	.....	Iowa and Mo.
Platte.....	Missouri.....	53,300	0.005	'04	Lexington.....	Nebr.
Platte.....	Missouri.....	56,867	0.01	'04-'05	Columbus.....	Nebr.
Platte.....	Missouri.....	90,000	.....	.....	.....	Nebr.
North Platte.....	.....	7,668	.....	.....	Sweetwater	.....
North Platte.....	.....	14,255	.....	.....	Douglas	.....
North Platte.....	.....	14,828	.....	.....	Orin Junction	.....
North Platte.....	.....	16,240	0.028	'05	Guernsey.....	Wyo.
North Platte.....	.....	16,416	.....	.....	Fort Laramie.....	.....
North Platte.....	.....	20,492	.....	.....	below Laramie River.....	.....
North Platte.....	.....	23,190	0.006	'04	Bridgeport.....	Nebr.
North Platte.....	.....	24,340	.....	.....	Gering.....	Nebr.
North Platte.....	.....	24,400	0.018	'05	Mitchell.....	Nebr.
North Platte.....	.....	24,830	.....	.....	Camp Clarke	.....
North Platte.....	.....	28,520	0.015	'05	North Platte.....	Nebr.
North Platte.....	.....	36,000	.....	.....	..... Colo., Wyo. and Nebr.	.....
South Platte.....	Platte.....	1,677	.....	.....	Lake Cheesman.....	Colo.
South Platte.....	Platte.....	2,612	0.04	'04-'05	South Platte.....	Colo.
South Platte.....	Platte.....	3,840	0.021	'06	Denver.....	Colo.
South Platte.....	Platte.....	9,470	0.015	'06	Kersey.....	Colo.
South Platte.....	Platte.....	20,600	0.001	'06	Julesburg.....	Colo.
South Platte.....	Platte.....	23,294	.....	.....	North Platte.....	Nebr.
South Platte.....	Platte.....	24,000	.....	.....	..... Colo. and Nebr.	.....
Potomac.....	.....	1,487	.....	.....	.....	W. Va.
Potomac.....	.....	2,882	.....	.....	N. & S. branches	.....
Potomac.....	.....	3,388	.....	.....	Great Cacapaw	.....
Potomac.....	.....	4,059	.....	.....	bel. Great Cacapaw	.....
Potomac.....	.....	4,099	.....	.....	Hancock.....	W. Va.
Potomac.....	.....	5,556	.....	.....	Williamsport.....	Md.
Potomac.....	.....	6,354	.....	.....	Harpers Ferry.....	W. Va.
Potomac.....	.....	9,397	.....	.....	below Harpers Ferry, incl. Shenandoah	.....
Potomac.....	.....	9,654	0.13	'02-'05	Point of Rocks.....	Md.
Potomac.....	.....	11,100	.....	.....	Edwards Ferry	.....
Potomac.....	.....	11,427	.....	.....	Great Falls	.....

## POWER OPPORTUNITY

21

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Potomac.....		11,545	.....	.....	Chain Bridge.....	D. C.
Potomac.....		14,500				
Potomac, North Branch.....		293	.....	.....	Bloomington.....	Md.
Potomac, North Branch.....		406	0.065	'04-'05	Piedmont.....	W. Va.
Potomac, North Branch.....		891	.....	.....	Cumberland.....	Md.
Potomac, North Branch.....		1,365	.....	.....	junction, South Br.	
Potomac, South Fork.....		318	.....	.....	junction, North Fork	
Potomac, South Fork.....		640	.....	.....	below Seneca Creek	
Potomac, South Fork.....		1,198	.....	.....	Moorefield	
Potomac, South Fork.....		1,407	.....	.....	Romney.....	W. Va.
Potomac, South Fork.....		1,443	0.305	'06	Springfield.....	W. Va.
Potomac, South Fork.....		1,475	0.064	'03-'05	Springfield.....	W. Va.
Potomac, South Fork.....		1,487				
Potomac, South Fork.....		1,580				
Powder.....		275	0.04	'06	Salisbury.....	Oregon
Presumpscot.....		700	1.11	'06	.....	Me.
Quinnebaug.....	Shetucket	725	.....	.....	.....	Conn. and Mass.
Raccoon.....	Des Moines	3,329	.....	.....	.....	Iowa
Rapid Creek.....		410	0.17	'06	Rapid.....	S. Dak.
Rappahannock.....		2,700	.....	.....	.....	Va.
Raquette.....		1,169	0.518	'04-'05	Massena Springs.....	N. Y.
Raritan.....		490	0.422	'06	Finderne.....	N. J.
Raritan.....		800	0.551	'03-'05	Bound Brook.....	N. J.
Raritan.....		1,000	.....	.....	mouth.....	N. J.
Red Cedar.....		1,840	0.219	'05	Janesville.....	Iowa
Red.....	Mississippi	40,200	0.075	'06	Arthur City.....	Texas
Red.....	Mississippi	92,700	.....	.....	.....	Tex. and La.
Red River of the North.....		6,000	0.08	'05	Fargo.....	N. Dak.
Red River of the North.....		25,800	0.067	'04	Grand Forks.....	N. Dak.
Red Lake.....	Red	5,525	0.151	'06	Crookston.....	Minn.
Red Lake.....	Red	6,518	.....	.....	.....	Minn.
Red Water.....		1,015	0.14	'04-'05	Belle Fourche.....	S. Dak.
Republican.....	Kansas	23,270	0.011	'05	Bostwick.....	Nebr.
Republican.....	Kansas	24,600	.....	.....	.....	Nebr. and Kas.
Republican.....	Kansas	25,840	0.015	'04-'05	Junction.....	Kas.
Republican, South Fork.....		5,910	0.001	'06	Benkelman.....	Nebr.
Republican, North Fork.....		1,390	.....	.....	Haigler	
Richelieu.....		7,750	0.849	'06	Fort Montgomery.....	N. Y.
Rio Grande.....		1,400	0.209	'05	Del Norte.....	Colo.
Rio Grande.....		7,695	0.0025	'04	Lobatos.....	Cal.
Rio Grande.....		14,050	0.025	'05	San Ildefonso.....	N. Mex.
Roanoke.....		388	0.255	'06	Roanoke.....	Va.
Roanoke.....		3,076	0.35	'04-'05	Randolph.....	Va.
Roanoke.....		7,344	.....	.....	Clarksville	
Roanoke.....		8,717	.....	.....	Neal	
Roanoke.....		9,200	.....	.....	.....	Va. and N. C.
Rock.....	Mississippi	6,150	0.104	'06	Rockton.....	Ill.
Rock.....	Mississippi	10,973	.....	.....	.....	Ill.
Rock.....	Big Sioux	1,660	.....	.....	.....	Minn.
Rocky.....	Savannah	241	.....	'06	.....	S. C.
Rogue.....		2,020	0.65	'06	Tolo.....	Oregon
Rum.....	Mississippi	1,420	0.43	'06	Anoka.....	Minn.
Sabine.....		2,900	0.067	'05	Longview	
Sabine.....		10,400	.....	.....	mouth.....	Tex.
Saco.....		385	0.408	'06	Center Conway.....	N. H.
Saco.....		856	.....	.....	Great Falls	
Saco.....		1,366	.....	.....	Highland Rips	

## HYDRO-ELECTRIC PRACTICE

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Saco.....		1,578	.....	.....	Bonny Eagle Falls	
Saco.....		1,750	.....	.....	.....	Me. and N. H.
Sacondaga.....	Hudson.....	1,028	.....	.....	.....	N. Y.
Sacramento.....		655	.....	.....	.....	Oregon
Sacramento.....		9,134	.....	.....	Jellies Ferry.....	Cal.
Sacramento.....		9,295	0.555	'05	Red Bluff.....	Cal.
Saint Croix.....		500	.....	.....	Little Falls.....	Me.
Saint Croix.....		1,390	0.806	'04	Spragues Falls.....	Me.
Saint Croix.....		1,530	0.810	'06	Calais.....	Me.
Saint Croix.....		1,620	.....	.....	mouth.....	Me.
Saint Croix.....	Mississippi.....	7,576	.....	.....	.....	Minn. and Wis.
Saint Francis.....	Mississippi.....	8,000	.....	.....	.....	Mo. and Ark.
Saint John.....		26,000	0.203	'06	.....	Me. and Canada
Saint Joseph.....		863	.....	.....	above Three Rivers....	Mich.
Saint Joseph.....		1,417	.....	.....	below Three Rivers....	Mich.
Saint Joseph.....		3,616	.....	.....	above Niles.....	Mich.
Saint Joseph.....		3,898	.....	.....	below mouth of Dowagee	
Saint Joseph.....		3,935	0.373	'06	Buchanan.....	Mich.
Saint Joseph.....		4,157	.....	.....	above Paw Paw.....	Mich.
Saint Joseph.....		4,586	.....	.....	below Paw Paw.....	Mich.
Saint Louis.....		3,272	.....	.....	above Cloquette.....	Wis.
Saint Marys.....		763	0.059	'06	Fort Wayne.....	Ind.
Salinas.....		4,084	.....	.....	Salinas.....	Cal.
Saline.....	Smoky Hill.....	2,730	.....	.....	Beverley	
Saline.....	Smoky Hill.....	3,463	.....	.....	.....	Kas.
Salmon.....		259	0.40	'06	Pulaski.....	N. Y.
Salt.....	Gila.....	2,880	.....	.....	above Verde River	
Salt.....	Gila.....	5,756	0.036	'04-'05	Roosevelt.....	Ariz.
Salt.....	Gila.....	6,260	0.045	'04-'05	McDowell.....	Ariz.
Salt.....	Gila.....	12,260	.....	.....	Arizona Dam.....	Ariz.
Saluda.....	Broad.....	1,056	0.51	'04-'05	Waterloo.....	S. C.
Saluda.....	Broad.....	2,350	.....	.....	mouth.....	S. C.
Sandy.....	Kennebec.....	340	.....	.....	Farmington.....	Me.
Sandy.....	Kennebec.....	650	0.137	'04-'05	Madison.....	Me.
San Diego.....		208	0.0005	'06	Lakeside.....	Cal.
San Francisco.....		1,800	0.021	'05	Alma.....	N. Mex.
San Gabriel.....		222	0.18	'06	Azusa.....	Cal.
Sangamon.....	Illinois.....	5,592	.....	.....	.....	Ill.
San Joaquin.....		1,637	.....	.....	Herndon.....	Cal.
San Juan.....		1,320	.....	.....	Arboles.....	Colo.
San Juan.....		6,920	0.035	'05	Farmington.....	N. Mex.
San Pedro.....		2,870	.....	.....	Dudleyville.....	Ariz.
Santa Ana.....		182	0.26	'06	Mentone.....	Cal.
Santa Ynez.....		207	0.005	'06	Santa Barbara.....	Cal.
Santee.....		14,700	.....	.....	.....	S. C.
Santiam, North Fork.....		740	1.00	'06	Mehama.....	Oregon
Santiam, South Fork.....		640	0.47	'06	Waterloo.....	Oregon
Saranac.....		624	0.498	'06	Plattsburg.....	N. Y.
Sauk.....	Mississippi.....	968	.....	.....	.....	
Savannah.....		2,712	.....	.....	Calhoun Falls.....	S. C.
Savannah.....		7,294	0.35	'04-'05	Augusta.....	Ga.
Savannah.....		10,000	.....	.....	.....	S. C. and Ga.
Schoharie Creek.....	Mohawk.....	240	0.125	'06	Prattsville.....	N. Y.
Schoharie Creek.....	Mohawk.....	684	.....	.....	Central Bridge	
Schoharie Creek.....	Mohawk.....	930	.....	.....	Schoharie Falls	
Schoharie Creek.....	Mohawk.....	947	.....	.....	Fort Hunter.....	N. Y.
Schroon.....	Hudson.....	479	.....	.....	Schroon Lake	



River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Schroon.....	Hudson.....	502	.....	.....	Tumblehead Falls	
Schroon.....	Hudson.....	556	.....	.....	Warrensburg.....	N. Y.
Schuylkill.....	Delaware.....	1,915	0.368	'05	Philadelphia.....	Pa.
Scioto.....	Ohio.....	153	.....	.....	Kenton.....	Ohio
Scioto.....	Ohio.....	1,051	0.039	'04-'05	Columbus.....	Ohio
Scioto.....	Ohio.....	1,660	.....	.....	Shadesville.....	Ohio
Scioto.....	Ohio.....	6,400	.....	.....	.....	Ohio
Sebasticook.....	Kennebec.....	1,070	.....	.....	.....	Me.
Seneca.....	Oswego.....	745	.....	.....	Waterloo	
Seneca.....	Oswego.....	771	.....	.....	Seneca Falls	
Seneca.....	Oswego.....	1,593	.....	.....	below Cayuga Lake	
Seneca.....	Oswego.....	2,472	.....	.....	Montezuma	
Seneca.....	Oswego.....	3,101	0.605	'04-'05	Baldwinsville.....	N. Y.
Seneca.....	Oswego.....	3,447	.....	.....	.....	N. Y.
Seneca.....	Tubelo.....	646	1.07	'05	Clemson College.....	S. C.
Seneca.....	Tubelo.....	908	.....	.....	.....	S. C.
Sevier.....	.....	255	.....	.....	Salina	
Sevier.....	.....	3,986	0.0063	'05	Gunnison.....	Utah
Sevier.....	.....	5,595	.....	.....	Leamington	
Shell Rock.....	Cedar.....	2,631	.....	.....	.....	Iowa
Shenandoah.....	Potomac.....	2,624	.....	.....	Riverton.....	Va.
Shenandoah.....	Potomac.....	2,850	.....	.....	.....	Va. and W. Va.
Shenandoah.....	Potomac.....	2,995	0.19	'04-'05	Millville.....	W. Va.
Shenandoah, South Branch.....	.....	1,288	.....	.....	Shenandoah	
Shenandoah, South Branch.....	.....	1,491	.....	.....	Overall	
Shenandoah, South Branch.....	.....	1,569	0.23	'04-'05	Front Royal.....	Va.
Shenandoah, North Branch.....	.....	215	.....	.....	Brocks Gap	
Shenandoah, North Branch.....	.....	511	.....	.....	Mt. Jackson	
Shenandoah, North Branch.....	.....	1,037	0.165	'05	Riverton.....	Va.
Shetucket.....	Yantic.....	396	0.558	'04-'05	Willimantic.....	Conn.
Shetucket.....	Yantic.....	1,245	.....	.....	Norwich.....	Conn.
Sheyenne.....	.....	5,400	0.009	'06	Haggart.....	N. Dak.
Shoshone.....	.....	1,480	0.12	'04-'05	Cody.....	Wyo.
Shoshone.....	.....	1,718	.....	.....	Corbett	
Shoshone.....	.....	2,720	.....	.....	Lovell.....	Wyo.
Shoshone, South Fork.....	.....	500	0.212	'06	Marquette.....	Wyo.
Siletz.....	.....	220	0.90	'06	Siletz.....	Oregon
Silver Creek.....	.....	221	0.06	'06	Silver Lake.....	Oregon
Silvies.....	.....	865	0.025	'06	Burns.....	Oregon
Skunk.....	Mississippi.....	4,409	.....	.....	.....	Iowa
Smoky Hill.....	Republican.....	2,255	.....	.....	above Ellsworth.....	Kas.
Smoky Hill.....	Republican.....	7,980	0.0047	'04	Ellsworth.....	Kas.
Smoky Hill.....	Republican.....	20,000	.....	.....	.....	Kas.
Snake.....	Columbia.....	10,100	.....	.....	Idaho Falls.....	Ida.
Snake.....	Columbia.....	17,900	0.109	'05	Minidoka.....	Ida.
Snake.....	Columbia.....	22,600	.....	.....	Montgomery Ferry	
Snake, North Fork.....	.....	1,040	0.902	'06	Ora.....	Ida.
Snake, South Fork.....	.....	820	0.458	'05	Moran.....	Wyo.
Snake, South Fork.....	.....	5,480	0.376	'05	Lyon.....	Ida.
Solomon.....	Smoky Hill.....	5,539	.....	.....	Beloit	
Solomon.....	Smoky Hill.....	6,815	.....	.....	Niles	
Solomon.....	Smoky Hill.....	6,939	.....	.....	.....	Kas.
South.....	Shenandoah.....	1,050	.....	.....	Pt. Republic.....	Va.
South.....	Ocmulgee.....	595	.....	.....	.....	Ga.
Spanish Fork.....	.....	670	0.001	'06	Spanish Fork.....	Utah
Spearfish Creek.....	.....	230	0.35	'06	Spearfish.....	S. Dak.
Spokane.....	.....	4,000	0.40	'06	Spokane.....	Wash.

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Spoon.....	Illinois.....	1,905	.....	.....	.....	Ill.
Stanislaus.....	.....	935	0.20	'06	Knights Ferry.....	Cal.
Staunton.....	Dan.....	3,076	.....	.....	Randolph.....	Va.
Staunton.....	Dan.....	3,450	.....	.....	.....	Va.
Staunton.....	Dan.....	3,546	.....	.....	Clarksville.....	Va.
St. Mary.....	.....	452	0.21	'06	Cardston.....	Alberta
Stony Creek.....	.....	760	0.023	'06	Fruto.....	Cal.
Susquehanna.....	.....	1,638	.....	.....	bel. mouth Unadilla	.....
Susquehanna.....	.....	1,789	.....	.....	Nineveh	.....
Susquehanna.....	.....	2,024	.....	.....	Susquehanna.....	Pa.
Susquehanna.....	.....	2,279	.....	.....	Birmingham.....	Pa.
Susquehanna.....	.....	2,400	0.294	'06	Binghamton.....	N. Y.
Susquehanna.....	.....	4,945	.....	.....	ab. mouth Chemung	.....
Susquehanna.....	.....	7,463	.....	.....	bel. mouth Chemung	.....
Susquehanna.....	.....	9,810	0.46	'04-'05	Wilkesbarre.....	Pa.
Susquehanna.....	.....	11,070	0.288	'06	Danville.....	Pa.
Susquehanna.....	.....	24,030	0.395	'06	Harrisburg.....	Pa.
Susquehanna.....	.....	26,800	0.47	'06	McCall Ferry.....	Pa.
Susquehanna, W. Branch.....	.....	5,640	0.43	'04-'05	Williamsport.....	Pa.
Susquehanna, W. Branch.....	.....	6,538	.....	.....	Allenwood.....	Pa.
Susquehanna, W. Branch.....	.....	7,027	.....	.....	mouth	.....
Sweetwater.....	.....	2,929	.....	.....	mouth.....	Wyo.
Tallapoosa.....	Coosa.....	2,500	0.20	'04-'05	Sturdevant.....	Ala.
Tallapoosa.....	Coosa.....	2,610	.....	.....	Susanne	.....
Tallapoosa.....	Coosa.....	3,840	.....	.....	Milstead	.....
Tallapoosa.....	Coosa.....	4,935	.....	.....	.....	Ga. and Ala.
Tar.....	Pamlico.....	2,290	.....	.....	Tarboro	.....
Tar.....	Pamlico.....	3,000	.....	.....	.....	N. C.
Tennessee.....	.....	8,990	0.30	'04-'05	Knoxville.....	Tenn.
Tennessee.....	.....	21,418	0.30	'04-'05	Chattanooga.....	Tenn.
Teton.....	.....	960	0.26	'06	St. Anthony.....	Ida.
Teton.....	.....	967	0.387	'05	St. Anthony.....	Ida.
Thames.....	.....	1,450	.....	.....	.....	Conn., R. I., Mass.
Thornapple.....	Grand.....	824	.....	.....	.....	Mich.
Thunder Bay.....	.....	580	.....	.....	ab. North Branch	.....
Thunder Bay.....	.....	789	.....	.....	ab. South Branch	.....
Thunder Bay.....	.....	1,267	0.294	'05	Alpena.....	Mich.
Thunder Bay, S. Branch.....	.....	454	.....	.....	.....	Mich.
Thunder Bay, N. Branch.....	.....	199	.....	.....	.....	Mich.
Tieton.....	.....	289	0.80	'06	Naches.....	Wash.
Tiffin.....	Maumee.....	723	.....	.....	.....	Mich.
Tiffin.....	Maumee.....	748	0.064	'04-'05	Defiance.....	Ohio
Tiger.....	Broad.....	720	.....	.....	.....	.....
Tioga.....	Susquehanna.....	750	.....	.....	Canistota.....	N. Y.
Tioga.....	Susquehanna.....	1,530	.....	.....	.....	Pa., N. Y.
Tioughnioga.....	Susquehanna.....	428	.....	.....	Atselic	.....
Tioughnioga.....	Susquehanna.....	735	.....	.....	.....	N. Y.
Tioughnioga, W. Branch.....	.....	103	.....	.....	.....	.....
Tioughnioga, E. Branch.....	.....	164	.....	.....	.....	.....
Tippecanoe.....	.....	1,890	0.279	'06	Delphi.....	Ind.
Toe.....	Nolichucky.....	438	.....	.....	Hunt Dale.....	N. C.
Tohickon Creek.....	Delaware.....	102	0.560	'06	Pt. Pleasant.....	Pa.
Tombigbee.....	Alabama.....	4,440	0.15	'04-'05	Columbus.....	Miss.
Tombigbee.....	Alabama.....	8,830	0.190	'06	Epas.....	Ala.
Tombigbee.....	Alabama.....	21,917	.....	.....	.....	Ala.
Tongue.....	.....	3,875	.....	.....	Miles City.....	Mont.
Tonto Creek.....	Salt.....	1,030	.....	.....	Livingston.....	Ariz.

River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Trinity.....		16,000	0.04	'04-'05	Riverside.....	Tex.
Truckee.....		502	0.040	'05	Tahoe.....	Cal.
Truckee.....		955	0.403	'05	Nev.-Cal. State line	
Truckee.....		991	.....	.....	mouth Little Truckee	
Truckee.....		1,014	.....	.....	Laughtono.....	Nev.
Truckee.....		1,519	0.167	'05	Vista.....	Nev.
Truckee.....		2,130	0.096	'05	Wadsworth.....	Nev.
Tuckaseegee.....		662	0.71	'04-'05	Bryson.....	N. C.
Tugaloo.....		593	1.0	'04-'05	Madison.....	Ga.
Tugaloo.....		870	.....	.....	..... Ga. and S. C.	
Tule.....		437	0.09	'06	Portersville.....	Cal.
Tuolomne.....		400	.....	.....	Hetch Hetchy Valley	
					Dam site	
Tuolomne.....		1,501	0.041	'05	Lagrange.....	Cal.
Tuolomne.....		1,635	.....	.....	Modesto.....	Cal.
Tygart's Valley.....	Monongahela.....	1,367	.....	.....		
Uinta.....		218	.....	.....	Whiterocks.....	Utah
Uinta.....		672	0.140	'04	Fort Duchesne.....	Utah
Uinta.....		967	0.086	'04	Ouray School.....	Utah
Umatilla.....	Columbia.....	353	1.00	'06	Gibbon.....	Oregon
Umatilla.....		1,200	0.04	'06	Yoakum.....	Oregon
Umatilla.....		2,130	0.0005	'06	Umatilla.....	Oregon
Umpqua, North Fork.....		1,000	0.90	'06	Oakcreek.....	Oregon
Umpqua, South Fork.....		1,800	0.12	'06	Brockway.....	Oregon
Uncompahgre.....	Gunnison.....	433	0.021	'04-'05	Colona.....	Colo.
Uncompahgre.....	Gunnison.....	497	.....	.....	Ft. Crawford	
Uncompahgre.....	Gunnison.....	565	0.050	'05	Montrose.....	Colo.
Uncompahgre.....	Gunnison.....	565	0.10	'06	Montrose.....	Colo.
Uncompahgre.....	Gunnison.....	1,130	0.010	'04-'05	Delta.....	Colo.
Upper Iowa.....	Mississippi.....	952	.....	.....	..... Minn.	
Verde.....		6,000	0.030	'04-'05	Ft. McDowell.....	Ariz.
Verdigris.....	Arkansas.....	3,067	.....	.....	McTaggart's Mills.....	Kas.
Verdigris.....	Arkansas.....	8,010	.....	.....	..... Kas. and I. T.	
Vermilion.....	Missouri.....	2,230	.....	.....	..... Dak.	
Vermilion.....	Illinois.....	1,413	.....	.....	..... Ill.	
Wabash.....	Ohio.....	3,163	0.273	'05	Logansport.....	Ind.
Wabash.....	Ohio.....	12,200	0.22	'06	Terre Haute.....	Ind.
Walker.....		2,420	0.024	'05	Wabuska.....	Nev.
Walker.....		306	0.26	'06	Coleville.....	Cal.
Walker, East Fork.....		1,100	0.09	'06	Yerington.....	Nev.
Walker, East Fork.....		1,103	0.052	'05	Yerington.....	Nev.
Walker, West Fork.....		306	0.199	'05	Coleville.....	Cal.
Walla Walla.....		130	1.70	'06	Milton.....	Oregon
Wallowa.....		510	0.53	'06	Wallowa.....	Oregon
Wallowa.....		870	0.42	'06	Elgin.....	Oregon
Wapsipinicon.....	Mississippi.....	1,308	0.127	'06	Stone City.....	Iowa
Wapsipinicon.....	Mississippi.....	2,568	.....	.....	..... Iowa	
Watauga.....		261	.....	.....	Butler.....	Tenn.
Watauga.....		408	0.475	'04-'05	Elizabethton.....	Tenn.
Weiser.....		1,670	0.046	'04	Weiser.....	Ida.
Wenatchee.....		1,190	0.90	'06	Cashmere.....	Wash.
West Gallatin.....		860	0.40	'04-'05	Salesville.....	Mont.
White, East Branch.....		4,900	0.18	'04-'05	Shoals.....	Ind.
White, West Branch.....		1,520	0.23	'04-'05	Indianapolis.....	Ind.
White.....	Arkansas.....	27,925	.....	.....	..... Ark. and Mo.	
White.....	Connecticut.....	680	0.309	'04	Sharon.....	Vt.
Willamette.....		4,860	0.69	'06	Albany.....	Oregon



River.	Tributary of	Drainage Area.	Low Flow.	Year.	At	State.
Willamette, Coast Fork.....		690	0.10	'06	Goshen.....	Oregon
Willamette, Middle Fork.....		1,450	0.60	'06	Jasper.....	Oregon
Willow Creek.....		259	0.015	'06	Malheur.....	Oregon
Willow Creek.....		455	0.018	'06	Dell.....	Oregon
Winooski.....		885	0.695	'06	Richmond.....	Vt.
Wisconsin.....	Mississippi.....	2,630	1.10	'06	Merrill.....	Wis.
Wisconsin.....	Mississippi.....	5,800	0.834	'06	Necedah.....	Wis.
Wisconsin.....	Mississippi.....	12,280	.....	.....	mouth.....	Wis.
Wood.....		906	.....	.....	Hailey.....	Ida.
Wood.....		2,190	.....	.....	Toponis.....	Ida.
Yadkin.....		500	0.97	'05	North Wilkesboro.....	N. C.
Yakima.....		1,960	.....	.....	Selah.....	Wash.
Yakima.....		3,300	0.210	'06	Yakima.....	Wash.
Yakima.....		5,230	0.031	'06	Kiona.....	Wash.
Yamhill.....		290	0.28	'06	Sheridan.....	Oregon
Yampa.....		1,730	0.16	'06	Craig.....	Colo.
Yampa.....	Green.....	1,730	0.072	'05	Craig.....	Colo.
Yampa.....	Green.....	3,670	0.050	'05	Maybell.....	Colo.
Yazoo.....	Mississippi.....	8,580	0.159	'04	Yazoo City.....	Miss.
Yazoo.....	Mississippi.....	12,794	.....	.....	.....	Miss.
Yellowstone.....		2,635	.....	.....	Harr.....	Mont.
Yellowstone.....		3,580	0.289	'05	Livingstone.....	Mont.
Yellowstone.....		11,180	0.240	'05	Billings.....	Mont.
Yellowstone.....		66,090	0.068	'05	Glendive.....	Mont.
Youghiogheny.....	Monongahela.....	295	0.160	'04	Friendsville.....	Md.
Youghiogheny.....	Monongahela.....	435	0.126	'04-'05	Confluence.....	Pa.
Youghiogheny.....	Monongahela.....	1,800	.....	.....	.....	Md. and Pa.
Yuba.....		1,220	0.376	'05	Smartville.....	Cal.
Yuba, North Fork.....		483	.....	.....	North San Juan.....	Cal.
Yuba, Middle Fork.....		205	.....	.....	North San Juan.....	Cal.

ARTICLE 9.—*The topography* of the drainage area represents the undulations of the surface, which exercise an important influence upon the distribution of run-off. It is self-evident that the storm run-off will be greater from a hilly country than from table-lands and that the part of precipitation remaining available for ground storage will be correspondingly smaller; the topography, therefore, is one of the fundamental conditions determining constancy, fluctuations, and flood characteristics of stream flow and should receive commensurate consideration.

A topographical map of the United States is published by the United States Geological Survey, from which the general topography of all important drainage areas can be readily found,—that is, it can be learned whether the area is generally of a hilly or flat country, whether stream channels are narrow and declivitous or broad valleys, and what, if any, is the area of lakes and swamps. It is not necessary to define these conditions as to details, but it is essential to understand the prevailing features as distinguished between the flat land drainage areas of streams in Iowa, Illinois, Indiana, and the middle West, and those of

rolling and hilly formation in Virginia, Kentucky, Vermont, or the Pacific slope; or of parts of a river, when perhaps a site on its upper reach is considered, where practically all of the area is in mountain ranges or foot-hills, or a point near the mouth of the river, where only a small part of the area is in hilly and by far the greater is in flat or rolling country.

As an example, the Cumberland River may be cited, of which Chart 2 gives drainage areas for two important water-power sites,—the upper one at Cumberland Falls, Ky., often called the Niagara of the South, the lower one near Nashville, Tenn.; the first is almost wholly in the mountain region, while the Nashville site area is largely of flat and rolling country.

Such general information, as has been said before, can be gleaned from the United States Geological Map or from the Map of Altitudes published by the same department. Some conclusions as to topography can frequently be drawn from location of railroads and highways, especially from the former, which in hilly and broken country more generally parallel the watercourses than in flat or rolling parts. Many sections have been covered by detail topographical surveys, and the information then is conclusive.

To secure a sufficient appreciation of the topography from any or all of these sources requires considerable experience in the reading of the projections. It is, of course, prohibitive in cost to make surveys for this purpose, but a horseback reconnoissance or drifting down the river, or the major portion of it, will frequently enable the investigator to form correct conclusions on this point. The author has examined several rivers by going down in a canoe, and the information thus gained proved exceedingly valuable in planning power developments.

ARTICLE 10.—*The geology* of the drainage area should be understood to the extent of influencing the degree of absorption and storm run-off. Where rock ledge is at surface or crops out in banks, the depth of overlying drift is readily ascertained; otherwise borings should be made, if practicable to rock, and the character of the overlying material found. The percolosity of the ground determines its storage capacity. A very satisfactory conception of this latter can be obtained from the observance of conditions following heavy rainfalls, when frequent accumulations of pools of water in level fields are evidence of the prevalence of non-absorbent soil, while its rapid disappearance indicates sandy and gravelly for-



mations. The stream itself gives testimony of these conditions, the water being turbid where draining clayey soils, while the run-off from porous earths shows little discoloration. No practical information, for the investigation in hand, can be gained from this study beyond the formation of the immediate subsurface, and this can be obtained by a personal examination of the locality in question and a study of the farming culture. In many sections conclusive data can be obtained from records of well borings, which are generally sunk by one concern covering several counties. Some of the State Geological departments publish such records.

ARTICLE 11.—*The flora and culture* in the drainage area constitute the third characteristic which influences the flow. Forests are conservers of water, protecting it from the heat of the sun and the winds, and thus retarding its evaporation as compared with cultivated fields, grazing land, or open soil, while the many obstructions to the storm run-off in timbered areas result in a greater portion finding its way into ground storage. The requirement of moisture for tree growth is considerably less than that of crops; for instance, long grass consumes six times as much water as fir trees. Wooded hill-sides, tamarack and cypress swamps are storage reservoirs; highly cultivated table-lands with tile drainage leave but little, if any, surplus during the growing season for run-off. It is important, therefore, to secure an adequate knowledge of these conditions. The degree of cultivation can be ascertained from the rural population of counties and the character and volume of produce shipped out, all of which, together with the forest area, can be obtained from the United States census publications.

ARTICLE 12.—As stated before, *precipitation* is the source of all stream flow, which latter can only be a fraction of it. Frequently a good enough preliminary estimate of flow can be made if quantity of precipitation in drainage area and the extent of the latter which contributes to the river at the point under examination are known, and reliable data of fluctuations of flow throughout seasons and years can be found from such information.

Drainage areas, as has been seen, can be readily measured, and precipitation is ascertainable from public records. For fifty years and longer rain- and snow-fall have been measured in the United States and Canada through the agency of the Government, in this country by the United States Weather Bureau, in the Dominion of Canada by Provincial meteorological departments; points of observations are distributed over



Cumberland River Drainage area  
above Nashville, Tenn.,

13987 square miles.

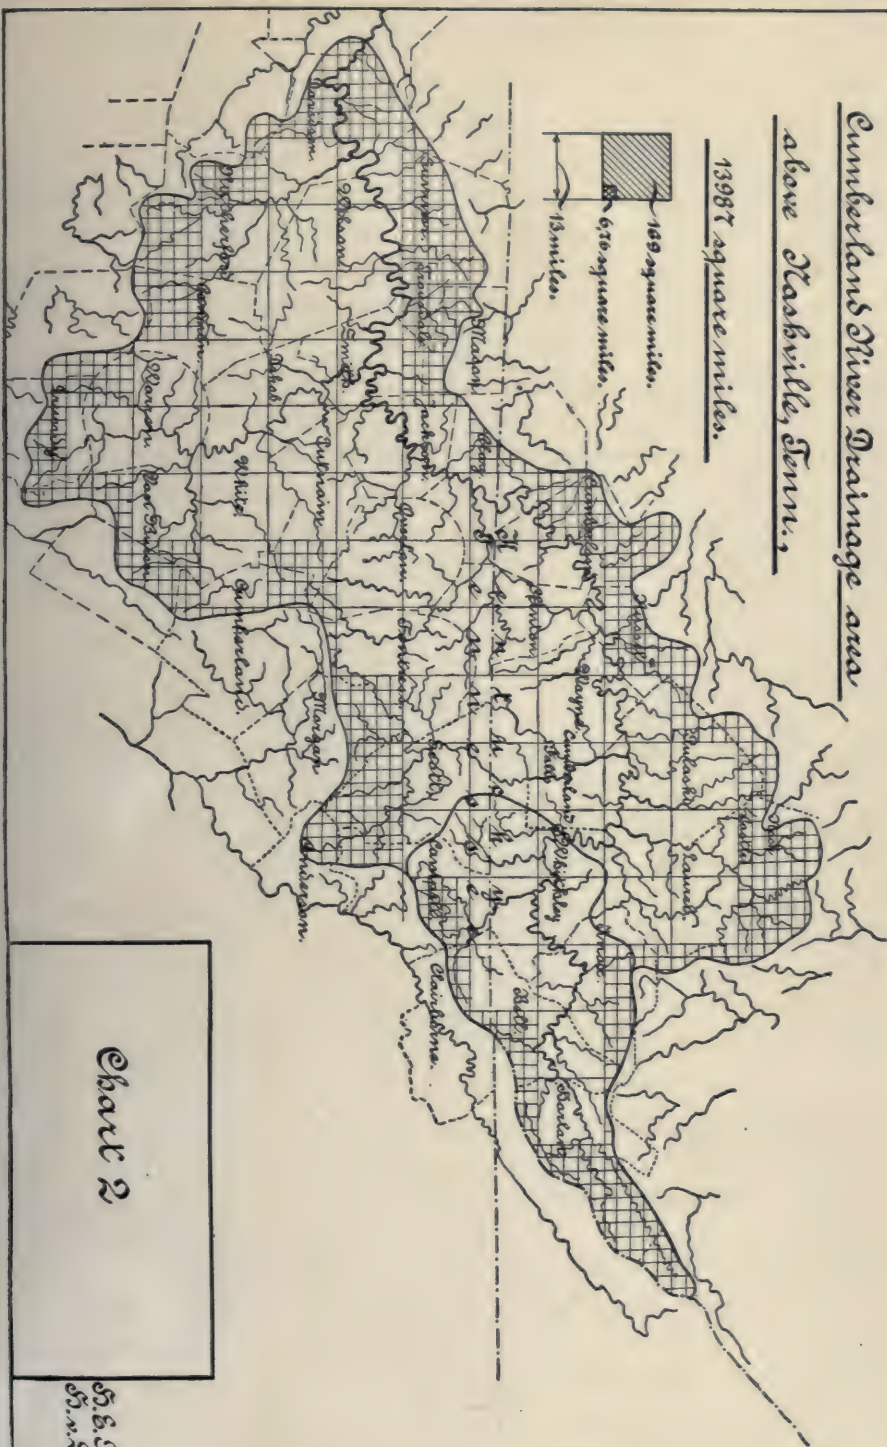
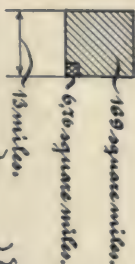


Chart 2

U.S.G.S.  
1884

the country with somewhat of a uniformity, and one or more of them can always be found in a certain drainage system. The measurements are made by means of standard cups, so exposed that they receive the normal rain- and snow-fall, which is measured as to its depth in inches and fractions, the snow being melted for that purpose and therefore expressed in the same quantity as the rain. Observations are made daily of the rain- or snow-fall during twenty-four hours, and the daily, monthly, and annual totals are given in public records.

Such measurements require no skill and may, therefore, be accepted as a fairly accurate record of precipitation.

From these data the general distribution of precipitation is well known; it is illustrated on Chart 3, on which equi-precipitation curves are projected, the precipitation being the normal annual quantity in inches. This may be used with advantage for first investigations of stream flow, exhibiting neither the wet nor dry but the normal year.

Observations of this character have been carried on for a sufficiently continuous period to warrant the conclusion that precipitation is not undergoing any great changes: it does not rain more or less now than it did fifty years ago, nor does the clearing of land seem to be followed by any marked change in rainfall in that section. The ordinary fluctuations of precipitation appear to be represented in a cycle of seven years,—that is, the totals of seven years of precipitation are very nearly equal; each of these seven-year periods contains one dry year, the one of least precipitation, and generally one or two extremely wet years.

ARTICLE 13.—The information to be sought in connection with *determination of stream flow* comprises the quantity and distribution of rain and snow during at least one complete cycle of seven years, in order to fix upon the ordinary dry year of the period. The safe method is to collect the precipitation data by monthly totals from as many observation points as are obtainable in the drainage area for a period of fifteen continuous years, which are certain to contain a complete cycle. If the entire drainage area is located in the same precipitation belt as per Chart 3, the monthly means of all observations are compiled and may be taken as applying to the entire area; when the drainage area extends through different precipitation belts, the monthly means of stations in each precipitation belt are to be found, the drainage area is to be divided into parts covered by different precipitation belts, and the respective monthly means applied to each. Such precipitation records from five points in















drainage area of Green River, Ky., for fifteen years by monthly means, which in the case of this system, lying in the same precipitation belt, may correctly be accepted for the whole area, are here given.

PRECIPITATION IN GREEN RIVER, KY., DRAINAGE AREA FROM 1891 TO 1905,  
BY MONTHLY MEANS.

Station.	Jan.	Feb.	March	April	May	June	July	Aug.	Sept.	Oct.	Nov.	Dec.	Total.
1891													
Bowling Green.....	6.80	7.61	8.24	2.42	0.76	3.02	1.08	6.76	2.41	0.96	6.56	4.37	50.99
Edmonton.....	5.77	6.84	9.46	2.61	0.97	6.71	2.15	6.27	1.41	0.94	6.22	3.38	52.73
Greensburg.....	4.96	6.80	8.83	2.05	0.65	4.07	2.38	4.84	2.30	1.31	5.22	3.15	45.56
1892													
Bowling Green.....	2.60	2.60	5.48	10.84	6.64	4.35	1.19	2.57	4.12	0.10	4.39	7.73	52.61
Edmonton.....	2.42	3.04	4.79	8.56	4.97	3.78	2.58	.....	.....	0.41	4.30	5.50	
Greensburg.....	2.04	2.62	3.52	8.15	4.92	2.67	4.02	5.29	3.20	0.10	3.80	4.53	44.86
1893													
Bowling Green.....	0.72	4.26	3.29	7.12	8.67	5.87	5.85	1.37	2.74	4.88	4.03	2.79	51.59
Edmonton.....	1.38	4.67	3.66	5.10	8.63	6.46	5.29	2.09	3.54	3.08	3.63	3.42	50.95
Greensburg.....	0.64	4.61	3.63	5.61	5.44	8.52	6.02	3.26	3.21	4.46	2.83	3.47	51.70
1894													
Bowling Green.....	3.09	6.37	2.72	3.59	3.47	0.93	3.84	2.98	3.28	0.83	1.41	2.84	35.35
Edmonton.....	3.31	5.47	2.70	3.33	4.18	1.79	2.54	4.62	3.91	1.22	2.13	4.21	39.41
Greensburg.....	2.92	5.14	3.26	2.71	3.14	3.59	2.97	4.75	2.64	1.25	1.42	3.94	37.73
1895													
Bowling Green.....	5.28	0.47	3.54	2.82	5.42	1.96	9.95	3.63	0.67	1.45	4.08	5.17	44.44
Edmonton.....	5.57	0.84	4.46	3.09	4.46	2.03	5.35	1.79	1.18	2.69	3.42	6.06	40.94
Greensburg.....	6.73	0.81	4.39	3.32	2.18	5.10	4.85	2.38	0.25	2.06	3.73	4.92	40.72
1896													
Bowling Green.....	1.40	3.26	6.92	3.67	5.71	3.94	8.21	1.48	3.82	1.32	5.42	1.70	46.85
Edmonton.....	0.81	3.87	7.56	2.52	5.24	3.48	8.27	3.21	3.28	0.74	5.12	1.63	45.73
Greensburg.....	0.70	3.86	6.90	1.25	4.30	8.47	9.32	1.85	3.60	0.99	4.71	1.64	47.59
Leitchfield.....	1.31	3.35	5.47	0.78	6.41	2.87	6.58	1.25	3.54	1.41	5.47	3.06	41.50
St. John.....	.....	.....	4.92	0.43	5.04	3.10	5.00	1.25	3.60	1.48	4.68	3.02	
1897													
Bowling Green.....	3.34	4.56	7.61	7.45	2.43	0.80	2.98	2.30	0.08	0.80	3.15	3.76	39.26
Edmonton.....	2.87	7.64	8.10	6.57	1.88	2.08	4.90	2.40	.....	0.82	3.74	3.80	
Greensburg.....	3.62	6.10	8.22	7.16	5.04	3.21	4.90	4.00	.....	0.78	3.77	3.78	
Leitchfield.....	3.36	6.66	9.62	5.72	3.10	1.84	2.86	3.70	.....	1.38	4.35	3.48	
St. John.....	3.41	5.60	8.92	5.11	3.39	3.31	2.71	1.33	0.03	1.65	4.46	3.62	43.54
1898													
Bowling Green.....	11.99	0.82	7.44	4.08	4.75	3.87	2.19	3.80	3.32	4.95	3.22	2.96	53.39
Edmonton.....	10.53	1.49	5.96	3.21	2.50	5.45	3.15	2.04	3.62	5.25	2.87	2.87	48.94
Greensburg.....	9.30	1.26	6.85	3.21	4.06	1.75	4.94	1.81	4.90	6.65	2.77	3.85	51.35
Leitchfield.....	10.73	1.09	9.27	4.25	5.83	4.34	4.35	1.59	6.12	5.14	3.08	2.94	58.73
St. John.....	9.72	1.26	9.36	4.20	4.75	5.05	2.31	3.22	5.35	3.50	2.57	2.76	54.05
1899													
Bowling Green.....	7.51	4.14	8.65	4.14	4.83	1.93	5.26	2.61	0.71	1.57	1.83	4.86	48.04
Edmonton.....	6.18	6.33	10.73	4.42	4.61	2.67	5.45	1.54	1.23	2.22	1.68	5.44	52.50
Greensburg.....	7.34	4.59	10.32	4.02	6.16	3.82	3.16	1.26	0.92	2.18	1.94	4.88	50.59
Leitchfield.....	7.20	3.68	8.09	3.88	5.01	2.84	3.32	3.78	1.07	2.04	2.75	4.74	48.40
St. John.....	5.88	3.32	7.65	4.02	4.05	1.98	2.45	4.61	0.86	2.61	1.75	4.77	43.95

Station.	Jan.	Feb.	March	April	May	June	July	Aug.	Sept.	Oct.	Nov.	Dec.	Total.
1900													
Bowling Green.....	3.15	5.30	2.74	2.60	4.01	5.67	5.72	1.67	4.41	2.65	10.94	3.17	52.03
Edmonton.....	2.26	4.78	3.97	2.71	2.66	7.14	6.27	3.73	3.01	1.22	10.05	3.09	50.89
Greensburg.....	2.16	4.85	3.63	2.68	3.44	9.94	6.43	4.31	1.66	1.23	6.85	3.21	50.39
Leitchfield.....	3.06	6.48	2.09	3.33	4.58	3.79	3.32	3.21	1.34	2.91	11.06	3.21	48.38
St. John.....	2.98	5.59	2.37	2.56	3.25	4.46	4.45	4.57	1.37	2.25	8.81	2.79	45.45
1901													
Bowling Green.....	2.13	1.15	3.36	3.90	1.31	2.71	0.17	7.34	5.38	0.62	1.25	5.60	34.92
Edmonton.....	2.31	1.11	3.81	5.36	2.69	4.57	0.40	7.31	5.66	1.15	1.32	4.80	40.49
Greensburg.....	1.99	0.93	3.23	4.30	2.35	4.19	1.55	3.66	3.87	0.97	1.03	4.35	32.42
Leitchfield.....	1.99	1.14	4.21	3.57	2.35	2.65	1.12	5.80	6.49	0.89	1.10	5.25	36.56
St. John.....	1.57	1.08	4.02	2.22	2.65	3.98	1.30	3.86	4.15	0.79	1.12	4.95	31.69
1902													
Bowling Green.....	8.25	1.39	6.18	2.68	3.82	3.22	0.72	2.53	4.35	2.78	4.49	9.24	49.65
Edmonton.....	7.37	1.40	7.03	2.86	2.77	2.77	3.31	1.78	4.96	2.57	4.29	9.82	50.93
Greensburg.....	7.54	0.60	4.80	2.02	2.42	3.46	4.27	2.18	4.88	3.07	5.05	8.82	49.11
Leitchfield.....	6.61	0.89	3.91	3.31	2.94	5.51	0.89	2.15	8.25	1.04	4.45	11.97	51.92
St. John.....	5.65	0.85	3.67	2.14	3.73	5.16	1.17	4.04	8.26	1.36	4.67	7.19	47.89
1903													
Bowling Green.....	2.64	8.37	3.10	3.23	4.95	5.95	5.46	2.03	0.76	2.63	1.21	3.57	43.90
Edmonton.....	2.25	8.65	6.67	5.35	3.69	4.28	5.63	2.19	0.35	3.01	3.89	3.02	48.91
Greensburg.....	2.69	8.48	6.01	4.22	4.27	3.84	3.02	5.25	0.35	3.11	3.39	3.08	47.71
Leitchfield.....	2.55	8.19	3.78	3.93	4.65	5.43	4.33	3.95	1.35	1.48	2.97	3.38	45.99
St. John.....	2.44	7.94	3.64	3.16	3.86	3.94	2.30	4.50	0.30	1.57	4.45	2.54	40.64
1904													
Bowling Green.....	2.93	2.61	5.00	2.46	2.32	5.50	4.09	2.41	2.24	0.05	1.40	5.40	36.41
Edmonton.....	3.81	2.45	7.27	2.62	4.17	2.35	4.26	2.92	1.48	0.30	1.34	4.98	37.95
Greensburg.....	3.34	2.05	5.52	2.78	2.50	2.47	2.84	5.48	2.66	0.16	1.06	4.67	35.53
Leitchfield.....	3.32	2.34	6.85	3.67	1.37	6.03	2.49	1.28	4.33	0.20	0.40	5.14	37.42
St. John.....	2.99	3.13	6.09	2.98	3.50	3.25	2.75	1.12	2.49	0.21	0.57	5.46	34.54
1905													
Bowling Green.....	3.21	1.96	3.53	2.16	3.39	4.22	3.65	1.19	3.00	3.34	2.23	3.55	35.43
Edmonton.....	2.84	2.53	5.15	2.46	4.31	5.59	6.53	2.58	4.45	4.92	3.52	4.72	49.62
Greensburg.....	3.12	2.05	5.59	2.99	3.81	3.69	6.03	4.04	6.13	5.33	2.94	4.68	50.40
Leitchfield.....	2.70	2.23	4.67	3.33	6.65	5.52	5.32	2.00	3.90	4.16	3.53	5.22	49.23
St. John.....	2.60	2.31	4.66	3.55	5.74	4.85	5.93	2.16	1.90	5.80	3.19	5.13	47.82

The annual totals are plotted as shown on Profile 1, from which the fluctuations are readily appreciated, the year 1901 being unmistakably the dryest of the period. This is the year we are concerned with, and by plotting the monthly precipitation as shown on Profile 2 we see how it was distributed and which are the months of low flow.

This closes the necessary precipitation investigation, the dry year has been found, the low flow months are known, and it remains to be determined what portion of this precipitation evaporates, which will leave the quantity representing the run-off and thus the flow.

ARTICLE 14. *Evaporation.*—Investigations have been carried on in this country and abroad for many years with the object of finding a



practical method for evaporation determination, and observations and measurements of evaporation from water surfaces, forests, uncultivated lands, and fields with growing crops of all kinds have conclusively established such a ratio. Evaporation from water surfaces is found by aid of evaporation pans which are of considerable area and water-tight, the contents of which may be found precisely at known intervals of time, the diminution being due to evaporation. For this determination from land, known areas are isolated, surrounded by ditches in which the water draining off can be accurately measured, when the difference between the quantity of a certain rainfall and that draining off by these ditches represents evaporation from that area for a given time, other climatological conditions being duly observed. These experiments have been repeated in various latitudes by different persons, and from them certain evaporation values have been determined.

Table 2 gives monthly evaporation in inches from different surfaces for certain locations.

TABLE 2.\*—EVAPORATION FROM WATER AT EMDRUP, DENMARK.

(Latitude, 55° 41' N.; longitude, 12° 34' E. from Greenwich.)

Year.	Jan. in.	Feb. in.	Mch. in.	Apr. in.	May. in.	June. in.	July. in.	Aug. in.	Sept. in.	Oct. in.	Nov. in.	Dec. in.	Total. in.
1849 ....	1.1	0.3	1.8	2.5	4.1	5.8	4.7	4.0	2.6	1.1	0.9	0.6	29.5
1850 ....	1.1	0.3	1.2	1.7	4.5	5.6	4.8	4.8	2.4	1.6	0.9	0.2	29.1
1851 ....	0.5	0.4	0.7	1.7	4.2	4.8	5.7	5.1	2.7	1.5	0.6	0.5	28.4
1852 ....	0.7	0.5	0.8	2.4	3.8	4.6	6.4	4.5	2.7	1.7	0.8	0.5	29.4
1853 ....	0.5	0.1	0.7	1.0	4.1	6.2	5.1	4.2	2.8	1.1	0.6	0.5	26.9
1854 ....	0.5	0.9	0.9	3.2	3.3	4.5	5.2	4.3	2.6	1.2	0.7	0.6	27.9
1855 ....	1.0	1.1	0.5	1.2	2.6	4.1	4.7	4.1	2.8	1.4	0.9	0.7	25.1
1856 ....	0.5	0.5	1.2	2.1	2.8	4.6	4.3	4.0	2.0	1.9	0.6	0.5	24.0
1857 ....	0.7	0.6	0.6	1.4	4.1	6.6	5.9	4.3	3.2	1.4	0.7	0.4	29.9
1858 ....	0.4	0.7	1.2	3.1	5.1	6.1	4.9	5.6	2.8	1.6	0.7	0.4	30.6
1859 ....	0.3	0.5	0.7	1.9	4.3	5.8	5.3	3.8	1.8	1.0	0.7	0.3	26.4
Mean....	0.7	0.5	0.9	2.0	3.7	5.4	5.2	4.4	2.6	1.3	0.7	0.5	27.9
Ratio ...	.301	.215	.387	.860	1.592	2.323	2.237	1.892	1.118	.559	.301	.215	
<i>Mean Evaporation from Short Grass, 1852 to 1859, inclusive.</i>													
Mean....	0.7	0.8	1.2	2.6	4.1	5.5	5.2	4.7	2.8	1.3	0.7	0.5	30.1
<i>Mean Evaporation from Long Grass, 1849 to 1856, inclusive.</i>													
Mean....	0.9	0.6	1.4	2.6	4.7	6.7	9.3	7.9	5.2	2.9	1.3	0.5	44.0
<i>Mean Rainfall at same Station, 1848 to 1859, inclusive.</i>													
Mean....	1.5	1.7	1.0	1.6	1.5	2.2	2.4	2.4	2.0	2.3	1.8	1.5	21.9

\*J. T. Fanning, Water-Supply Engineering.



EVAPORATION FROM WATER-SURFACE AT BOSTON, MASS., IN INCHES—FOURTEEN  
YEARS\*,—1875-1890.

	1876.	1877.	1878.	1879.	1880.	'81-'84.	1885.	1886.	1887.	1888.	1889.	Total.	Mean.
January.....	0.96	0.96	0.96	0.96	0.96	0.96	0.96	0.96	0.96	0.96	0.96	15.36	0.96
February.....	1.05	1.05	1.05	0.15	1.05	1.05	1.05	1.05	1.05	1.05	1.05	16.80	1.05
March.....	1.70	1.70	1.70	1.70	1.70	1.70	1.70	1.70	1.70	1.70	1.70	27.20	1.70
April.....	2.98	2.98	2.98	2.98	2.98	2.98	2.98	3.12	3.07	2.78	2.84	47.57	2.97
May.....	4.45	4.05	4.14	5.89	5.22	4.45	3.77	4.45	4.83	3.35	4.57	71.42	4.46
June.....	5.44	5.68	5.26	5.32	6.46	5.55	7.01	5.25	5.05	5.98	3.94	88.69	5.54
July.....	7.50	4.82	6.04	6.41	5.82	5.98	7.09	5.59	5.96	5.57	5.04	95.72	5.98
August.....	6.21	4.40	4.33	5.23	5.34	5.50	7.41	5.80	6.20	5.81	4.25	87.98	5.50
September.....	3.48	4.08	4.04	3.80	4.04	4.20	5.13	4.55	4.57	3.91	3.08	65.88	4.12
October.....	3.12	2.51	3.52	2.99	2.79	3.11	2.79	4.13	3.61	3.27	3.13	50.52	3.46
November.....	0.66	2.23	2.23	2.23	2.60	2.23	2.23	2.69	3.00	2.71	1.98	35.94	2.25
December.....	1.51	1.51	1.51	1.51	1.51	1.51	1.51	1.51	1.51	1.51	1.51	24.16	1.51
Total.....	39.06	35.97	37.76	40.07	40.47	39.22	43.63	40.80	41.51	38.60	34.05	627.24	39.20

Evaporation from an entire drainage area of a stream is readily determined if precipitation and flow for a sufficiently continuous period—as, for instance, one year—are known. Precipitation may be measured as already described, while the actual quantity of water passing down the stream may also be found by physical measurements. This has been done on many streams for long periods, measuring weirs have been erected and the overflow recorded by automatic gauges, and thus the continuous and total flow per day, month, or year determined; the difference between this flow and the total precipitation is chargeable to evaporation.




From such data, resulting from extensive systematic investigations, rules have been evolved to find evaporation, the correct application of which will give results in harmonious agreement with those found by measurements, and these rules or formulæ may be applied to any set of conditions for the purpose of finding similar results.

A detailed description of the method of determining evaporation will be found in Part II.; a practical application of it, from the author's practice, will go far toward securing for its further study that degree of confidence in its value for the general investigation of stream flow which it deserves.

Green River, Ky., was the subject, the development of power to be planned at a Government lock. The drainage area was delineated from a State map, as shown on Chart 1; precipitation data were collected as

---

\* Desmond Fitzgerald, C.E., Rainfall, Flow of Streams, and Storage. (Transactions Am. Soc. C. E., Vol. XVII.)

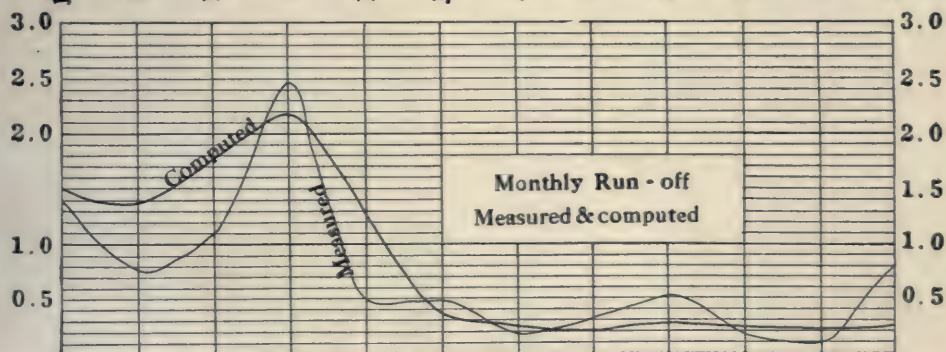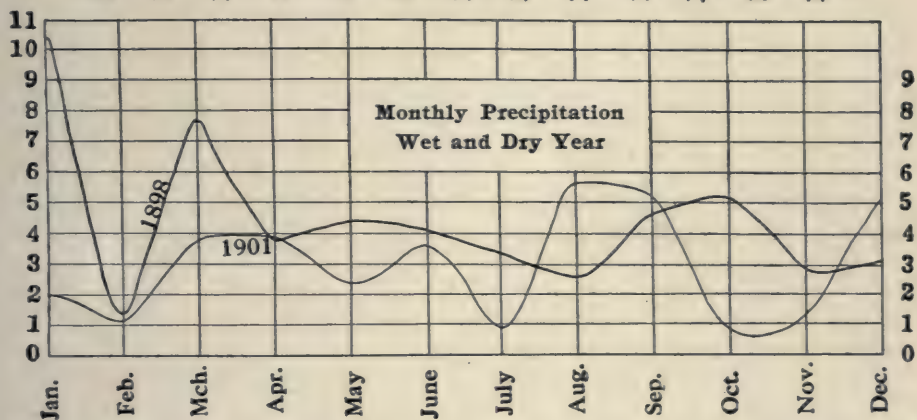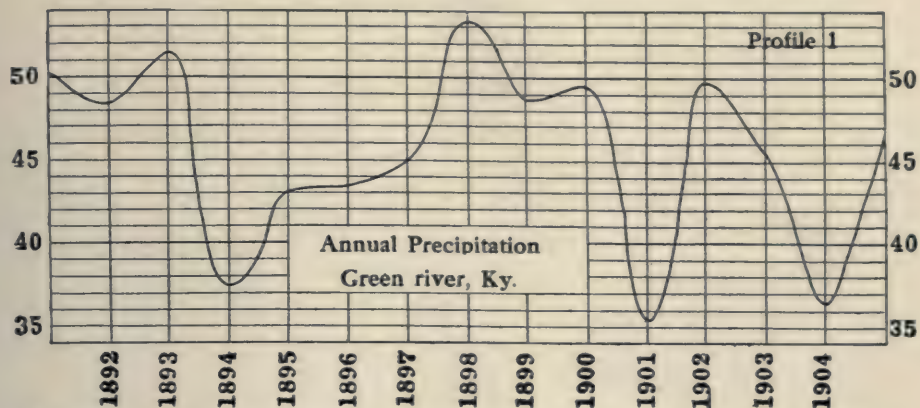

H.E.P.6.  
H.v.S.



given on Table 3 and on Profiles 1 and 2; from these evaporation and run-off were computed, the results for the latter being plotted on Profile 3, in heavy line, as monthly run-off for the dry year of the period covered by precipitation records.

The overflow at the Government dam had been recorded daily for this same year, and from these the flow was computed from the weir formula, and these results are also plotted on profile in light line. Both of these operations were executed by different persons. The agreement between the two profiles is striking, the discrepancies during the winter months are accounted for by the fact that the run-off as computed was partially frozen and therefore retained until spring. The reliability of the computation method is, however, evident. Similar results can be quoted from published records, especially in New England and Eastern States, where the flow of many streams has been measured in similar manner for many years and the run-off as computed from evaporation compared with it. In fact, the system has been evolved from comparative results on rivers where flow has been established by physical measurements. The author has always used the two methods of calculation and measurements to check results whenever authentic flow measurements covering sufficient periods were available, and has found them to agree most satisfactorily.

ARTICLE 15.—*The application of flow deductions from precipitation* for preliminary investigation purposes is expressed by the following rules:

*Rule 1.* About 30 per cent. of annual precipitation remains available for flow; the other portion is evaporation.

*Rule 2.* The low monthly flow cannot exceed one-twelfth of the total available flow.

*Rule 3.* The monthly flow during three months, generally in the fall, in Northern latitudes is from one-half to one-third, in Southern latitudes from one-fourth to one-sixth, and in Western States from one-sixth to one-tenth of one-twelfth of the annual precipitation excess over evaporation.

The author has met cases where the application of this simple rule would have saved to the promoters of water-power projects thousands of dollars. One in point is recalled, where a water-power was projected on a stream with a drainage area of about 700 square miles, the available fall was 30 feet, and the opportunity was credited with a power output of 3500 horse-power, which would call for an available flow of



about 1450 cubic second feet, requiring run-off of 2.07 cubic second feet per square mile of area, which represents monthly precipitation excess over evaporation of 2.3 inches. These facts should be sufficient to reveal a gross error in the assumed power output,—that is, if the area has been ascertained. The stream was in a Northern State where normal annual precipitation is 35 inches, annual temperature about 48°, and annual evaporation therefore nearly the same as that found in the example given, or about seven-tenths, leaving a residue of precipitation for annual run-off of about three-tenths, or eleven inches for the entire year. As a matter of fact, the opportunity was good for about 1500 horse-power with a 250 horse-power auxiliary plant supplementing the three months low flow output. About 1000 acres of lands had been purchased and paid for, but no power development has yet taken place. Many similar instances could be cited.

ARTICLE 16.—*Flow measurements* are made by various methods, but, unless they extend over a sufficiently long period, especially covering the low stages, their result is not conclusive as to the available flow. As a rule, the time necessary to do this properly cannot be taken; when water-power projects ripen to the stage of such investigations, results are expected promptly, and, unless it is then the period of low flow, measurements will be of little practical value. On many streams measurements have now been made for several years by the Federal Government, the results being published in annual reports of United States Geological Survey as stream measurements, and, where these have been carried on long enough to furnish a rating table for the stream, this information may be taken as conclusive for the purpose. Table 1 gives low flow for some rivers in the United States compiled from this source.

The most reliable method of measuring a stream's flow is by an overflow weir, which is a type of low dam over which the entire flow passes. It is, of course, necessary that no portion of the flow passes under it or around its ends, and this is neither readily nor economically constructed, and, as a rule, is impracticable unless the stream is a very small one. If the river is already crossed by a dam, it may afford a satisfactory opportunity for measurement, provided it is free from leaks and its crest is horizontal. Old mill-dams are generally not water-tight and are more or less out of alignment, and therefore not very reliable for this purpose.

The technic of weir measurements and reductions is described in

detail in Part II., Chapter 6; for practical purposes of first investigations, the following method will yield sufficient results. Ascertain the length of dam crest by stadia measurement or triangulation, and the height of overflow by differential levels between water surface some thirty feet upstream of the dam and of dam crest, and take corresponding flow from Diagram 2, which gives the volume passing per linear foot of overfall over a wide flat-crested dam in cubic second feet for depths of overflow in tenths of inches.

*Example.*—Overflow of 1.2 inches over dam crest 236 feet long represents a flow of 4.35 cubic second feet.


Mill-dams, unless in very bad condition, may furnish valuable data as to flow; millwrights know how much power is required to operate their plant, the effective head can readily be measured, and, crediting the water-wheels with an efficiency of about 65 per cent. when of old pattern, the volume passing through them can be computed. Nothing is more strongly impressed upon the miller than shortage of water and the length of time during which he has to shut down to raise the pond, and the depth below the dam crest to which the pond lowers during low seasons after running the mill a certain period; each one of these facts may be utilized in determining the low flow of the stream and its duration.

The author determined the low flow on the Cannon River, Minn., in 1904 from such data collected at a mill which had operated some forty years with a water-wheel equipment representing the earliest American turbine styles, and the result was only about two per cent. lower than was afterwards found from measurements and gaugings extending over an entire year, and this discrepancy was chargeable to leakage through mill tail-race.

Where weir measurement is impracticable, a well-conditioned cross section of the stream is selected, its area found by soundings, and the velocity determined with which water passes through it by meters or floats. Part II., Chapter 6, treats the technical phases of these measurements and of the instruments, methods, reductions, and computations; the practical application for preliminary investigations is as follows.

Select a section about one hundred feet long on a straight stretch, with shores parallel and of gentle and even slope, containing no islands, visible rocks, or other obstructions, and where the water appears to pass at a nearly uniform speed throughout the entire width. Stretch two



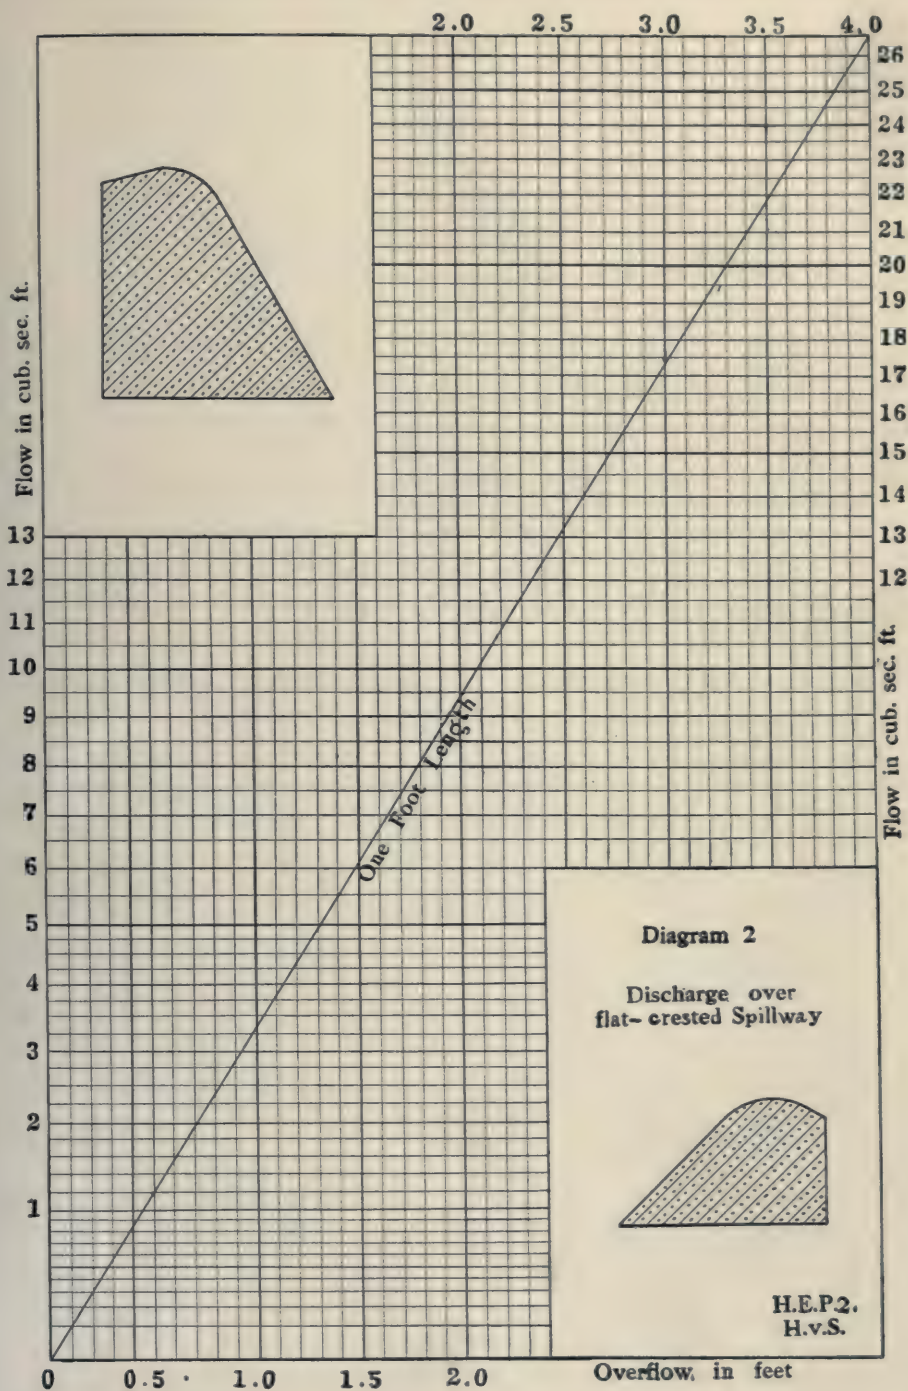

lines ( $\frac{1}{4}$ -inch rope) across the river, secured at shore and one hundred feet apart. Stretch a third line midway between these two and mark it off in ten-foot sections by tying on it alternately red and white bits of cotton ribbon. When the river is wider than one hundred feet, attach two guy lines to this centre line so that a boat may pass along without sagging it greatly out of straight line. Find the depth of water at each red and white marker along the centre line by differential level between water surface and river bed, by means of a levelling instrument reading on a rod held by a man, in boat, on river bottom. Collect chips of wood or pieces of lath or bark which can be recognized while floating, and have man in boat throw one at a time in the river some fifty feet above the upstream line, time the passage of float under upper and lower lines, also spot the red or white marker under which it passes; use as many floats as there are markers in the line, endeavoring to have at least one pass under each. Find the mean of the velocities observed, the product of 0.85 of this mean velocity and the cross section area represents the approximate discharge at that period for the purpose of preliminary investigation. Part II., Chapter 6, will deal with and describe measurements by meter, surface and rod floats, and of reductions, coefficients, etc.

ARTICLE 17. — *The fall* available for development must be found from the total fall existing in entire reach of stream to be controlled, that is, from the upper to the lower point to be affected by the development, less the fall represented by the slope in the upper pool, which may be from 0.05 to 0.5 feet per mile. The condition of river stage on which these fall determinations are based must be that which represents the flow to be utilized. If the consideration of backswell is neglected, the upper pool will extend beyond the expected limit, lands will be flooded which perhaps have not been secured, and, if there is an upper development or power site, the upper pool water will trespass on its tail waters.

When available fall is thus fixed, it remains to be determined whether all or only part of it is to be utilized, which will depend upon the topographical conditions as influencing location and character of development. The constancy of the fall as depending upon flow fluctuations must be carefully studied; on many streams the fall may all disappear during extreme floods.

ARTICLE 18. *Power Output.*—The unit of output of a hydro-electric development is the *electrical horse-power*, being representative of the power available for actual work.



The original energy is hydraulic power, which is converted by means of turbines into mechanical power, and this in turn into electric power; both of these transitions entail some loss of originally available energy, due to friction in one form or another. The amount of this loss from hydraulic to electric energy depends upon the type of the machines and their mode of operation, and in practice is generally considerably in excess of that which is claimed for them or even shown by tests. After the plant is in operation for a period, it is found that efficiencies of 76 per cent. for turbines and of 94 per cent. for generators may be obtained with proper equipment correctly installed. Based upon these the electric power realized is 72 per cent. of the hydraulic energy, or about  $12\frac{1}{2}$  cubic second feet with one foot fall represent one electric horse-power.

By the aid of Diagram 3 flow and fall may be readily converted into electric horse-power, or the flow required for certain output with fixed fall determined.

*Example.*—Flow 250 c. sec. ft., fall 22 ft. Output = 440 E.H.P. Fall 30 ft., desired output 100 H.P., required flow = 417 c. sec. ft.

Having found, by one method or the other, the monthly mean flow during a dry year, the volume on which maximum development may be based, which will be called the *power-flow*, is to be fixed upon.

The development plant, with exception of equipment, will generally cost nearly as much for a small as for a large output development, and, if for no other reasons, this is sufficiently important to seek the development into useful energy of the greatest possible portion of the entire flow during the dry year: the most complete utilization of this is the best development. However, the low month flow presents undisputably the maximum continuous volume which is available for twelve months; if any higher is taken, the deficiency must be made up, and the substance of the inquiry lies in the question, "How much can be added to the low flow, and from what source?"

The source is threefold: the market conditions may, and most generally do, call for current service only during a portion of the 24 hours; in that case the plant closes at the expiration of the operating period, and the natural flow may be accumulated by *pondage* above the dam during the remaining portion of the 24 hours, the non-operating period. This is accomplished by temporarily raising the height of the pond a foot or more through the fixing of flashboards along the crest; the ponded flow then becomes available, together with the natural flow,


during the succeeding operating period; the addition will not be large, but every  $12\frac{1}{2}$  cubic second feet represents one electrical horse-power for each foot fall. For instance, the low-month flow is 250 sec. ft., the fall 30 feet, the non-operating period is six hours, from midnight until 6 A.M.; the accumulated, or ponded, flow will be  $250 \times 21,600 = 5,400,000$  cub. ft., and, deducting 10 per cent. for leakage and seepage, the quantity added during the operating period of 18 hours is  $4,860,000 \div 64,800 = 75$  sec. ft., which represents an added power output of  $75 \div 12.5 \times 30 = 180$  horse-power; the low-month flow is increased to 325 sec. ft. If the pond is two miles long and 200 feet wide its area is  $10,560 \times 200 = 2,112,000$  sq. feet, and the dam crest, or pond level, must be raised by  $5,400,000 \div 2,112,000 = 2.5$  feet.

The second source of increasing the low monthly flow is from *storage*. Some of the stream's tributaries emptying within a few miles above the power plant may present suitable *reservoir* sites, where the valley can be closed by an economical dam structure rising to a moderate height of 10 to 15 feet, thereby empounding a storage reservoir; such a dam would be of the earth and rock fill type, with a suitable timber waste gate, as water is not to spill over the structure. The reservoir is permitted to fill during high-flow season, when the withdrawal of this portion from the main stream is of no consequence, and the supply is drawn out during the low month as needed. Taking the last example and a reservoir site of 250 acres of an average depth of ten feet, the volume stored is  $250 \times 43,560 \times 10 = 108,900,000$  cubic feet, the daily loss from evaporation and seepage of about 2.5 per cent. will be replenished by the normal run-off from a drainage area tributary to the reservoir site of about 100 square miles. This stored volume represents an 18-hour flow for thirty days of about 40 cub. sec. ft. and with 30 feet fall an output of 96 horse-power. Diagram 4 gives continuous flow for stated periods from a water surface of 10 acres area and one foot deep.

*Pondage and storage* may be combined, and in the case cited the low flow would be increased from 250 to 365 sec. ft.

The third source of replenishing the low-month output is by *auxiliary power*. When the hydro-electric plant goes into business, some power customers may be found who are then using steam power, and arrangements can be made with them by which the use of their steam-power plant may be had during low-flow seasons, and, in that event, the low-flow output can be increased by the capacity of such an auxiliary plant.



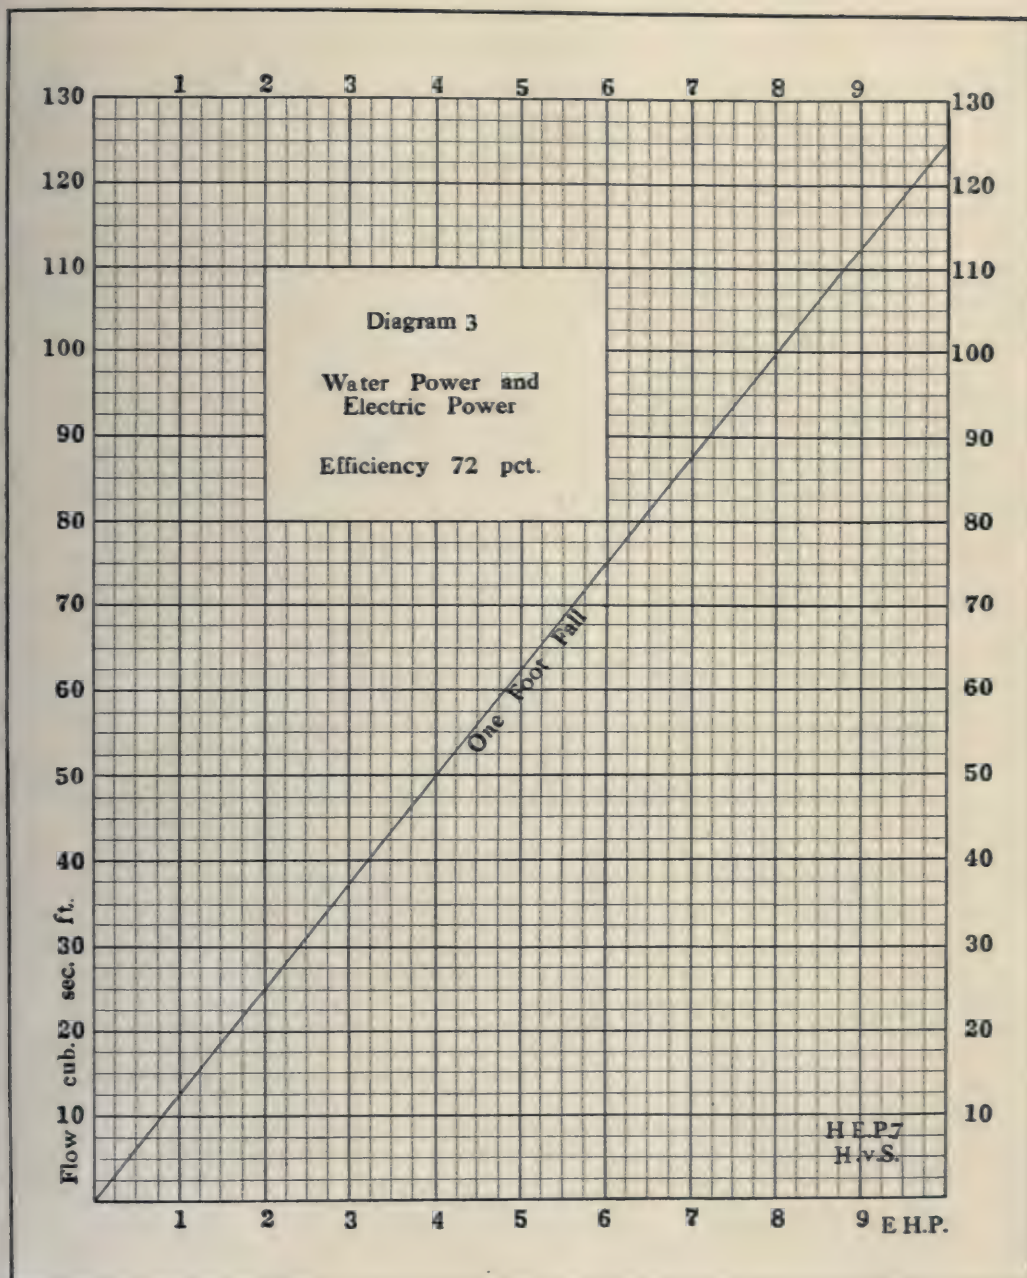

The entire subject of developing the opportunity in excess of the low dry-year flow is one of comparisons between cost of reservoir storage, or auxiliary plant, or both, and the returns from additional output thus secured; but in this connection it must be borne in mind that increasing the low-months output enables the plant to contract for delivery of this increase during the entire year, while the auxiliary plant will only be operated during one month.

Given the reservoir project above of 250 acres, the land costing \$25.00 an acre and the reservoir dam \$2500.00, the increased hydraulic and electric equipment for 96 horse-power \$1500.00, and the annual operating cost of reservoir gates \$250.00, the annual charges will be


Interest 6 per cent. on investment of \$10,250.00.....	\$615	
Operation of reservoir.....	250	
Taxes on reservoir site.....	200	
Maintenance of reservoir dam.....	50	\$1,115
The revenue from 96 H.P., 18 hr., at \$35.00 p. year.....		<u>3,360</u>
Annual surplus.....		\$2,245
From which may be deducted for sinking fund.....		<u>500</u>
Leaving net surplus of.....		\$1,745

This amount will go far toward meeting the operating cost of the generating plant, and the reservoir is therefore a profitable addition.

In the case of the steam auxiliary of, say, 100 horse-power capacity, it has been pointed out that it may not be necessary to purchase the plant, as arrangements can generally be made to use an existing one; but, supposing the plant is bought outright and installed at the hydro-electric station so that one of the generators can be belted to the engine, the annual accounts would be like this:

Charges: 100 H.P. steam plant.....	\$6,000	
Housing.....	500	
Investment.....	<u>\$6,500</u>	
Interest, 6 per cent.....		\$390
Fuel at 3 pounds per H.P. hours for 18 hours per month, 81 tons, @ \$3.....		243
Oil and waste.....		25
Maintenance.....		125
Taxes.....	132	\$915
(The station personnel operates the plant.)		
Revenue from 100 H.P. at \$35.....		<u>\$3,500</u>
Surplus.....		\$2,585
Charging off for sinking fund.....		<u>325</u>
Net surplus.....		\$2,260



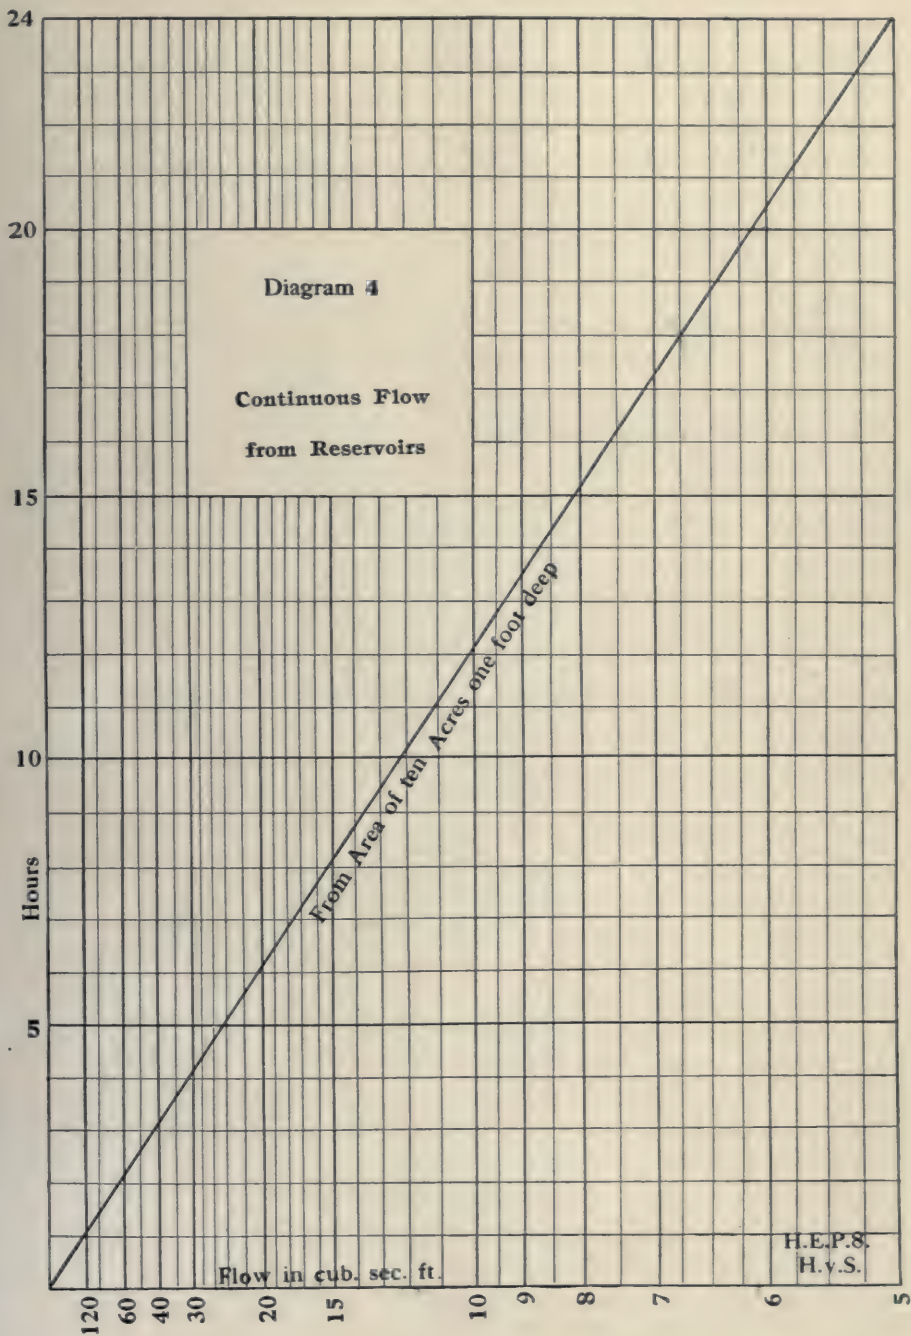

The low-flow opportunity represented by 250 second feet and 30 feet fall showed an output of 600 horse-power; by pondage, storage, and auxiliary power this has been increased to 976 horse-power, representing a flow of 406 second feet at a net gain of \$4000.00 per year.

In this manner the entire problem of what the development scope should be is to be argued out from month to month until the inevitable limit is reached. In fact, hydro-electric projects are rarely developed to their most resourceful scope at the beginning.

The immediate demand for the product, it is true, may be foretold with considerable accuracy, but this will grow; first customers gradually increase their demands and new patrons are added, as the advent of economical power sooner or later attracts new industries to a community. The development scope can, therefore, not be completely exhausted when the project is investigated and planned; but so much of it as will influence the required investment should be covered, and this relates specifically to reservoir storage and auxiliary power equipment; other additions—as, for instance, electric storage—may prove recommendable after the plant has been in operation some time and the market conditions are more fully developed.



## CHAPTER III

### FEASIBILITY AND PRACTICABILITY

*The feasibility and practicability of a project* are not entirely established because the power and market are available: questions of Government control on the stream, of State laws regulating the use of water, of riparian rights and land titles must be investigated and settled, while the practicability of economical development should be established.

ARTICLE 19.—*The United States Government exercises constitutional control* over all navigable waters, and the question as to the navigability of a watercourse rests with the Congress. When provisions are made by Congressional legislation to examine a river for the purpose of determining whether the commercial interests and the physical conditions warrant navigation improvements, the stream passes under the control of the War Department, and no works of any description for the development of power along that river, or so much of it as is covered by the act, can be erected without the consent of the Secretary of War, nor can such works be erected on rivers where navigation improvements have been made by the Government without a like consent. The policy of the War Department is to grant such permits where no interference with navigation works is threatened, reserving, however, a revocable authority. The following is of the usual tenor of such grants.

AN ACT permitting the building of a dam across the Red Lake River at or near the junction of Black River with said Red Lake River, in Red Lake County, Minnesota.

BE IT ENACTED, by the Senate and House of Representatives of the United States of America in Congress assembled, That the consent of Congress is hereby granted to William J. Murphy, his successors and assigns, to build a dam across the Red Lake River at or near the junction of the Black River, so called, with said Red Lake River, in Red Lake County, Minnesota, for the development of water-power, and such works and structures in connection therewith as may be necessary or convenient in the development of said power and in the utilization of the power thereby developed: *Provided*, That the plans for the construction of said dam and appurtenant works shall be submitted to and approved by the Chief of Engineers and the Secretary of War before the commencement of the construction of the same: *And provided further*, That the said William J. Murphy, his successors or assigns, shall not deviate from such plans after such approval, either before or after the completion of said structures, unless the modification of said plans shall have previously been submitted to and received the approval of the Chief of Engineers and of the Secretary of War: *And provided further*, That there shall be placed and maintained in connection with said dam a sluice-way, so arranged as to permit logs, timber, and lumber to pass around, through, or over said dam without unreasonable delay or hinderance and without toll or charges: *And provided further*, That the dam shall be so constructed

that the Government of the United States may at any time construct in connection therewith a suitable lock for navigation purposes, and may at any time, without compensation, control the said dam so far as shall be necessary for purposes of navigation, but shall not destroy the water-power developed by said dam and structures to any greater extent than may be necessary to provide proper facilities for navigation, and that the Secretary of War may at any time require and enforce at the expense of the owners such modifications and changes in the construction of such dam as he may deem advisable in the interests of navigation: *And provided further*, That suitable fishways, to be approved by the United States Fish Commission, shall be constructed and maintained at said dam by the said William J. Murphy, his successors or assigns.

SEC. 2. That in case any litigation arises from the building of said dam, or from the obstruction of said river by said dam or appurtenant works, cases may be tried in the proper courts, as now provided for that purpose in the State of Minnesota and in the courts of the United States: *Provided*, That nothing in this Act shall be so construed as to repeal or modify any of the provisions of law now existing in reference to the protection of the navigation of rivers, or to exempt said structures from the operation of same.

SEC. 3. That this Act shall be null and void unless the dam herein authorized be commenced within one year and be completed within three years from the time of the passage of this Act.

SEC. 4. That the right to amend or repeal this act is hereby expressly reserved.

Approved, March 16, 1906.

#### LEASE EXECUTED BY WAR DEPARTMENT.

WHEREAS, By an Act of Congress, approved September 19, 1890, entitled "An Act making appropriations for the construction, repair, and preservation of certain public works on rivers and harbors, and for other purposes," it is provided that the Secretary of War is authorized and empowered to grant leases or licenses for the use of water-powers on the Green and Barren Rivers, at such a rate and on such conditions and for such periods of time as may seem to him just, equitable, and expedient; said leases not to exceed the period of twenty years; *Provided*, That the leases or licenses shall be limited to the use of the surplus water not required for navigation.

AND WHEREAS, MR. T. LINDSEY FITCH, of Louisville, Kentucky, has applied to the Secretary of War for the lease of the surplus water-power at Dam No. 5, Green River, Kentucky, for manufacturing purposes, and also a small tract of land, in connection therewith, at the abutment end of said Dam No. 5, the leasing of which said water-power and land has been recommended by the Chief of Engineers, United States Army:

NOW, THEREFORE; I, F. C. Ainsworth, the Military Secretary, Acting Secretary of War, under authority of the Act of Congress aforesaid, and in consideration of the rental herein provided for, and of the covenants and conditions herein to be kept and performed by the lessee, have leased, and by these presents do hereby lease, unto the said T. Lindsey Fitch, for the term of nineteen (19) years and five (5) months from the tenth day of August, 1906, the surplus water-power at Dam No. 5, Green River, Kentucky, for manufacturing purposes, and, in connection therewith, the following described parcel of United States land at the abutment end of said Dam No. 5; said parcel of land hereby leased is described as follows:

Beginning at a point in the southerly boundary line of the parcel of land now owned by the United States at the abutment end of Dam No. 5, Green River, Kentucky; said point being 80 feet from the southeast corner of said land; thence S. 71° 30' W. 200 ft., thence N. 18° 30' W. 100 ft., thence 71° 30' E. 200 ft., and thence S. 18° 30' E. 100 ft., to the place of beginning; at the location and as shown on the attached blue-print.

The said lessee paying therefor the sum of three hundred dollars per annum, as hereinafter specified, and subject to the following provisions and conditions:

1. That the said lessee shall bear all the expense of providing and maintaining suitable and substantial means of conducting the water to and from the wheel or wheels used for power purposes, all of which means shall be of such design as to meet the approval of the Engineer Officer of the United States Army, in charge of Green and Barren Rivers, Kentucky; such approval to be obtained before any original, modifying, or renewal construction is begun.



2. That the location of the structure to be placed upon the parcel of land leased shall be subject to the prior approval of said engineer officer, in charge of said rivers.

3. That the use of said water for power is only given for such period of time as such use will not interfere with the navigation of the stream from which said water is drawn; and the United States hereby reserves the right to determine, through its officers and agents, when the use of water for power interferes with navigation; the said lessee to abide by such determination whenever made.

4. That no rebate shall be allowed to said lessee for periods of time when the use of said water for power is not permitted, except in cases of stoppages, under such conditions, for a period of thirty (30) consecutive days, or more; on which event the rebate is to be determined by multiplying the annual rental by a fraction in which the denominator will be three hundred and sixty-five (365) and the numerator the number of days during which, as above, the use of the water was not permitted by the United States.

5. That this lease is only for the use of the land hereinbefore described and the use of said surplus water for power; and shall not be transferred or assigned, except by the consent of the Secretary of War.

6. That said lessee shall pay for the use of the said ground and water an annual rental of \$300.00, and shall place and maintain such electric-light fixtures and conductors as said Engineer Officer may desire to have placed on the Lock Walls and in the cottages and office at Lock No. 5, Green River, and shall furnish necessary electric current to light the said buildings and structures, all free of cost to the United States.

7. That work on the proposed plant for the utilization of said water shall be begun within one year from the date of this lease and shall be completed without unnecessary delay.

8. That no rental under this lease shall accrue until the construction of the proposed plant is begun; then, beginning with that date, there shall accrue one three hundred and sixty-fifth part of the annual rental for each day until the following January; which amount shall be paid on or before January 10th. Succeeding payments of the annual rental shall be made not later than January 10th, each year, during the life of this lease.

WITNESS my hand and official seal, this last day of August, 1906.

(Signed) F. C. AINSWORTH,

The Military Sec'y, Acting Sec'y of War.

THIS INSTRUMENT is also executed by T. Lindsey Fitch, in testimony of the acceptance by him of the provisions of the Act of Congress aforesaid and the provisions and conditions herein imposed.

WITNESS my hand and seal, this 6th day of August, 1906.

(Signed) T. LINDSEY FITCH.

(Signed) J. M. MARTIN, JR.

(Signed) JAMES F. HUTTY.

#### REVOCABLE LICENSE ISSUED BY WAR DEPARTMENT.

The Edison Sault Light and Power Company of Sault Ste. Marie, a corporation existing under the laws of the State of Michigan, is hereby granted a license, revocable at will by the Secretary of War, to erect and maintain a dam on the Rapids of the St. Mary's River between the mainland and Island No. 3, and within the limits of the lines marked "Proposed Embankment Dam" on the map hereto attached and made a part of this instrument, upon the following provisions and conditions:

1. That said dam shall be so constructed as not to interfere with private rights or public interests and improvements.

2. That the engineer officer of the United States Army, in charge of the district within which the dam is to be constructed, may supervise its construction so far as may be necessary to secure the compliance with the conditions herein contained.

3. That any sum which may have to be expended, after revocation of this license, in putting any premises or property, hereby authorized to be occupied or used, in as good condition for use by the United States as it is at this date shall be repaid by said Edison Sault Light and Power Company on demand.

Witness my hand, this fourteenth day of March, 1889.

REDFIELD PROCTOR,  
Secretary of War.

TABLE 3.—WATERCOURSES IN THE UNITED STATES UNDER CONTROL OF THE WAR DEPARTMENT.

River.	State.	Navi- gable.	From	Since	To be extended.	New Project.
Alabama.....	Ala.....	Yes..	Wetumpka.....	1878		
Allegheny.....	Pa.....	Yes.....		1879		
Altamaha.....	Ga.....	Yes..				
Appomattox....	Va.....	Yes..	Petersburg.....	1902		
Arkansas.....	Kans.....	Yes..	Muskogee, I. T.....	1886		
Au Sable.....		Yes.....				Project
Bad.....	Mich.....	Yes..	St. Charles.....	1902		
Barren.....	Ky.....	Yes..	Bowling Green.....	1879		
Beech.....	Tenn.....					Project
Belle.....	Mich.....	Yes.....		1896		
Bennetts.....	N. C.....				Gatesville.....	Project
Big Sandy.....	Ky.....	Yes..	Louisa.....	1880		
Big Sandy.....	Tenn.....				Big Sandy.....	Project
Big Sandy.....	Va.....					Project
Big Sunflower..	Miss.....					Project
Black.....	Ark. and Mo..	Yes.....		1880		
Black.....	Mich.....	Yes.....		1872		
Black.....	N. C.....	Yes..	Lisbon.....	1885		
Black Warrior..	Ala.....	Yes..	{ Mulberry, Locust Forks	1902		
Bois de Sioux...	Minn.....					Project
Brazos.....	Tex.....	Yes..	Waco.....	1902		
Broad.....	S. C.....					.99 Ind. Shoal
Cache.....	Ark.....	Yes..	Riverside.....	1888		
Caney Fork.....	Tenn.....	Yes.....		1906		
Cape Fear.....	N. C.....	Yes..	Fayetteville.....	1902		
Chattahoochee..	Ga. and Ala..	Yes..	Columbus.....	1874		
Cheat.....	W. Va.....				25 miles from mouth	
Chester.....	Md.....	Yes..	Jones Ldg.....	1890		
Choctawhatchee.	Fla. and Ala.	Yes..	Geneva.....	1874		Newton
Clatskanie.....	Ore.....	Yes..	Clatskanie.....	1898		
Clearwater.....	Ida.....	Yes..	North and South Fork	1879		
Clinch.....	Tenn.....	Yes..	Haynes.....	1880		
Clinton.....	Mich.....	Yes..	2700 ft. ab. mouth..	1870		
Coan.....	Va.....					Project
Cochecho.....	N. H.....	Yes..	Dover.....	1871		
Columbia.....	Ore., Wash...	Yes..	Lewiston, Ida.....	1877		
Conecuh.....	Ala.....	Yes.....		1907		
Congaree.....	S. C.....	Yes..	Granby.....	1899		Broad River
Connecticut.....	Conn.....	Yes..	Hartford.....	1870	Holyoke	
Contentnia.....	N. C.....	Yes..	Snow Hill.....	1894		
Coos.....	Ore.....	Yes.....		1896		
Coosa.....	Ga. and Ala..	Yes..	Wetumpka.....	1890		Horseley Shoal
Coquille.....	Ore.....	Yes..	Myrtle Pt.....	1878		
Cowlitz.....	Ore.....	Yes.....		1880		
Cumberland.....	Ky. and Tenn.	Yes..	Burnside			
Current.....	Ark. and Mo..	Yes.....		1872		
Damariscotta...	Me.....	Yes..				
Delaware.....	Pa., N. J., Del.	Yes..	Philadelphia.....		Bordentown	



River.	State.	Navi- gable.	From	Since	To be extended.	New Project.
Duck.....	Tenn.....					Centerville
Edisto, N. Fork	S. C.....					Orangeburg
Edisto, S. Fork	S. C.....					Scotts Bridge
Elk.....	Tenn.....					Fayetteville
Elk.....	W. Va.....	Yes.....		1878		
Escambia.....	Fla.....	Yes.....	Ala. State line	1880		
Exeter.....	N. H.....	Yes.....	Exeter.....	1899		
Flathead.....	Mont.....	Yes.....		1896		
Flint.....	Ga.....	Yes.....	Albany.....	1874		
Flint.....	Mich.....	Yes.....		1902		
Forked Deer	Tenn.....	Yes.....		1896		
Fox.....	Ill.....	Yes.....				
Fox.....	Wis.....	Yes.....		1872		
French Broad	Tenn.....	Yes.....		1880		
Galena.....	Ill.....	Yes.....		1884		
Ganley.....	W. Va.....	Yes.....	28 miles ab. Roughs	1888		
Gasconade.....	Mo.....	Yes.....		1880		Gasconade
Georges.....	Me.....	Yes.....		1896		
Grand.....	Mich.....	Yes.....		1866		
Grays.....	Wash.....	Yes.....				
Great Pedee.....	S. C.....	Yes.....	Georgetown.....	1902		Dee Station
Green.....	Ky.....	Yes.....		1891	Minford'sville	
Guyandot.....	W. Va.....	Yes.....		1878		
Hatchie.....	Tenn.....					Brownville
Hiawassee.....	Tenn.....	Yes.....	Ocoee River.....	1877		
Holston.....	Va. and Tenn	Yes.....		1902		
Housatonic.....	Conn.....	Yes.....	Stratford.....	1871		
Hudson.....	N. Y.....	Yes.....	Waterford			
Illinois.....	Ill.....	Yes.....		1852		
Ipswich.....	Mass.....					
James.....	Va.....	Yes.....	Richmond.....	1870		
Kalamazoo.....	Mich.....	Yes.....		1868		
Kanawha.....	W. Va.....	Yes.....				
Kennebec.....	Me.....	Yes.....	Gardiner.....	1866		
Kennebuck.....	Me.....	Yes.....				
Kentucky.....	Ky.....	Yes.....		1879		
Kootenai.....	Ida.....	Yes.....	Int. Boundary.....	1896		
Leaf.....	Miss.....	Yes.....	Bowie Creek.....	1890		
Lewis.....	Ore.....	Yes.....	Lacenter.....	1897		
Little Kanawha	W. Va.....	Yes.....		1876		
Little Pigeon	Tenn.....	Yes.....		1892		
Long Tom.....	Ore.....	Yes.....		1898		
Malden.....	Mass.....	Yes.....		1882		
Mattaponi.....	Va.....	Yes.....	Aylett.....	1880		
Maumee.....	Ohio.....	Yes.....	Toledo			
Meherrin.....	N. C.....	Yes.....	Murfreesboro.....	1907		
Menominee.....	Wis., Mich.	Yes.....		1890		
Merrimac.....	Mass.....	Yes.....		1870		Haverhill
Minnesota.....	Minn.....	Yes.....	Yellow Medicine Riv.	1867		
Mississippi.....	Minn.....	Yes.....	Grand Rapids.....	1902		
Missouri.....						Sioux City

River.	State.	Navi- gable.	From	Since	To be extended.	New Project.
Monongahela....	Pa. and W. Va.	Yes		1897		
Muskingum....	Ohio	Yes	Zanesville	1888		
Mystic.....	Mass.	Yes		1880	Somerville	
Napa.....	Cal.	Yes		1888		
Narragnagus....	Me.	Yes		1871	Yes	
Neuse.....	N. C.	Yes	Goldsboro	1871		
New.....	N. C.	Yes		1882		Jacksonville
Obion.....	Tenn.	Yes		1892		
Ocmulgee.....	Ga.	Yes	Macon	1876	Joliet	
Oconee.....	Ga.	Yes	Milledgeville	1891	Oconee Sta.	
Ohio.....	Ohio	Yes		1825	Metropolis, Ill.	
Okanogan.....	Wash.	Yes		1899		
Osage.....	Mo.	Yes		1871		Niangua River
Otter.....	Vt.	Yes	Vergennes	1872		
Pamlico.....	N. C.	Yes	Little Fall	1889	Greenville	
Pamunkey.....	Va.	Yes	Hanover town	1880		
Patuxent.....	Md.	Yes	Bristol	1902		
Pawcatuck.....	R. I.	Yes				
Pearl.....	Miss.	Yes	Jackson	1879	Rockport	
Penobscot.....	Me.	Yes	Bangor	1870		
Pine.....	Mich.	Yes		1896		
Pomoke.....	Md.	Yes		1878		
Potomac.....	Va.	Yes	Washington			
Powow.....	Mass.	Yes		1885		
Providence.....	R. I.	Yes		1852		
Rainy.....	Minn.					Project
Rappahannock....	Va.	Yes	Fredericksburg	1871		
Raritan.....	N. J.	Yes	New Brunswick	1878		
Red.....	Ark. and Tex.	Yes	Fulton, Ark.	1907		
Red of the North	Minn., N. Dak.	Yes	Goose Rapids	1877	Int. Bound.	
Richland.....	Tenn.					Project
Roanoke.....	N. C.	Yes	Weldon	1902		
Rock.....	Ill.	Yes		1890		
Rogue.....	Mich.	Yes		1906		
Rouge.....	Mich.	Yes		1888		
Rough.....	Ky.	Yes		1890		
Saco.....	Me.	Yes		1827		
Sacramento.....	Cal.	Yes	Sacramento	1899		
Saginaw.....	Mich.	Yes		1866		
Saint Croix.....	Wis., Minn.	Yes	Taylor's Falls	1875		
Saint Francis....	Ark. and Mo.	Yes	Kennett	1884		
Saint Johns....	Fla.	Yes	Jacksonville	1896		
Saint Joseph....	Mich.	Yes		1836		
Saint Lawrence	N. Y.	Yes				
Saint Mary's....	Mich.	Yes				
Sakonnet.....	R. I.	Yes		1896		
Saline.....	Ark.					Turtle Bar
Saluda.....	S. C.					Hollow Creek
San Joaquin....	Cal.	Yes	Stockton	1877		
Santee.....	S. C.	Yes	Mosquito Cr.	1881		
Sasanoa.....	Me.	Yes				



River.	State.	Navi- gable.	From	Since	To be extended.	New Project.
Savannah.....	Ga.....	Yes	Trotters Shoal.....	1880		
Saugatuck.....	Conn.....	Yes		1827		
Saugus.....	Mass.....					Project
Sebewiany.....	Mich.....	Yes		1875		
Shallotte.....	N. C.....	Yes	Shallotte.....	1906		
Shem.....	S. C.....					Project
Shiawassee.....	Mich.....	Yes		1902		
Shipyards.....	S. C.....					Project
Simpson.....	Ala.....					Fayette
Snohomish.....	Wash.....	Yes	Stretch's Riffle			
South.....	N. C.....					Aurora
Susquehanna.....	Md.....	Yes	Havre de Grace.....	1852		
Tallahatchie.....	Miss.....	Yes			Batesville	
Tar.....	N. C.....	Yes	Tarboro.....	1894	Greenville	
Taunton.....	Mass.....	Yes		1870		
Tennessee.....	Tenn.....	Yes		1871		
Thames.....	Conn.....	Yes	Allyn's Pt.....	1886		
Thunder Bay.....	Mich.....	Yes			Batesville	
Tombigbee.....	Ala.....	Yes	Columbus, Miss.....	1888		
Town.....	Mass.....	Yes		1896		
Trent.....	N. C.....	Yes	Newbern.....	1879		Trenton
Trinity.....	Tex.....	Yes	Dallas.....	1902		
Union.....	Me.....	Yes		1873	Yes	
Wabash.....	Ind. and Ill.....	Yes	Grand Rapids.....	1872		
Waccamaw.....	N. and S. C.....	Yes	Lake Waccamaw.....	1880		
Wateree.....	S. C.....	Yes	Camden.....	1881		
Weymouth.....	Mass.....	Yes		1890		
White.....	Ark.....	Yes	Buffalo Shoals.....	1899		
White.....	Ind.....	Yes		1879		
White Oak.....	N. C.....					Maysville
Wicomico.....	Md.....	Yes		1872		
Willamette.....	Ore.....	Yes	Eugene.....	1878		
York.....	Va.....	Yes		1860		
Youghiogheny.....	Pa.....					Connellsville

ARTICLE 20.—On navigable rivers *the title to shore lands carries to low-water line*, while on non-navigable streams it goes to the middle of the watercourse, securing to the owner the use of the water within the boundaries of his lands for floatage, power purposes, and fisheries, but no portion of the volume can be diverted from its normal course or put to such a use that the natural flow or fall pertaining to any land not owned by him is thereby periodically or permanently diminished or changed. *The State retains control of the land under the water*, and several have enacted laws reserving the approval of any permanent structures such as are required for power development; this right, however, does not include the power of prohibition of such works, but merely of securing safety of structures and of provisions guaranteeing non-interference with

the floatage of timber and the passage of fish to their accustomed breeding-grounds. Some of the States have constructed navigation canals along certain rivers, and in this connection have reserved control of a portion of the flow and of certain reservoirs maintained for the feeding of the canal system; water-power development on such streams must conform to statutes enacted for the protection and maintenance of such State canals. The Western States have legislated on the use of water of streams for the purpose of guaranteeing its equitable distribution to adjacent land for irrigation, and in these the permit of the respective authorities must be secured for the use of any volume for power purposes; and, finally, the Federal Government has taken possession of certain streams in the arid regions for purposes of national irrigation projects, and from these all other utilization of their waters is excluded.

The legal requirements and limitations relating to water-power development expressed in Federal and State statutes in the United States, Canada, and Mexico are now being compiled by the author, and will be published in the near future.

ARTICLE 21.—*The practicability of an economical development* is solved only after the programme has been fixed upon, the plant designed, and estimates made, all of which is treated in detail in Part II.; in some cases, however, difficulties to be met may be so apparent and the great expense of overcoming them so patent that the undertaking may be pronounced prohibitive without the necessity of detail engineering studies. Market and power capacity enter into this problem, and in fact their proper consideration will frequently terminate the entire inquiry. Many excellent water-power opportunities are undeveloped to-day and will remain so for some time to come, because there is no market available for their output, nor is there any in sight for many years to come unless electric power is utilized by railroads generally for their passenger business, which is, no doubt, among the probabilities of the near future. In some cases even the best available development site reveals, upon preliminary examinations, such difficulties, as to length of required dam and unstable material at its logical location, that it becomes at once evident the cost of the necessary works will be out of all proportion to the power which may be secured; and, finally, the constancy of the output may be proved to be entirely void of any reasonable guarantee of that continuity which must underlie the enterprise which proposes to meet binding contract obligations.



ARTICLE 22. — *The investment balance*, or the summation of the capital outlay and the returns promised by the enterprise, is the quintessence of the analysis of a hydro-electric project; if this, being based upon authoritative facts, makes a satisfactory showing, and the development is found to be feasible, its realization is a certainty.

The treatment of this subject is the same as that of any other commercial proposition: charges and revenue are the components. The first consist of interest on investment, sinking fund, maintenance, operation, depreciation, taxes, and insurance; the second, of receipts from sale of product. An annual charge of 8 per cent. on capital investment will meet the interest of 5 per cent. and the retiring of a bond issue representing the investment in 20 years. Maintenance and depreciation should be charged at 2 per cent. of the cost of the works and 3 per cent. of that of equipment; operation cost of generating, transmission, and distributing plant may be estimated on a personnel of two shifts, each composed of an operator and assistant and of one lineman for day service, which is required for a plant whether of 500 or 5000 horse-power output, or a line 5 or 25 miles long; the wages allowed should not be less than \$90.00 for the operators, \$60.00 for assistants and \$75.00 for linemen. The maintenance charge will cover oil, waste, wire, insulators, and all other needed repair material. Taxes are generally 2 mills on a  $\frac{3}{4}$  valuation. Insurance is not always placed on hydro-electric plants, as the fire risk is small.

Tabulating these charges for a plant of 1000 horse-power with ten-mile transmission line, the fixed items are the cost of the generating equipment, which will be about \$20.00 per horse-power, cost of transmission equipment (transformers) \$6.00 per horse-power, and of substation at market end \$2000.00; no estimate is made for distribution and service lines and equipment, and the receipts from current are assumed to be its wholesale value at the substation, or \$30.00 per horse-power-year.

The statement for one horse-power ratio will be

Charges:	
Interest on sinking fund.....	\$ 4.28
Maintenance and depreciation.....	1.59
Operation.....	8.22
Taxes and insurance.....	0.80
Income.....	30.00
Balance.....	15.11

This balance must meet interest and sinking fund at 8 per cent. and maintenance and depreciation at 2 per cent. of the cost of the works, consisting of a dam, intake, power-house, and tail-race, of lands, right of way, taxes, and discount from face value of securities and service charges, and represent a principal of about \$140.00 per horse-power; or, in other words, the cost of these, the works, lands, etc., must not exceed \$140.00 per horse-power in order that the enterprise may meet fixed charges, while a smaller cost will leave a corresponding surplus. If, for example, the cost of items not above included aggregates \$70,000, of which \$50,000 is cost of works, then the statement is:


Cost of complete development.....	\$123,500.00
Capital investment.....	137,200.00
Interest and sinking fund at 8 per cent.....	11,000.00
Maintenance and depreciation.....	2,590.00
Operation.....	8,220.00
Taxes and insurance.....	1,800.00
Income.....	30,000.00
Surplus .....	6,390.00
or about 5 per cent. on the investment.	

The operating charge is the largest item, and, since this does not materially increase with a greater output up to about 5000 horse-power, the larger capacity developments will show a greater surplus.

The income from current is here taken rather low, being for ten-hour motor service at a rate of 1.3 cents per kilowatt-hour, and for eighteen-hour traction service only about 0.6 of a cent, both of which are considerably below average values; however, the same line of investigation adapts itself to the probable value of the output as found from market investigations, and, when investment required is known, the balance statement can be safely made up along these lines.

Diagrams 5, 6, and 7 show the fixed charges per horse-power for plants of varying capacity and total investment, and by the aid of Diagram 8 the horse-power per year values can readily be converted into kilowatt-hour rates for the three classes of current service, light, motor, and traction.



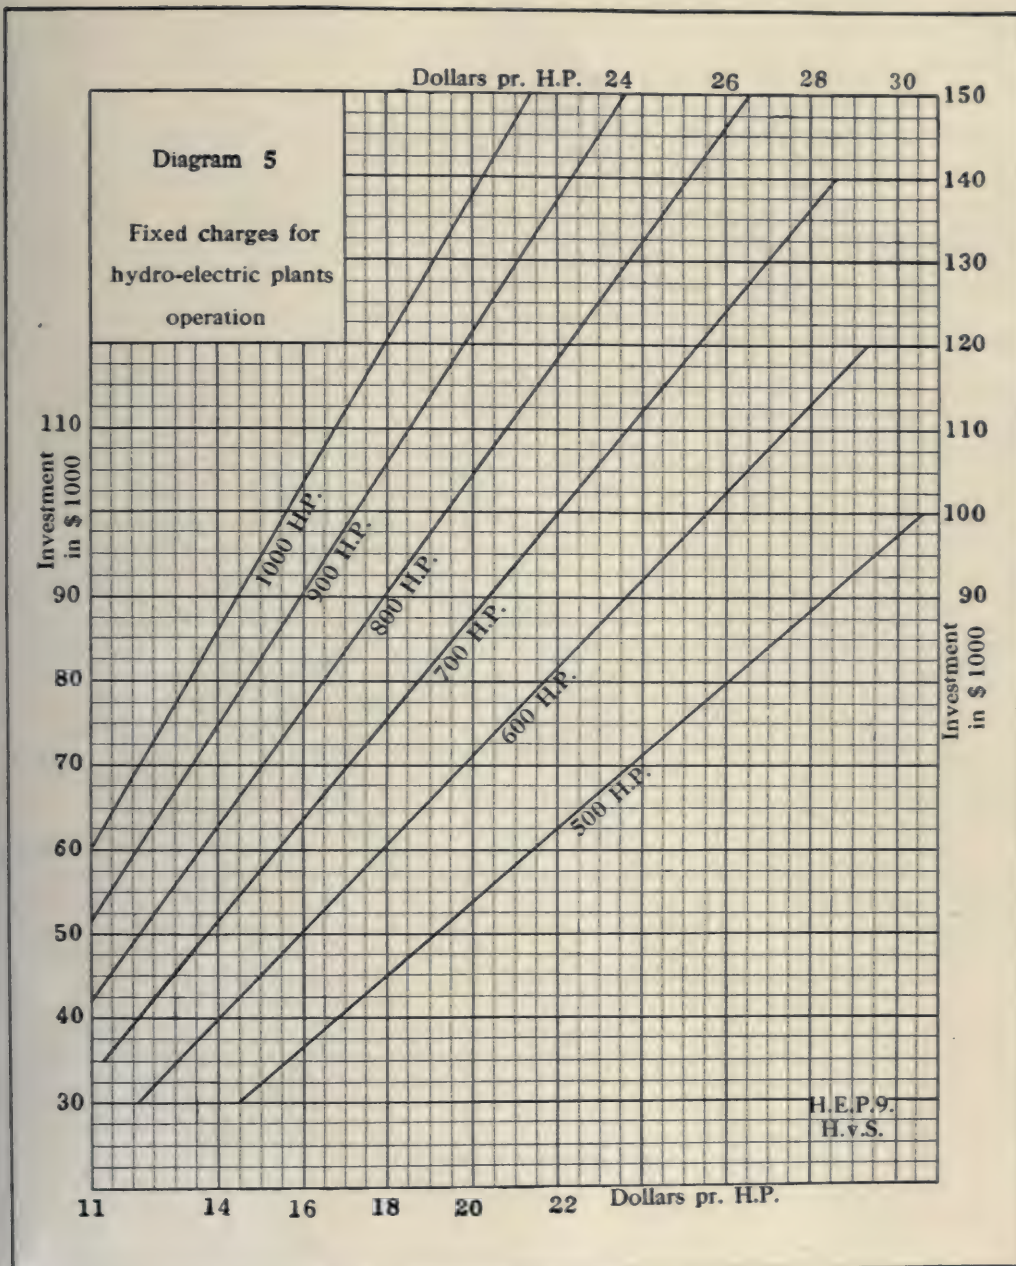



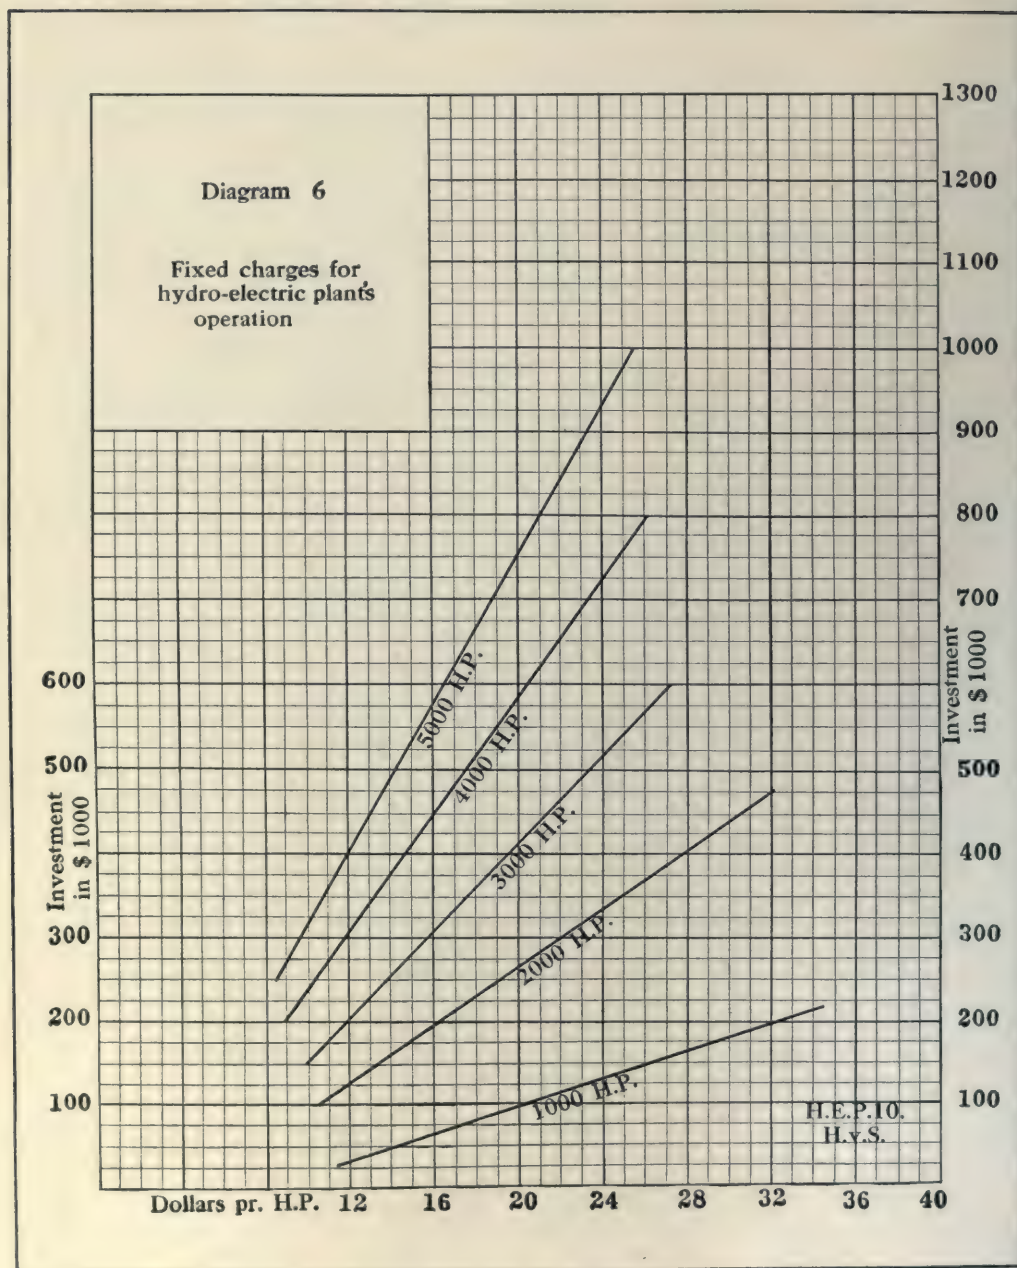




Diagram 7

Fixed charges for  
hydro-electric plants  
operation

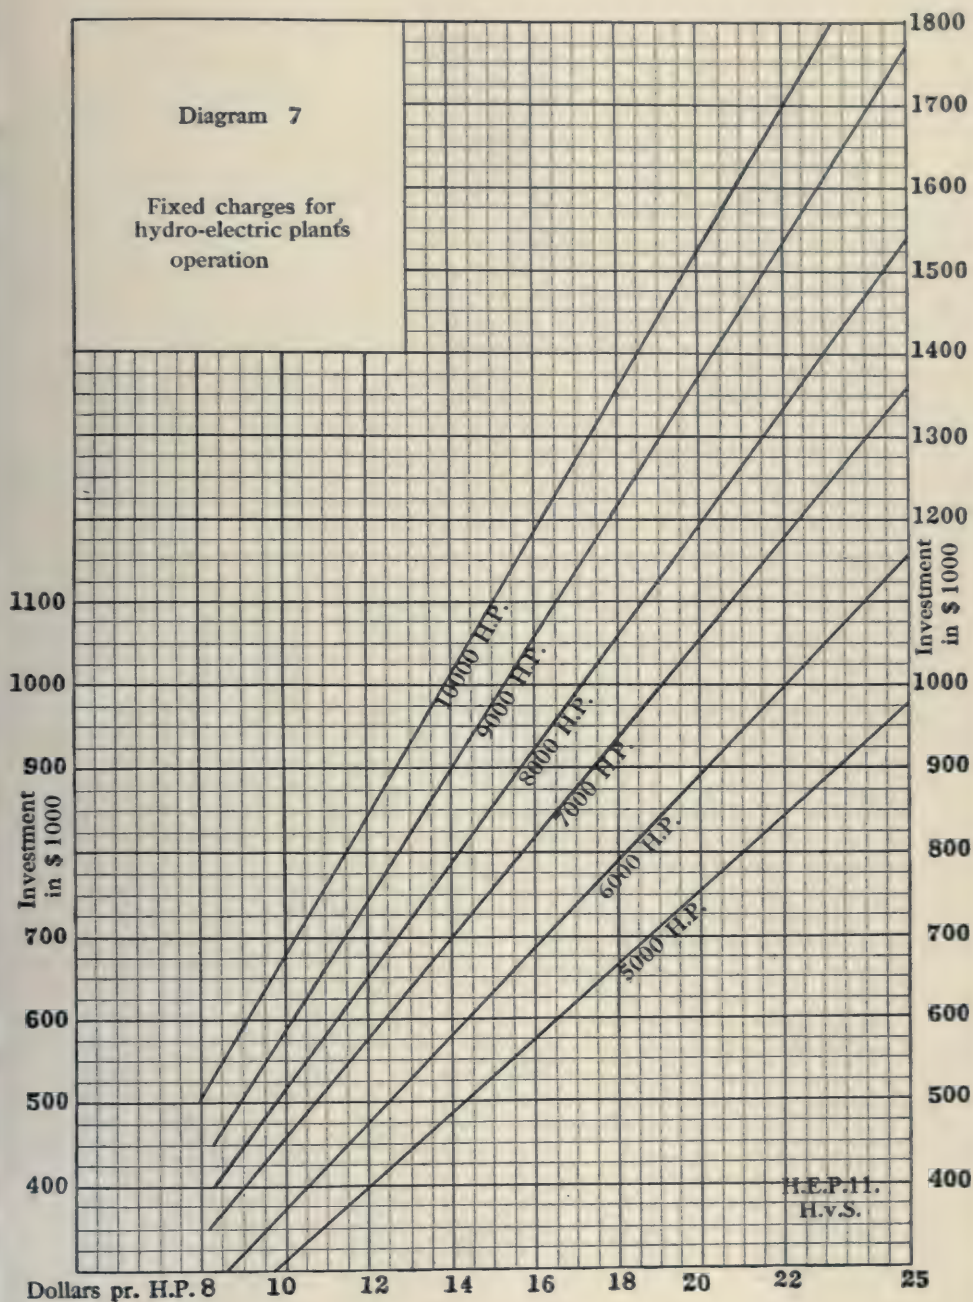

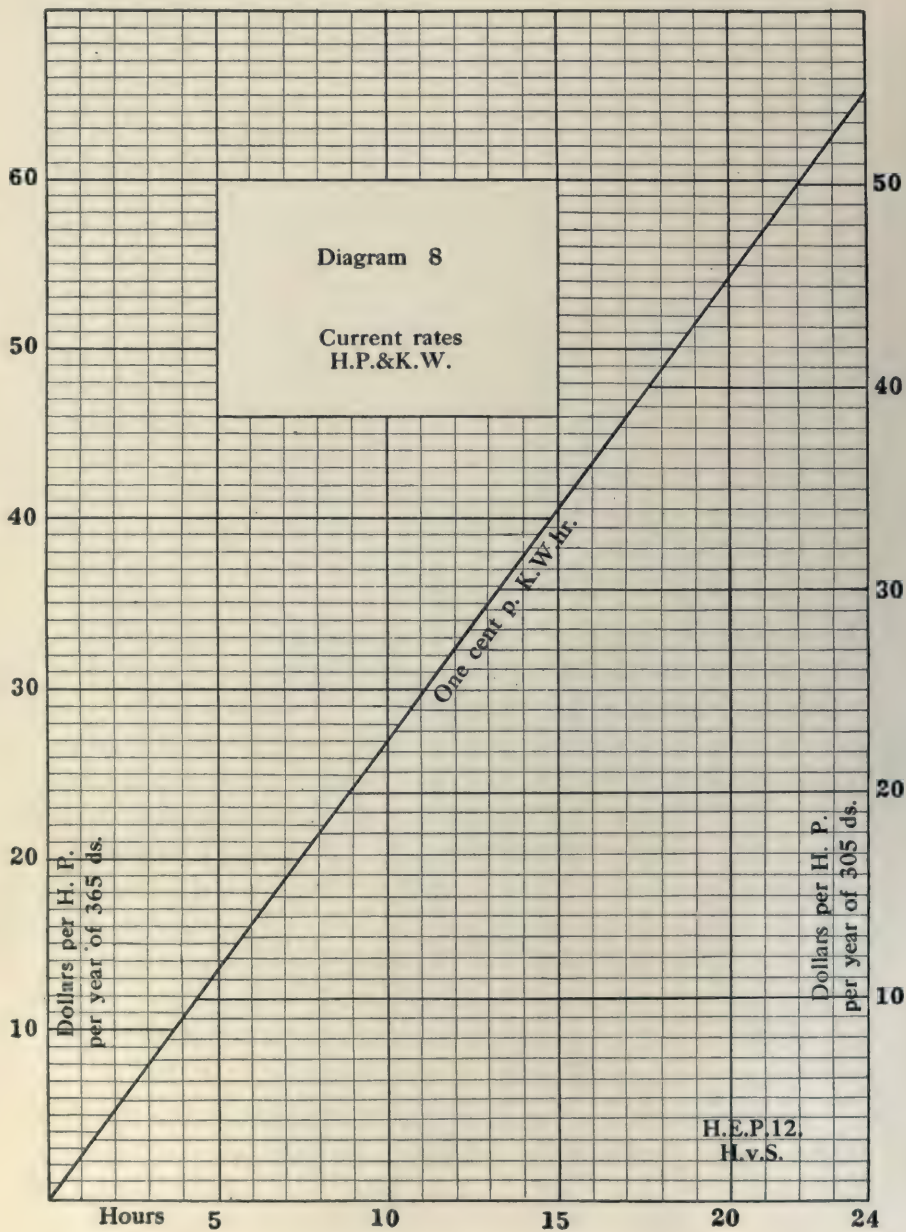



## CHAPTER IV

### COST OF DEVELOPMENT

THE COST of the development can be found correctly only from estimates based upon a well-defined programme and the plans and detail designs of the required structures, all of which is treated exhaustively in Part II. Only some general rules and guides are given here, by which an approximate first estimate of such cost may be found.

ARTICLE 23.—The cost of the *dam*, only the spillway proper being here considered, depends not only upon the type to be built but also upon the conditions of flow and character of river bed. A reasonable allowance must be made for controlling the flow during construction period, which may require erection of coffer-dams of more or less substantial design and the operation of a pumping plant. Where the river is shallow and the possibilities of a material rise during construction period are remote, this item may not be very important; sheet piling often proves sufficient to exclude the flow from the area, the seepage being accumulated in one sump and thence removed by moderate pumping. Again well-constructed timber cribs loaded with rock may be required to guard against flooding and a large capacity pumping plant needed to perform continuous duty. Sheet piling, where gravel and boulders prevail, is best of interlocking steel material, which will cost from \$1.50 to \$3.00 per foot length of piles in place, depending upon the depth to which they are to be driven. In rock or hard bottoms timber cribs must be employed to coffer the desired area; these are constructed of square timber suitably framed, from 6 to 10 feet wide, filled with rock and puddling material; if water is shallow, rock diking with puddling placed on outside may answer the purpose. The characteristics of the flow, of material in river bed, and probable duration of construction under such safeguards must decide the means to be employed; at any rate, the item "control of flow" is an important one, and may be from a few hundreds to several thousands of dollars. For some dam constructions it will be less than for others, even on the same site; with a structure, for instance, consisting of piers rather than a continuous mass of masonry the completed portion can readily be utilized for water-way while the

remaining is being built; like methods can be employed with concrete-steel dams.

This brings us to the type of dam itself, which should be chosen because of its peculiar fitness to the conditions and purpose as well as for considerations of first cost. Part II. treats this point in all its practical phases.

Diagrams 9 and 10 give quantities required for masonry, concrete, and concrete-steel dams of different heights and for unit length of ten feet; the cost can be found for different values of labor and material from Diagram 11.

The dam should contain waste-gates or sluices and perhaps flashboards, which must be covered in estimate.

This cost, as given on diagrams, does not cover the construction in river bed required to carry the dam, safeguard it against underwashing or the downstream area against scouring. In soft locations a pile foundation, cut-off walls or curtains, and apron construction will be required, the extent and cost of which depend solely upon the character of the material on which the dam is to rest. Again reference for details is invited to Part II.


Diagram 12 gives quantities for foundation, cut-off, and apron construction in alluvial locations for different heights of dams and for lengths of ten feet.


And, finally, the dam terminates in abutments, unless the site is a rock gorge into which the dam structure may be built; Diagram 12 also gives quantities required for two abutments of concrete-steel design for dams of different heights.

Compiling the cost of the dam in alluvial river bed, with small flow and no floods during construction period, height above river bed 30 feet, length between abutments 250 feet, labor being \$0.20 per hour, material for cub. yd. of xxx concrete \$4.75, forming timber \$25.00 per 1000 ft. b. m., and re-enforcing steel 3c. per pound.


Item 1. Controlling flow:		
Coffer-dam or sheet piling.....		\$2,500.00
Pumping, 200 days at \$5.00.....		1,000.00
Item 2. Preparing bed, excavation, etc.....		500.00
Foundation, cut-off and apron dam:		
Rubble masonry .....	\$36,300.00 or	
Cyclopean concrete .....	28,117.00 or	
Concrete-steel .....	22,100.00	
Item 3. Abutments.....		2,060.00
Item 4. Waste- or sluice-ways and gates depending upon flood flow volume.		




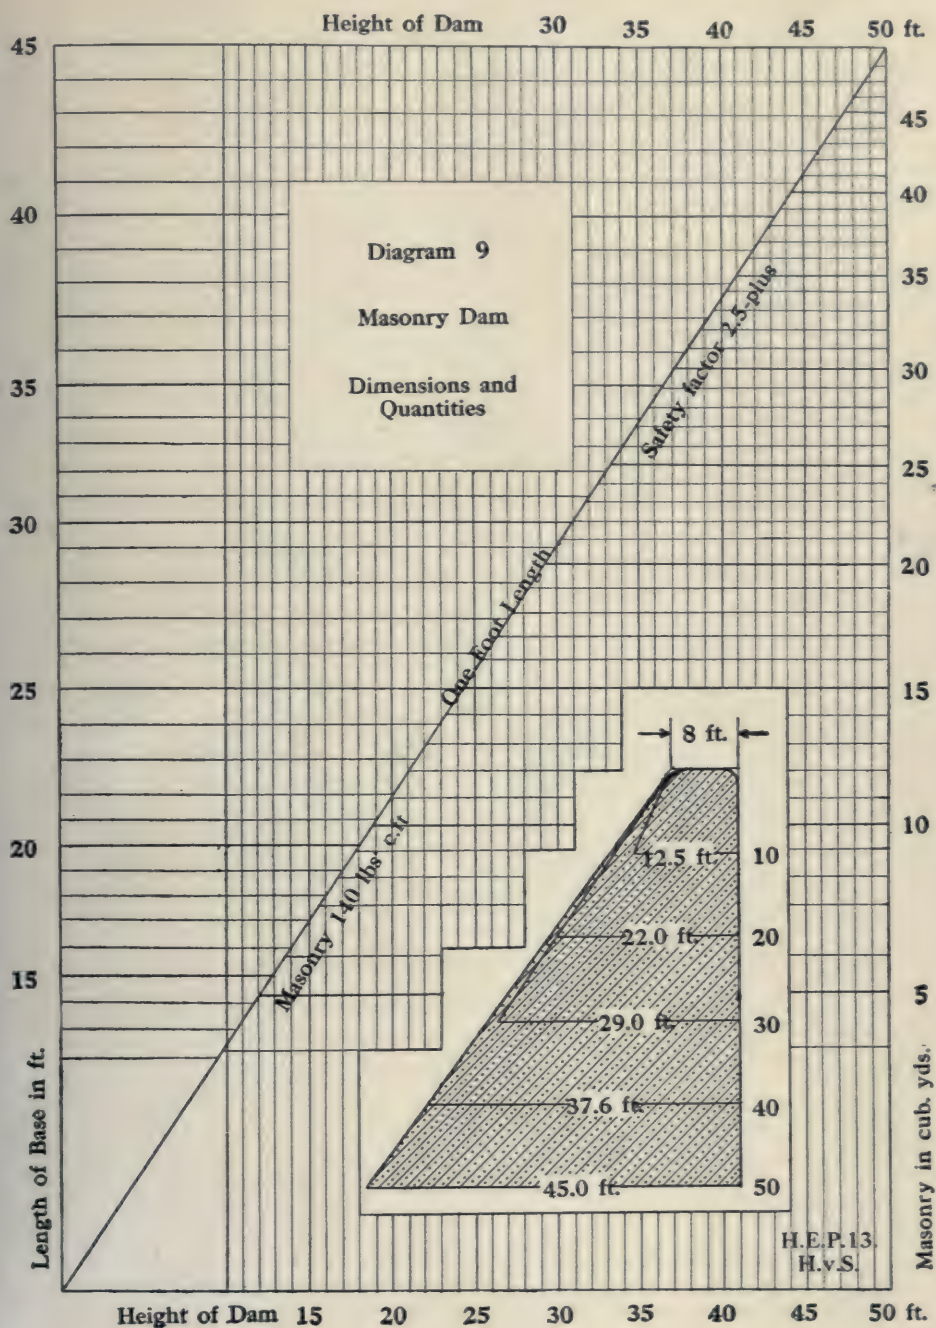

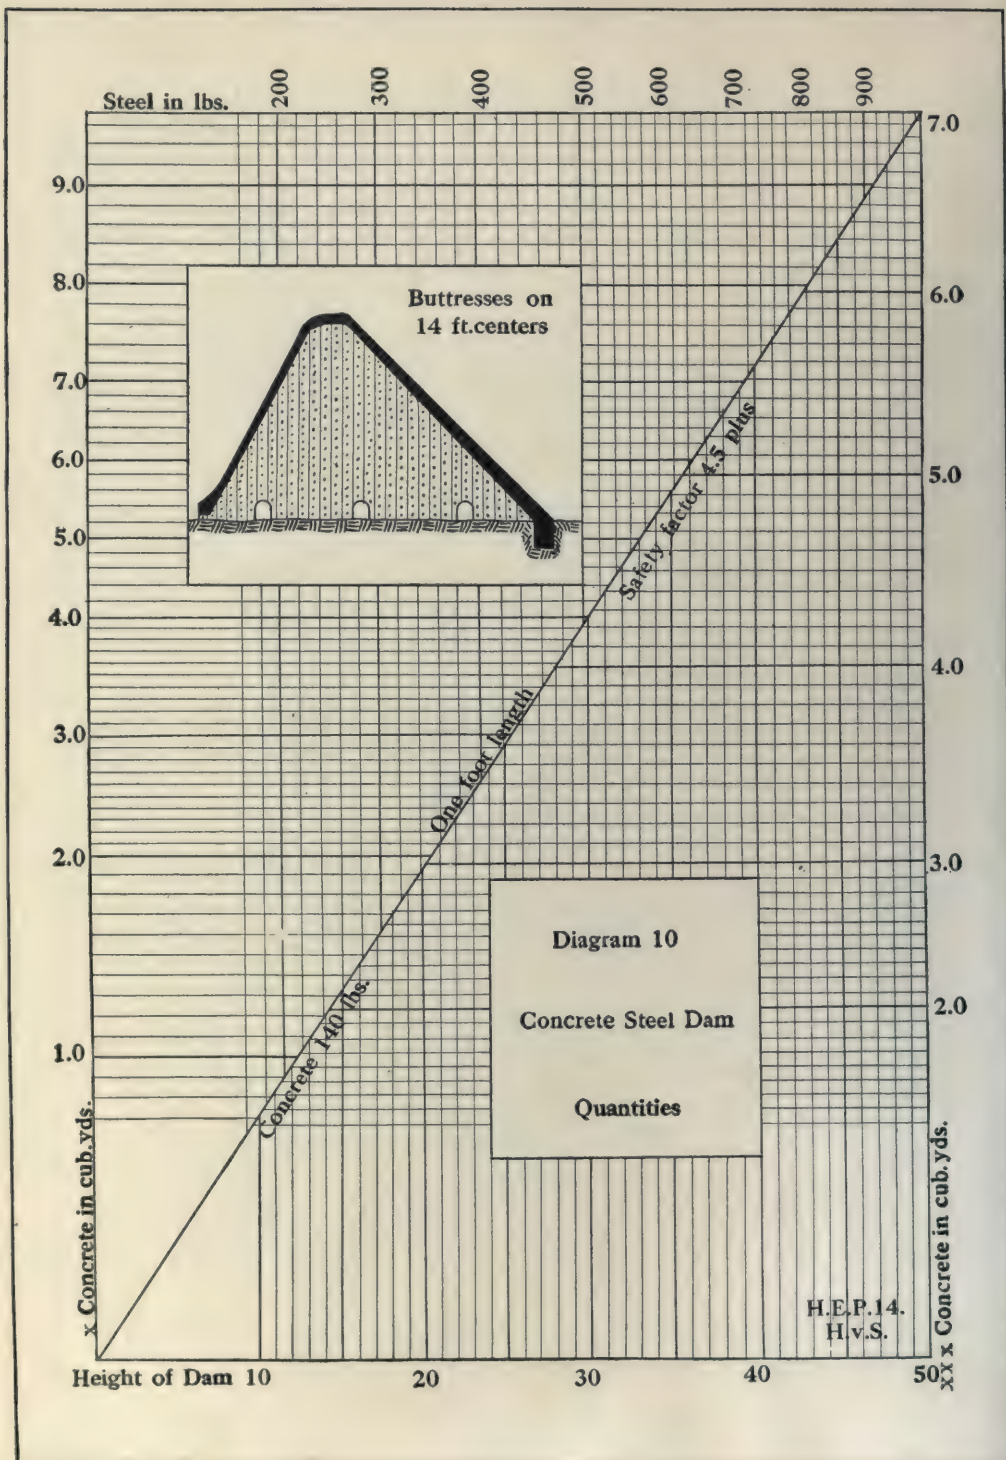



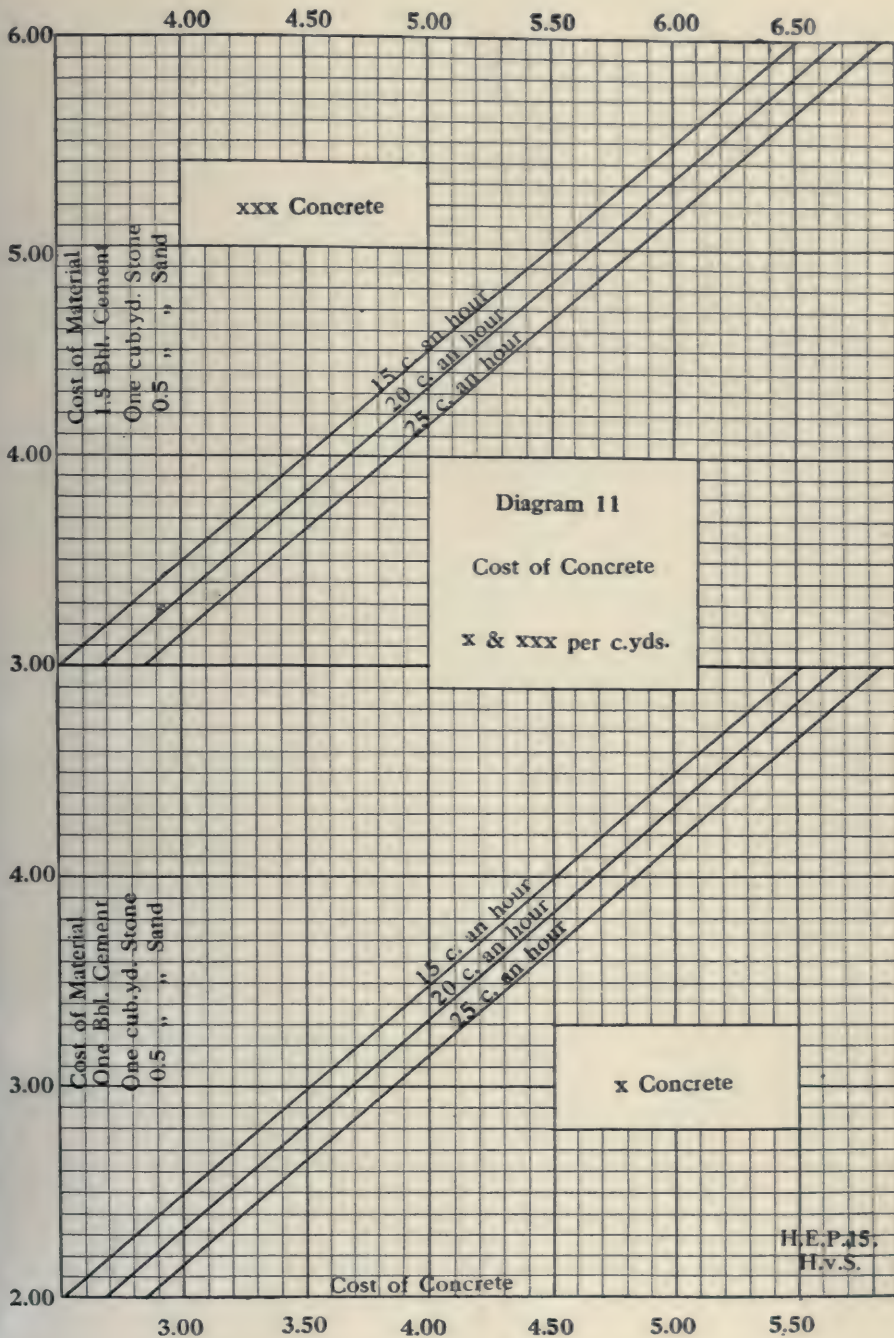

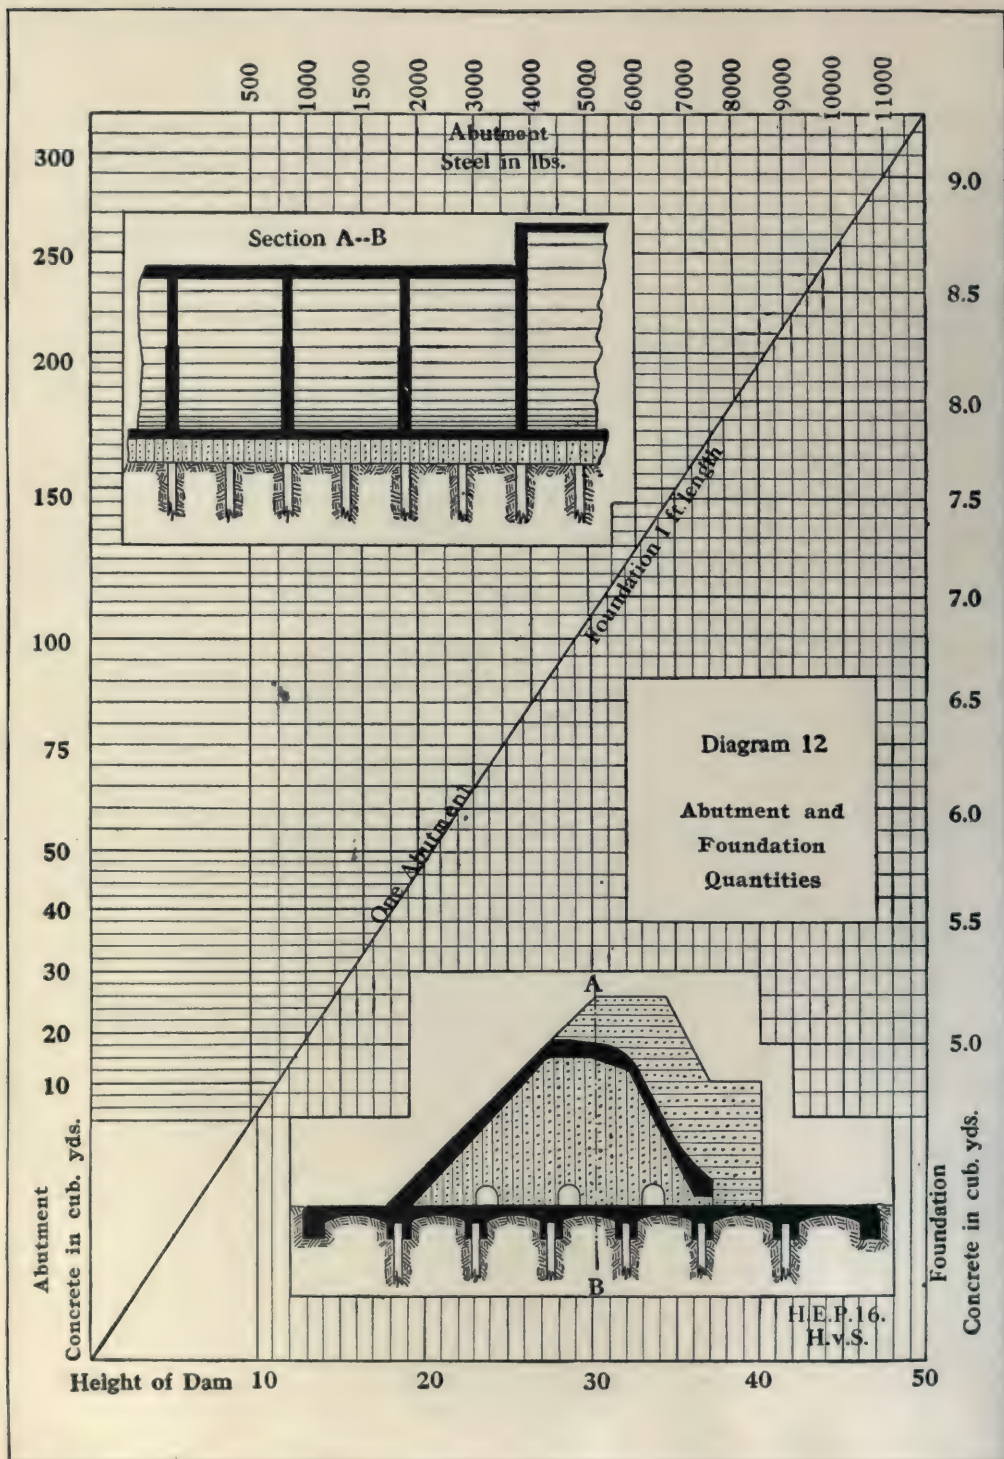



ARTICLE 24.—*The diversion works*, by which the water is carried from dam to the power station, are next in line. These may be canal, flume, or pipe line, depending upon the volume and distance over which the water must be conducted. If no diversion is required, these are, of course, unnecessary. These structures involve excavation of rock or loose material, timber or concrete lining, slope paving, timber framing, wood stave, steel plate, or concrete-steel conduits, pipe-line anchorages, flume supports, intake works, head-gates, culverts, waste- or sluice-ways, and gates and forebays with bulkheads, all of these being treated specifically as to design and construction in Part II.

Excavation cost of rock depends upon its character, and may vary from 75 cents to \$1.50 per cubic yard, also that of loose material from 25 to 50 cents per cub. yd.; timber lining of canals, with timber at \$20.00 per 1000 ft. b. m., costs \$4.50 per square yard, concrete lining \$5.00 per sq. yd., slope paving \$1.25 per sq. yd., timber framing of flumes costs \$40.00 per 1000 ft. b. m. The cost of pipe line at present is

	36-inch.	48-inch.	60-inch.
Wood stave.....	\$4.00	\$6.00	\$8.00
Steel plate.....	6.00	8.00	10.00
Concrete-steel.....	5.00	7.00	9.00

per linear foot of pipe, to which must be added cost of delivery, and putting in place, painting, etc.

Cost of head-gates, waste- and sluice-ways, etc., depends upon character of design and size of conduit.

The canal prism should be of an area sufficient to pass the flow at a velocity not exceeding three feet per second; the diameter of pipe conduits depends upon the ratio of head which can be economically expended in friction. The designs of all diversion works should be based upon appropriate hydraulic theorems.


ARTICLE 25.—*The power-house* is the last of the principal structures. Its location is determined by the development programme; it may be at the end of the dam or inside of the spillway, immediately below or at the terminal of diversion canal or pipe line. The design is fixed by the method of bringing the water to the turbines, the dimensions by number of power units it is to contain. Whether it is recommendable to let the water enter the power station freely or by means of feed pipes depends upon the height of fall, volume of flow, and topography at chosen power-house site. In both cases the structure consists generally of three parts,

—foundation, substructure or pit, and superstructure in which turbines and generators are housed. Foundation must adapt itself to the character of the material at the site, pit to volume of flow, height of fall and of backwater, and superstructure to power equipment. The walls and floors should be of masonry, monolithic concrete, or concrete-steel. Wherever permissible the water should be taken to turbines in conduits, as the power-house required for such an arrangement will be considerably less costly than where the water enters freely; and, for the same reason, if otherwise recommendable, the power units should be rather large than small, as the length of the power-house materially depends upon this condition. Especially is this true where water enters freely, since the structure in that event performs, in a sense, the functions of a dam, and the foundation and pit structures must in that case be designed not only for the duty of supporting vertical loads but also to resist horizontal pressures, which adds considerably to dimensions. The power-house should be readily approachable by the best available means of transporting the heavy equipment; ample room should be provided on the operating floor, so that each machine can be readily dismantled, repaired, or removed; a power traveller, by which parts of equipment can be handled, should be provided. There should be no stinting of light, and the roof had best be of the most substantial and fire-proof character.

Diagram 13 gives quantities for power-house per power unit length and for varying heights of fall, both for structures into which water enters freely and where it is conducted to turbines by feed pipes; the same diagram shows quantities required for foundations for structures in alluvial locations.

ARTICLE 26.—In addition to these works there may be required *reservoir embankments*, in the event that a part of the stream valley must be closed; in fact, this is the most frequent condition. These embankments are a continuation of the spillway, but rise sufficiently higher to guard them against possible overflow, the spillway proper being designed of sufficient length to pass the greatest probable flood volume at a safe height. These structures may be of earth or concrete-steel, depending largely upon the availability of suitable material for the former type. Reservoir banks or bulkheads partake of the importance of the spillway, and require the greatest care of design and still more so of construction. This consists in preparation of surface on which they are placed by a complete removal of all vegetable growth, roots, and stones, loosening



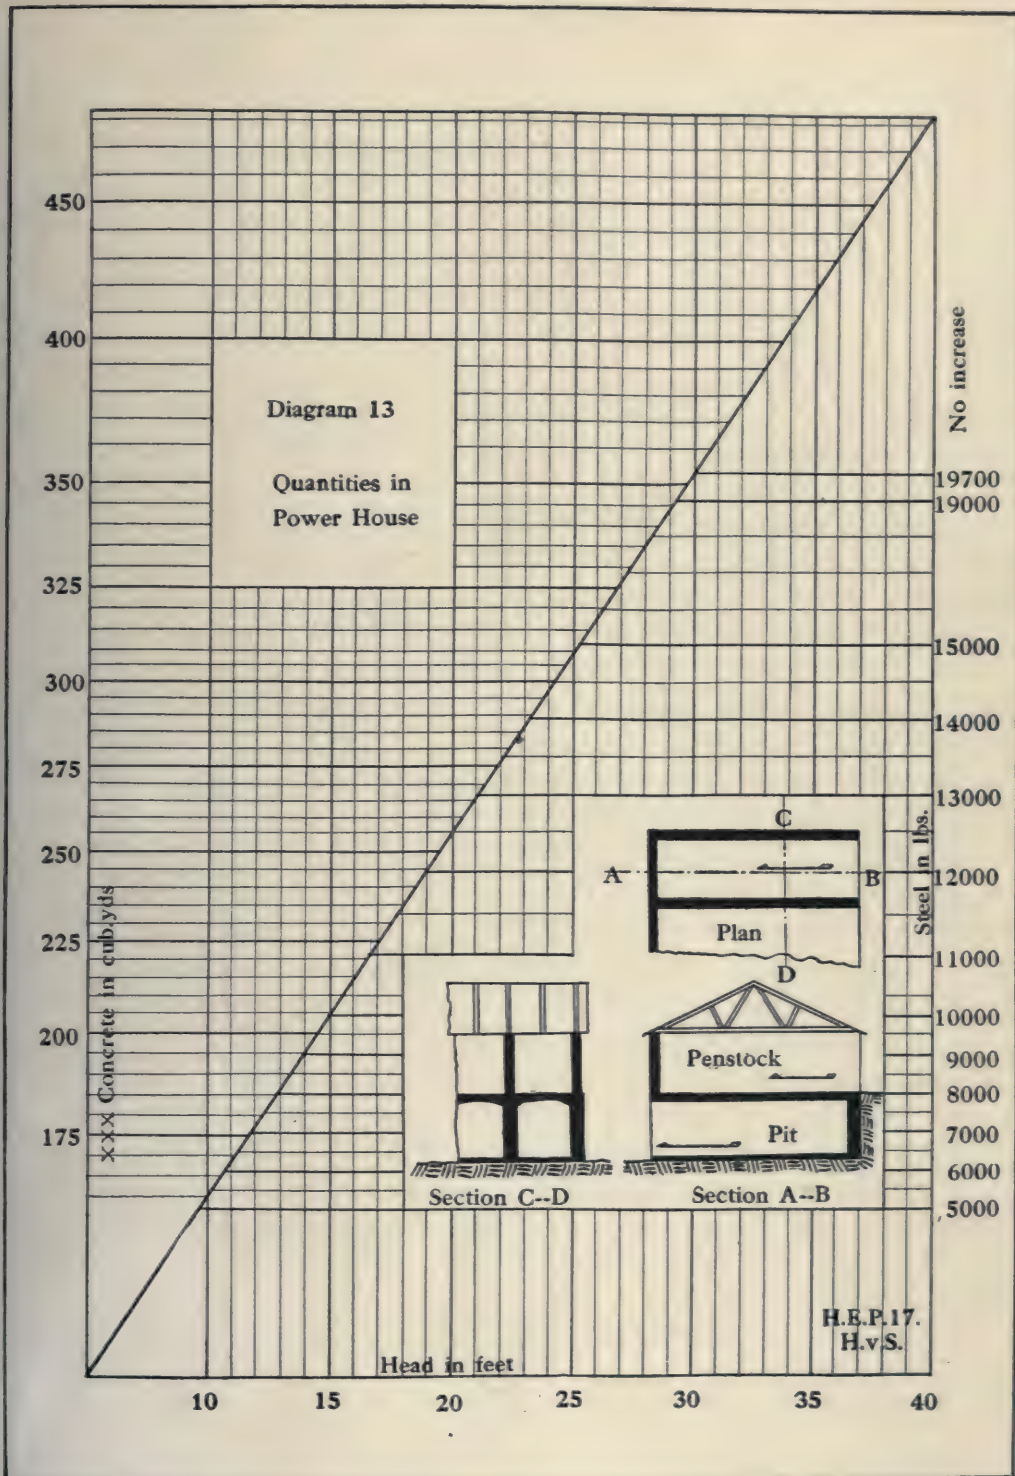

the soil to a considerable depth; constructing a core wall, which must penetrate into impermeable material, and compacting the material of which the bank is to be constructed in thin horizontal layers in a wet and plastic condition. Core walls should be of concrete and the banks of puddling material, being a proper mixture of clay, sand, and fine gravel which will pack solid when damp. This construction involves excavation at 25 to 50 cents, concrete at \$5.00 to \$6.00, and compacted earth fill at 35 to 50 cents per cub. yd.; the upstream upper slope should be paved at \$1.25 per sq. yd.

Diagram 14 gives quantities for earth reservoir embankments with concrete core wall in lengths of ten feet and for different heights.

Where the ground material is hard, reservoir bulkheads of concrete-steel construction may take the place of earth embankments when suitable material for these is not available. The quantities, in ten-foot lengths, are given on Diagram 15.

This completes the works which are generally required.

ARTICLE 27.—The *power equipment* consists of water turbines, with governors and draft tubes, and of electric generators, exciters, and switchboards. When generators are coupled to turbine shafts and the units are of standard type, an estimate of \$20.00 per horse-power will generally cover its cost; when turbines have to be geared to generator shafts, the cost per horse-power will be \$24.00.


ARTICLE 28.—The last item comprises the *transmission line* and equipment. As a rule, a wooden pole line is recommendable, poles being 35 feet long and set 106 feet apart; a single circuit will be sufficient excepting for large outputs. Such a line requires cross-arms, pins, insulators, and three strands of bare copper wire, the size, and therefore weight, of which depends upon the amount of current to be transmitted, the voltage of transmission, and the drop or loss to be allowed. On lines up to 50 miles the loss may be economically confined to 10 per cent.


Diagram 16 gives quantity of copper wire for transmission line, for different output and voltage, at 5 per cent. line drop, per mile, to which are to be added 50 poles, 100 cross-arms, 150 pins and insulators, for single circuit 3-phase line.

*Transformers* to raise and lower voltage at terminals of line cost \$6.00 per kilowatt of output.


A *substation* has to be provided at market end of line, which may be estimated for at \$1.00 per horse-power.



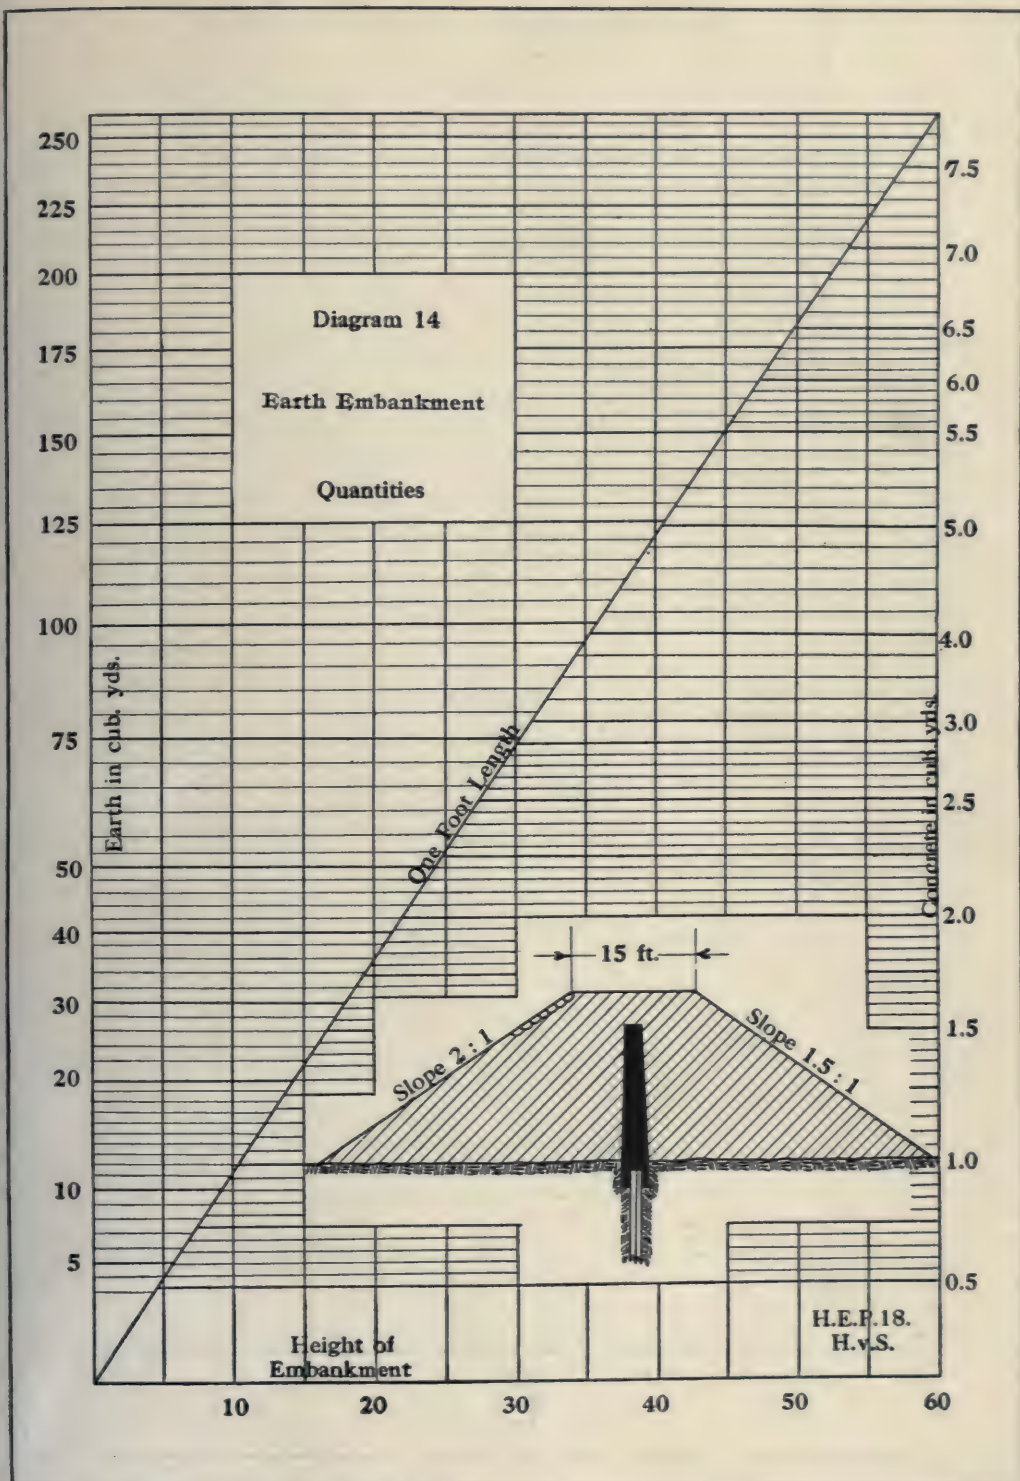

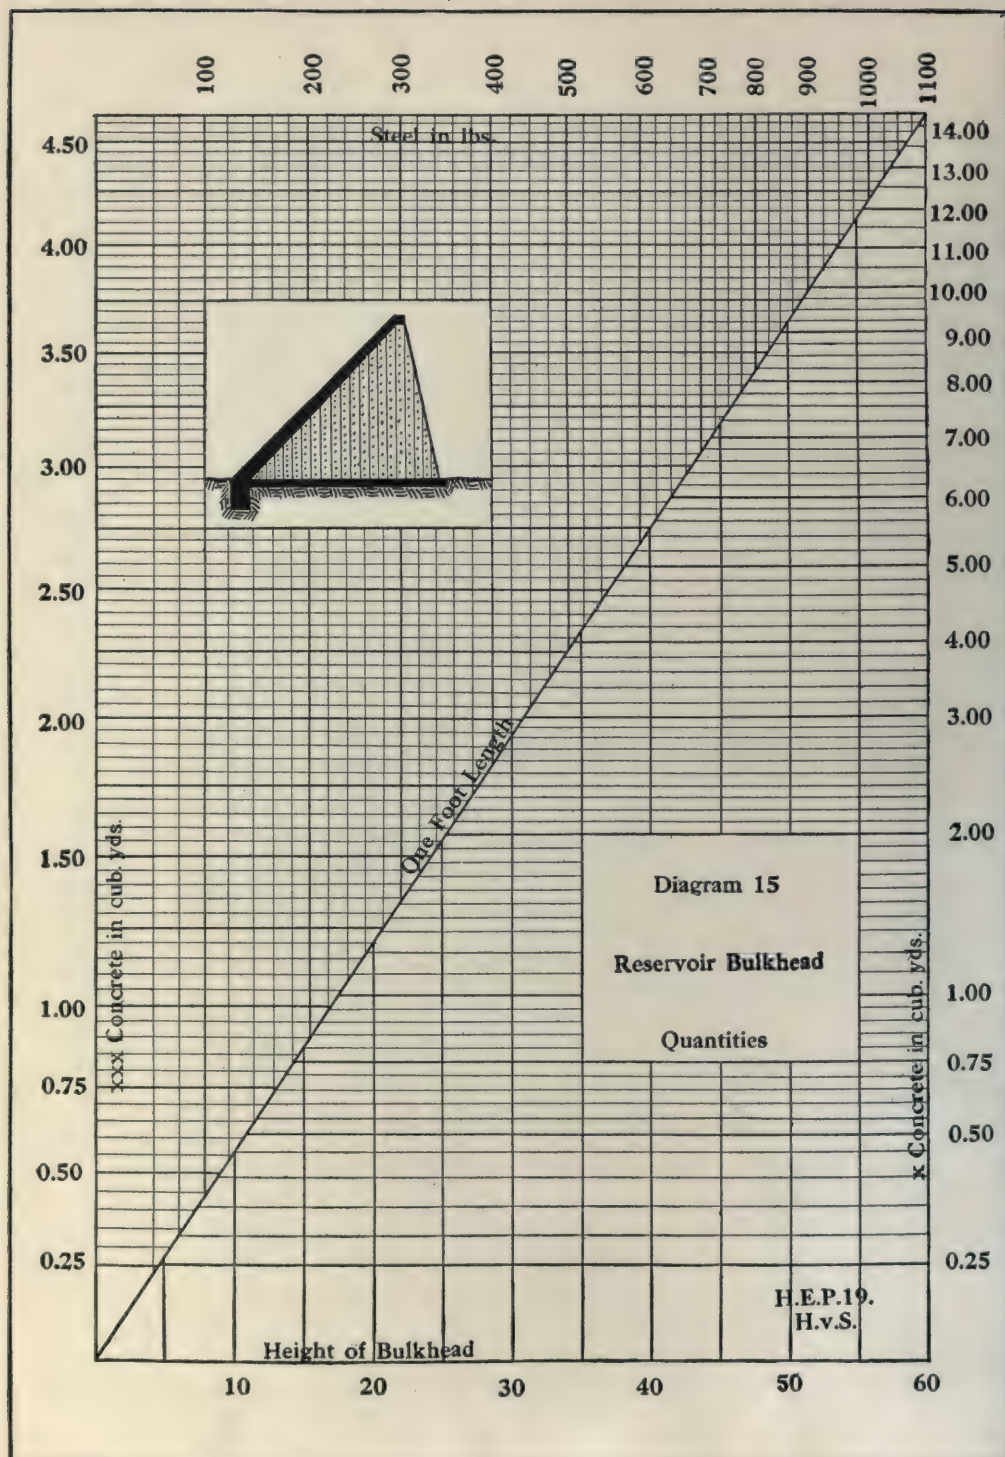



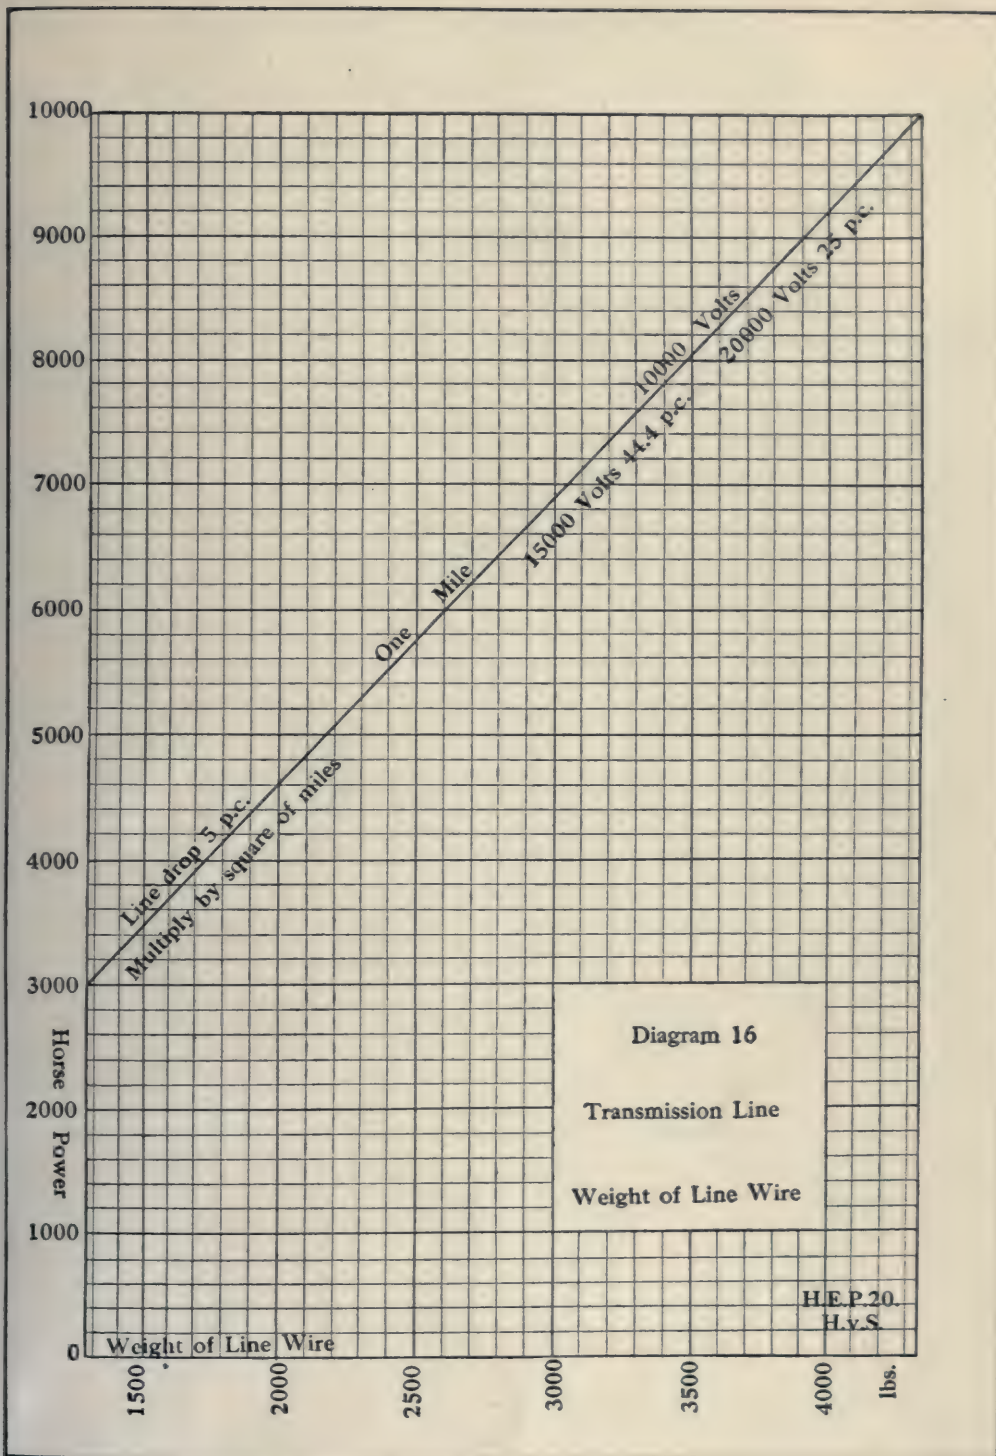

ARTICLE 29.—The probable *cost* of the development may be compiled from these approximations by finding cost of dam from Diagrams 9, 10, 11, and 12, cost of diversion works from a location profile, cost of power-house from Diagrams 11 and 13, cost of reservoir structures from Diagrams 11 and 15, taking cost of power equipment at \$20.00 per horsepower, cost of transmission line from Diagram 16, and cost of transformers and substation as stated.

To these items must be added 10 per cent. for engineering and inspection, and to the total the value of lands, right of way, of charter and franchises.



## CHAPTER V

### VALUE OF PROJECT AND PRESENTATION

THE SUMMING UP of findings from investigations of market, power capacity, feasibility and practicability, and cost of a hydro-electric project takes the shape of an engineer's report, with such documentary proofs and legal opinions as conditions may call for. If the funds required for development are to be secured from individual investors or through the customary financial channels, by which the securities of new enterprises are underwritten and placed on the market, the make-up of the report should be of a presentable character, preferably in bound book form, with plans, profiles, and designs reduced to photographs. Such a report is here given in full.

#### ARTICLE 30.—*Report on a Hydro-electric Project.*—

FREMONT POWER AND LIGHT COMPANY,

FREMONT, OHIO.

GENTLEMEN:—

In accordance with your commission, I have secured all the needed data to report to you on the hydro-electric power development on the Sandusky River near your city.

My conclusions are thus summarized:

This project contemplates the consolidation of four old mill powers and the modern development of the opportunities they present.

The plan is feasible, practical, and void of serious or costly problems, to the extent of developing a marketable output of twenty-two hundred electric horse-power and delivering the product for distribution at Fremont, O., for about one hundred thousand (\$102,600.00) dollars; the required investment aggregates one hundred and seventy-five thousand dollars.

Fremont, O., offers remunerative market for the output, and the investment will earn from ten to fifteen per cent net.

The data, calculations, and arguments upon which these findings are based form the subject of the following report.

Yours truly,

(Signed) H. VON SCHON,  
Consulting Engineer.

DETROIT, MICH., October, 1905.

#### *Hydrography,*

*The Drainage Area.*—Plan 1, of the Sandusky, is of the Great Lakes system, all of it being in the State of Ohio. Head-waters are in Richland County; the river empties into Sandusky Bay of Lake Erie.

The length of the river is about one hundred and fifteen (115) miles; the drainage area tributary to the point here considered (Fremont, Ohio) covers approximately fourteen hundred (1400) square miles.

There are some lakes, of small areas, at the source of the river, which is at altitude of twelve hundred and eighty (1280) feet above sea level. The basin is underlaid by lime-rock and shale; the land is generally under cultivation; the wooded area is small.

Precipitation, evaporation, and run-off are those normal to the lower Lake region; the annual temperature is fifty (50) degrees.

*The flow* has not been established by authentic measurements.

*Precipitation* has been observed for fifteen years at three (3) points in the watershed concerned; the monthly totals from 1891 to 1905 are given on Tables 1, 2, and 3, and the monthly means for the drainage area for same period on Table 4. (Here omitted.)

The fluctuations in annual precipitation are shown on Profile 1. (Omitted.)

*Evaporation* and *run-off* have been computed for the two dry years 1894 and 1905 of this period, results being given on Tables 5 and 6, and

*Monthly flow* from mean run-off of these dry years is noted on Table 7 and shown on Profile 2. (Omitted.)

The *ground flow* factor used in these calculations is that established for watersheds of bold relief, with light drift overlying rock, and no swamp or lake storage.

TABLE 5.—ORDINARY DRY-YEAR MONTHLY RUN-OFF FROM SANDUSKY RIVER WATER-SHED. (All measurements in inches.)

MONTH.	PRECIPITATION.		EVAPORATION.		RUN-OFF.		Ground Storage.
	Monthly.	Total.	Monthly.	Total.	Monthly.	Total.	
December '93.....	2.34	2.34	0.65	0.65	1.69	1.69	full
January '94.....	1.84	4.18	0.45	1.10	1.39	3.08	full
February '94.....	2.48	6.66	0.55	1.65	1.93	5.01	full
March '94.....	1.18	7.84	0.60	2.25	1.40	6.41	—0.82
April '94.....	2.08	9.92	1.08	3.33	1.40	7.81	—1.22
May '94.....	5.31	15.23	2.93	6.26	1.16	8.97	full
June '94.....	3.86	19.09	3.47	9.73	1.32	10.29	—0.93
July '94.....	2.70	21.79	3.81	13.54	0.46	10.75	—2.50
August '94.....	0.69	22.48	2.79	16.33	0.28	11.03	—4.88
September '94.....	3.26	25.74	2.28	18.61	0.22	11.25	—4.12
October '94.....	3.50	29.24	1.30	19.91	0.28	11.53	—2.20
November '94.....	1.81	31.05	0.84	20.75	0.40	11.93	—1.63
December '94.....	2.31	33.36	0.65	21.40	0.68	12.61	—0.65

T. = 50°. Ground flow for minimum capacity of storage.

Computed by H. VON SCHON, Cons. Engr.

TABLE 6.—ORDINARY DRY-YEAR MONTHLY RUN-OFF FROM SANDUSKY RIVER WATER-SHED. (All measurements in inches.)

MONTH.	PRECIPITATION.		EVAPORATION.		RUN-OFF.		Ground Storage.
	Monthly.	Total.	Monthly.	Total.	Monthly.	Total.	
December '04.....	3.78	3.78	0.80	0.80	2.98	2.98	full
January '05.....	1.56	5.34	0.43	1.23	1.13	4.11	full
February '05.....	1.43	6.77	0.44	1.67	0.99	5.10	full
March '05.....	0.94	7.71	0.58	2.25	1.32	6.42	—0.96
April '05.....	2.94	10.65	1.16	3.41	1.16	7.58	—0.34





TABLE 6.—ORDINARY DRY-YEAR MONTHLY RUN-OFF FROM SANDUSKY RIVER WATER-SHED.—*Continued.* (All measurements in inches.)

MONTH.	PRECIPITATION.		EVAPORATION.		RUN-OFF		Ground Storage.
	Monthly.	Total.	Monthly.	Total.	Monthly.	Total.	
May '05.....	4.93	15.58	2.84	6.25	1.75	9.33	full
June '05.....	3.45	19.03	3.36	9.61	1.20	10.53	—1.11
July '05.....	4.76	23.79	4.43	14.04	0.64	11.07	—1.32
August '05.....	2.20	25.99	3.17	17.21	0.38	11.45	—2.67
September '05.....	2.89	28.88	2.20	19.41	0.32	11.77	—2.30
October '05.....	2.27	31.15	1.15	20.56	0.38	12.15	—1.56
November '05.....	2.39	33.54	0.90	21.46	0.68	12.83	—0.75
December '05.....	1.95	35.49	0.61	22.07	1.10	13.93	—0.51

T. = 50°. Ground flow for minimum capacity of storage.

Computed by H. VON SCHON, Cons. Engr.

The fall of the river has been found from instrumental levels and is shown on Plan 3. The elevations (referred to sea level) of points pertinent to this discussion are:

Sandusky Bay.....	573 feet
Lower Rapids (in Fremont, O.).....	580 feet
River bed at Creager power-house.....	585 feet
River bed under Ballville bridge.....	590 feet
Roadway of Ballville bridge.....	613 feet
River bed at Cemetery Hill.....	600 feet
River bed at Tucker dam.....	609 feet
Crest of Tucker dam.....	618 feet
River bed at Tindall bridge.....	627 feet
Tindall bridge roadway.....	643 feet
Sandusky Falls, upper level.....	630 feet

The topography of river banks and adjacent territory has been developed instrumentally and is shown on Plans 3, 5, and 6.

#### *Development Programme.*

The available fall is fifty (50) feet from Upper Sandusky Falls, at elevation of 630 feet, to Lower Rapids, at elevation of 580 feet.


To utilize this fall in one development requires diversion of river by a canal on south side, entailing the acquisition of the right of way and the withdrawal of practically all flow—during low stages—from the natural river bed, by which property and legal difficulties would be encountered.

Forty (40) feet of the available fall can be utilized within the flowage limits of the mill powers to be acquired, and without change of natural flow in river, by two developments,—a twenty-two (22) foot development at the Cemetery Hill and an eighteen (18) foot development at the Creager power-house.

The remaining fall can be utilized for purposes of a storage reservoir.

The lower development to be at the Creager power-house; realizing a power head of eighteen (18) feet by deepening tail-race from Lower Rapids, at elevation of 580 feet, to river bed elevation at Creager power-house, 585 feet, and erecting an eleven (11) foot high dam with two (2) feet high flashboards rising to elevation 598 feet.



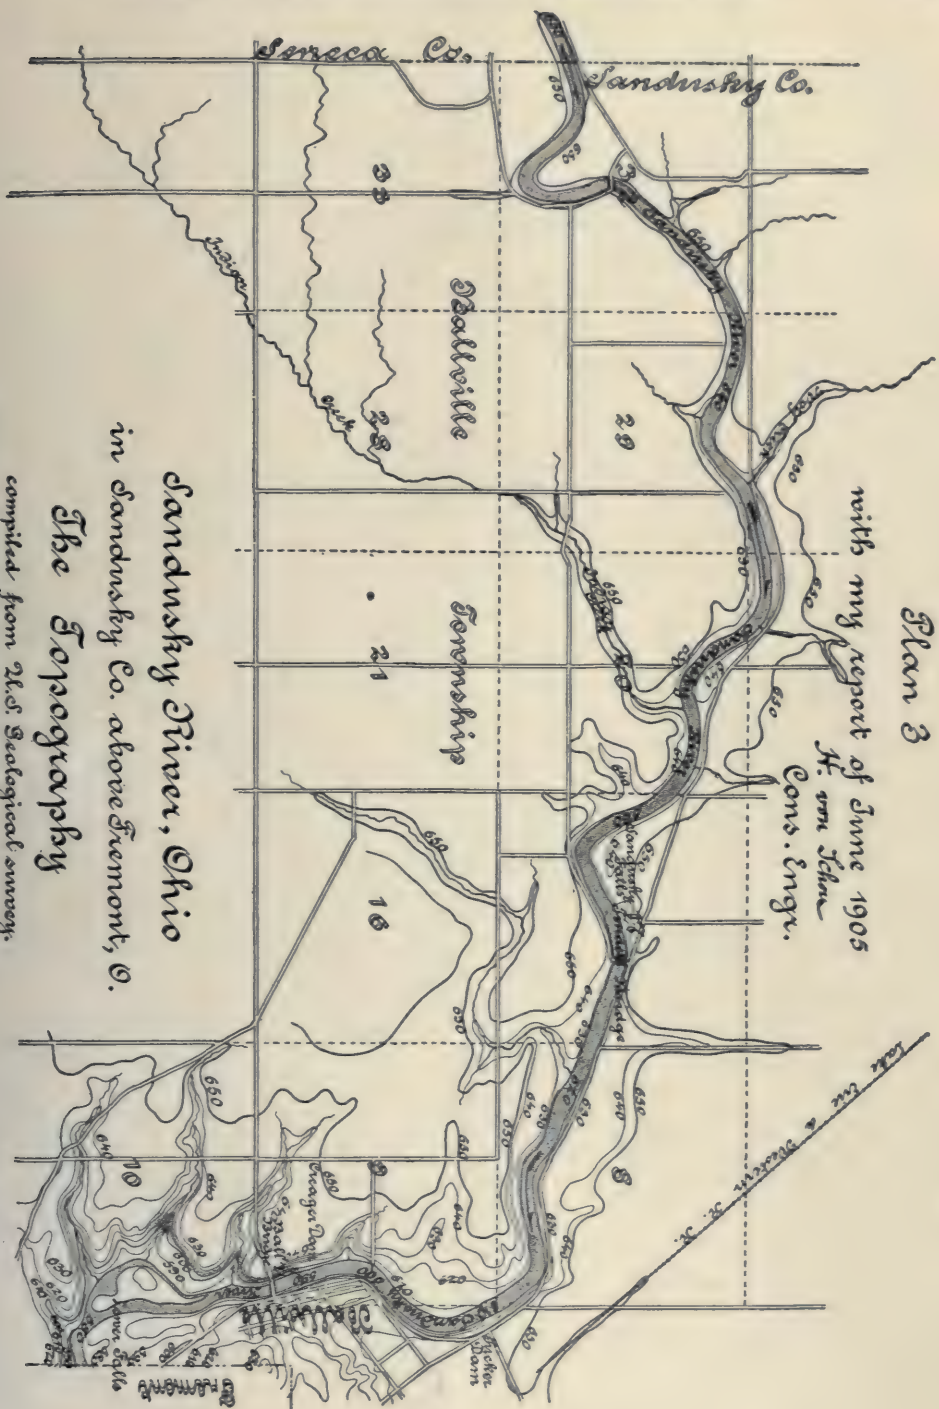

Plan 3  
with my report of June 1905  
H. M. Shaw  
Cons. Engr.

Sandusky River, Ohio  
in Sandusky Co. above Fremont, O.


The Topography

compiled from U.S. Geological survey.

Scale in feet: 0 1000 2000 3000 4000 5000 ft. contains.

U.S.

U.S. G. S. 22.  
S. N. S.


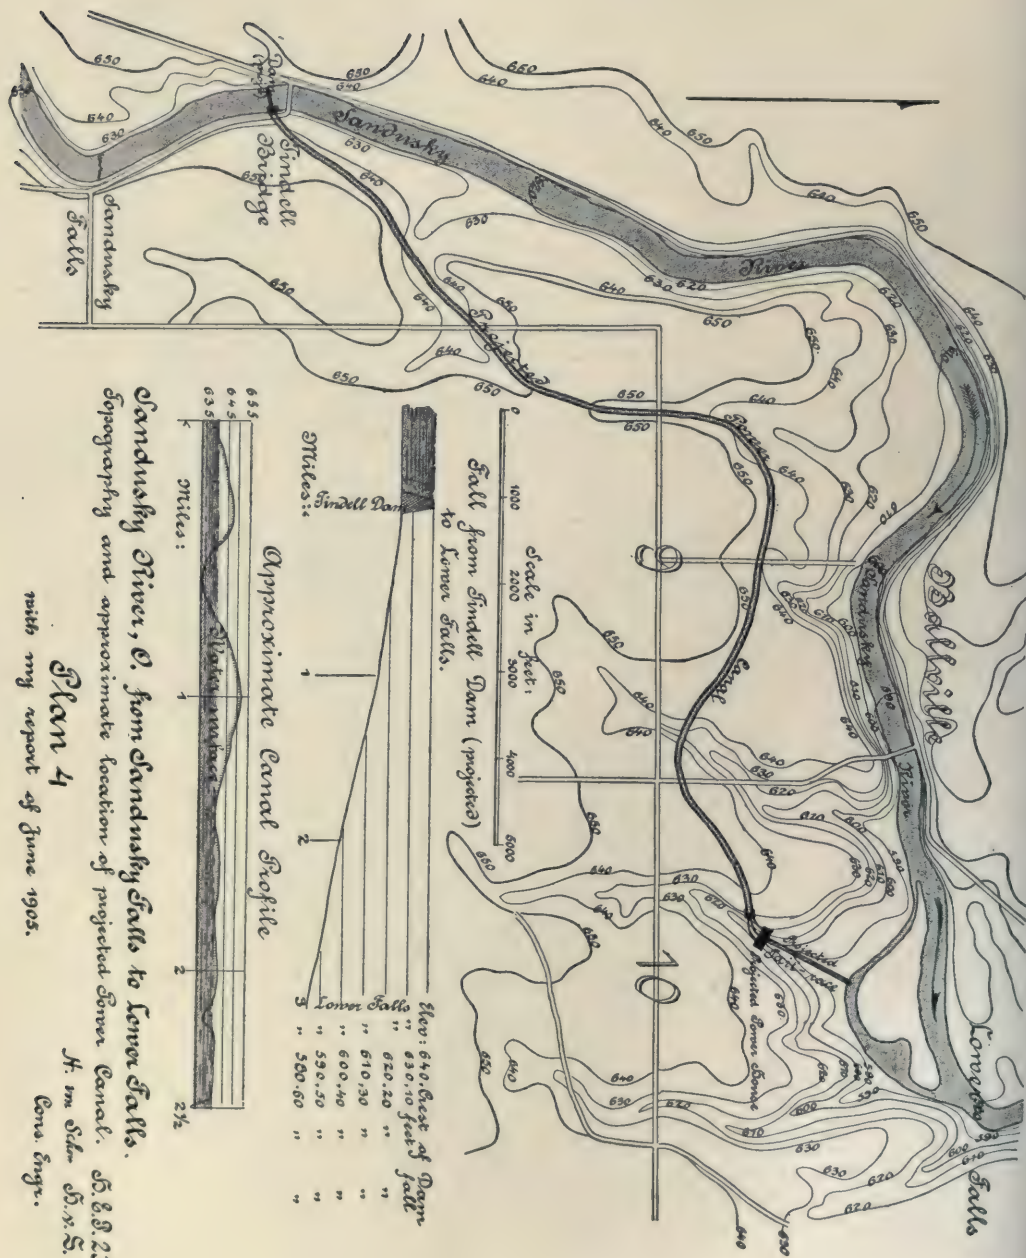




# Sandusky River, O., at and above Ballville.

## Topography from personal survey.

Scale in feet:

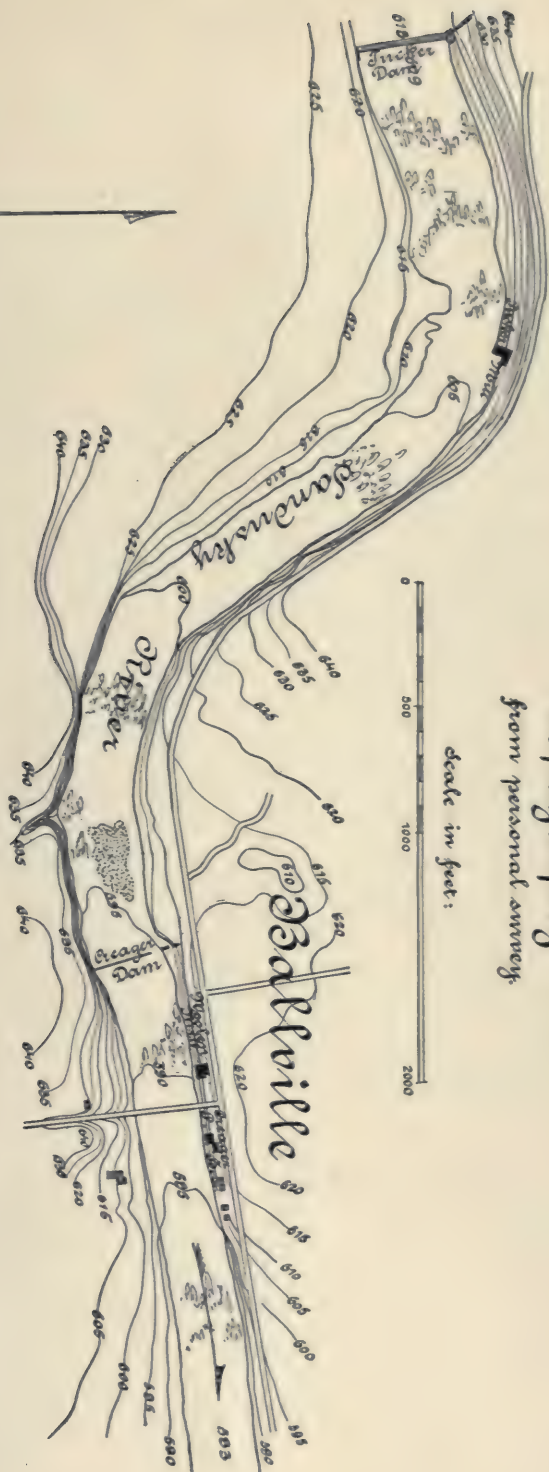

Plan 5,

with my report of June 1905.

H. M. John

Cons. Engr.

Oct. 8, 1924.

W. A. S.

The upper development would be at the Cemetery Hill, creating a power head of twenty-two (22) feet by erecting a twenty (20) foot high dam on river bed, elevation of 600 feet, which, with two (2) feet high flashboards, would reach an elevation of 622 feet.

A storage reservoir could be created on the Tindall power property by erecting on the river bed above the bridge, at elevation 627 feet, a six (6) foot high dam, which, with two (2) feet high flashboards, would rise to elevation of 635 feet, creating a reservoir of about six (6) million cubic feet capacity, furnishing a ten-hour flow of one hundred and sixty (160) cubic second feet, which could be increased by adding flashboards, as flowage covers to elevation of 638 feet.

TABLE 7.—ORDINARY DRY-YEAR OUTPUT OF DEVELOPMENT AT FREMONT, O., ON SANDUSKY RIVER.

Mean of 1894 and 1905, Month.	RUN-OFF FROM		Water-shed, square miles.	Flow, cubic sec. ft.	AVAILABLE		
	Water-shed, inches 1	Square mile, 0.896			Fall, feet	per ft. fall.	Electric Horse-Power, for 40 feet.
January.....	1.26	1.12	1400	1568	40	125.44	5017
February .....	1.80	1.61	1400	2254	40	180.32	7212
March .....	1.36	1.21	1400	1694	40	135.52	5420
April.....	1.28	1.14	1400	1596	40	127.68	5107
May.....	1.45	1.30	1400	1820	40	145.60	5824
June .....	1.26	1.12	1400	1568	40	125.44	5017
July .....	0.55	0.49	1400	686	40	54.88	2195
August .....	0.33	0.29	1400	406	40	32.48	1299
September .....	0.27	0.24	1400	336	40	26.88	1075
October .....	0.33	0.29	1400	406	40	32.48	1299
November .....	0.54	0.48	1400	672	40	53.76	2150
December .....	0.89	0.79	1400	1106	40	90.08	3603

Efficiencies: turbines, 76 per cent.; generators, 90 per cent.

Compiled by H. VON SCHON, Cons. Engr.

### Market.

The proposed development is half a mile from the city limits of Fremont, O. (This market analysis appears in Article 6.)

### Output.


The present power consumption at Fremont, O., aggregates 2850 electric horsepower, of which

2050 is day motor (10 hour),  
250 is light (night), and  
450 is mixed day and night load.

The available power output (see Table 7) is

for nine months.....2200 electric H.P.  
for eleven months.....1300 electric H.P.  
for twelve months.....1100 electric H.P.



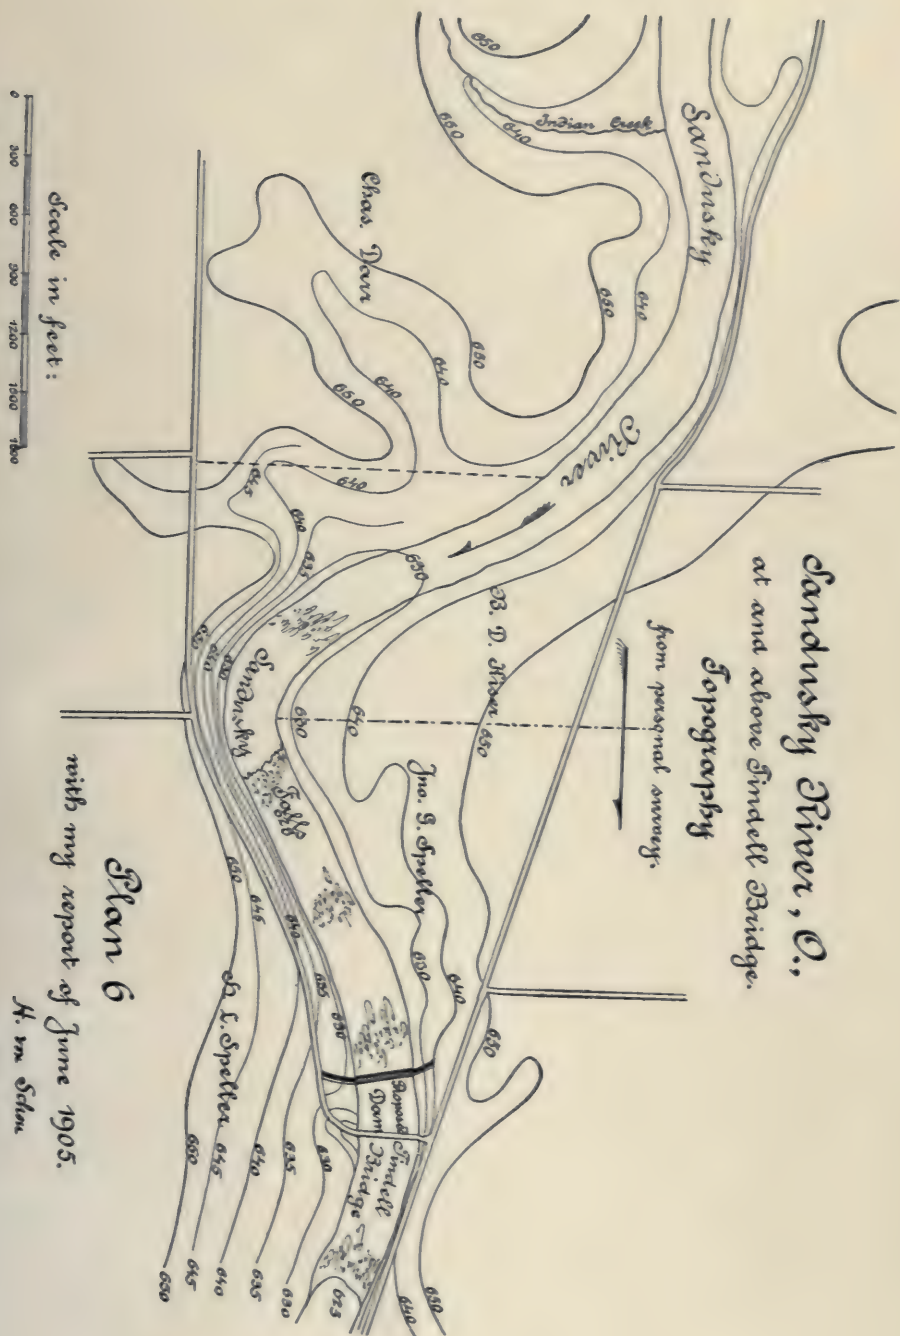

Sandusky River, O.,  
at and above Lindell Bridge.  
Topography

Plan 6

with my report of June 1905.

H. W. Sisson

Cons. Engr.

U.S. G. S.

W. N. S.

The recommendable programme appears to be to develop twenty-two hundred (2200) electric horse-power; to operate the plant during nine months with continuous flow, giving 24-hour output of 2200 electric horse-power; during three months of lower flow with ten-hour flow doubled by night storage, yielding a 10-hour (day) output of 2200 electric horse-power; and to supplement for night service with 250 horse-power steam plant.

*Underlying Values.*

1. *To be constructed.*

The proposed power works are to consist

- of one concrete spillway twenty-two feet high, with power-station at its end;
- of one concrete spillway eleven feet high, with Creager power-house arranged for station;
- of one concrete spillway six feet high;
- of embankments and waste-flumes to empound and control the entire flow of the river;
- of the hydraulic and electric machinery to develop the water-power and convert it into electric energy;
- and of the transmission line by which the current is to be delivered to the customers.

The total cost of these works and this equipment is estimated to aggregate 102,620 dollars.

2. *Existing properties to be acquired*

consist of mill powers and lands controlling the flow and fall of the river, the necessary pondage and storage, and the sites for dams and power-stations.

They are

- (a) The Creager water-power property, of six acres of land, a partial timber dam, an obsolete race-way, and a substantial mill building, with some hydraulic machinery not now utilized (lower power site).
- (b) The Heim & Baum woollen mill property, of eleven acres of land and a good mill building not occupied at present (upper power site).
- (c) The Tucker water-power and mill property, of eleven acres of land, a timber dam now in commission, serviceable head-works and race-way, and a modern flour grist-mill now being operated by water-power (upper power site).
- (d) The Tindall mill power, consisting of eleven acres of land (reservoir site); and
- (e) Some twenty-seven (27) acres of bottom-land, to be flooded by upper development.

The purchase price of these properties aggregates 65,000 dollars.

*Inventory of Properties: Buildings and Equipment.*

	Valuation.
1. Creager property:	
One four-story slate-roofed mill building, lately used as a power-house . . . .	\$3,500.00
One Samson 168 H.P. water-wheel . . . . .	250.00
One Leffel 104 H.P. water-wheel . . . . .	150.00
One Leffel 30 H.P. water-wheel (fair condition) . . . . .	50.00
One engine-house and 100 H.P. boiler and engine . . . . .	1,000.00
2. Heim & Baum property:	
Three-story frame woollen-mill . . . . .	2,000.00
Office building . . . . .	100.00
3. Tucker property:	
Three-story stone mill building . . . . .	5,000.00
Two Leffel water-wheels, 67 and 30 H.P. respectively, in good condition . . .	150.00
Modern milling machinery of 60 barrels capacity, good condition . . . . .	600.00
One 70 H.P. boiler and engine . . . . .	1,500.00
Stables and sheds . . . . .	100.00
Cooper-shop . . . . .	100.00
Total valuation of . . . . .	\$14,500.00

*Structural Types.*

*Lower Development.*—Concrete spillway, on rock, 11 feet high, 300 feet long; south end terminating in concrete-steel abutment, north end butting against masonry substructure of Creager power-house.

Earth embankment, 300 feet long, connecting south abutment with natural bank at south end of Ballville bridge.

Power equipment in Creager power-house.

*Upper Development.*—Concrete spillway, on rock, 20 feet high, 300 feet long; south end against rock bank, north end terminating in concrete-steel abutment.

Earth embankment, 500 feet long, connecting north abutment with natural bank at Cemetery Hill.

Power equipment in station constructed at end of dam.

*Reservoir.*—Concrete spillway, 6 feet high, 300 feet long; ends terminating in concrete-steel abutments.

Earth embankments, 300 feet long on south and 200 feet on north end, connecting with natural banks.

*Estimates.*

Estimates are based upon following unit prices not quoted in connection with schedules.

Cement, Portland, delivered, per barrel . . . . .	\$2.50
Concrete, 1-3-6, monolithic, placed, per cub. yd. . . . .	6.00
Concrete, 1-2-4, cyclopean, placed, per cub. yd. . . . .	7.00
Concrete, 1-2-4, formed and placed, per cub. yd. . . . .	8.00
Excavation, rock, per cub. yd. . . . .	0.75
Excavation, no rock, per cub. yd. . . . .	0.30
Gravel, or broken stone, for concrete, per cub. yd. . . . .	1.00
Labor, per day . . . . .	1.75



Planking, timber for forms, per M. ft. b. m.....	\$25.00	
Sand for concrete, per cub. yd.....	0.75	
Steel, re-enforcing, per lb.....	0.03	
Steel, structural, erected, per ton.....	100.00	
Team and driver, per day.....	3.50	

## I. Lower Plant—Creager Dam.

Item 1.	Controlling flow by diking.....	\$500.00	
Item 2.	Preparing dam site, clearing .....	200.00	\$700.00
Item 3.	Foundation on rock ledge.....		
Item 4.	Spillway, 11 ft. high, 300 ft. long: 810 cub. yds. cyclopean concrete, at \$7.00.....	5,670.00	
Item 5.	One abutment, concrete-steel: 10 cub. yds. concrete, at \$8.00 .....	80.00	
	700 lbs. re-enforc. steel, at 3 c.....	21.00	5,771.00
Item 6.	Earth embankments, with concrete core, 20 ft. 15' h., 50 ft. 10' h., 300 ft. 5' h.: core wall, 100 cub. yds. concrete, at \$6.00 .....	600.00	
	1370 cub. yds. earth fill, at \$0.35.....	480.00	1,080.00
Item 7.	Power station in Creager mill for two power units: 2 pits and penstocks, 16' x 20', concrete-steel: 280 cub. yds. concrete, formed, at \$8.00.....	2,240.00	
	2000 lbs. re-enforc. steel, at 3 c.....	600.00	
Item 8.	Repairing mill building.....	1,000.00	3,840.00
Item 9.	Deepening tail-race, 2000 ft. long, 25 ft. wide, 5 ft. deep at upper end: excavating 5000 cub. yds. rock, at 75 c.....	3,750.00	3,750.00
Item 10.	Hydraulic equipment, 18 ft. head, 400 cub. ft. flow, four 33-inch turbines with draft tubes, two per unit, at 330 H.P., 180 R.p.m., placed, at \$6.00 per H.P.....	3,960.00	
Item 11.	Two turbine governors, at \$300.00.....	600.00	4,560.00
Item 12.	Electric equipment: Two 250 Kw. alternators, 2300 volts, 60 cycle 3-phase, placed, at \$12.00 per Kw.....	6,000.00	
Item 13.	Three switchboards, equipped, at \$275.00.....	825.00	
Item 14.	Two 7½ Kw. D. C. motors, at \$250.00 .....	500.00	7,325.00
	Lower plant complete.....		\$27,026.00

## II. Upper Plant—Cemetery Hill Dam.

Item 15.	Controlling flow by diking.....	\$500.00	
Item 16.	Preparing spillway site, clearing.....	200.00	\$700.00
Item 17.	Foundation on ledge rock.....		
Item 18.	Spillway, 22 ft. h., 300 ft. long: 2475 cub. yds. cyclopean concrete, at \$7.00.....	17,325.00	
Item 19.	One abutment, concrete-steel: 48 cub. yds. concrete, at \$8.00 .....	384.00	
	2100 lbs. re-enforc. steel, at 3 c.....	63.00	17,772.00
Item 20.	Earth embankment with concrete core, 30 ft. 20' h., 20 ft. 15' h., 225 ft. 10' h., 225 ft. 5' h.: core wall, 242 cub. yds. concrete, at \$6.00 .....	1,452.00	
	3330 cub. yds. earth fill, at \$0.35.....	1,166.00	2,618.00

Item 21. Power station for 2 units, same as lower station with addition for roof and end walls.....	\$8,000.00	\$8,000.00
Item 22. Tail-race in river bed (none).....		
Item 23. Hydraulic equipment:		
Four 30" turbines with draft tubes, two per unit, at 400 H.P., 200 R.p.m., placed, at \$6.00 per H.P.....	4,800.00	
Item 24. Two turbine governors, at \$300.00.....	600.00	5,400.00
Item 25. Electric equipment:		
Two 300 Kw. alternators, 2300 volts, 60 cycle 3-phase, placed, at \$12.00 per Kw.....	7,200.00	
Item 26. Three switchboards, equipped, at \$275.00.....	825.00	
Item 27. Two 10 Kw. D. C. motors, at \$275.00.....	550.00	8,575.00
Upper plant complete.....		\$43,065.00

III. Reservoir Dam (Tindall).

Item 28. Controlling flow.....	\$500.00	
Item 29. Preparing river bed.....	200.00	\$700.00
Item 30. Foundation ledge rock.....		
Item 31. Spillway, 6 ft. h., 300 ft. long:		
300 cub. yds. cyclopean concrete, at \$7.00.....	2,100.00	
Item 32. Two abutments, concrete-steel:		
12 cub. yds. concrete, at \$8.00.....	96.00	
1000 lbs. re-enforc., at 3 c.....	30.00	2,226.00
Item 33. Earth embankment with concrete core, 100 ft. 10' h., 550 ft. 5' h.: core wall, 220 cub. yds. concrete, at \$6.00.....	1,320.00	
2030 cub. yds. earth fill, at \$0.35.....	710.00	2,030.00
Item 34. Sluice-gate.....	500.00	500.00
Storage plant complete.....		\$5,456.00

IV. Transmission.

One mile, 2300 volts, 1500 Kw., 5 per cent. drop, 18,000 circ. mils, No. 6 wire.

Item 35. 53 poles, 35 ft., set, at \$5.00.....	\$265.00	
Item 36. 116 cross-arms, placed, at \$0.50.....	53.00	
Item 37. 159 insulators, placed, at \$0.50.....	80.00	
Item 38. 1280 lbs. copper wire, at \$0.26.....	3,228.00	
Item 39. Wire strung, at \$2.50 per pole.....	132.00	\$3,758.00

V. Distribution.

Item 40. Lines (poles in place), 2 miles.....	\$6,986.00	
Item 41. Transformers, 1500 Kw., at \$4.00.....	6,000.00	
Item 42. Substation.....	1,000.00	\$13,986.00

Summary.

Lower plant.....	27,026.00	
Upper plant.....	43,065.00	
Reservoir plant.....	5,456.00	
Transmission.....	3,758.00	
Distribution.....	13,986.00	
Total.....		93,291.00
Item 43. Engineering and inspection, 10 per cent.....		9,329.00
Total cost of development.....		\$102,620.00

*Output.*

Generated.....	2200 E.H.P.
Delivered .....	2090 E.H.P. or 1560 Kw.
Cost per H.P. delivered for service.....	\$49.10

*Annual Operating Cost.**Generating, Day Service.*

One operator, supervising both plants .....	\$1,000.00	
Two assistants, at \$720.00 .....	1,440.00	
Two laborers, at \$600.00 .....	1,200.00	\$3,600.00
For night service add operator and 2 assistants .....	\$2,440.00	

*Distributing, Day Service.*

Superintendent .....	1,200.00	
Assistant .....	720.00	
Two linemen, at \$720.00 .....	1,440.00	
Book-keeper .....	720.00	
Office and stationery .....	600.00	4,680.00
For night service add assistant and one lineman .....	\$1,440.00	

*Maintenance and Depreciation.*

Works, \$60,000.00, 2 per cent .....	1,200.00	
Equipment, \$32,000.00, 5 per cent .....	1,600.00	2,800.00

*Taxes.*

2 per cent. on $\frac{2}{3}$ valuation of lands and works, \$112,000.00.....	2,240.00
--	----------

*Investment Balance.*

Capital investment:		
Property, franchises, etc.....	\$65,000.00	
Hydro-electric plant.....	102,620.00	\$167,620.00

*Charges.*

Item 1. Interest and redemption at 8 per cent. on \$175,000.00.....	14,000.00	
Item 2. Operating cost, day and night:		
Generating.....	5,080.00	
Distributing.....	6,120.00	
Maintenance and depreciation.....	2,800.00	
Taxes.....	2,240.00	30,240.00

*Revenue.*

Item 3. From 2090 H.P., 1560 Kw., 10-hour service, at $1\frac{1}{2}$ c. p. Kw. hr., with 75 per cent. load factor, 308 days—3080 hours—4,804,800 Kw. hours, or 3,603,600 Kw. hours, at $1\frac{1}{2}$ c.....	54,054.00	
about \$26.00 p. H.P.		
Surplus.....		23,814.00

No revenue is estimated from night service; operating cost estimate includes night operation.

ARTICLE 31. *Value of Hydro-electric Opportunity.*—The value of any commercial enterprise is deduced from the value of its product; if this is not marketable, there is no value. Given a market for the power output of a hydro-electric opportunity, the intrinsic value of the latter must



be established by comparison with other power sources from which the market could be supplied, and it becomes purely a process of balancing the comparative earning capacities of the two power plants and the conversion of the balance into the principal of which it represents the interest or cost of money.

A hydro-electric plant shows on estimates an annual surplus of \$5000, and a steam plant of similar output pays fixed charges and no more; it is evident that the hydro-electric opportunity is capable of earning interest on a larger investment than the steam plant; the theoretical difference is \$100,000, and the intrinsic value of the hydro-electric plant is that based upon the rate of valuation of personal property for purposes of assessment in the district in which it is located. Valuations of lands or riparian rights representing water-power opportunities, determined otherwise than from a conclusive estimate of earning capacity of the projected plant, are purely speculative values, which may be a hundred per cent., and greater, in error either way.

Only one programme gives safe results, safe commercially, and that is to secure a complete and correct analysis of the project.

## PART II

### DESIGNING AND CONSTRUCTING THE DEVELOPMENT

THIS PART treats of the engineering of the hydro-electric development; in it are presented methods, theories, designs, and their execution, as they have been found, in the author's practice of this specialty, to secure the desired results in a manner adapted to the commercial as well as the engineering requirements of the business. Some of these leave the trodden paths of former practice; the majority must needs follow them; only where necessary, in the author's judgment, to make clear his meaning, have rudimentary methods been employed; on the whole, it has been the purpose to render the treatment of this subject complete within its scope.

The subheads are of five chapters dealing with surveys, development programme, structural types, equipment, plans, and estimates and specifications, construction, and superintendence, each of which is divided into articles covering detail topics.

---

## CHAPTER VI

### THE SURVEY

SURVEY embraces all operations by which the hydrographic, topographic, and geologic characteristics are investigated and determined.

ARTICLE 32.—The first preparation for the work of surveys is the *examination of maps* of the stream and the projected power-plant location, if such has been fixed. The best obtainable maps are the United States Geological Survey topographic sheets, which may be secured from the Director of the Survey, in Washington, D. C., or at local agencies. Several of the States provide annual appropriations for co-operative surveys with the Federal department, and the annual reports of the State Engineers, or Geologists, contain topographic county maps of similar origin. This is the available information from which the topography of a stream system, or so much as is involved in the examinations,

may be studied; it will reveal the course of the river, the contour formation of its banks, its fall, by the crossing of successive contours, the locations of railroads and highways, of fords and ferries, and of settlements. All this furnishes ample data for the appreciation of the general conditions, which will become useful in locating dam site, estimating fall, flowage areas, and storage opportunities.


An examination of the drainage area on State maps and of precipitation records will throw considerable light upon the probable flow characteristics of the watercourse; note the origin of its principal sources, whether in foot-hills or flowing out of swamps or lakes, and the length of its tributaries, the import of all of which will be discussed in detail further on.

Finally, much practical information as to subsurface formations in the vicinity of the projected power site can be gained from well borings; one concern frequently operates a well-boring apparatus in several counties, and these may be traced through hardware merchants at the county seat or near-by town.

ARTICLE 33. *Reconnaissance*.—With the general knowledge of hydraulic, topographic, and geologic characteristics thus gathered, a reconnaissance is the next best preparation, on horseback or preferably in a boat floating down the river, equipped with a camera, compass, hand-level, aneroid, field-glasses, sketch-book, and the plan of the river's course, showing county, township, and section lines. On such a trip many details will be revealed which are not on the maps or are given erroneously. The aneroid should be read at regular intervals of time, the location being identified on the map; the velocity of flow, and therefore of transit, can be estimated and thus distances sufficiently determined to aid in fixing the fall. Observe the character of the banks and make notes in the sketch-book of likely dam sites, estimating the river's width and finding the approximate and relative heights of the banks by aneroid and hand-level; note also the improvements on river bottom lands and the height of bridge crossings, paralleling railroads and highways. A few days devoted to reconnaissance will prove an exceedingly valuable investment, the benefits of which will be frequently recognized in the course of perfecting the development programme; above all, it is highly recommendable to make copious notes and sketches of whatever is worth remembering and to take photographic views of the most notable features.



ARTICLE 34. *Triangulation*.—With this general equipment the work of definite determinations can be approached. It is not always feasible to foretell what the extent of the survey will be. It must cover the dam site, the flowage area, and perhaps the tracing of property lines. It is, however, always advisable first to establish some fixed references for elevations and points by a system of *triangulation* of one or more quadrilaterals; this should be planned to be readily accessible and safe from interference during construction and above the highest pond level. The base should be at least twice as long as the width of the stream valley.

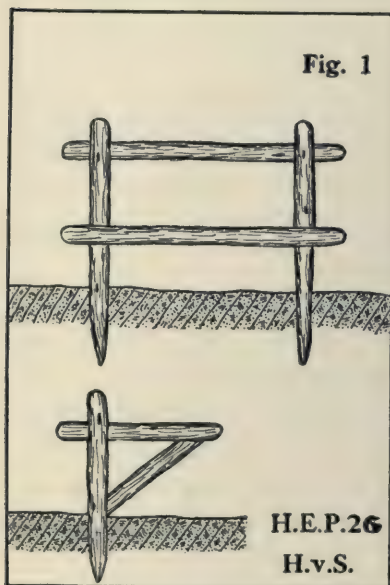

Base Benches; Base Supporting Brackets.

The line is instrumentally projected and permanent base-point markers of stout posts or of stones are set. Measuring benches (Fig. 1) are placed at intervals of 100 feet along the line; they consist of two stout vertical stakes set twelve inches centres and a horizontal piece with two-inch flattened top face secured to them; the bench pieces of each successive 100-foot section are on same level, and where this changes two bench pieces are secured to stakes. Supporting brackets (Fig. 1), consisting of a stake with one horizontal piece at the level of the respective 100-foot section, are set 25, 50, and 75 feet from the section bench. The measurement should be made with a standardized 100-foot steel tape, which is placed on sup-

porting brackets, ends on benches, and a ten-pound weight secured to each handle; the zero is marked on the permanent base point and the fractional foot to the marked centre of the bench piece is measured with a hardwood scale to one-hundredth of a foot; record of the length of each section of base is kept. This measurement should be repeated three times and the mean accepted. The selected triangulation points are permanently marked, and *tripods* (Fig. 2), constructed of fence-posts, are placed securely over them, the legs being set three feet in the ground; tops are covered by a two-inch wooden plate with a two-inch hole in its centre and plumbed over the base point; the top of the tripod should be from four to four and a half feet above the ground. Triangu-

lation points are preferably marked with *targets*, consisting of two boards one inch thick, twelve inches wide, and three feet long, secured to each other as shown in Fig. 2, wings being painted alternately white and red; a two-inch handle, secured to the end, is set into the hole of the tripod plate.

The angles should be measured with an engineer's transit reading by vernier to thirty seconds. The instrument is secured to a *trivet plate* with three spikes which rest on the tripod plate. Each angle should be measured five times in both directions, giving ten readings; the mean is accepted.

The *azimuth* of the base should be determined from Polaris, so that any station in the survey system may be available for the tracing of the magnetic bearings given in the boundary descriptions. The sides of triangles are computed by trigonometrical functions; the location of points is determined by co-ordinates.

ARTICLE 35. *Elevations*.—A *reference bench* is selected or established, and the elevations of the triangulation points are determined by return levels from reference or line-benches and plainly marked on the station tripod. An eighteen-inch "Y" level in good adjustment and rods reading to hundredths of a foot are used in running the level lines. Triangulation benches


being established, a level line is run up and down the stream over the entire reach affected by the development. When the immediate river shore is inaccessible or the stream tortuous, the line may follow along the top of the bank, or at some distance from it along roads, and *levels taken to water* at accessible points. Every fifth turning-point should be a bench of permanent mark, and each section of level line between benches should be returned until an agreement between two runs within 0.001 foot is secured; where convenient the line benches should be connected with the triangulation benches for check. Elevations are plainly marked on all permanent benches.



Tripod and Target.



ARTICLE 36. *Topography*.—A *stadia survey* is made of all the river valley to be considered in the development; it is referred to the triangulation system. This survey should develop the topography to one-foot contours at the probable location of the works, and in five-foot contours over the remaining territory; the bearings should be of azimuths in harmony with the triangulation system; distances are read on plumed rods; vertical angles are measured to the height of instrument; stadia

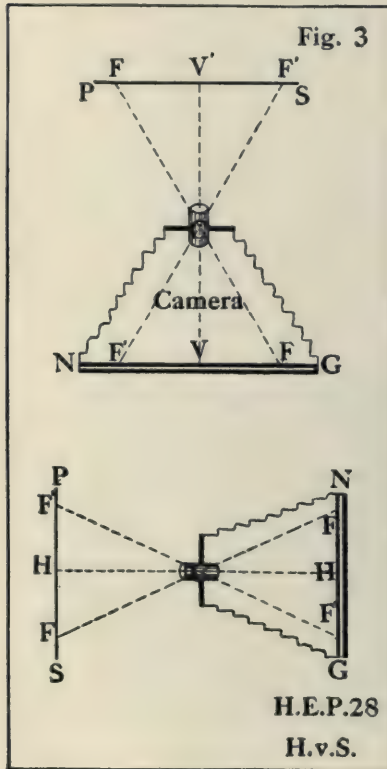

stations are marked by stakes with tack, and the instrument is plumbed. Whenever practicable, reference readings are taken to triangulation and water points. By this survey, with a rodman on each side of the river, the shore lines, property corners and boundaries, buildings, bridges, roads, and a sufficient number of contour points to project the true topography are located. Plan 7 shows the *results* of triangulation, levelling, and topographic survey.

The instrument's adjustments should be checked at the beginning and close of each day's survey.

ARTICLE 37. *Phototopography*.—It is not the purpose to enter upon a broad discussion of the subject of photogrammetry, but to describe only the practical process by which a general projection of the topography of the stream valley and its immediate high banks can be obtained within contour intervals of about ten feet.

In a photographic camera (Fig. 3) C is the optical centre, being the middle point of the optical axis between the two lenses of the objective; N G is the negative plane in which the sensitive plate or film rests; V V' is the optical axis produced and its vertical projection called the vertical; H H' is the horizontal projection of the same axis known as the horizon; C V is the focal length which is uniform for distances beyond 100 feet; P S is the imaginary positive plane, being parallel to the negative plane and focal length from the optical centre.

The image on the negative plane is the reverse of the object it repre-




sents and in true perspective, but if reflected on the positive plane it would there appear as a perfect miniature facsimile; the points  $F$  and  $F'$  in the negative plane would be found as  $F$  and  $F'$  in the positive at like distances horizontally or vertically from the vertical or horizon.

This is the optical and geometrical principle on which the utilization of the camera for this purpose is based.

Fig. 4,  $A B D E$ , is a print of the negative laid down flat with  $H H'$ , the reproduced horizon, parallel to  $P S$ , the positive plane, and at any convenient distance above it;  $V V'$  is the vertical produced;  $F$  is the image of a flag on top of a hill. To locate  $F$  graphically drop a perpendicular from  $F$  to the positive plane at  $F'$  and connect this point with the optical centre  $C$ , fixed in  $V V'$  produced and focal length, in natural scale, from the positive plane. The true location of  $F$  will be in the extension of the line  $C F'$ , and will be fixed by a similar operation with the second view taken from the other end of the base line, as the two projections will intersect at the location of  $F$  in the plan.

To find the location of  $F$  algebraically measure "y" on the print, being the distance along the horizon of the vertical projection of  $F$  to

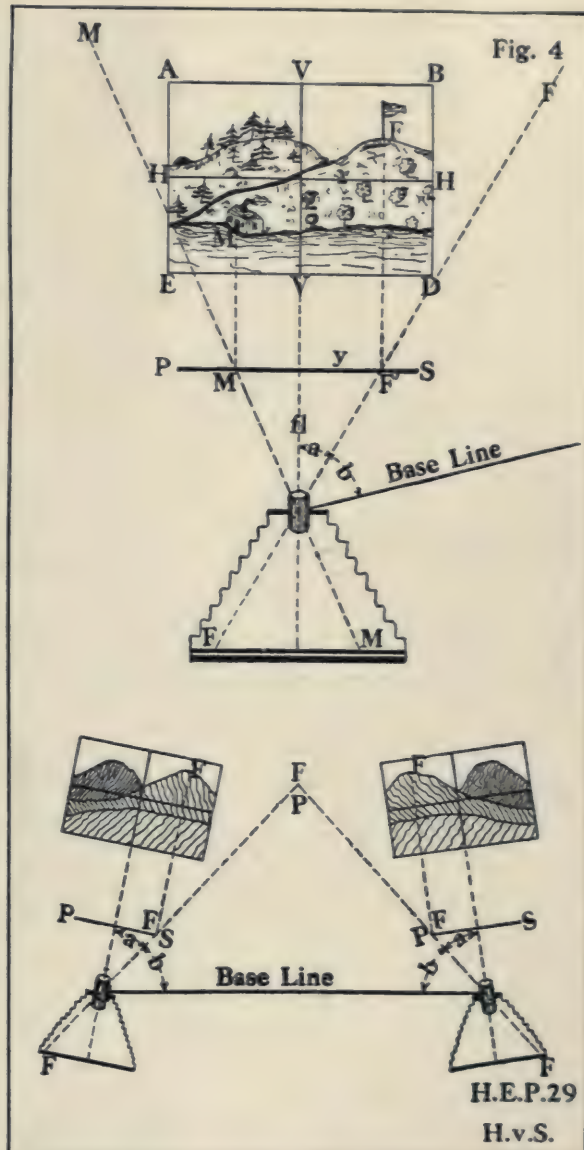






*The practical operating programme is as follows:*

1. The optical centre of the camera objective lies in a vertical plane over the station point occupied by the transit.

- These four conditions remain rigid throughout the operations here considered—that is, the more complex and broader practice of photogrammetry in which the negative plane may be inclined from the vertical or of curved surfaces does not here enter.

The vertical and horizon are marked on the ground glass or finder, and small arrows or pointers are fixed to the interior of the four sides of the plate or film holder at the intersections of vertical and horizon with the frame, so that each view taken bears these marks, by which the control lines can be correctly reproduced on the positive print. The apparatus is now ready for operations,—that is, the survey of a stream valley, a triangulation system having been established.

- 7

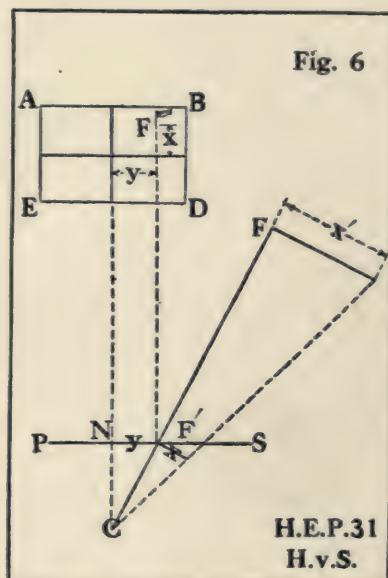



6. A pointing is made with the transit and known azimuth to the triangulation target on the opposite side of the stream valley.
7. The plate or film is exposed, removed, and the camera is recharged.

Sweeping the horizon in the direction of the operating programme, up or down stream, one pointing is made and view taken to each visible opposite triangulation target.

8. A record is kept as in surveys, views being identified as 1 to 2, 1 to 4, 1 to 6, etc., and the same notation is made on the plate holders as they are taken from the camera.

The same programme is repeated from the opposite side,—that is, 2-1, 2-3, 2-5, etc.

The operator needs no technical photographic knowledge or skill beyond adjusting, charging, and unloading the camera, protecting plates from being light-struck, guarding against halation,—that is, exposures toward the sun,—and a practical guide to the use of the proper diaphragm or stop and the length of exposure under different conditions of light and time of day. Such an exposure and diaphragm scale should be adapted to the characteristics of the objective and the sensitiveness of the plate, and the data required can readily be obtained from the photographic supply house where these are secured.

Development of the exposed plates or films and the printing of the positives had best be delegated to a photographer. In practice it will be found advisable to duplicate all views, to make certain by examination of image on ground glass or in finder that the key point connecting with the previous view is in the field of view. The instrument must be examined before each exposure as to its level condition, as the weight of the camera may throw it out. The prints should be strong, and in order to secure detail an orange-colored screen may be fixed in the camera immediately back of the objective.


9. For the projection of the plan the horizon and vertical are drawn on the prints in vermilion, and likewise all objects to be plotted are marked by small circles or dots of the same color and numbered identically on the different prints containing them.

After the principal points are projected and their elevations have been determined, the contours and topographic characteristics are plotted on the plan as indicated in the prints.

As stated at the beginning of this subject, the results to be expected

are of a general character only, and therefore the refinements of guarding against change of paper texture have no place here.

ARTICLE 38.—*Detail surveys* should be made of gauging sections, recommendable dam sites, and of the location of the diversion works;

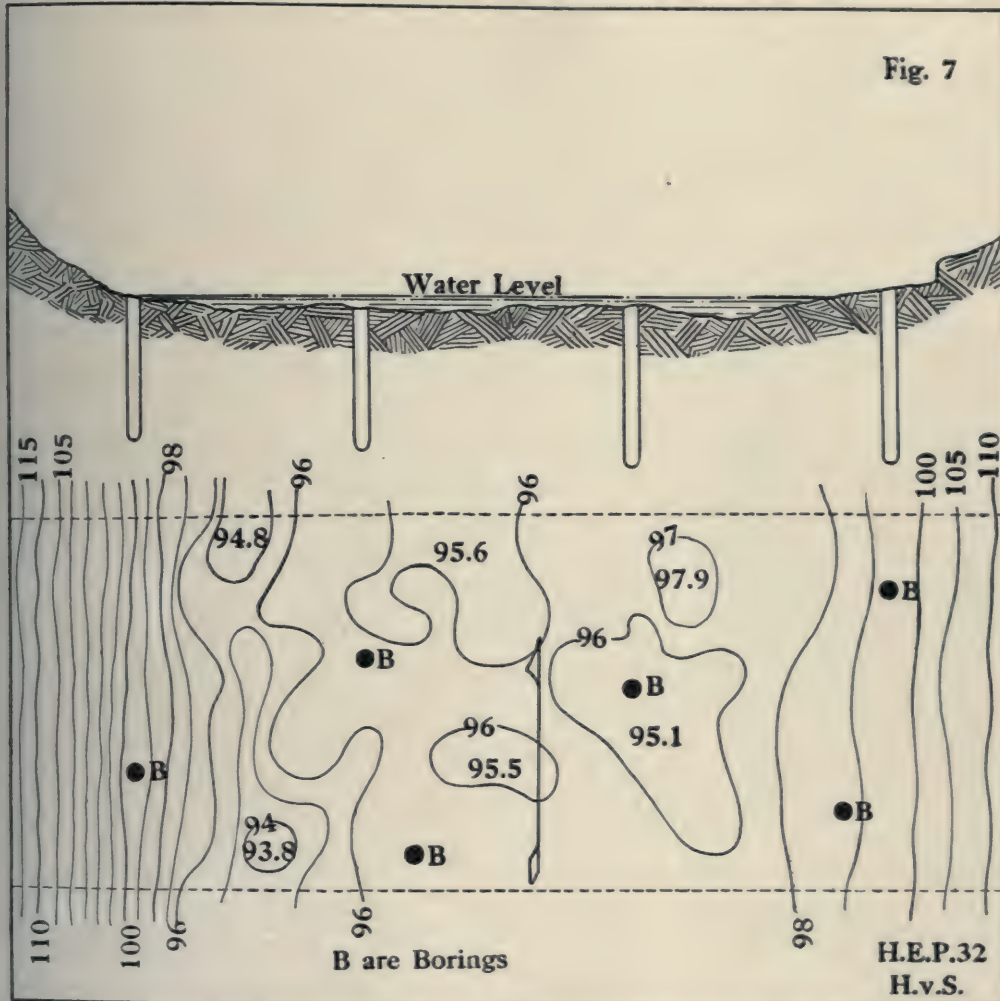


they are referred to bench marks by determination of land or river bed and of water surface elevations at intervals of five feet by means of "Y" level, the points in the river being taken from a boat passing across along a line held taut by means of upstream guy ropes, the line being suitably marked off in five-foot lengths. One such section suffices at the gauging point, the terminals being fixed by posts; gaugings of different days



should be preceded by re-sectioning in order to detect changes in the river bed. At the dam locations a section of the stream, two hundred feet long, should be covered by transverse lines five feet centres; canal, flume, and pipe line locations must be cross sectioned every ten feet longitudinally for a width double that of the probable construction, the centre line being traversed and marked at 100-foot points. The power-house location site should be cross sectioned as described for the dam site.

Fig. 7 shows the plan and cross-section of a dam site.

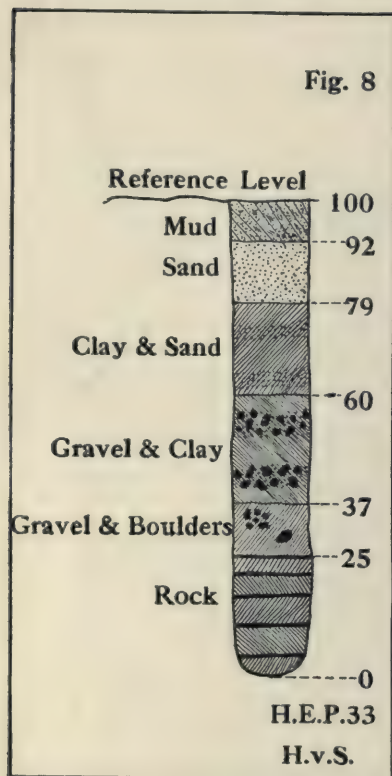

ARTICLE 39.—*Borings* should be made on sites of dam, diversion works, and power station, being carried to rock or impermeable material, and about fifty feet centres in each direction. The elevation, depth, and character of each class of material should be ascertained. The stratifications of rock for upper ten feet of its depth must be ascertained in order to discover possible water channels, nor must the rock surface found at fifty-feet points be accepted as being uniformly level between them, but intermediate borings should be made to establish fully these conditions. Gravel, clay, and sand should be classified as to their characteristics, samples of all being preserved for future reference. These investigations by borings cannot be made too exhaustively; the more thorough the knowledge of the subsurface formations,

the better for the sake of safety and economy. A well-digger's outfit will prove the best for all purposes; nothing of much value can be secured with hand-boring apparatus. All borings should be instrumentally located and all elevations referred to bench marks.

Fig. 8 shows the record of a boring station.

ARTICLE 40.—*Stream gaugings* should be made daily for as long a period as practicable, which will employ a separate force of three or four men constantly. A well-conditioned section is selected, preferably on a straight reach of the river, the best obtainable being a bridge cross-



ing, and in its absence a point where the perimeter is of nearly uniform elliptical shape and the flow is not influenced by islands, shoals, rocks, or other obstructions. A gauge is set at each shore point, preferably in a recess of the shore where it will be guarded against floatage; it consists of a board graduated to feet and tenths, which is secured to a post or pile firmly set, or to a bridge pier. The gauge boards are marked to correspond with the elevation reference of the survey. The cross-section is determined as described in Art. 37. Gauges are read and a velocity measurement is made with a current meter. The programme will depend upon conveniences at hand, most readily from a flat boat passing across by aid of a ferry rope or, better, from two such boats secured together by a timber platform. The meter must be rated before and after the

operation, which is most conveniently done by having two meters, one of which is used only as the standard, all the measurements being made with the other. Velocity measurements should be made at depth intervals of two feet; if the river stage fluctuates during measurements, they should be rejected. The meter is used from the upstream end of the boat; three separate readings of one, one and a half, and two minutes' duration should be taken for each observation, and the mean accepted; the boat must be held firmly in a fixed position during the observations.

The measurements at all the verticals of one meter station are to be made before moving to the next station in the section. The first measurement should be taken two feet below the surface; the last, two feet above the river-bed, and at least three on each vertical. In great depths, or swift currents, a sufficient weight must be suspended from the meter to maintain it in a vertical position. Weeds and floating sand will interfere with correct measurements.

The total discharge is ascertained by plotting the velocities found for each vertical as shown in Fig. 9, where  $S'F$  represents the verticals and total depth,  $a', b', c', d', e'$  the meter points 2 feet centres, and  $a'a, b'b, c'c, d'd$ , and  $e'e$  the corrected velocities for each; therefore the discharge through section  $S'F$  is represented by the area  $S'Sab c d e F$ .


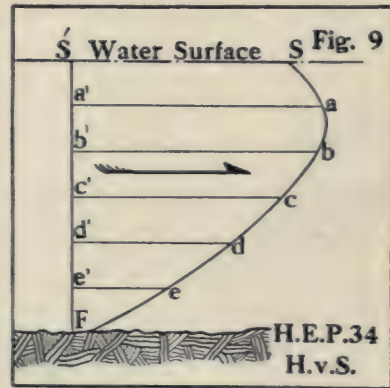


Fig. 10 represents the entire cross-section; 1, 2, 3, 4, etc. are section points ten feet centres; the lower ordinates express the depth, the upper the mean velocities; the discharge at a section point =  $d \times v$ , and the total discharge is the product of the sum of all point discharges into ten, their spacing.

Meters should be run for a short time before beginning the operations, —i.e., before readings are taken,—as they are likely to overspeed at first.

When current meters are not available, the velocity may be found by aid of *floats*. The gauging station is arranged as described in Art. 16;

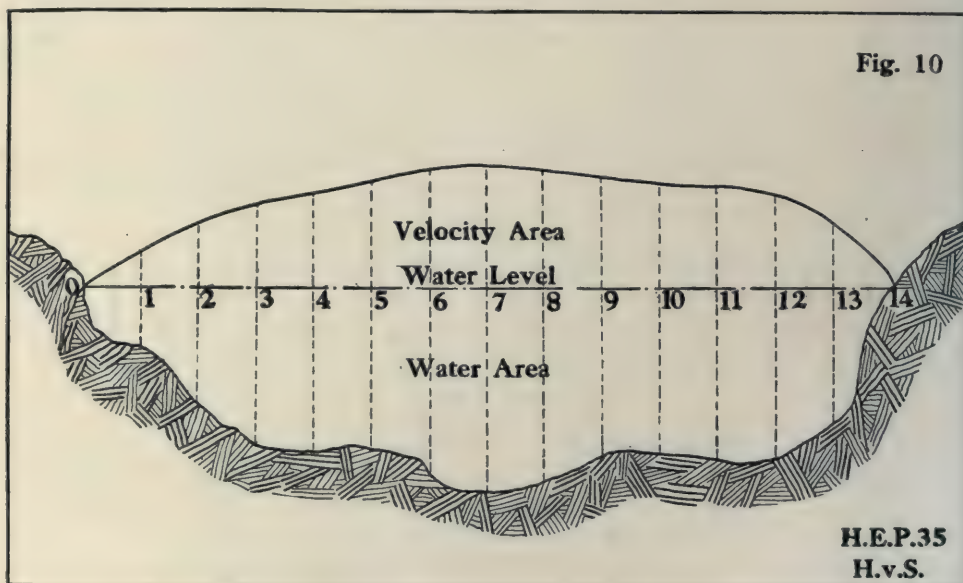

*surface floats*, preferably corked bottles sufficiently weighted to project only with their necks, are placed in the water fifty feet above the upstream gauging section limit, being the "dead run," the locus of their passage into the gauging section area is noted by line markers, and the time of such entry is taken by a stop-watch; one satisfactory run should pass under each marker; the bottles may be recovered by a boat below section. *Subsurface floats*, or double floats, are sometimes employed; they consist of a surface float from which a lower float is suspended, the theory being that thus the velocity of lower strata will be indicated; in practice this result is not readily realized.

*Rod-floats* are likely to secure a much more reliable measurement of mean velocity of the stream. They are one-inch square soft wood sticks



weighted at one end with lead strips or wire to float upright and as near the bottom of the river as practicable without striking it; they are set adrift fifty feet above the section, being located and timed as are surface floats; one should be sent under each line marker.

ARTICLE 41. *Reduction of Stream Gaugings.*—The discharge of a watercourse is the product of its area and the velocity of flow; the former having been found from cross-section and the latter by any of the described methods.

When surface floats are employed, the observed velocity is the surface velocity, which is reduced to the mean velocity and then plotted, as in Fig. 10, for the respective vertical. The ratio of surface to mean velocity is fixed by the depth and the coefficient of the perimeter roughness, "N," which for alluvial stream beds is—


- .017 for a smooth channel bed without any obstructions to flow, such as boulders, snags, or large gravel in bed;
- .020 for smooth channels with large gravel in bed;
- .0225 for slightly irregular channel beds;
- .025 for an irregularly contoured bed with some boulders;
- .0275 for same as last with boulders and some weeds;
- .030 for rough rock channel beds;
- .035 for very rough rock beds with many boulders.


With these values of "N" for the respective channels, the compiled results of many experiments suggest, as an approximate ratio of mean to surface velocities, the values given on Diagram 17; when the mean velocity on a vertical has thus been found from the observed surface velocity it is plotted as shown on Fig. 10.


The velocities of rod floats represent the mean velocity of a vertical section when their submerged length is 0.99 of the depth of the water; but it is impracticable to float them of such length, and their velocities are therefore in excess of the mean velocity; the necessary corrections, as established by experiments, are given on Diagram 18.

ARTICLE 42. *Stream Discharge Curve.*—When the river's discharge is known for a considerable range of its stages, a discharge curve is projected, as shown on Diagram 19, by which the flow, corresponding to any gauge height, can be found; only constant repetitions of stream measurements, especially during the extreme low and high stages, will furnish the complete data for a reliable rating of its flow.



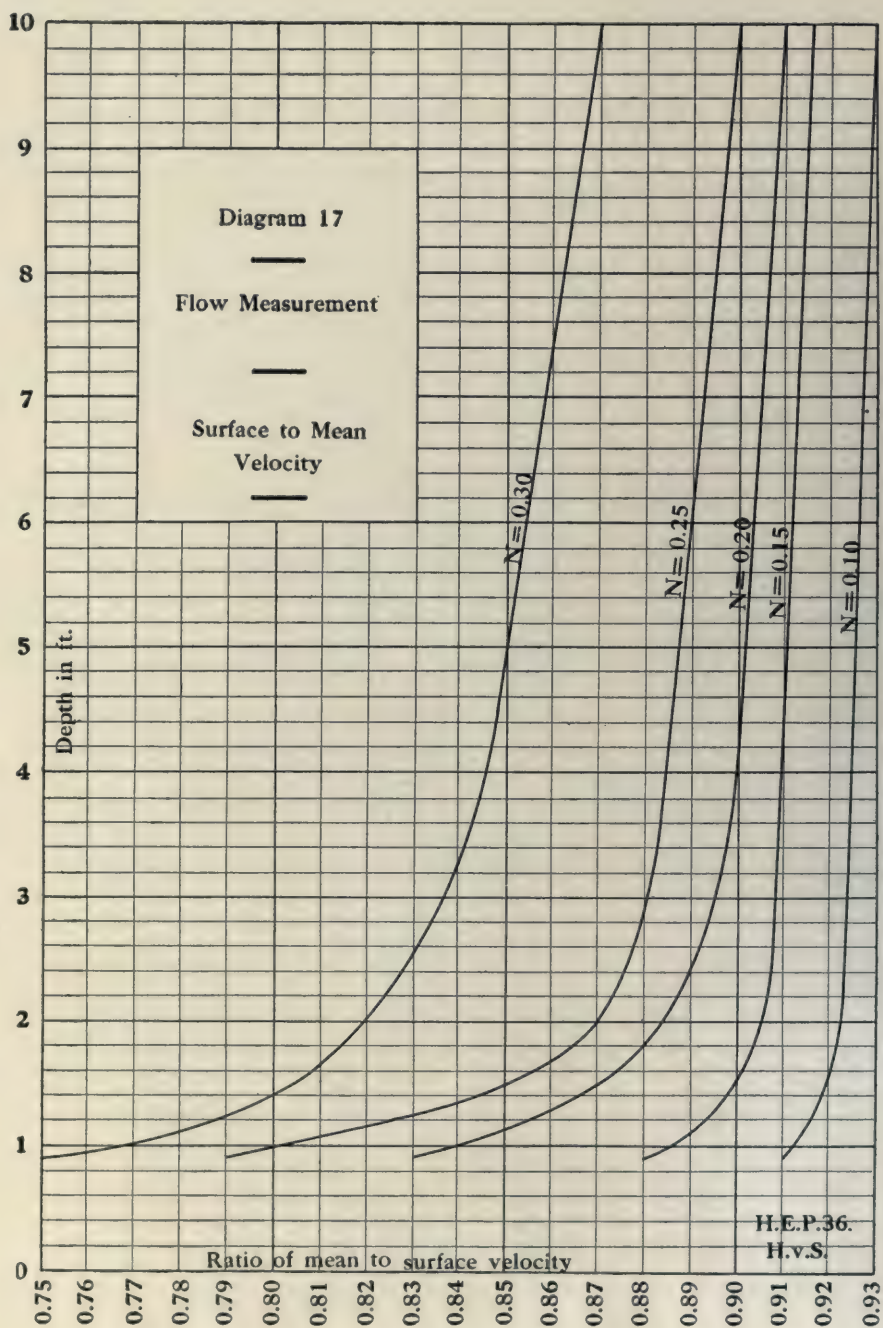

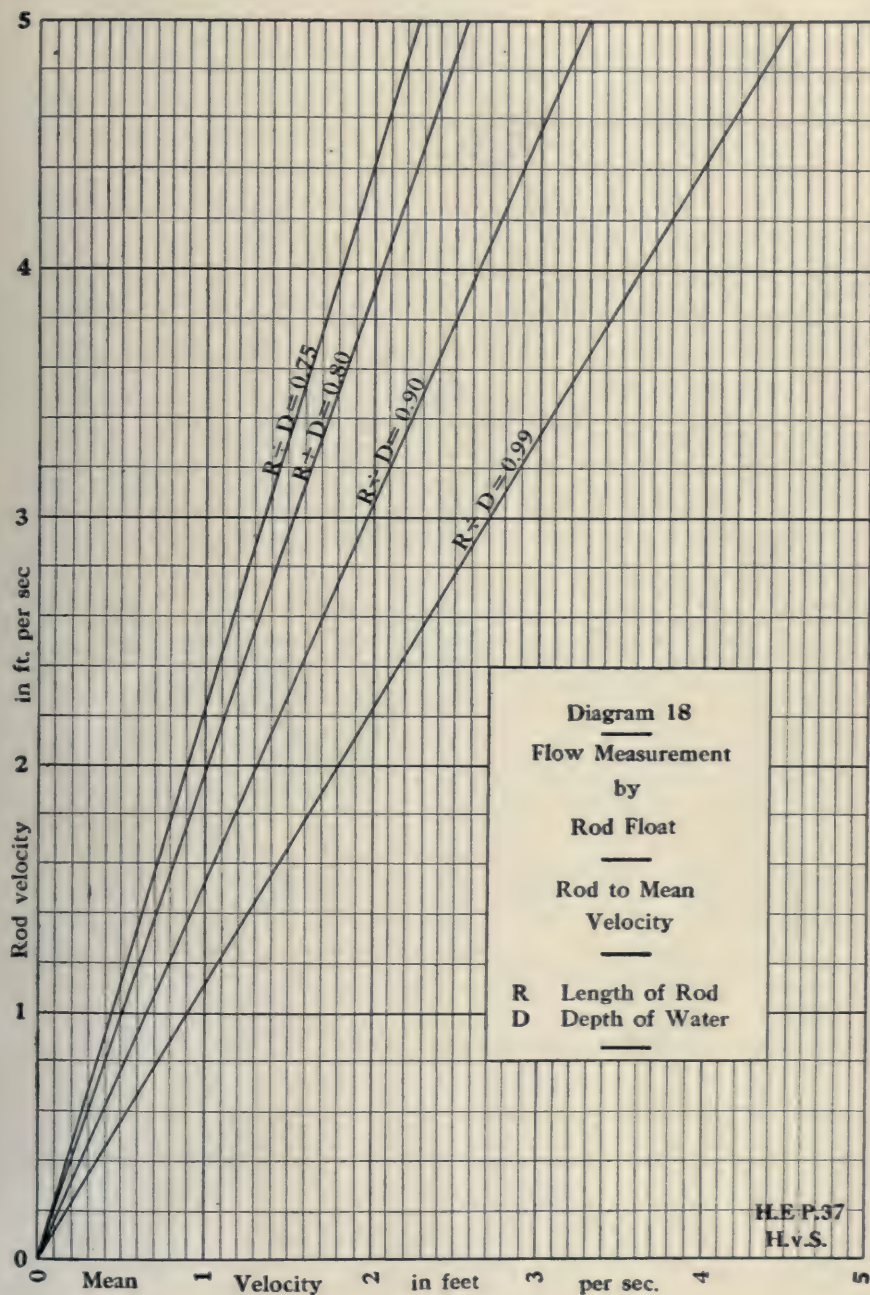


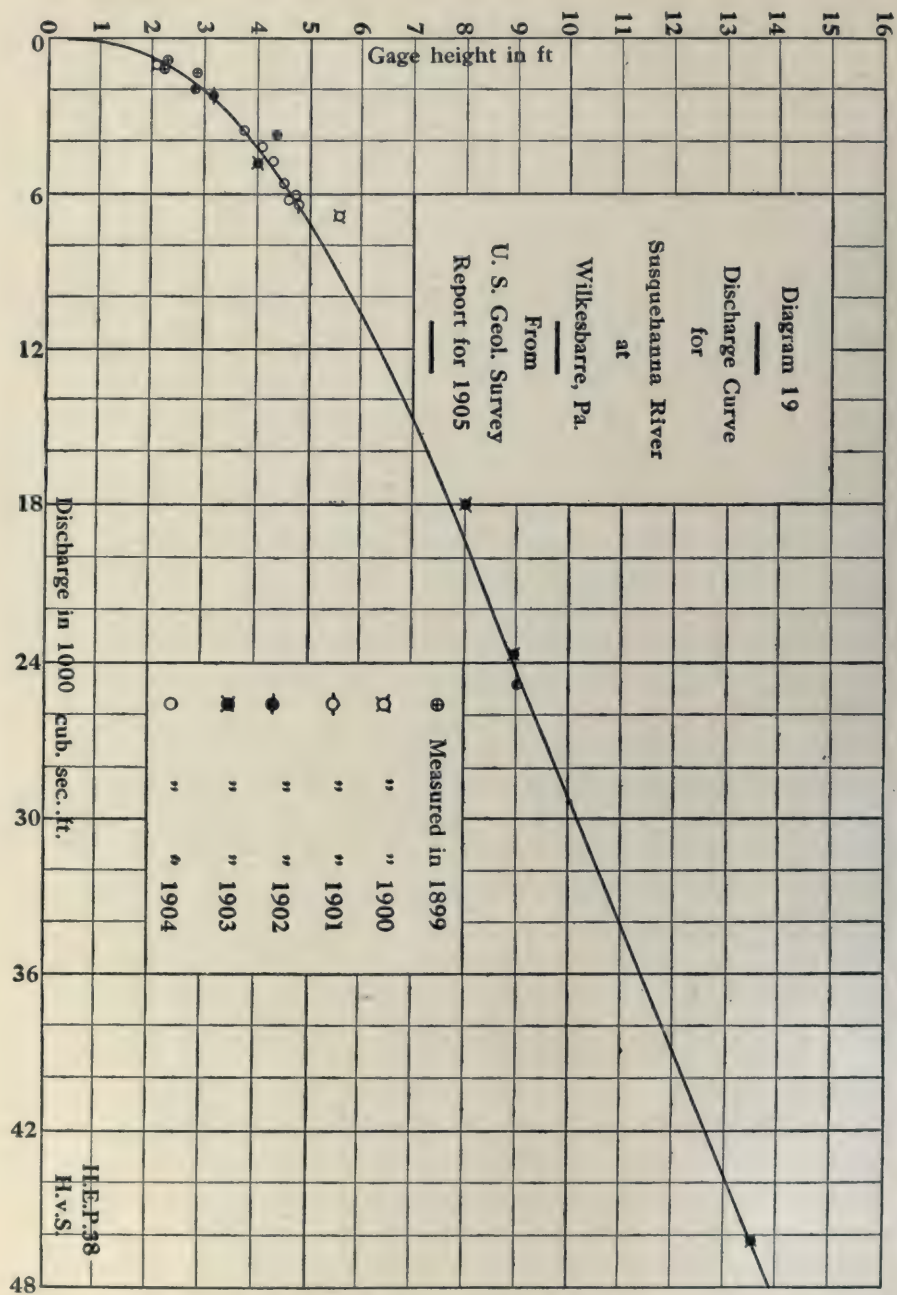



ARTICLE 43.—When the stream is small, it may be practicable to ascertain the flow by *weir measurement*.

Fig. 11 shows the elevation and section of a weir, being a rectangular opening of horizontal base and vertical ends, the edges of the weir crest and ends being wedge shaped. The weir crest should be of such height that the downstream water surface is below it. The theory of measuring the volume passing over the weir is based upon the law of velocity of flow discovered by Torricelli, to wit: "the theoretic velocity of the flow of water is like that of a body falling freely in a vacuum through a height equal to the head," —  $V = \sqrt{2gh}$ , where  $V$  is velocity in feet per second,  $g$  is acceleration of gravity, 32.2 feet per second, and  $h$  is the head or height of water above the weir crest.

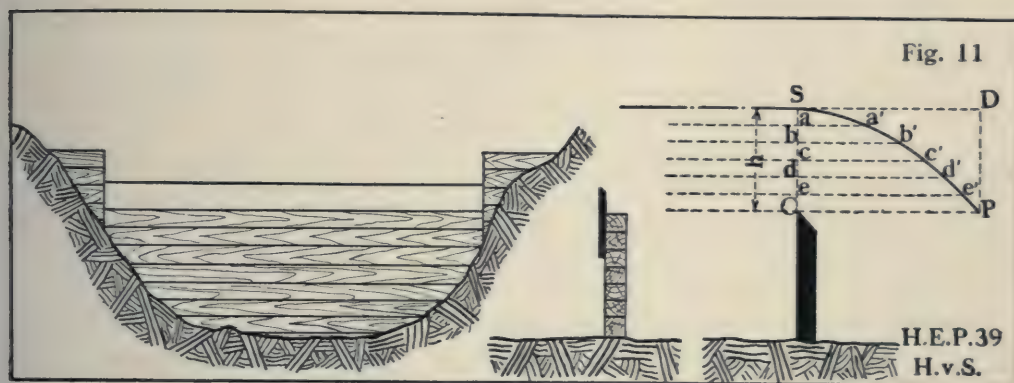

In Fig. 11,  $C$  is the weir crest,  $S$  the surface of the water; each film of water passes with a velocity due to the head acting upon it,—i.e., of 0.1, 0.2, 0.3, etc., feet down to the lowest film, the one near the crest, the velocity of which is that due to  $SC = h$ . Were the respective film velocities projected as ordinates  $a'a'$ ,  $b'b'$ ,  $c'c'$ ,  $d'd'$ , etc., they would terminate in a parabolic line  $Sa'a'b'b'c'c'd'd'e'e'P$ , and the volume passing in a unit of time would be represented by the parabola segment  $SPC$ . In accordance with the geometric theorem, the area of this segment is two-thirds of the rectangle of like base and altitude, or  $SPC = \frac{2}{3} h \times \sqrt{2gh}$ , which therefore expresses the theoretic volume passing over the weir.

This value is based upon the free falling of the water in a vacuum, and the actual volume will therefore be reduced from this theoretic by reason of the friction of water against the weir crest and ends and against the air, all of which retarding influences are expressed by coefficients

which have been determined from results of many experiments. End contractions are expressed by J. B. Francis in a reduction of length "L" of weir =  $0.1 h$  for each such contraction, while the other reductions from the theoretical volume are expressed by the same authority by a coefficient

$$M = 0.622.$$

More recent determinations by M. H. Bazin differ slightly from this. The weir formula is then

$$Q \text{ (discharge)} = M \frac{2}{3} h \sqrt{2gh} \times (L - 0.2 h L).$$

$$\text{Solving, } Q = 0.622 \times \frac{2}{3} 8.02 h \sqrt{h} \times (L - 0.2 h L).$$

When  $L$  exceeds  $5 h$  the correction for end contractions may be omitted, and for the purposes of stream measurements

$$Q = 3.33 \sqrt{h^3} \text{ per linear foot of weir,}$$

where " $h$ " represents the height of water on the weir crest measured at a point upstream of the weir and above the initial depression due to the overfall.

Diagram 2 is constructed from this formula.

ARTICLE 44. *Flow deduced from Precipitation and Evaporation.*—When flow measurements are insufficient to yield a rating curve, especially when the low flow remains uncertain, the only method by which an approximation of it can be found is by the deduction of the run-off as the difference between the precipitation and evaporation. The general theory on which this method is based has been outlined in Art. 16, Part I. The detail operations of its practicable application are as follows:

Evaporation computations are based upon the determined monthly ratios due to the requirements of vegetation, the capacity and condition of ground storage, and the temperature. The year, for this purpose, is divided into two periods, the first being from December to May, when vegetation needs but little moisture and the evaporation is only that due to the action of the sun; during these six months evaporation is small and fluctuates only with precipitation or is very similar to evaporation from water surfaces. The quantity of evaporation during this period is approximately expressed by  $E = 4.20 + 0.12 R$ , in which "E" represents



total evaporation and "R" total precipitation during this period. The second period is from June to November, when vegetation matures and requires a large amount of moisture; this is generally expressed by  $E = 11.30 + 0.20 R$ .

The monthly distribution of these quantities is given by the following values:

For December.....	$e = 0.42 + 0.10 r$
For January.....	$e = 0.27 + 0.10 r$
For February.....	$e = 0.30 + 0.10 r$
For March.....	$e = 0.48 + 0.10 r$
For April.....	$e = 0.87 + 0.10 r$
For May.....	$e = 1.87 + 0.20 r$
For June.....	$e = 2.50 + 0.25 r$
For July.....	$e = 3.00 + 0.30 r$
For August.....	$e = 2.62 + 0.25 r$
For September.....	$e = 1.63 + 0.20 r$
For October.....	$e = 0.88 + 0.12 r$
For November.....	$e = 0.66 + 0.10 r$

"e" is monthly evaporation, "r" monthly precipitation.

These values were found substantially correct for the latitude of New Jersey, while for others a temperature correction is to be applied. Five per cent. for each degree of temperature as differing from that normal in the latitude above referred to appears to correct these values for stream systems in other latitudes, and it is sufficient to apply this correction as based upon the mean *annual* temperature of the drainage area in question, which correction is expressed by  $0.05 T - 1.48$ , in which "T" is annual temperature; this may be termed the *temperature factor*, with which the values above given for monthly evaporation are to be multiplied.

ARTICLE 45.—A *typical case of flow determination* will now be taken up and argued month by month to its conclusion. The river taken is the Maitland in Ontario, emptying into Lake Huron at Goderich, which was examined by the author in 1905, the flow being measured for a sufficient period to prove substantial agreement between the two methods. The year taken is 1903. Monthly precipitation records were available for five well-distributed stations in the area, and, as the stream flows generally westerly and its drainage area is located in one precipitation belt, the monthly mean of all stations was adopted.

The mean annual temperature was found to be  $46^{\circ} \text{ F}$ .

Temperature factor  $0.05 \times 46 - 1.48 = 0.82$ .



Month.	Precipitation.	Evaporation.
December '02.....	2.18	$(0.42 + 0.10 r) \times 0.82 = 0.52$
January '03.....	1.36	$(0.27 + 0.10 r) \times 0.82 = 0.33$
February '03.....	1.80	$(0.30 + 0.10 r) \times 0.82 = 0.39$
March '03.....	1.19	$(0.48 + 0.10 r) \times 0.82 = 0.49$
April '03.....	0.89	$(0.87 + 0.10 r) \times 0.82 = 0.79$
May '03.....	2.74	$(1.87 + 0.20 r) \times 0.82 = 1.98$
June '03.....	2.85	$(2.50 + 0.25 r) \times 0.82 = 2.63$
July '03.....	2.68	$(3.00 + 0.30 r) \times 0.82 = 3.12$
August '03.....	2.87	$(2.62 + 0.25 r) \times 0.82 = 2.74$
September '03.....	3.54	$(1.63 + 0.20 r) \times 0.82 = 1.92$
October '03.....	3.92	$(0.88 + 0.12 r) \times 0.82 = 1.11$
November '03.....	0.96	$(0.66 + 0.10 r) \times 0.82 = 0.62$
December '03.....	4.28	$(0.42 + 0.10 r) \times 0.82 = 0.69$

Having found the monthly evaporation, it is evident that the excess of precipitation over evaporation represents the run-off; but an examination of these two reveals the fact that during July evaporation exceeds precipitation; this generally will be the case during several months and apparently there would be no run-off under such conditions. This, however, is not so, at least only rarely on western streams, which sometimes dry up entirely during seasons of drought; but there is water stored in the ground and in lakes and swamps, and whenever the evaporation is greater than precipitation, and in fact when the excess of precipitation becomes small, water stored in the ground feeds out into the stream.

It would be well, at this stage, for the reader to retrace his steps and review the discussion of drainage area, its topography, geology, flora, and culture, as the important influences of all of these conditions are about to become more apparent.

The supply from which a stream is fed during periods when precipitation only slightly exceeds evaporation, or when there is no such excess, which is the case on almost every system during the growing season from June to September, depends on the drainage area characteristics: if the ground contains no storage, there can be no supply; if the storage is large, the supply from it will be correspondingly plentiful, yielding frequently as much, and a greater flow than a normal rainfall would furnish. The rainfall is generally very small during two or three months of this growing season: a wet summer is an exception rather than the rule.

From a generalization of drainage area characteristics, as represented by topography and geology, the investigations in this field have

resulted in a classification of

- (1) An area of bold relief and in highlands with no surface storage.
- (2) An area of drift-covered rock with no surface storage.
- (3) An area of deep drift and large surface storage.

Others could be added as being descriptive of conditions between these, but in practice the investigator will generally find that the area under examination is practically described by one of these three classes. It is evident that the ground storage capacity of these three will greatly differ, and, as they do, they will be capable of furnishing a comparative supply to the stream during the periods of small rainfall.

In the course of the search for a practical determination, fixed values of ground flow from areas of these different classes have been found and are represented by *ground-flow diagrams on Profile 2*. The side notations stand for monthly flow in inches from the ground storage, while those at the bottom represent the corresponding depletion of the ground storage, also in inches. Examining the projected curves, their more gradual flattening will be noted as the storage capacity of the area increases, while all finally assume almost the horizontal, indicating that storage is nearly depleted; it will also be seen that each of these begins to feed out with a flow of two inches, which means that, whenever the excess of precipitation over evaporation is less than two inches, ground storage begins to supply in accordance with the quantity of the remaining storage. The essence of all of this ground storage topic may be expressed by the following:

*The ground storage conserves the excess precipitation and from it feeds to the stream during dry seasons in accordance with its capacity.*

We may now go back to the finding of the flow on the Maitland River, and we note that during the very first month the excess of precipitation over evaporation is less than two inches, and, from what has been said before, we know that ground storage will add some supply and the storage itself will be correspondingly depleted. The ground-flow diagram arrangement shows what the depletion corresponding to a certain out-flow from ground storage is, which may be expressed as  $d_1$  = depletion or condition at the end of the month preceding the one under consideration, when  $d_2$  for present month =  $d_1 + e + f - r$ , being the sum of existing depletion and present month's evaporation and flow less precipitation,

and for the average condition of the month

$$d = \frac{d_1 + d_2}{2}, \text{ or}$$

$$d = d_1 + \frac{e - r}{2} + \frac{f}{2}, \text{ or}$$

$$d = \frac{f}{2} + d_1 - \frac{r - e}{2}.$$

Applying this to December, 1902, where

$$r = 2.18, \text{ and } e = 0.52, \frac{r - e}{2} = 0.83,$$

there being no previous depletion, therefore  $d_1 = 0$  and

$$d = \frac{f}{2} - 0.83.$$

The ground-flow diagram for Maitland River is that of a drainage area with drift-covered rock and no surface storage (No. 2), and, examining the curve, we find that the intersection of  $d = 0.25$  and  $f = 2.15$  fills the condition because  $\frac{f}{2} = 1.07$  and  $\frac{f}{2} - 0.83 = 0.24$ ; "f" is therefore 2.15 inches. The difference between the sum of evaporation and flow and of precipitation must come from ground storage and  $d = e + f - r$ , or in this case

$$0.52 + 2.15 - 2.18 = 0.49.$$

When the next month, January, 1903, is examined,  $r = 1.36$ ,  $e = 0.33$ , and ground storage is depleted by 0.49 inch.


Then from

$$\begin{aligned} d &= \frac{f}{2} + d_1 - \frac{r - e}{2} \\ &= \frac{f}{2} + 0.49 - 0.52 \\ &= \frac{f}{2} - 0.03, \end{aligned}$$

which is practically met by the intersection on the ground-flow diagram of  $0.78d$  and  $1.62f$  or  $0.78 = 0.81 - 0.03$ , and  $f$  therefore  $= 1.62$ , while depletion is again  $=$  to total evaporation and flow less total precipita-



Profile 2  
Groundflow diagrams

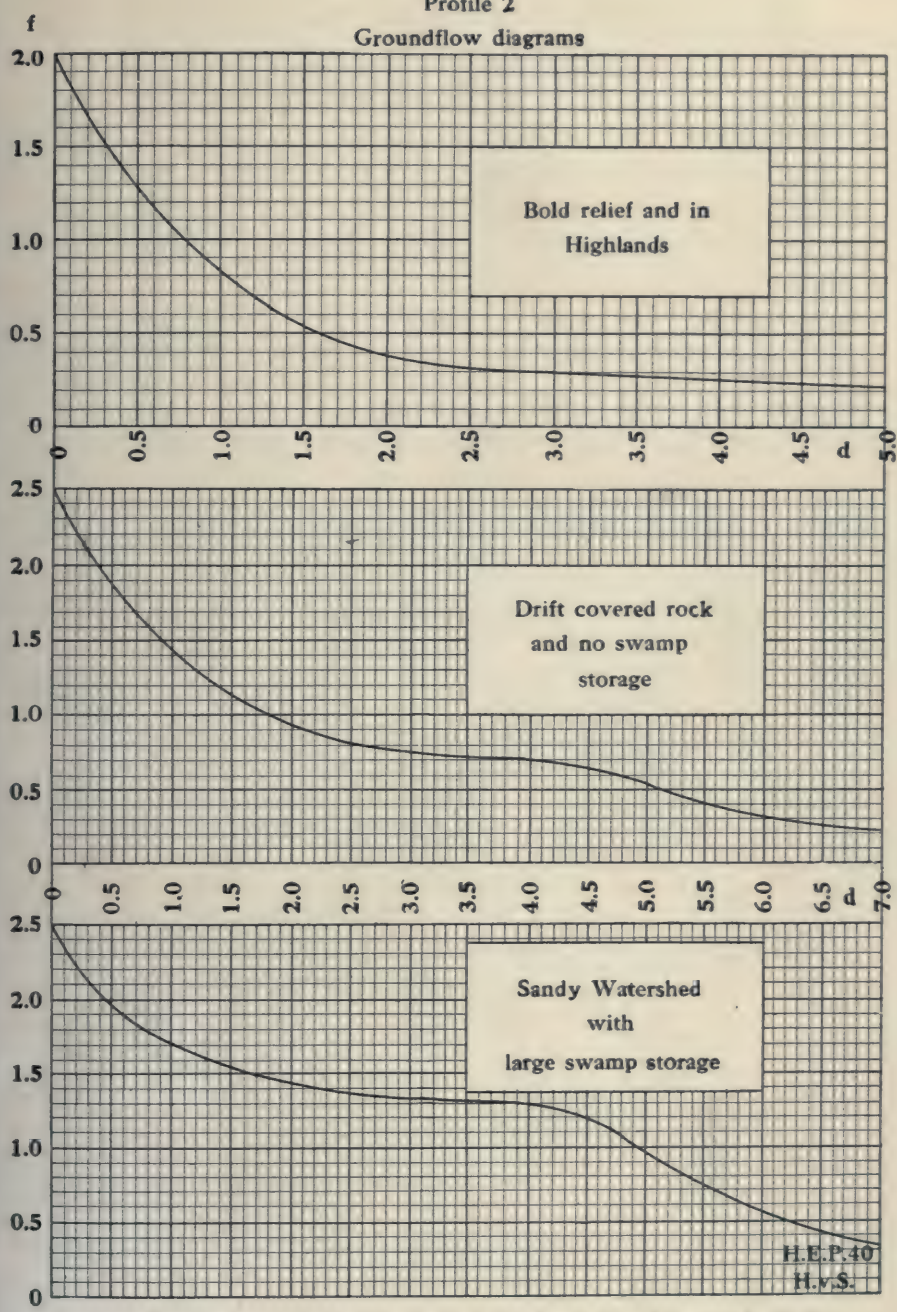

From report of Geol. Survey of N. J. 1894 by C. C. Vermuele C. E.

tion =  $0.85 + 3.76 - 3.54 = 1.07$ ; or, in other words, the total supply represented by the total precipitation and the ground storage outflow (depletion) must always equal the total amount expended, that is total evaporation and total flow. As rainfall increases, ground storage again becomes gradually replenished, as appears at the end of the year. In this manner month by month is taken up and the run-off found in inches from the drainage area, which, for practical application, is later transposed into flow of cubic second feet.

The convenient arrangement of these deductions is as follows:

Column 1 gives the months, commencing with December of the previous year, because the accepted water year is from December to November.

Column 2 shows monthly precipitation ..... r  
 Column 3 shows total precipitation ..... R  
 Column 4 shows monthly evaporation ..... e  
 Column 5 shows total evaporation ..... E  
 Column 6 shows monthly run-off ..... f  
 Column 7 shows total run-off ..... F  
 Column 8 shows depletion of ground storage ..... d

The computations are here given in detail in accordance with above arrangement, and Column 6 contains the resultant monthly run-off in inches per square mile of drainage area.

ORDINARY DRY YEAR MONTHLY RUN-OFF FROM MAITLAND, ONT., RIVER  
 WATER-SHED. (All measurements in inches.)

1903 Month. 1	PRECIPITATION :		EVAPORATION :		RUN-OFF :		Ground Storage. 8	Remarks.
	Monthly. 2	Total. 3	Monthly. 4	Total. 5	Monthly. 6	Total. 7		
December '02 .....	2.18	2.18	0.51	0.51	1.67	1.67	full	
January '03.....	1.36	3.54	0.33	0.84	1.03	2.70	full	T = 46°
February '03.....	1.80	5.34	0.39	1.23	1.41	4.11	full	
March '03.....	1.19	6.53	0.48	1.71	1.44	5.55	-0.73	Ground flow
April '03.....	0.89	7.42	0.77	2.48	0.76	6.31	1.37	taken as
May '03.....	2.74	10.16	1.93	4.41	0.60	6.91	1.16	from watershed
June '03.....	2.85	13.01	2.56	6.97	0.60	7.51	1.47	of bold relief
July '03.....	2.68	15.69	3.04	10.01	0.40	7.91	2.23	with no
August '03.....	2.87	18.56	2.67	12.68	0.33	8.24	2.36	swamp or lake
September '03.....	3.54	22.10	1.87	14.55	0.44	8.68	1.13	storage and
October '03.....	3.92	26.02	1.08	15.63	1.71	10.39	full	some drift
November '03.....	0.96	26.98	0.54	16.17	1.32	11.71	0.90	overlying
December '03.....	4.28	31.26	0.68	16.85	2.70	14.41	full	rock.

ARTICLE 46.—*Reservoir sites* should be looked for along the tributaries above the power site, and on lakes or swamps in the drainage area, and when found they should be surveyed to determine their available area and depth, location of reservoir dams, and cross-section at such.

Diagram 4 gives the continuous flow capacity, for various periods of time, in cubic-second feet, from an area of one hundred acres and one foot depth, from which the area corresponding to a required flow, or *vice versa*, can be taken.

Evaporation from reservoir surface, as per Table 4, Article 14, must not be overlooked, and some allowance should be made for water escaping from storage by seepage and by leakage through reservoir dam. The time required by the flow, from the storage reservoir to the power site, must also be determined.

ARTICLE 47.—The prevalence of *timber floating* down the stream, either from logging operations or trees on the banks which will be uprooted by the raising of the water above the dam, should be investigated; also the *ice* conditions during the winter periods, to what thickness it is likely to form and whether there is likelihood of its gorging in the river bends or above islands.



## CHAPTER VII

### DEVELOPMENT PROGRAMME

THE data collected by the various operations described in Chapter VI. will furnish the information required to plan the best programme.


ARTICLE 48.—*The direct development* utilizes all the available fall at the dam, and the power station is located at its end or in the interior of the spillway. This plan is recommended because of the concentration of the entire plant at one point and the consequential saving in the operation cost, and because of its securing the highest obtainable hydraulic efficiency of the power components, fall and flow; by any other programme losses of both of these are incurred. Any diversion sacrifices a portion of the available fall by the slope in canals and flumes or the friction-head in pipe lines, while losses of flow are represented by leakage, evaporation, and ice conditions. When the water is passed at once from the upper pool through the turbines, no such losses occur. The conditions which determine this choice are the cost of the dam and embankments as compared with that of a lower dam and of diversion works; also the extent and cost of flowage for the upper pool and further the advantages secured by an extensive pond area; the flood flow conditions as affecting power house; the rise in the lower pool and the fluctuations in the working head. The rapid increase of cost with the height of the dam is shown on Diagrams 9 and 10, Art. 23, and of the foundations, if in alluvial location, and of abutments, on Diagram 11, Art. 23. When the location is in a narrow rock gorge, the entire width of the river will be required for the passage of the flood flow, and then it is not permissible to occupy any portion of it by the power house; to create a location for it in the rock bluff would be a costly undertaking. The solution for such a case may be found in arranging the interior of the spillway for the power station, as will be detailed further on, and in this way a spillway of the full river width becomes available and the direct development feasible. If the river is subject to frequent high stages, when the discharge over the spillway represents large volumes, it will correspondingly raise the level in the power-house pits and may impede the efficiencies of turbines; floating timber and ice also have a bearing upon this pro-

gramme, as it may necessitate costly safeguards to prevent injury to the power house or interference with the free entrance of the water to the turbine chambers. Thus, while the direct development plan realizes the highest percentage of flow and fall and represents the greatest simplicity of works and lowest operating charges, and therefore, as a rule, the most economical, the conditions may sometimes be such that its adoption is prohibited by the first cost or by considerations of safety and of continuity of operations.


ARTICLE 49.—*The short diversion programme* meets conditions where the dam location of the power house is not feasible because of contraction of the river channel or of the insufficient height of the spillway to accommodate the power equipment in its interior. The power house is then located as close below the dam as practicable, but at a safe distance from the spillway overfall. Water is conducted from the spillway pond in accordance with the volume to be utilized, in a canal, flume, or pipe. Since this programme is adopted only to escape the excessive cost or dangerous conditions, it presents more problems requiring careful solution than the former. No matter how short the diversion works, proper guards at point of intake are required, which, in combination with the spillway structure, cover a wide range of types. It may be advisable to locate the intake at some distance above the dam, in order to escape heavy rock cutting or ice gorges and to secure the most complete diversion of the low flow into it; to accomplish the latter object, on a wide river it may be necessary to provide a diverting dike or weir. When the rock bank continues precipitous for some distance above the dam, a partition wall may be required, or in some such cases it may be found to be most economical to arrange for diversion through a tunnel around the dam abutment. The intake entrance must be guarded by some kind of head gates, their character depending upon a number of controlling conditions which will be treated in detail later on. The diversion method will be shaped by the character and the formation of the river bank and the volume to be carried, detail considerations of which will be found under "Canals, Flumes, and Pipe Lines." The power house is placed at the most convenient point immediately below the dam; types will be described in the next chapter.

ARTICLE 50.—*The distant diversion programme* is applicable only when the concentration of the available fall at one point is not feasible or is too costly. The spillway or reservoir dam is located at the most



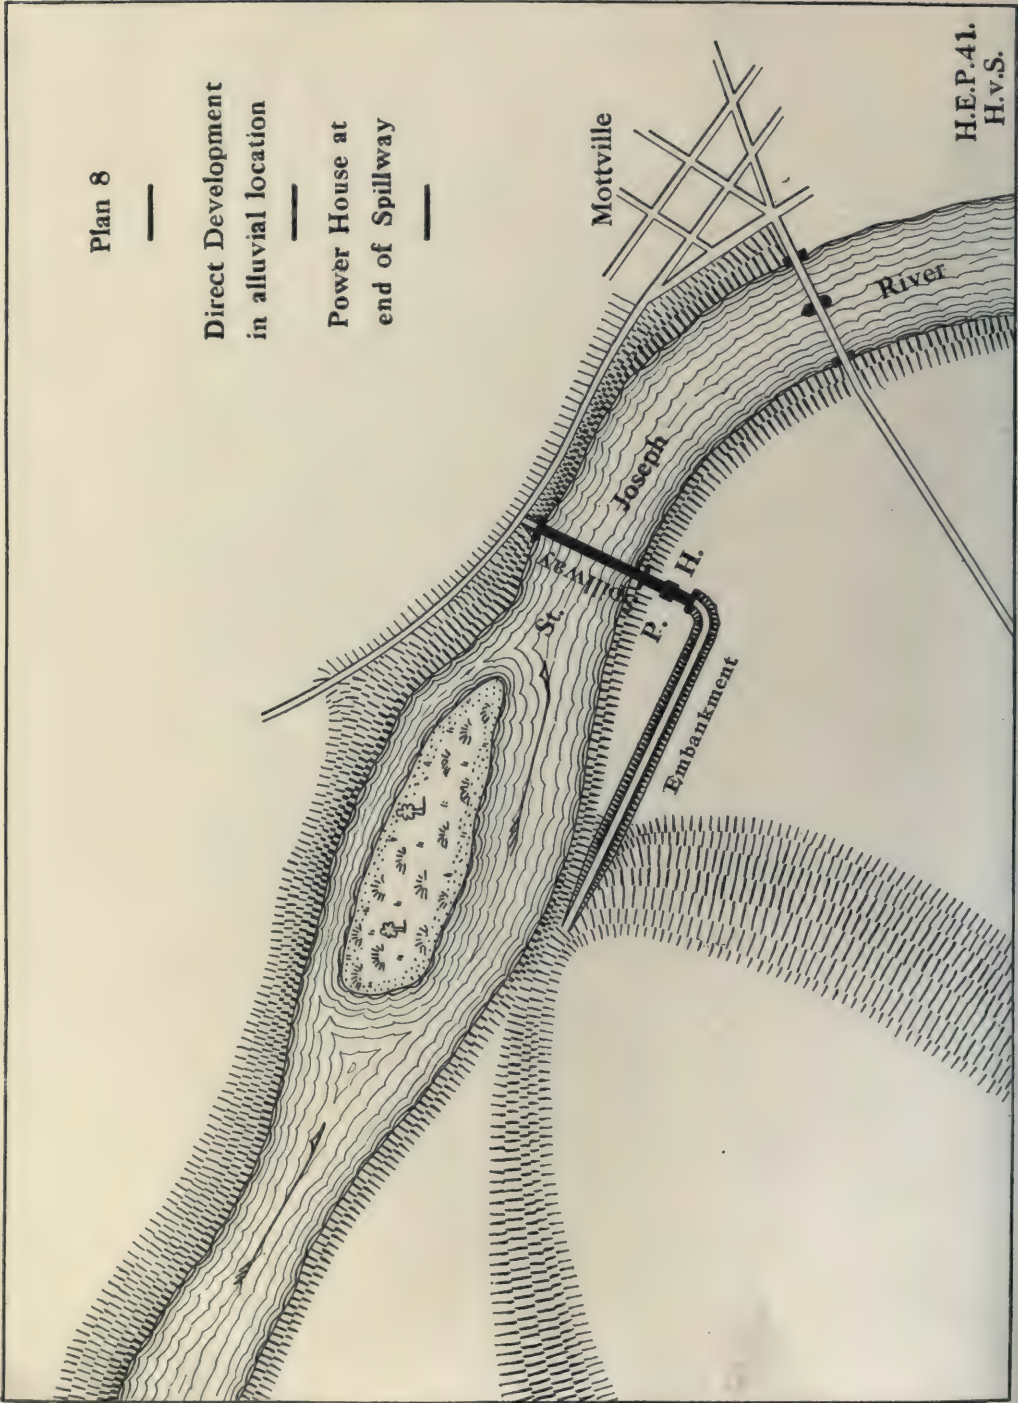




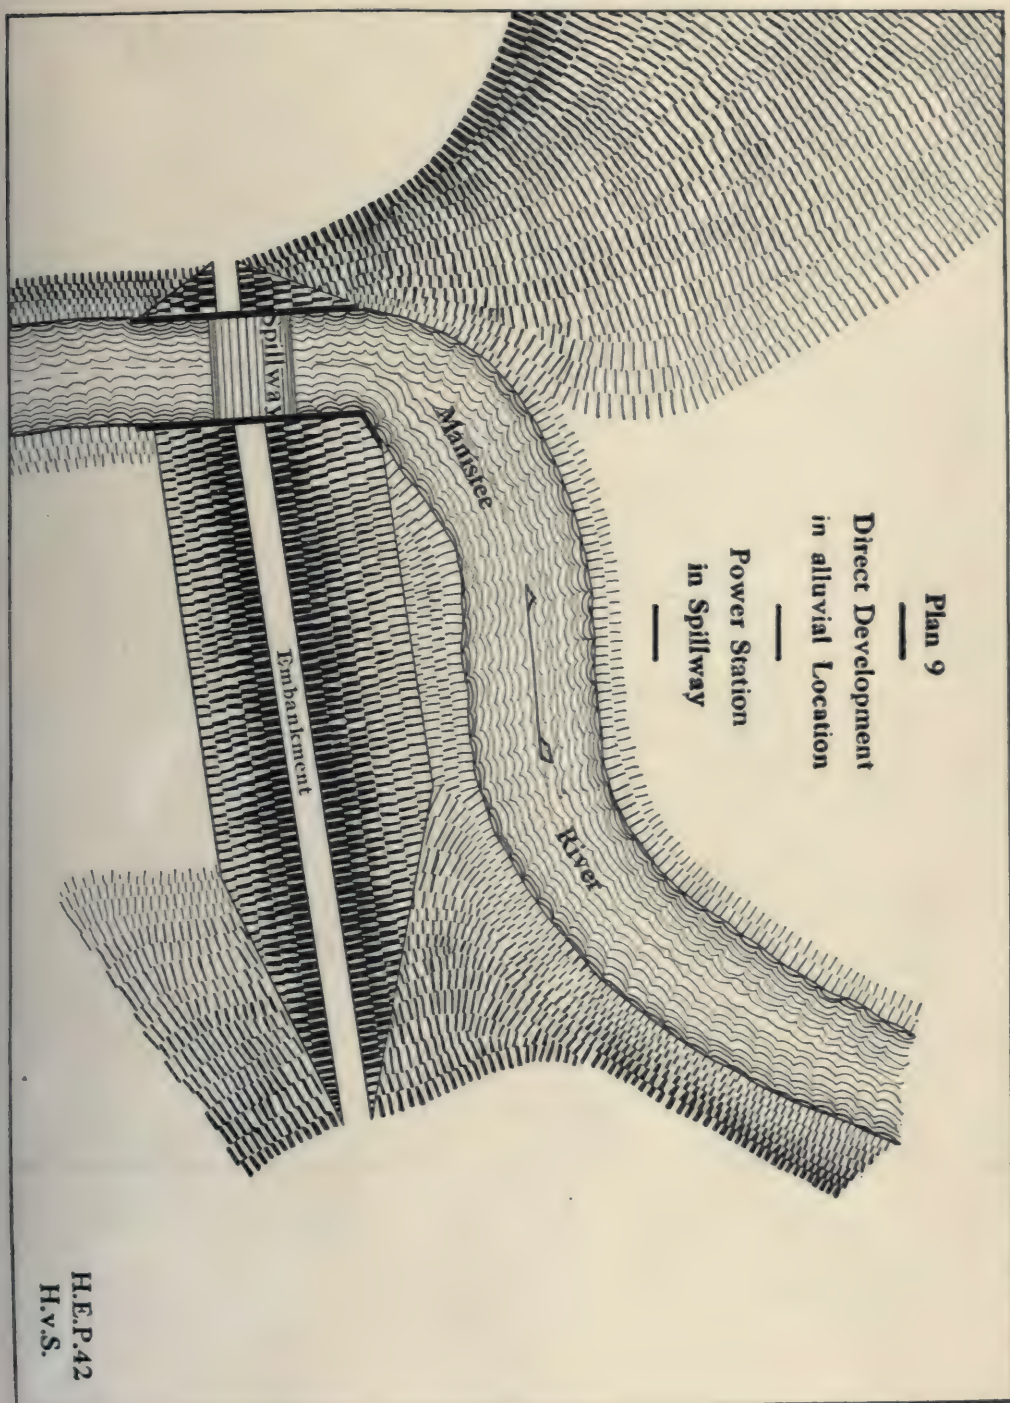

H.E.P.42  
H.V.S.

**Plan 10**  
**Short Diversion**  
**Development**

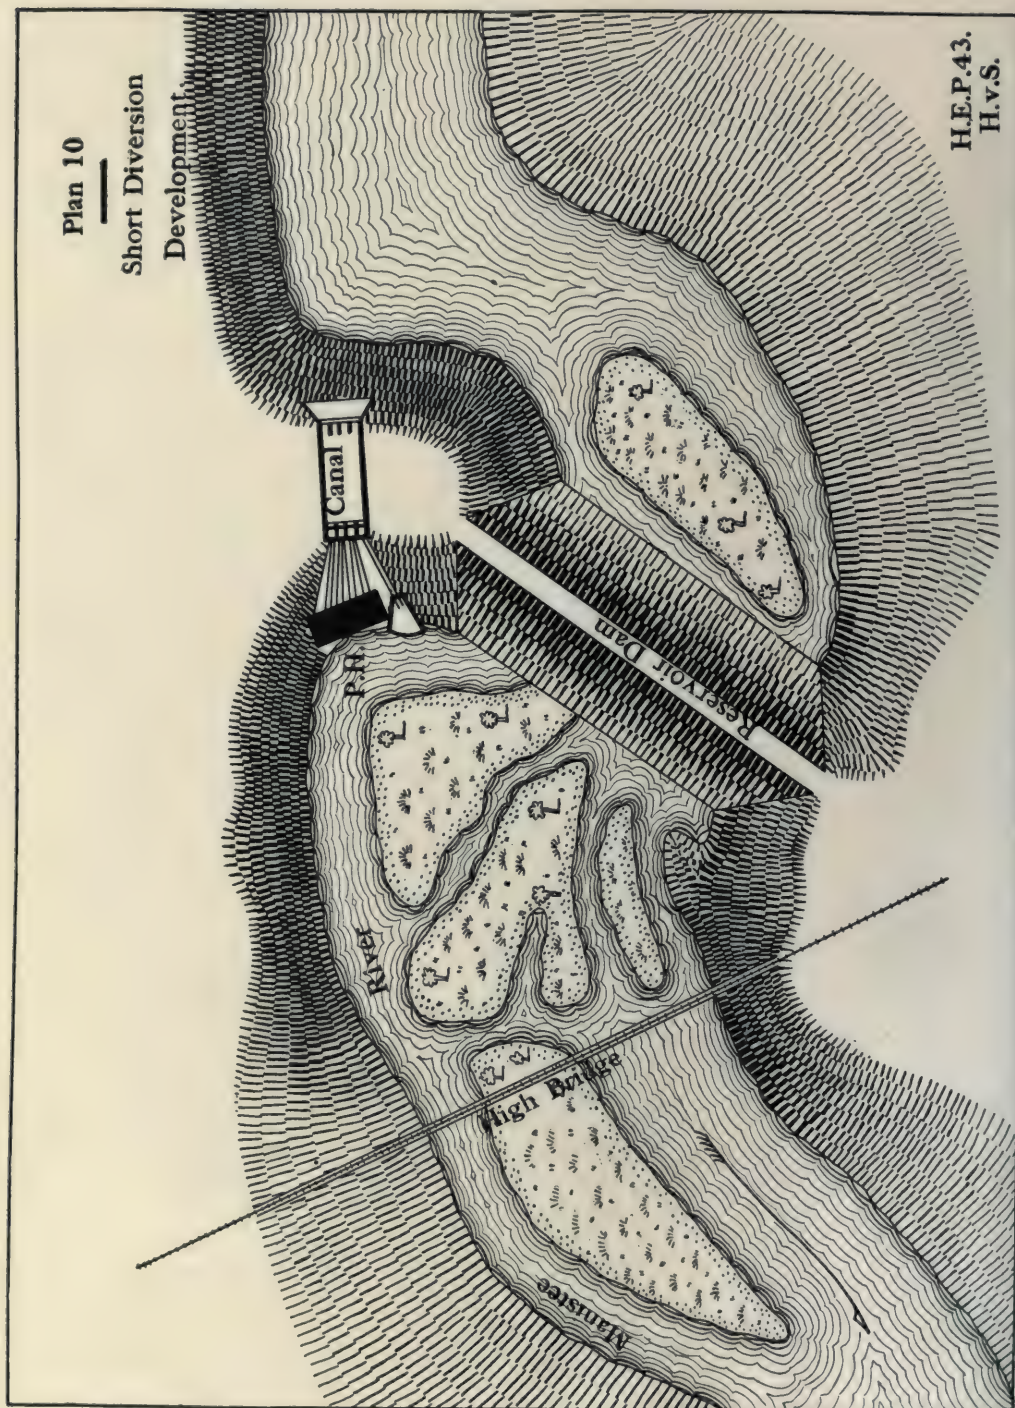

H.E.P.43.  
H.V.S.




advantageous point, and the water is conducted from there to the lower level by a canal, flume, or pipe line, and the power station is at the terminal. The features of this class are very similar to those of the short diversion programme, the difference being only the distance of diversion.


*The choice of development programme* is, as a rule, not a difficult problem; as the existing conditions in most cases readily point to one or the other, only occasionally may some doubt exist as between the first two.

When the development is on the lower reach of a river without falls or rapids, aiming to concentrate so much of its natural fall as may be feasible with the available height of its banks, and when the formation is generally alluvial, the direct programme is the solution, the power house being placed at the end of the spillway, as is shown on *Plan 8*, of the *Mottville, Mich.*, development; or if this is 30 feet and higher, in the spillway's interior, as illustrated on *Plan 9*, of the *Manistee River, Mich.*, plant. On such locations high flood conditions may advise the adoption of the second programme, or the peculiar formation shown in *Plan 10*, *High Bridge, Mich.*, where a promontory juts out into the river, presents a favorable condition for the short diversion development. The third would be available only in case sufficient more fall could be secured by it, for instance when the river makes a long detour, doubling back to within a short distance abreast of the dam site, the diversion location being across the peninsula formed by the river's oxbow course. The fall of rivers of such characteristics rarely exceeds two feet per mile and the length of its course around the détour must be five miles or more to warrant such a programme; in fact, its advisability must be weighed by a comparison of the earning capacity of the fall thus gained and the investment represented by the cost of the diversion works plus their maintenance and operation. This case is illustrated on *Plan 11*, of the *Clinton River, Mich.*, Renshaw site development, where the stream departs easterly for a distance of five miles and returning approaches the dam site within 1200 feet, gaining 12 feet fall.

In rivers with rock beds and palisade banks the first programme is admissible only when the spillway's interior can be utilized for the power station, as the entire width of the river channel must remain available, unobstructed, for the passage of the flood flow, and the creating of a power-house site at the spillway end involves the removal of rock and would be very costly. Such a development is shown on *Plan 12*, of the




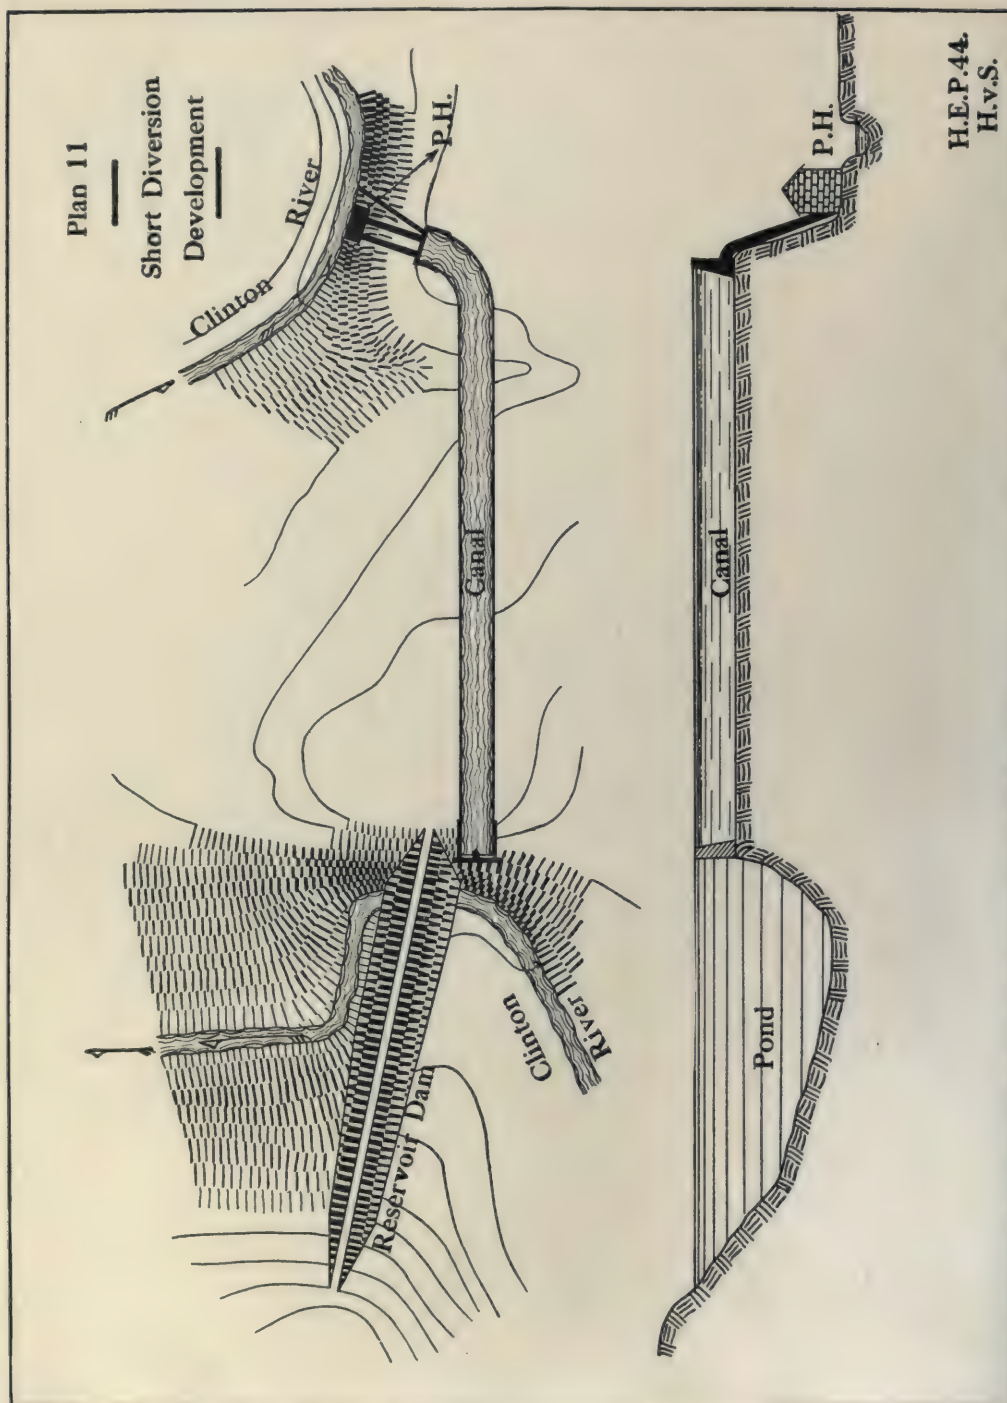

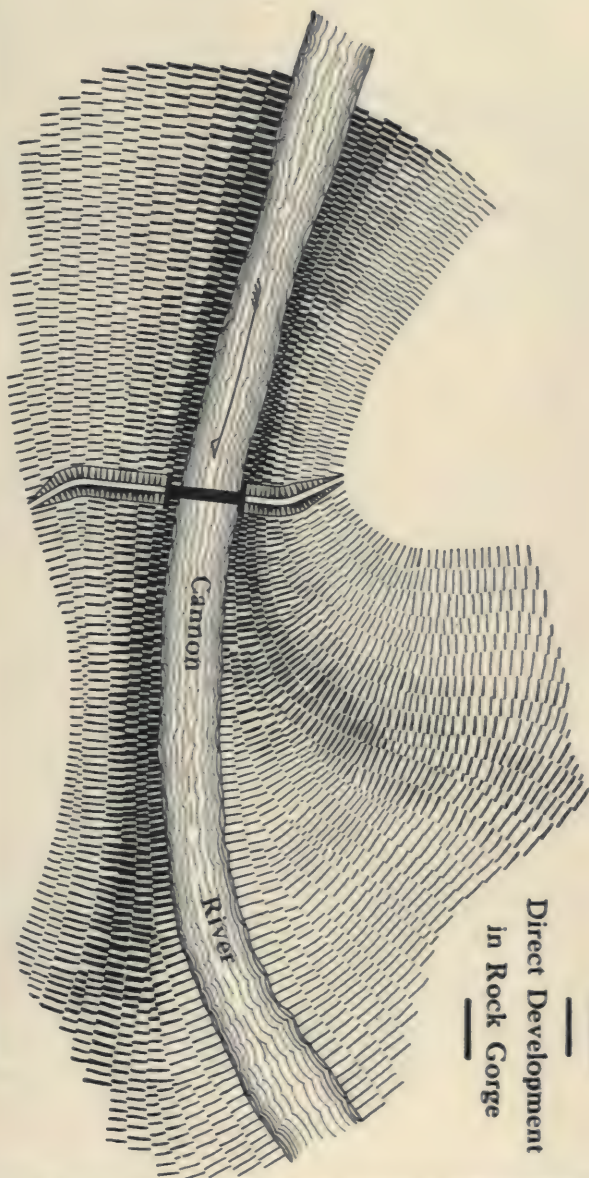

Plan 12


Direct Development  
in Rock Gorge

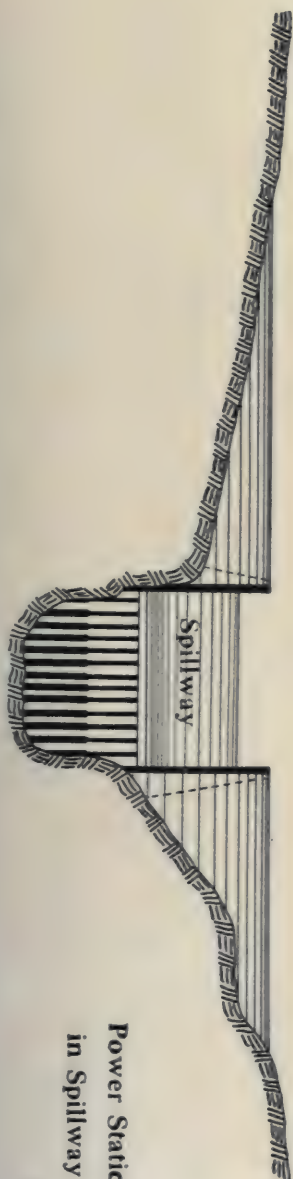


Power Station  
in Spillway

H.E.P. 45.  
H.V.S.




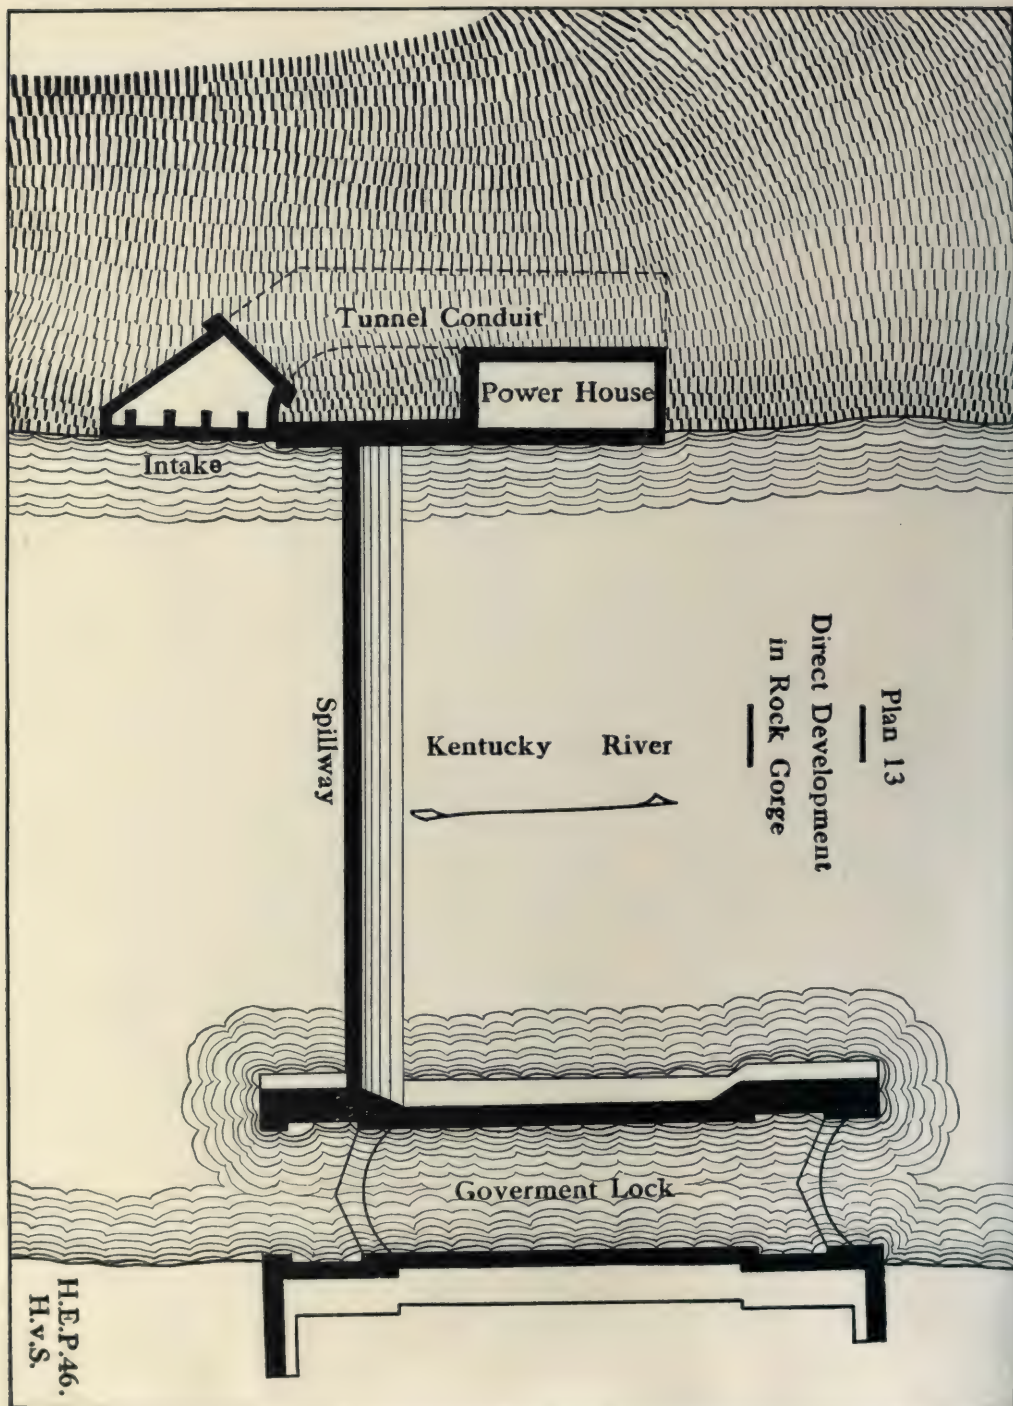

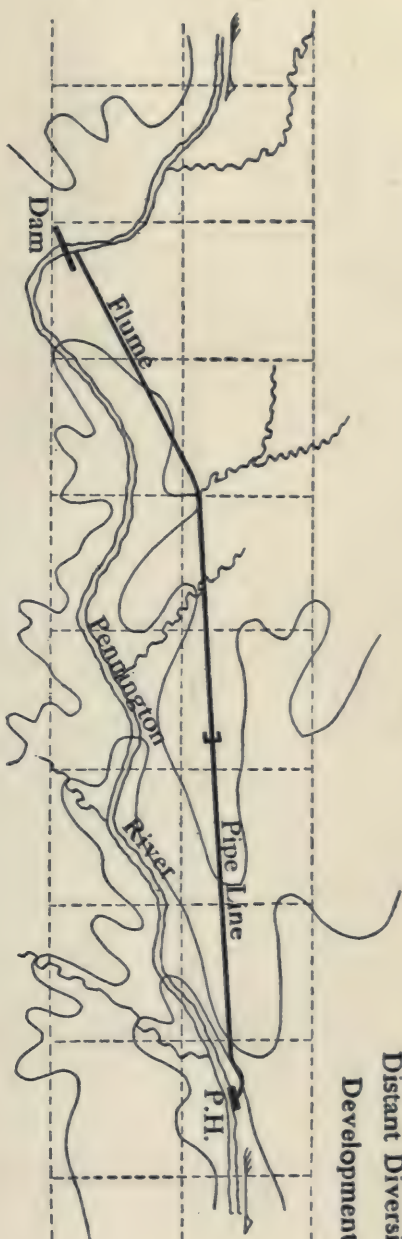


Plan 14


Distant Diversion  
Development

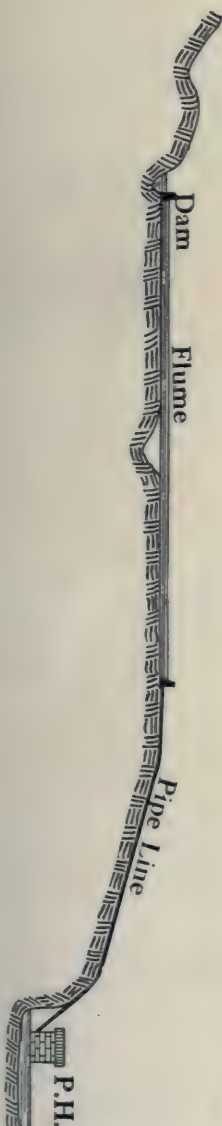


H.E.P.47.  
H.V.S.



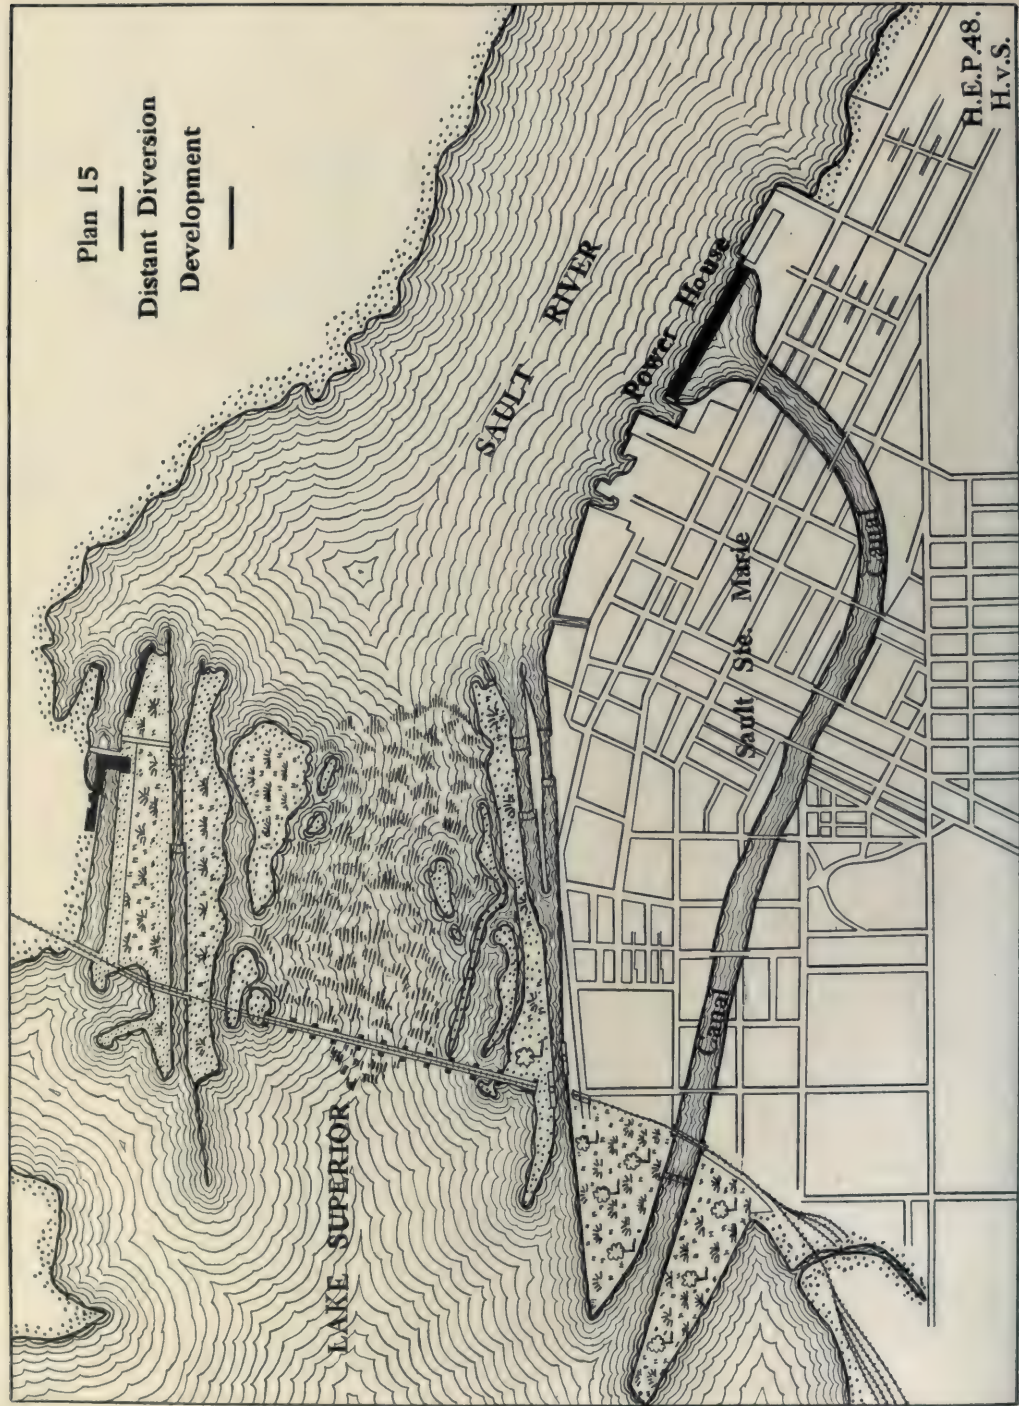

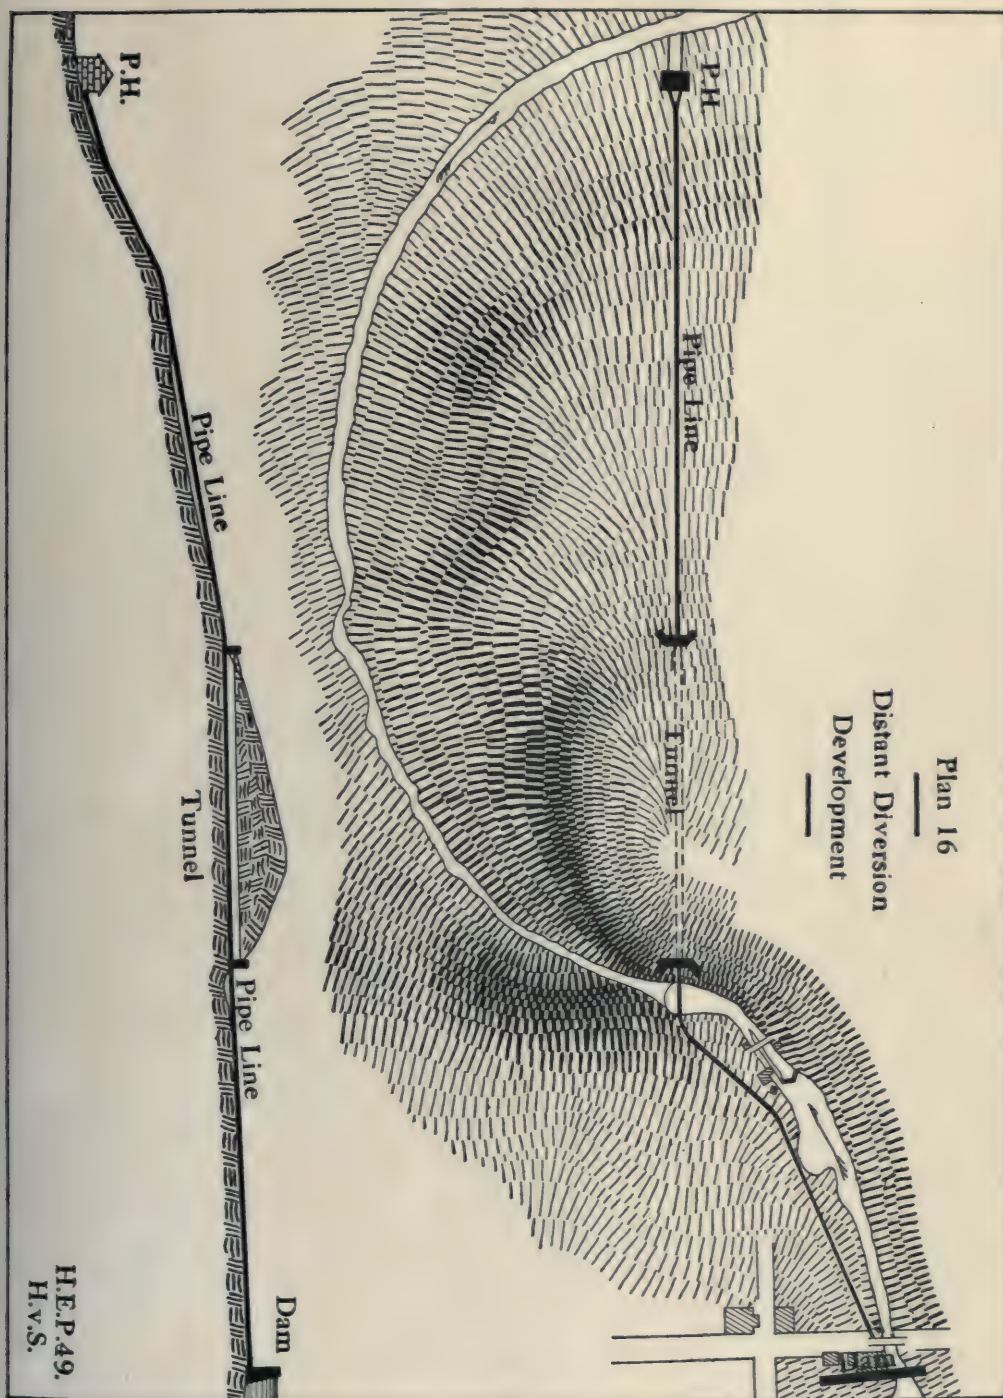



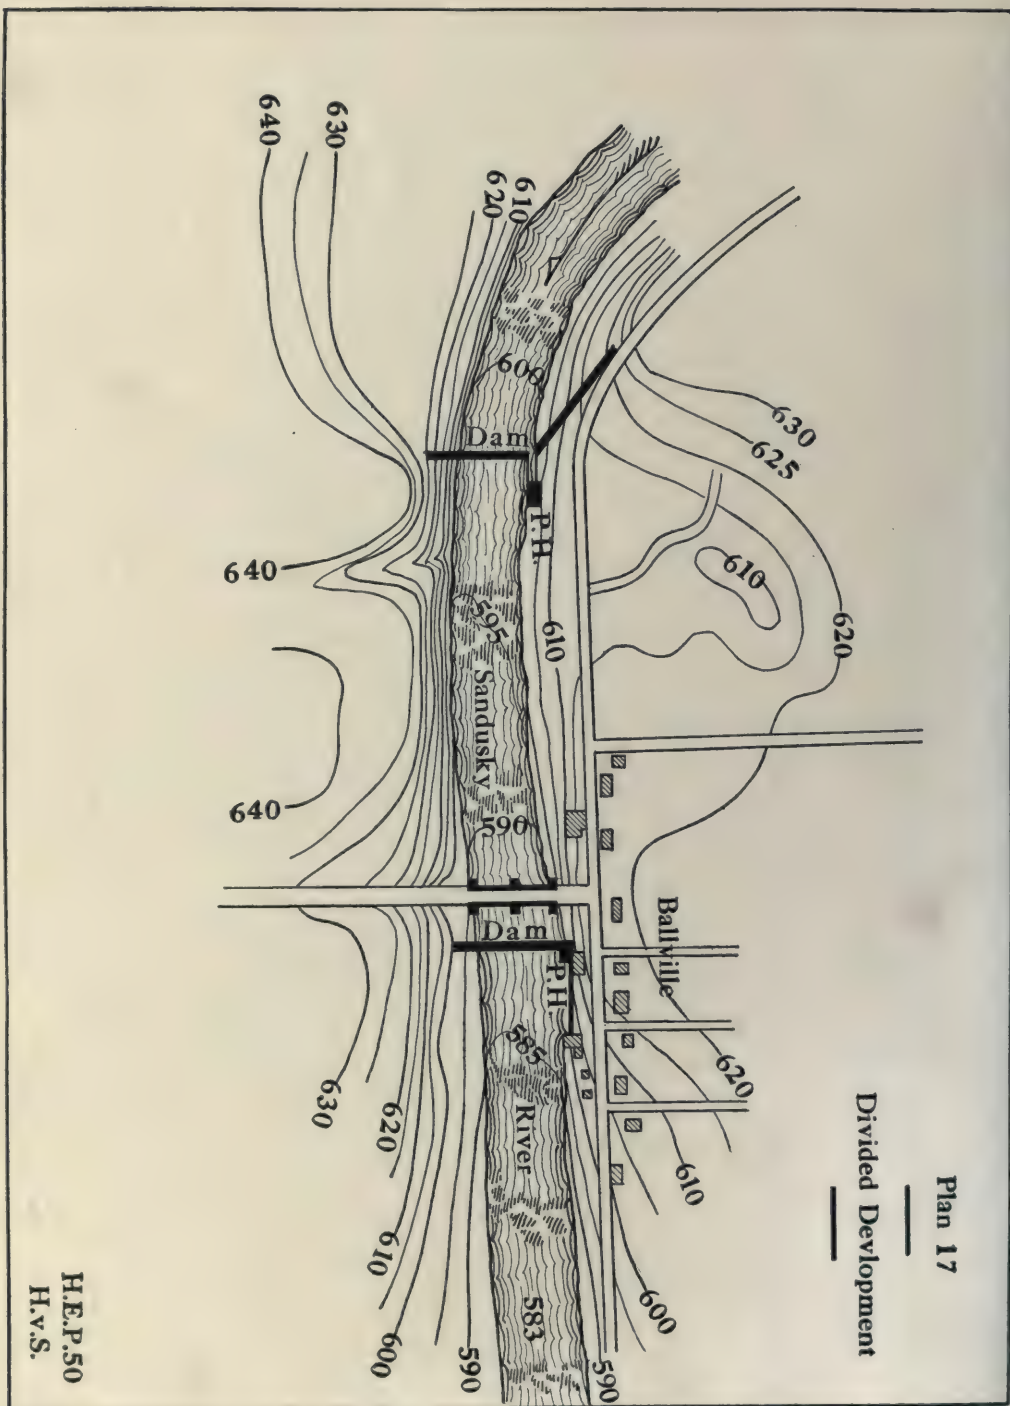



*Canon Falls, Minn.*, plant, the river forming practically a rock gorge, the spillway 40 feet high, and the power station inside of it; this can be carried out only when the spillway is 25 feet or higher, and the only alternative is as shown in Plan 13, at *Little Hickman, Green River, Ky.*, where the power house is 200 feet below the dam, diversion in this case being by tunnel.

When falls or rapids continue over a considerable distance, the third programme only is available,—that is, if a fall exceeding the feasible accumulation at one point is to be utilized. *Plan 14*, of the *Pennington, Ind. Ter.*, illustrates this, the fall in  $3\frac{1}{2}$  miles being 135 feet; diversion is by flume and pipe line; also *Plan 15*, of the development at *Sault Ste. Marie, Mich.* The development of most of the high falls is of this type, as appears on *Plan 16*, of the *Eugenia Falls, Ont.*, where a vertical drop of 78 feet is followed by continuous rapids in the stream flowing for one mile around a rock bluff; the spillway here is placed above the fall, and  $\frac{3}{4}$  mile diversion by tunnel and pipe line terminates at a point 400 feet below the spillway crest. Occasionally successive falls can only be developed by separate treatment,—that is, topography or right-of-way limitations prohibit any diversion programme. This is the case on the Sandusky River near *Fremont, O.*, *Plan 17*, where a fall of 40 feet occurring in half a mile can be developed only by two separate dams within a quarter of a mile of each other. Only the best market conditions will warrant such a treatment when the operating cost of the two stations creates a heavy charge against the enterprise.

ARTICLE 51.—*Development scope*—i.e., what output capacity is the development to be based upon—should be determined before the plant is designed. This question is to be decided from the considerations of the available market for the product and of the fall and flow which can be utilized. The market topic has been discussed in Part I. In the direct development it is generally advisable to utilize all the available fall; with distant diversion the cost of the latter corresponding to the fall gained is the criterion. If only a part of the available power is to be developed, the decision whether to use partial fall or flow rests with the cost of works adapted to one or other purpose; this, however, is rarely the case; on the contrary, it will be almost uniformly desirable to develop the largest possible capacity, as the market for the product is sooner or later created, and the greater the output at a given site the more economical will be the unit development and the operating cost. An estimate

of the largest practicable development is among the first questions met while the project is being exploited, and when it is furnished it must be based upon reliable data and be conclusive.

The low flow during the nine-month period will in the majority of cases be the most recommendable to adopt as the power flow; that during the remaining period of three months lower flow must be increased by drawing supply from reservoir storage, by ponding during non-operating hours, by auxiliary power plant, or by charging an electric storage battery with so much of the current output as is not called for because of the fluctuations of connected loads.

It is only in rare cases that the available market exceeds the low-flow output from the very beginning; if such is the case, the cost of creating any or all of these supplementary flow or power sources must be provided for in the first development estimate; if, however, none such will be required at the outset, the future increase of power demand will take care of the added investment for these additional power sources.



## CHAPTER VIII

### STRUCTURAL TYPES

IN this chapter are presented some practical designs for the works of a hydro-electric plant. They are preceded by the nomenclature of terms herein employed, specifications of material and of methods, followed by the development of one or more designs for each separate structure of importance, with an outline of the theory of stability and adaptability from which they are evolved, and concluded with estimates of quantities and, in some cases, of cost. This treatment of structural types is largely as developed in the author's practice and as proved practical, safe, and economical for the purpose.

*The dam* comprises the entire structure by which the river and its valley are closed, from bank to bank, for the purpose of accumulating the water, concentrating its fall at one fixed point, and diverting the flow in the desired direction. The dam may or may not pass water over its crest; in the affirmative case it becomes a spillway, in the other a reservoir dam; generally it is a composite structure of both types, the river proper being closed by the spillway, which terminates in abutments and is flanked at one or both ends by reservoir embankments or bulkheads.

The spillway consists of the foundation and superstructure.

ARTICLE 52.—*The foundation's* functions are to prevent the passage of water below the structure and to afford rigidity of position to the superstructure. Its design is determined by the character of the material at its site, as to hardness, strength, and porosity, the height and weight of the superstructure, the maximum height of water to be ponded, and the effect of its overflow.

Foundation sites are in rock or alluvial formation.

The *primitive* rocks, formed by original solidification, fusion, or later volcanic action, are granite and sienite; they are igneous and silicious. *Granite* is composed of quartz, feldspar, and mica, with talc and hornblende as impurities; its hardness and durability are increased by the proportion of contained quartz and decreased by that of feldspar and mica; it is unstratified. *Sienite* closely resembles granite; it

consists of feldspar and hornblende with some quartz and mica; it is as hard and durable as granite.

The *transition* or *metamorphic* rocks are gneiss, sienite gneiss, greenstone, trap, and basalt; they are sedimentary, but have undergone changes due to heat, pressure, or chemical action. *Gneiss* or *mica slate* is silicious and stratified, resembling granite. *Sienite gneiss* is a stratified sienite. *Greenstone*, *trap*, and *basalt* consist of hornblende and feldspar and are unstratified.

The *secondary* rocks are the *sandstones*, which are formed by the solidification of disintegrated primitive rocks, being composed of grains of silicious rocks cemented together by silica, lime, and alumina. To this class also belongs *soapstone*, silicate of magnesia. The physical characteristics of sandstone vary with its density and it is generally stratified.

The *tertiary* rocks are calcareous, being formed of shells and marine animals compacted under pressure of superimposed rock or soil; to this class belong the limestones, marble, chalk, and slates. *Limestone*, carbonate of lime, varies from the hardness and density of marble to the softness and porosity of chalk. *Slate* occurs in thin strata, of which clay forms the basis.

#### PHYSICAL CHARACTERISTICS OF ROCKS.

Rock.	Weight per Cubic Foot.	*Crushing Strength per Square Foot.	Stratified or not.
Granite.....	180 lbs.	750 tons	Unstratified
Sienite.....	180 lbs.	750 tons	Unstratified
Gneiss.....	180 lbs.	700 tons	Unstratified
Sienite gneiss.....	180 lbs.	700 tons	Unstratified
Trap.....	180 lbs.	700 tons	Unstratified
Basalt.....	180 lbs.	700 tons	Unstratified
Greenstone.....	180 lbs.	700 tons	Unstratified
Sandstone.....	150 lbs.	600 tons	Stratified
Marble.....	168 lbs.	500 tons	Unstratified
Limestone (hard).....	168 lbs.	500 tons	Unstratified
Slate.....	175 lbs.	600 tons	Stratified

Under *alluvials* are comprised gravel, sand, clay, loam, marl, and peat.

*Gravel* is fragmentary rock reduced by the atmosphere and water to pebbles, chiefly of quartz and of crystalline origin. *Sand* is of the same origin as gravel and consists merely of smaller particles, generally inter-

---

\* For structural considerations 0.25 only of crushing strength here given should be accepted for safe load capacity.



mixed with gravel; it is of angular or rounded fragments as its existence is due to recent or older disintegration of the rocks. *Quicksand* consists of small rounded particles of calcareous materials which, under the influence of water, becomes like a fluid.

*Clay* is decomposed crystalline rock, consisting of hydrated silica or alumina, and generally contains some sand and lime; it occurs in all colors from lightest to darkest, and, according to quantity of water contained in it, is soft or stiff. *Loam* is a mixture of clay and sand, the latter predominating so far that the clay loses its coherence. *Soil* is fine earthy material mixed with more or less organic matter; *mud* is moist, soft soil; *silt* is a fine earthy sediment.

*Marl* is correctly classed as a tertiary formation, and is a consolidated mixture of clay and carbonate of lime which readily disintegrates when exposed to the atmosphere.

*Peat* is decomposed vegetable matter, spongy and containing much water near the surface.

#### PHYSICAL CHARACTERISTICS OF ALLUVIALS.

Material	* Weight per Cubic Foot.	† Bearing per Square Foot.	Angle of Repose.	Coefficient of Friction.
Gravel.....	90-106 lbs.	2-3 tons	38°	0.78
Sand, dry and loose.....	90-106 lbs.	2-3 tons	28°	0.53
Sand, wet.....	118-129 lbs.	2-3 tons	28°	0.53
Clay, dry.....	119 lbs.	4-6 tons	..	
Clay, in lumps.....	63 lbs.	4-6 tons	45°	
Clay, damp.....		4-6 tons	45°	1.0
Clay, wet.....		4-6 tons	15°	0.27
Loam, dry, loose.....	72-80 lbs.	4-6 tons	35°	0.70
Loam, wet.....	66-68 lbs.	4-6 tons	35°	0.70
Mud.....	104-110 lbs.	4-6 tons	zero	0.70
Gravel and loam.....		2-3 tons	38°	0.78
Gravel and sand, dry.....		8-10 tons	45°	1.0
Loam on moist clay.....		.....	45°	1.0
Loam on wet clay.....		.....	17°	0.3
Clay on gravel.....		.....	45°	1.0
Peat.....		.....	20°	0.36

Having analyzed the character of the material at the foundation site, the following arguments and deductions should control the design.

In rock its hardness, stratification, condition and shape of surface determine the foundation.

\* Compacted. † At depth beyond atmospheric influence.

*In hard unstratified rock* with level surface no foundation is required; the homogeneous ledge will not permit water to pass beneath its surface and it will safely carry the superstructure which is anchored and keyed to it.

*In hard but stratified rock* a *cut-off wall* must be constructed along the upstream side of the spillway structure in a trench excavated from the rock to a sufficient depth to pass below those strata which are less than two feet thick, its upper portion becoming part of the superstructure. The rock ledge may be of sufficient solidity to carry safely the spillway.

*In soft stratified rock* a *cut-off wall* is essential. The superstructure may be founded on the rock surface after the soft, disintegrated upper portions are completely removed, but an *apron* must be constructed on the downstream side of the superstructure to receive the overfall and resist its erosive force.

*In compact alluvial* gravel and sand, defined as hardpan, *with no interior sand strata* to a depth of one-third of the water height on the upstream side of the spillway, a *cut-off wall* is required to a depth below the river bed equal to one-fourth of the maximum water head; when the aggregate weight of the superstructure and water does not exceed two tons per square foot of its base, it may be placed directly upon the levelled, cleaned hardpan surface, but when the load exceeds this limit, *bearing piles* must be driven to support safely the superstructure, which may be placed directly upon them, or a concrete *foundation floor* may be laid, the pile tops being imbedded in it. An *apron* is required on the downstream side.

*In clay with no sand strata* or pockets for a depth of one-fourth of the maximum water head, *upstream cut-off walls* must be constructed to a depth of one-third of the maximum water head, and these must form a part of the foundation floor, which rests upon the bearing piles and is extended up- and downstream of the superstructure base as aprons.

*In soft alluvials* of clay, gravel, sand, loam, silt, or peat, upstream cut-off walls are required to a depth penetrating into impermeable material or to rock, and a pile bearing foundation with up- and downstream aprons, as will be later on described, must be constructed.

In all alluvial locations the foundation must be specially designed to provide safety against *scour* or *underwashing* and secure ample bearing capacity. Whenever sand strata exist, even at a considerable depth, at




the spillway site or upstream of it, they may rise or connect with higher strata of the same material, and eventually form channels through which the water, under increased pressure head, finds a passage beneath the spillway base, which will cause leaks and in time remove some of the mass upon which the structure rests. The only reliable safeguard under such conditions lies in securely confining so much of the mass between the cut-off and intermediate foundation walls or beams that its weight exceeds the sliding force, and to penetrate through and below this body with bearing piles which will safely maintain the superstructure, even should it, so to speak, float upon the mass enclosed between the cut-off and the foundation walls. Upon this theory the depths of the cut-off walls should be based.

This liability of water passing under the foundation by way of permeable strata is not confined to the river bed, but in fact is much more likely to have its origin in the banks, where the constant passage of the ground-water into the stream has

formed permanent channels which, when the water is ponded above them, become readily connected by lateral channels; springs issuing from the river bank are evidences of the ground-water channels, which, however, are not always thus plainly marked. Of this subject more will be said under "Embankments."


ARTICLE 53. *Terms, Materials, and Methods.* — (A) Coffering comprises the operations and structures required to control the water during construction, to exclude it from the site.

(B) *Dike*, Fig. 12, is a loosely thrown up rock-and-earth bank; its function is to exclude water from the site it encloses; it consists of a *core* of loose rock of all sizes and an earth or clay and sand *facing fill*. Loosely piled limestone and sandstone weigh 86 pounds per cubic foot; one cubic yard solid of either yields 1.75 of loose volume. A rock bank with slopes of one-half in one, no top width, and of height equal to the depth of water in which it is placed, is safe against overturning by a

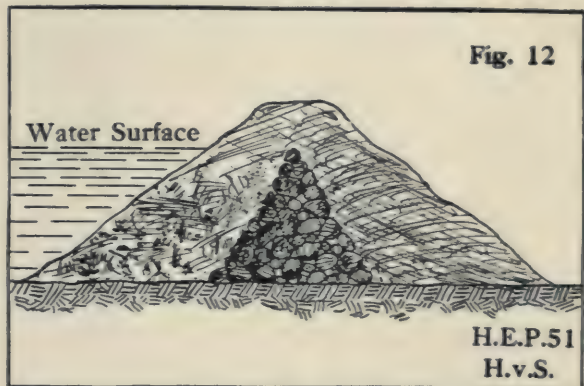

Dike.

factor of two, and can be made practically water-tight by placing alternate coverings of straw, hay, or manure and ashes, clay, or coarse loam against its pressure side, the water on the opposite side being maintained

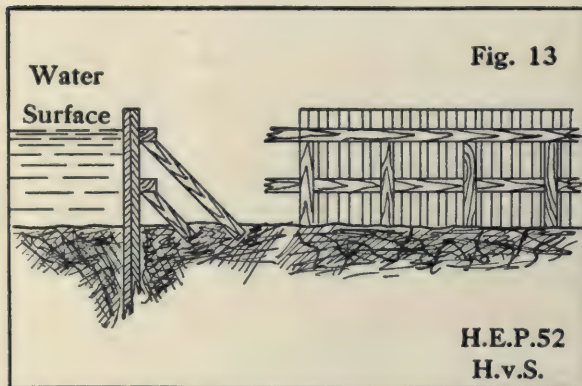

Timber Sheet.

at a lower level while the facing is placed. The earth fill should rise 3 feet above the top of the rock core.


(C) *Timber sheet*, Fig. 13, is a vertical curtain or wall, consisting of planks driven to overlap, of sheet piles to interlock, or of close-driven square piles for the purpose of coffering; they are effective only to enclose small areas, and must be strengthened

by *waling*, which are timbers secured horizontally to them at different heights, against which inclined timbers, securely footed, are strutted. With five feet of pressure head against the timber sheet of three-inch planks, the struts must be spaced five feet. Such a sheet is made water-tight by canvas covering and earth facing. Timber sheets are driven to a depth equal to the water head against them and rise 3 feet above water surface.

(D) *Steel sheet* consists of driven interlocking steel shapes, which are rolled of different sections from 11 to 45 pounds per foot; they are driven like timber sheets, are capable of resisting moderate

pressure heads unsupported, and can be made water-tight by filling ashes against their pressure side; they can be pulled out and used again. Fig. 14 shows some of the sections now on the market.


(E) *Log cribs*, Fig. 15, are constructed of round logs laid upon each other in crib fashion of alternate longitudinal and transverse streaks, the

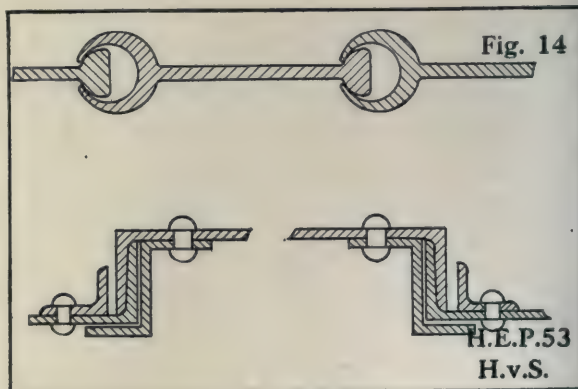


Steel Piling.



first from five to sixteen, the second from eight to twelve feet centres; the open rectangular spaces enclosed by the logs are the *crib bays*; the logs are spiked to each other at all crossings with  $\frac{3}{4}$ " round 18" wrought-iron drifts set in  $\frac{5}{8}$ " holes; logs may be gaped to secure firmer connections and to bring those of the same layer, or *streak*, to a uniform level. Log cribs are used for coffering, confining and directing flow, or retaining banks and slopes; they may be framed in place, the second streak being formed into an open log floor and the bays filled with gravel or loose rock as the framing progresses, or they may be floated light into position and there loaded and sunk; they can be made water-tight by planking or boarding, or by diking. To resist overturning, with a factor of two, their interior width should equal 0.75 of the water height and their rock-filled height should rise three feet above the water surface.

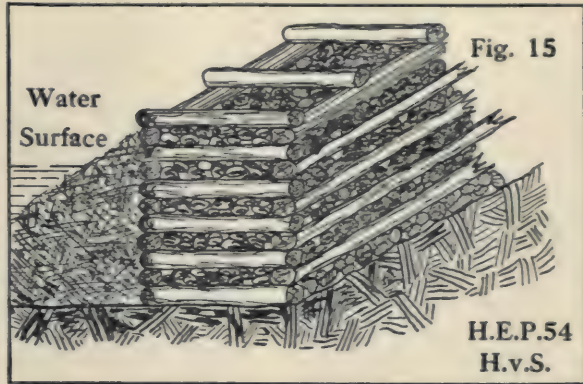

Log Crib.

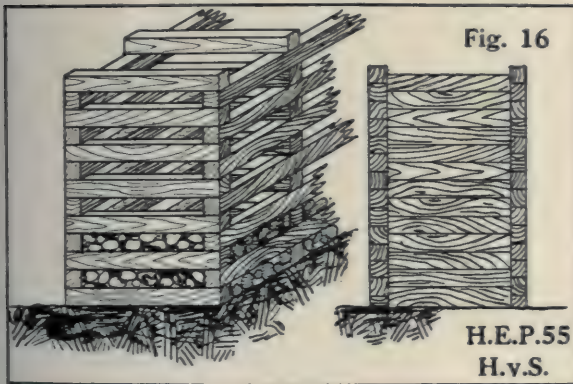

Timber Crib.

(F) *Timber cribs*, Fig. 16, are built of dimension timber in crib fashion similar to log cribs, or of solid timber walls, and are filled with rock, gravel, or sand and made water-tight by canvas covering and puddle placed along their footing on the pressure side. To resist overturning, with a factor

of two, the width of timber crib should be 0.66 of the water height and the filled height should equal that of the water.


(G) *Timber*.—*Boards* are one inch thick, and sawn; *planking* is two or three inches thick, sawn; *scantling* is 2" x 3" or 4", sawn. *Dimension* comprises all sawn or hewn sticks of rectangular or square section ex-

ceeding three inches in thickness; *ft. b. m.* is the abbreviation for feet board measure, the unit of which is one square foot one inch thick. *Round timber measure* is in cubic feet =  $\text{length} \times \frac{C^2}{13}$ ; C is the circumference of the log in feet.

(H) *Bearing piles* are straight logs 16 feet and longer, 8" in diameter at the small end under the bark; they must be of one year's cut and

sound and are barked. They are *driven to refusal* when they do not sink more than 0.5 inch under a free 20-foot drop of a 2000-pound hammer.

The theoretical *bearing capacity* of timber piles equals cube root of fall of hammer in feet x weight of hammer in pounds x constant 0.023, divided by constant  $1 + \text{sink-ing distance per stroke in inches}$ , which for "driven to refusal" conditions are  $\sqrt[3]{20} \times 2000 \times 0.023 \div 1.5 = 64$  tons. The actual loading should not exceed one-half of theoretical when the pile stands in gravel, clay, and sand; one-fourth of theoretical when the pile stands in clay and sand; one-tenth of

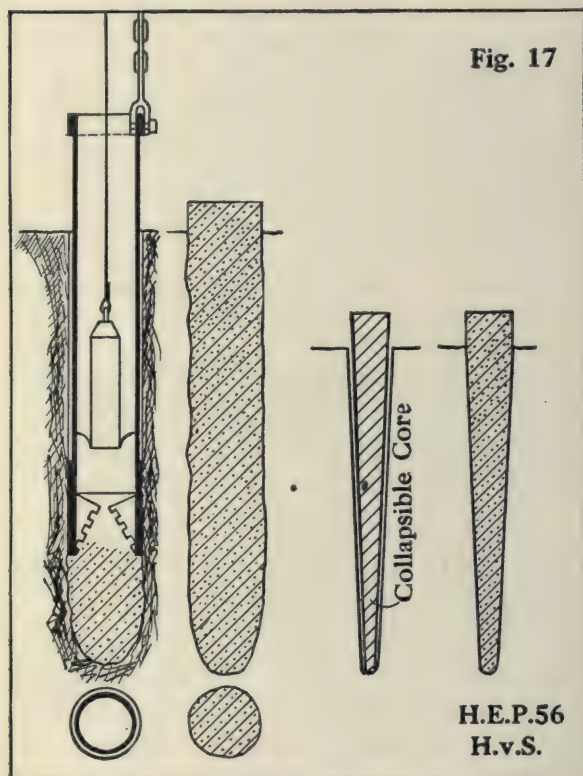

Concrete Piles.

theoretical when the pile stands in mud. To drive bearing piles in compacted sand is difficult and generally requires clearing by water jet.

(I) *Concrete piles* are constructed by different processes. In Fig. 17 a collapsible steel core inside of a steel plate shell is driven, the core is withdrawn and the shell filled with concrete. In the other type a steel form fitted with a bucket point is driven to the required depth, some concrete is then lowered into it and the shell is pulled up two feet, by which operation the bucket point opens and permits the concrete to drop to the bottom and it is there rammed in place; lowering more concrete,



pulling shell two feet, and ramming the concrete are repeated until the pile is completed. These piles can be re-enforced by imbedding steel rods in the concrete.

(J) *Cut-off wall* intercepts flow and seepage below the surface; it may be of puddle, timber or steel curtain, or a concrete wall.

(K) *Core wall* serves the same purpose as the cut-off in the interior of earth embankments.


(L) *Puddle* is a plastic mass of clay, small gravel, and coarse sand in the proportions of 5 to 3 to 2, compacted in a confined space.

(M) *Timber curtain* serves the purpose of cut-off or core wall, and consists of triple-lap sheet piles, Fig. 18, which are constructed of three planks placed on face sides, centre plank overlapping, thus forming tongue and groove on opposite edges; planks are secured by wrought-iron boat spikes one inch longer than thickness of pile, spikes are driven from opposite sides of pile, points are clinched.

Piles up to 8 feet long are 6 inches thick; piles up to 16 feet long are 9 inches thick; piles up to 24 feet long are 12 inches thick. One end is scarf pointed so that, when driven, it crowds toward preceding pile, forcing the tongue into the groove. These piles should be driven with a light hammer and a low drop and be guided all the way down; the timber for them should be pine or hemlock, sound, of uniform thickness, and preferably edged.

(N) *Steel curtain* is constructed of steel sheet pile sections described under D.

(O) *Concrete* herein considered consists of *true Portland cement* mortar and hard broken stone or gravel; the mortar is composed of one part of cement and two or three parts of sand by weight and of sufficient volume to fill completely the voids in the aggregate. A 1 : 3 : 6 mixture is designated as x concrete, a 1 : 2 : 5 mixture is called xx concrete. *The cement and sand* should conform to the standard specifications of the American Society of Civil Engineers; the aggregate is sized from one-quarter inch to two and one-half inches.

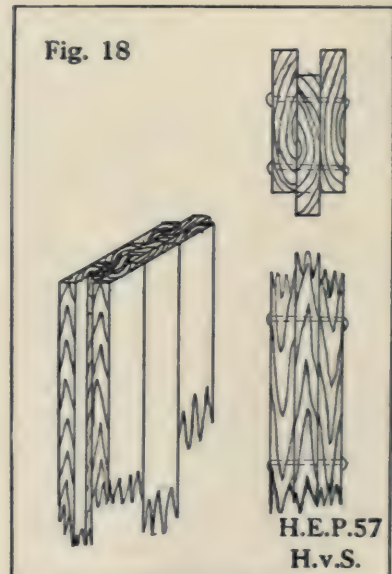

Triple-lap Sheet Pile.

*The mixing* is by hand or in *batch* mixers as follows: the cement and sand are dry mixed; water is added and the mortar mixed, the aggregate is added, thoroughly washed and wet, and the concrete is mixed to a wet but not flowing mass,—that is, water should not stand on its surface nor ooze out of it during handling or transporting.

*The concrete is placed* in a manner to avoid disintegration of the mixture when dropped from cars, barrows, or shovels; the height of its fall should be restricted, and the inclination of chutes must not be steep.

When concrete is placed on rock, the surface should be cleaned of all vegetable and earthy matter and drenched with water, and smooth rock surfaces should be scarred.

*Unfinished joints* are to be treated in the same manner as rock faces before new concrete is added, and the maximum length of unfinished joints on the same plane should not exceed ten feet.

*Finished concrete* should be covered, if practicable, with a layer of wet sand, or otherwise shaded from the sun and kept damp, for 48 hours.

Such concrete may be expected to develop in six months the following characteristics, expressed in pounds per square inch:

TABLE 4.—CONCRETE CHARACTERISTICS.

	X Concrete.	XX Concrete.
Modulus of elasticity.....	$E_c = 3,000,000$	2,400,000
Compressive strength.....	$f_c = 2,000$	2,400
Tensile strength.....	$f_t = 200$	200
Shearing strength.....	$C = 300$	300
Expansion.....	$= 0.000006$ per degree F.	
Adhesion to rust-free steel.....	$= 600$	

Working stresses should be taken at 0.25 of above.

*Cyclopean concrete* has imbedded in the concrete mass solid stones of any size, each stone being surrounded by not less than a twelve-inch wall of concrete, and no stones being placed closer to the finished surfaces of the structure than two feet. *Monolithic concrete* is a solid mass of concrete. *Block concrete* consists of shaped concrete units laid in the manner of ashlar or coursed masonry in Portland cement mortar.

*Forms* are shapes of boards, planking, or metal walls in which concrete is moulded into blocks, walls, partitions, arches, or beams; the interior sides of the forms are smooth and oiled. Forms should not be removed until the concrete is fully set, generally 48 hours.

*Concrete steel*, or reinforced concrete, is a structure in which the



imbedded steel increases the strength of the entire section; or in which the proportions of the steel to the concrete area, and the location of the steel with reference to the stresses, are determined to secure the action of both as a unit. The random placing of steel members in a concrete mass, or the lining or supporting of any side or face of a concrete section with steel, is not of the class herein considered. The characteristics of reinforcing steel are taken in pounds per square inch as follows:

TABLE 5.—REINFORCING STEEL CHARACTERISTICS.

Modulus of elasticity.....	$E_s = 29,000,000$
Ultimate strength.....	$f_s = 64,000$
Elastic limit.....	$F = 50,000$
Expansion.....	$= 0.000065$ per degree of $F$ .

The concrete steel designs herein used are based upon the concrete and steel characteristics given in *Tables 7 and 8*, and are according to formulæ of Mr. A. L. Johnson, M. Am. Soc. C. E.

TABLE 6.—CONCRETE STEEL BEAMS.

	X Concrete.	XX Concrete.
Moment of ultimate resistance.....	$= 3620 t^2$	$5505 t^2;$
Area of steel in width of sec. ....	$q = 0.077 t$	$0.132 t;$
$t$ is depth of the beam.		

Values of  $t$  and  $q$  for beams to resist various bending moments in accordance with these formulæ are given in *Table 7*. Many different kinds and shapes of reinforcing steel rods are used in such structures, but the above formulæ apply generally and differ only with the change of concrete and steel characteristics.

TABLE 7.—VALUES FOR CONCRETE STEEL BEAM DESIGNS.

$M$  = ultimate bending moment of external forces in 1000 inch pounds;  $t$  = depth of beam in inches;  $q$  = square inches of steel in one foot width of beam. Steel is placed 0.9  $t$  from compression face of the beam.

M.	X Concrete.		XX Concrete.	
	$t$	$q$	$t$	$q$
100.....	5.27	0.408	4.27	0.562
150.....	6.45	0.500	5.22	0.689
200.....	7.45	0.576	6.02	0.795
250.....	8.32	0.644	6.74	0.889
300.....	9.12	0.706	7.38	0.975
350.....	9.85	0.762	7.93	1.050
400.....	10.52	0.816	8.52	1.125
450.....	11.15	0.861	9.05	1.193
500.....	11.73	0.910	9.53	1.258

M.	X Concrete.		XX Concrete.	
	t	q	t	q
550.....	12.38	0.956	10.00	1.320
600.....	12.60	0.998	10.44	1.380
650.....	13.40	1.040	10.84	1.435
700.....	13.92	1.078	11.29	1.486
750.....	14.40	1.113	11.68	1.540
800.....	14.88	1.151	12.02	1.588
850.....	15.34	1.188	12.41	1.640
900.....	15.80	1.222	12.79	1.686
950.....	16.25	1.258	13.11	1.735
1,000.....	16.68	1.289	13.49	1.780
1,500.....	20.40	1.580	16.50	2.180
2,000.....	23.50	1.812	19.05	2.520
2,500.....	26.30	2.038	21.30	2.810
3,000.....	28.80	2.230	23.35	3.075
3,500.....	31.15	2.410	25.20	3.325
4,000.....	33.25	2.573	26.90	3.560
4,500.....	35.25	2.730	28.59	3.780
5,000.....	37.20	2.880	30.10	3.980
5,500.....	39.10	3.025	31.60	4.180
6,000.....	40.80	3.160	33.05	4.360
6,500.....	42.50	3.285	34.39	4.530
7,000.....	44.00	3.410	35.65	4.700
7,500.....	45.60	3.530	36.90	4.870
8,000.....	47.00	3.640	38.10	5.030
8,500.....	48.55	3.760	39.30	5.190
9,000.....	49.90	3.860	40.40	5.340
9,500.....	50.25	3.965	41.50	5.585
10,000.....	52.70	4.075	42.60	5.620

(P) *Breakwater* consists of log cribs placed ten to sixteen feet centres, the intervening spaces being closed by planks or timbers placed in an inclined position, ends resting on the stream bed and tops against longitudinal logs secured to the top of cribs; its purpose is to check swiftly flowing water.

(Q) *Sheet pile dike*, Fig. 19, is employed for coffering service; it consists of two parallel sheet pile curtains from five to fifteen feet apart, the area between them being filled with puddle, and the pressure side, or both sides, being covered with riprap and facing fill.

(R) *Riprap* is loose rock thrown up against a bank, wall, or curtain, to break the force of flowing water or resist its pressure.

(S) *Steel pile dike* is a structure similar to the sheet pile dike, the curtain being of steel sheet piles.

(T) *Paving* consists of large flat stones placed by hand on faces or edges, interstices being filled with stone chips or spalls, on slopes of earth banks or surfaces, to prevent erosion.



View 1  
Breakwater



H.E.P. 59  
H.v.S.

Heard Breakwater and Spar Trunk Aug 31 1911

View 2  
Timber Crib



H.E.P. 60  
H.v.S.

View 3  
Log Crib Coffers



View 4  
Sheet Pile Dike






ARTICLE 54.—*Coffering* is the first operation preparatory to the construction of any part of the dam, in order to exclude the water from the construction site. It requires judgment born of experience to confine the means employed, which will accomplish this, to devices of temporary character and economical cost; their failure will generally cause damages which would cover the cost of the most permanent works. Depth of water, velocity of flow, river-bed material, area to be coffered, and possibility of exposure to flood rises are the conditions to be weighed in determining the recommendable programme.

*In a rock bed* and shallow water where the velocity does not exceed three feet per second, a dike (53, B) answers the purpose until its required section exceeds the cost of a log crib (53, E), which latter must be chosen for swift water. *In rapids* a break-water (53, P) should first be constructed, such as is seen in View 1, which was erected in the Sault Rapids at the foot of Lake Superior, being 300 feet long in ten-foot-deep water with velocity of twelve feet per second. Rock is not always the most

economical filling for cribs, as, for example, in the case of the location just referred to, View 2, where the construction site was coffered by a timber crib filled with sand which was pumped in. *In gravel and clay beds* a dike answers until its cost exceeds that of a log crib, as the one shown in View 3, which was 250 feet long, placed in ten feet of water and exposed to considerable wave action.

*In clay and sand* and depth of water exceeding ten feet, a sheet pile dike (53, Q) will prove the most serviceable, such as is shown in View 4, which was placed by the author in twenty feet of water, was two thousand feet long, and consisted of two timber curtains, fifteen feet centres, braced and strutted, filled with puddle, riprapped and banked; it remained in service during a period of three years and developed no leaks. When water is shallow, timber or steel sheets (53, C and D) may answer; two examples of the latter, constructed of different type of steel-sheet piles,

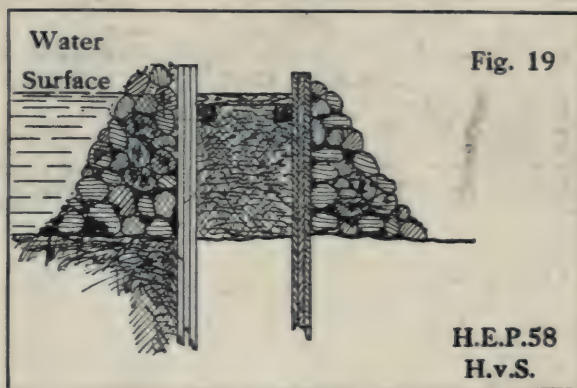

Sheet Pile Dike.

are shown in Views 5 and 6. *In compacted sand* a steel sheet may prove the only practicable coffer up to ten feet depth of water; when deeper, a steel pile dike may be the proper solution; timber sheets cannot be driven successfully in this class of material. In soft formations and water depth of five feet or less, timber sheets will answer; in greater depths the sheet pile dike is preferable to cribs, as it will be difficult to find firm footing for the latter.

In all coffer operations it is essential to provide, and constantly maintain, ready means to add promptly filling, riprap, and facing material to the coffering structures, and further to provide and keep in commission a sufficient *pumping plant* to remove all water accumulating from leaks and seepage which is collected in a *pump sump* conveniently located.

TABLE 8.—QUANTITIES REQUIRED FOR DIFFERENT COFFER STRUCTURES IN 10-FOOT LENGTHS, AS PER SECTIONS SHOWN IN FIGS. 12 TO 19.

Depth, ft.	SHEETS.			DIKE.		SHEET PILE DIKE.			LOG CRIB.			TIMBER CRIB.		
	Water, ft.	Timber, ft. b.m.	Steel, lbs.	Cub. Rock.	Puddle. ft. b.m.	Timber, ft. b.m.	Puddle, cub. yds.	Riprap, cub. yds.	Logs, lin. ft.	Drifts, lbs.	Rockfill, cub. yds.	Timber-Drifts, ft. b.m.	Spikes, lbs.	Sandfill, cub. yds.
5..	1230	1430		5	45	2400	10	12	125	150	7	1750	175	5.5
6..	1420	1650		7	54	2800	13.3	15	155	170	11.7	2175	200	9
7..	1630	1870		9	64	3200	17	19	174	190	15.5	2475	225	13
8..	1860	2090		12	75	3600	21.6	23	198	205	20	2825	250	17
9..	1880	2310		15	88	4000	27	28	220	220	25	3150	270	21
10..	2300	2530		18	100	4400	32	33	250	230	30.5	3600	290	26
11..	.....	.....		22	113	4700	37.8	37	275	245	35.5	4000	315	31
12..	.....	.....		27	126	5000	44.4	42	294	260	43	4275	335	36.5
13..	.....	.....		31	141	5450	51	47	317	275	52	4625	360	42
14..	.....	.....		36	154	5800	58.5	53	352	290	61	5150	380	48
15..	.....	.....		42	171	6200	66.6	60	375	305	71	5525	410	55
16..	.....	.....		..	...	6700	75	66	400	320	80	5900	430	65
17..	.....	.....		..	...	7100	83.7	74	425	335	89	6325	460	75
18..	.....	.....		..	...	7500	93	82	450	350	98	6700	480	85
19..	.....	.....		..	...	7900	102.8	90	475	360	107	7100	500	95
20..	.....	.....		..	...	8400	112.4	98	515	380	117	7700	530	105

ARTICLE 55.—A *foundation design* for a thirty-feet high spillway in alluvial location, based upon the theories outlined in Art. 52, is shown in *Plan 18*. The structure consists of a cut-off wall, bearing piles, floor walls or beams, and floor. *The cut-off* may be a driven timber or steel curtain, provided the river bed material is such that these can be driven in a manner guaranteeing an unbroken, solid curtain. Timber sheet piles do not secure this result if driven through coarse gravel, or if boulders are encountered, as these will deflect the driving point and force the tongue out of the groove, leaving openings between sheet piles, and thus





View B.—Steel Pile Coffin.  
U. S. Steel Pile.




View 6.—Steel Pile Coffers,  
Friedrich Channel Bar.



Plan 18

Foundation design

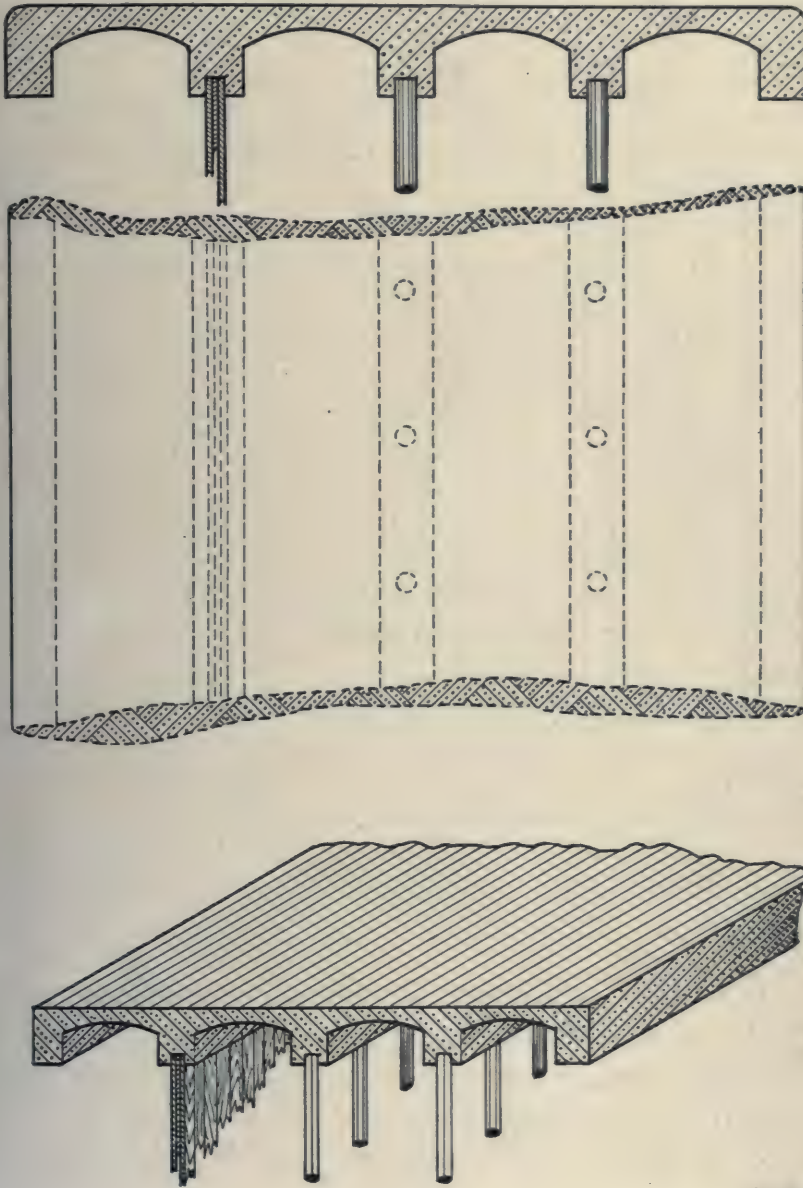

H.E.P.65  
H.v.S.

defeat the purpose for which they are employed. Steel piles readily penetrate gravel without deflection, but not so when large boulders are struck, as their interlocking parts may then be ruptured and thus also leave openings. These defects are not readily detected during the process of driving, and therefore the decision as to adaptability of driven curtains for cut-off service must be solely based upon the correct diagnosis of the material, as all other considerations are insignificant in importance when compared to the results expected from the foundation cut-off wall.

A driven curtain presents the double advantage of economy and expedition, as it can be frequently driven before any coffering operations are started and may in part also serve to aid in coffering and, when of timber, it forms the most economical cut-off wall type. The tendency, therefore, predominates to rely upon this form; but these influences must not be permitted to outweigh the sound judgment of the engineer; when the presence of numerous and large boulders has been fully established, a driven curtain should under no conditions be relied upon.

If the material favors the use of a driven curtain, the piles must be constructed and driven with the greatest care, and this operation, above all others, demands the most rigid supervision on the part of the engineer.

When a timber curtain cannot be used, it is not always likely that the steel curtain solves the problem: the very conditions which prohibit a timber curtain form difficulties in the construction of a perfect steel curtain. The cost should be estimated, as it will come close to, and perhaps exceed, that of a concrete wall, as will appear in a comparative estimate of quantities for various cut-off structures at the end of this article. Steel curtains are described in 53, D, and it is just as essential to observe every detail of their construction as with timber curtains. When carefully placed they form an effective cut-off wall; but they are perishable, nor can their life be prolonged by any protective coating, as this would be more or less removed during driving. Steel which had been imbedded in wet clay and sand for six years was found reduced in section nearly one-half by corrosion when recovered by the author.

When driven curtains are not adapted for cut-off wall, *trenching* must be resorted to and the question of cut-off type further examined. During trenching much valuable information is gained as to the exact subsurface formation, and advance borings from different levels will greatly add to this. When the required depth is reached, a close estimate



can be made as to which is the most economical cut-off, a timber curtain or concrete wall; both will give equally satisfactory results as cut-offs, as the timber sheet piles can now be placed with perfect interlocking, and their durability is guaranteed by their constant saturated condition. It becomes then solely a question of cost, which, with low-price concrete and high cost of timber, may be in favor of the former or, with values reversed, the latter may be more economical.

The placing of timber curtains in the trench needs no further detailing nor that of the concrete wall. Trenches should be three feet wide to ten feet depth, four to twenty, five to thirty, and six to forty feet depth, in order to provide room for shoring and handling of material. Concrete cut-off walls may be uniformly three feet thick; the remaining trench-space is refilled with puddle (53, L).

TABLE 9.—QUANTITIES FOR CUT-OFF WALLS IN TEN-FOOT LENGTHS.

Depth in feet.	DRIVEN CURTAINS.			TRENCHED CURTAINS.		CONCRETE WALL.	
	Timber, ft. b. m.	Spikes, lbs.	Steel, lbs.	Trenching, cub. yds.	Puddle, cub. yds.	Concrete, cub. yds.	Puddle, cub. yds.
6.....	600	60	660	7	5	7	
8.....	800	80	880	9	6	9	
10.....	1,000	100	1,100	11	7	11	
12.....	1,200	120	3,000	18	13.5	13	5
14.....	1,400	140	3,500	21	15	15.5	5.5
16.....	1,600	160	4,000	24	18	18	6
18.....	1,800	180	4,500	27	20	20	7
20.....	2,000	200	5,000	30	23	22	8
22.....	2,200	220	7,700	41	33	24	15
24.....	2,400	240	8,400	44	35	27	17
26.....	2,600	260	9,100	48	38	29	19
28.....	2,800	280	9,800	52	41	31	21
30.....	3,000	300	10,500	55	49	33	22
32.....	3,200	320	13,400	71	59	35.5	35.5
34.....	3,400	340	14,280	75	62	38	37
36.....	3,600	360	15,120	80	67	40	40
38.....	3,800	380	15,960	85	71	42	43
40.....	4,000	400	16,800	90	75	45	45

ARTICLE 56. *Foundation*.—When a sufficient area of the foundation site is safely coffered and the water removed by draining or pumping or both, the site is prepared by being levelled to a uniform plane, and all vegetable matter, roots, etc., removed; then the bearing piles are driven as per Plan 18 and, as specified in 53, H, to refusal. Piles must be driven with care; brooming of tops should be avoided; in hard driving timber *followers* should be used. In order to guard against the driving of piles

which prove too short, or prevent waste by using those which are too long, advance borings should be made by which the character of the material and thus its penetrability can be determined with certainty. In very soft soils every other longitudinal pile row should be driven at a batter leading downstream, by which additional resistance to sliding of structure will be secured, since a downstream movement would have to be accompanied by a rising upward of pile tops and thus involve lifting of the foundation walls in which they are imbedded and of the superstructure. All piles should be driven before any of the concrete is placed, to avoid possible rupture caused by vibration due to pile driving. Pile tops are cut off on a uniform horizontal plane being that of the bottom of foundation floor.

The trenching for floor walls should begin at the upstream cut-off wall, if it is a trenched structure, and only so much trench is opened as can be kept entirely free of water by pumping; the wall concrete is of x mixture and is compacted in the trench on both sides of the curtain top and covering the same. If the superstructure is to connect with the cut-off wall, as is generally the case, re-enforcing steel rods are imbedded in this cut-off concrete. The other floor walls or beams are placed likewise successively, steel rods or dowels being imbedded in them two feet centres. This concrete should not be too wet, as the soil itself will contain more or less water, and as all of it should be given considerable ramming. The top surfaces of floor walls must be left as rough as possible.

*The foundation floor* consists, as shown in Plan 18, of separate arches, longitudinal to the floor, the walls forming the skewbacks. Beginning at the upstream end, the soil between cut-off and first upstream wall is trimmed away to the arch form, and, the section being kept entirely free of water, the respective floor arch is laid of x concrete, the wall tops being first cleaned, roughened, and thoroughly wetted, and the concrete rammed into place. Along the top of each floor wall a groove is left free of concrete, one foot wide and deep, to form a connecting key for the superstructure, and, when the latter consists of transverse buttresses or partitions, similar grooves are formed in the floor transversely. In this manner the entire foundation floor is constructed. *Quantities* in such foundations for spillways of different heights are given on Diagram 12.

ARTICLE 57. *Superstructure*.—The subjects to be considered for the selection of a recommendable type are the height, length, section, character of material in river bed, flood volume to be controlled, fluctuations



of fall, floatage and ice, legal requirements, location of the power station, availability of structural material and skilled labor, and of transportation facilities to the site.

The height is fixed, generally speaking, by the available power fall and the depth of water in the river at the site. The fall is to be based upon conditions prevailing when the volume of flow is that which is to be diverted, and is represented by the total fall in the stream over the reach to be controlled *less the slope* which will prevail in the upper pool, proper weight being given to the flood conditions. The slope or *backswell* is the fall in the pond above the dam which creates the flow; this is most readily determined from the application and solution of the flow formula for a sufficient number of stream sections in the length which will be covered by the upper pool. For this purpose a contour plan of the stream valley, to the height to which the pond level is to be raised, must be available, and, assuming then section B B at some point above the dam site, the cross-section is plotted as on Plan 19, from which the

wetted perimeter is scaled .....  $P =$         feet,  
the flow area to the future pond level is computed .....  $A =$  square feet,  
and the hydraulic radius is found from  $A \div P$ . .....  $R =$

Assuming the flow volume which is to be diverted

when no water passes over the spillway as.....  $Q =$  cub. sec. ft.,  
the velocity with which it passes through the  
section ..... B B is  $V =$  ft. per sec.

The flow formula best adapted to solve the problem

is that of M. H. Bazin:.....  $R S = (a + \frac{b}{R}) V^2$ ,  
in which

$R$  is the hydraulic radius,

$S$  is the slope of the water surface,

$a$  and  $b$  are constants expressive of the retarding  
influence of  $P$ , and

$V$  is the velocity of the flow.

All the factors in this formula are known with the exception of  $S$ , and this is the value which is sought, as from it the fall in the pool's surface, which causes the flow toward the dam, is found.

" $S$ " can be taken from Diagrams 20 to 25 for the different river-bed characteristics, whether in rock, gravel and sand, or clay and sand.

According to the length of the pond and the uniformity of its prism,  $S$  is determined for the centre section of lengths of 1000 feet or more, or of such as represent approximate similarity of channel in area and shape, and the slope found for it is credited to that reach, and thus the aggregate slope or swell is determined for the entire pool until its upper terminal is reached, which will be detected by the rapid increase of  $S$ .

*Example.*—Length of pond deduced from the horizontal plane of the produced spillway crest level is 12 miles; the flow to be diverted, none passing over the spillway, is 2600 cubic second feet, the height of the dam crest above the river surface with this flow is 20 feet; the length of the spillway is 200 feet. For the first 5000 feet above the dam the pond lies between uniformly sloping banks and is of approximately uniform cross areas, the perimeter is of gravel and sand formation; section A is therefore taken midway, or 2500 feet above the dam, where

$$P = 243, \quad A = 3466, \quad R = 14.2, \quad \text{and} \quad V = 0.75,$$

$$S = \left( 0.000122 + \frac{0.0007}{14.2} \right) \frac{0.75^2}{14.2} = 0.000007;$$

the total fall in this reach of 5000 feet is therefore = 0.035 ft.

The next 3000 feet of the pond is of smaller flow area, the pond is narrower, the material the same; a section B is taken midway, or 6500 feet above the dam, where

$$P = 161, \quad A = 2500, \quad R = 15.5, \quad \text{and} \quad V = 1.0,$$

$$S = 0.000011, \text{ the fall in this reach} = 0.033 \text{ ft.}$$

Then the pond widens again for the next 4000 feet, and at mid-section C, or 10,000 feet above the dam,


$$P = 240, \quad A = 2780, \quad R = 11.6, \quad \text{and} \quad V = 1.0,$$


$$S = 0.000009, \text{ the fall in this reach therefore} = 0.036 \text{ ft.}$$

Thus for 12,000 feet of the pond the total fall or swell = 0.104 ft.


In this manner the process is continued to the head of the pond, or about twelve miles in this case. From this point up the original stream condi-




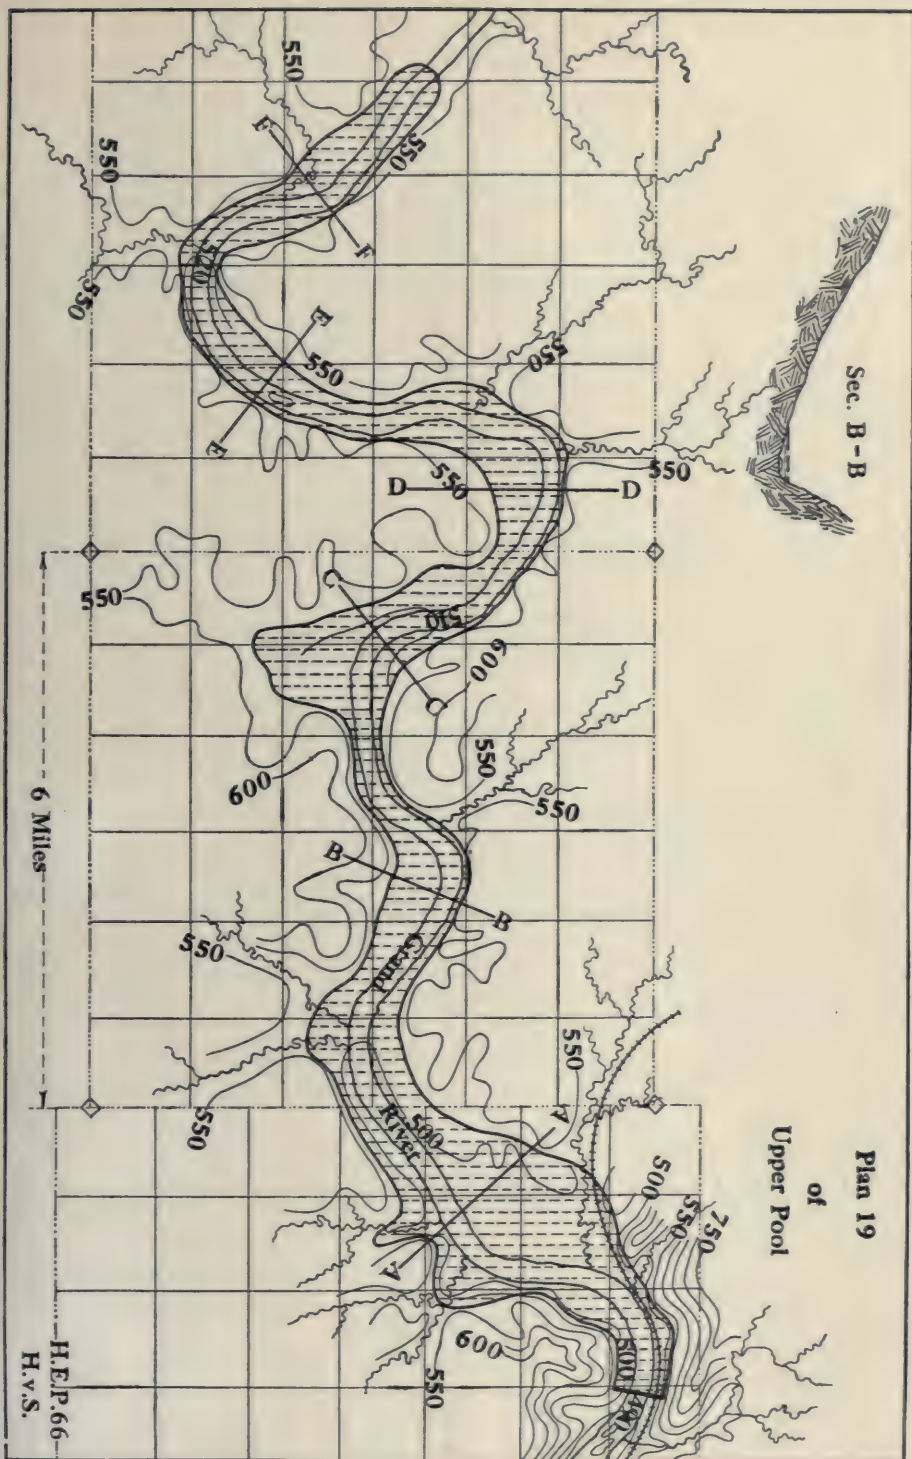

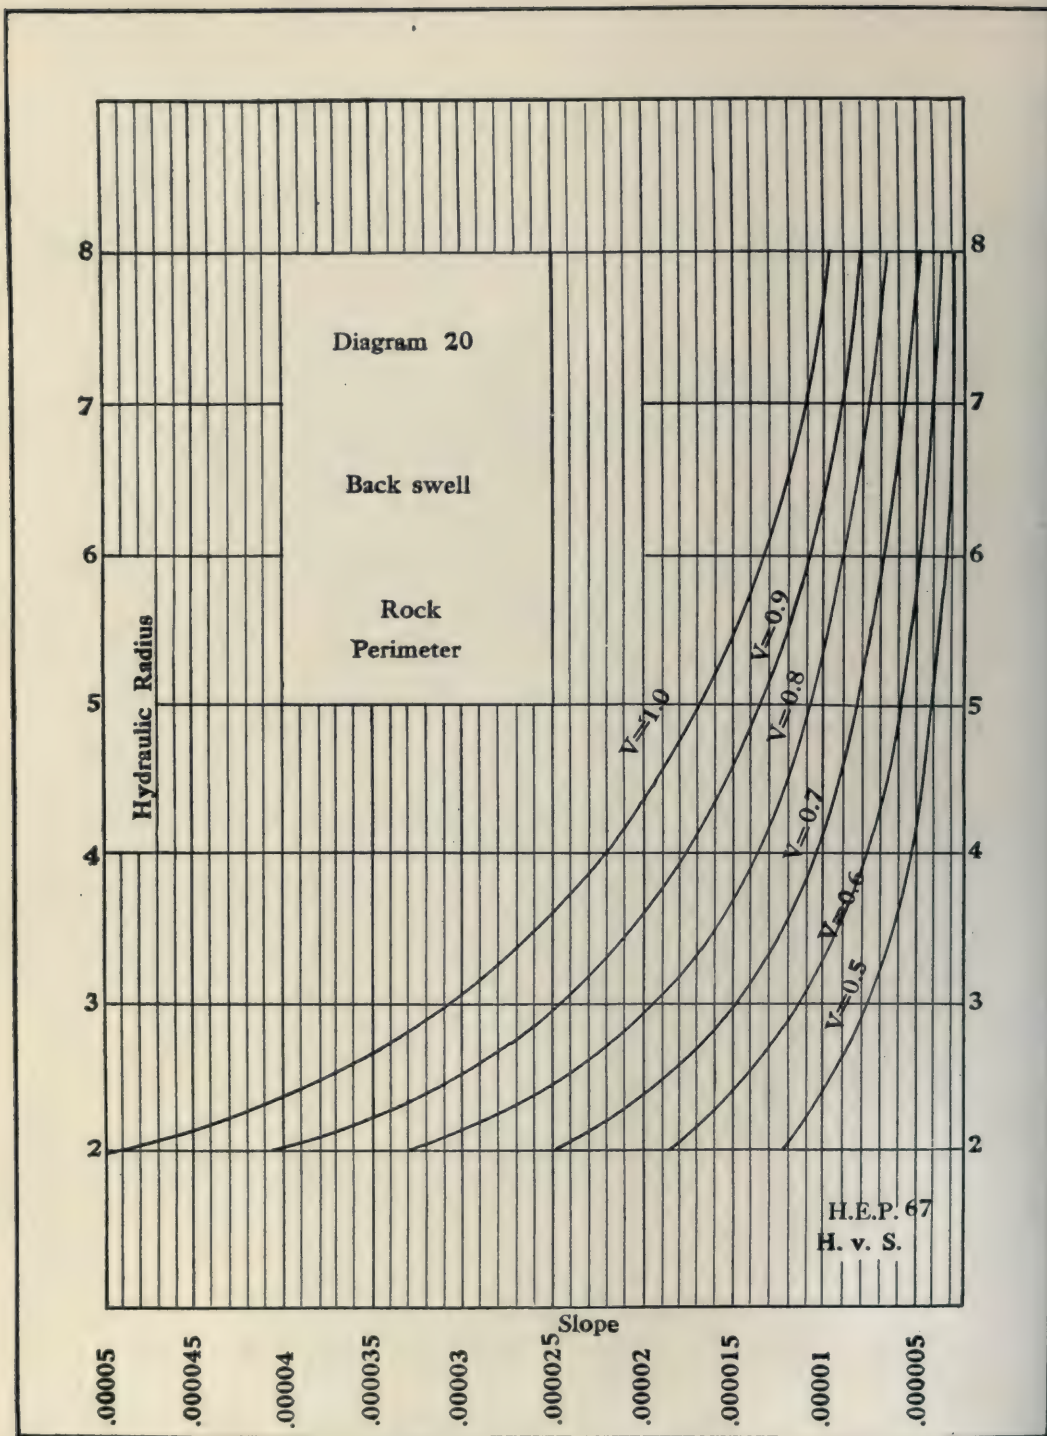





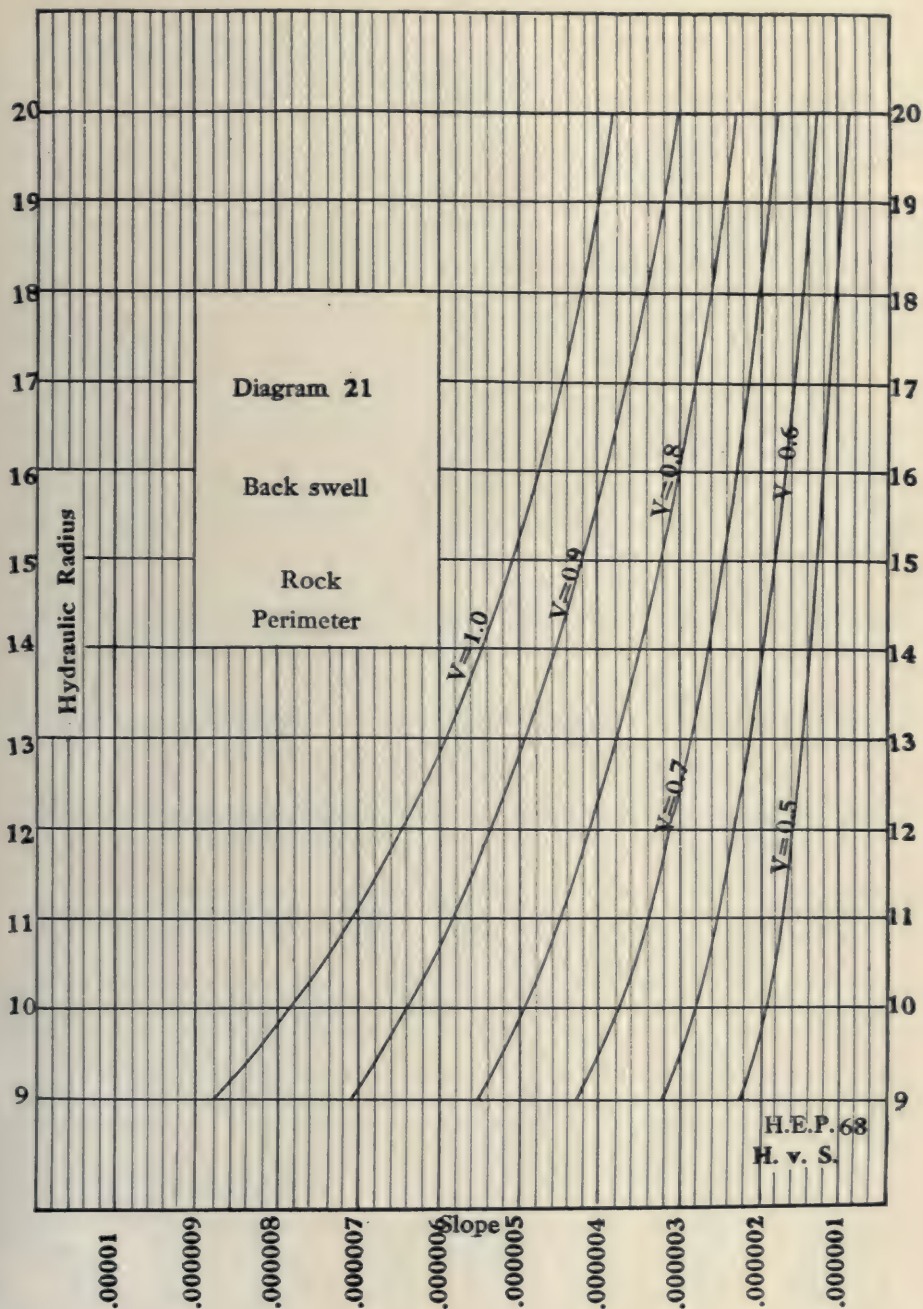

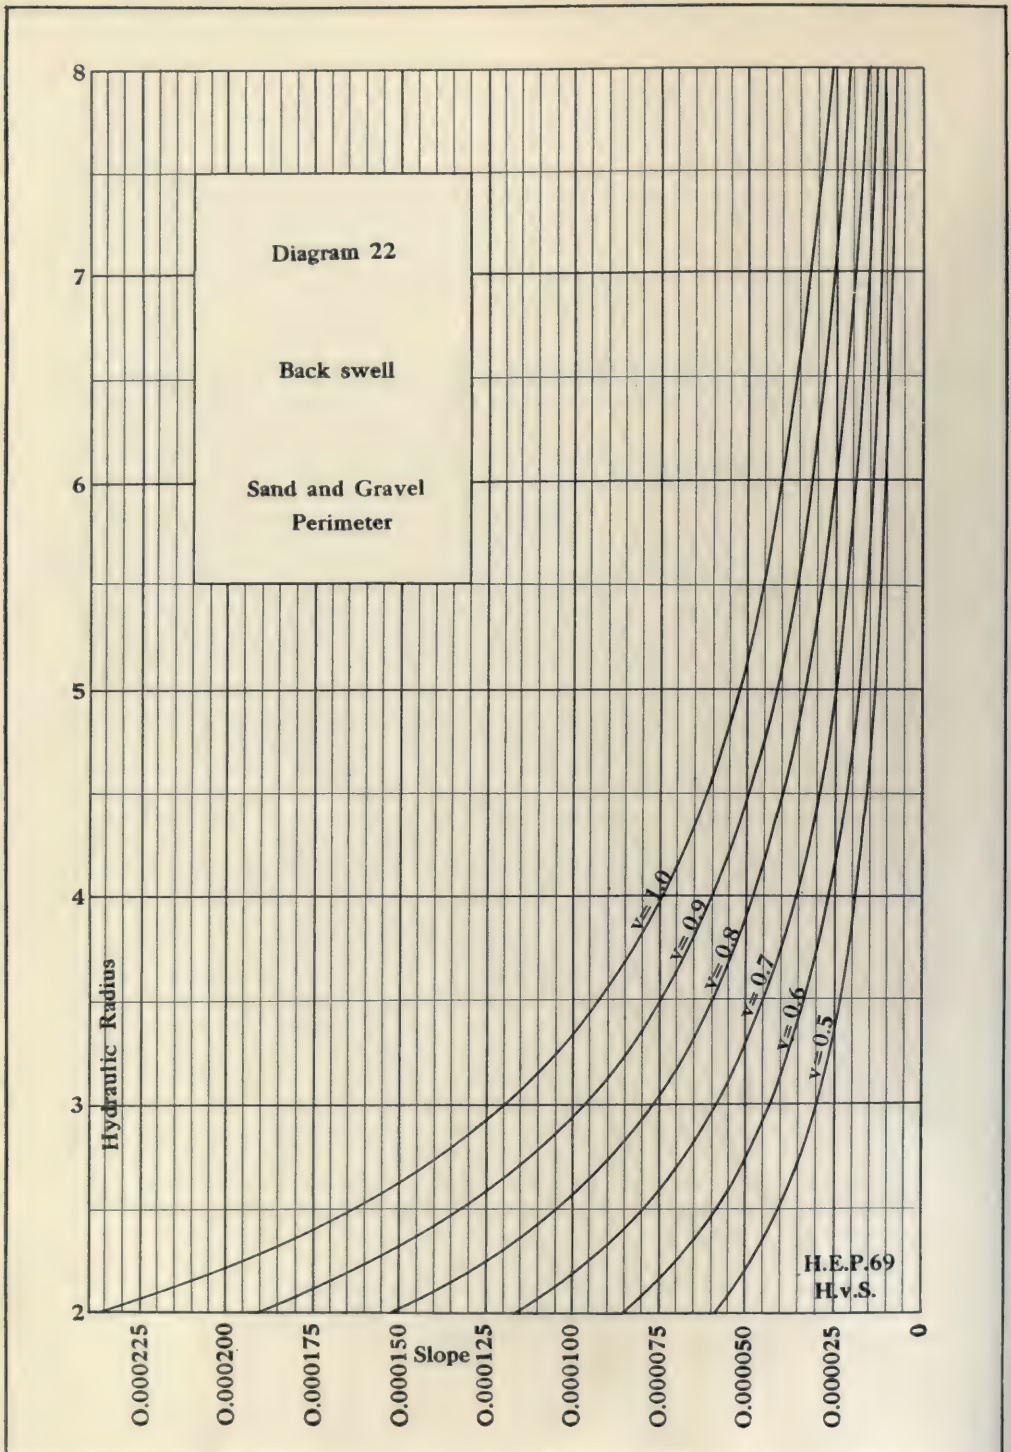




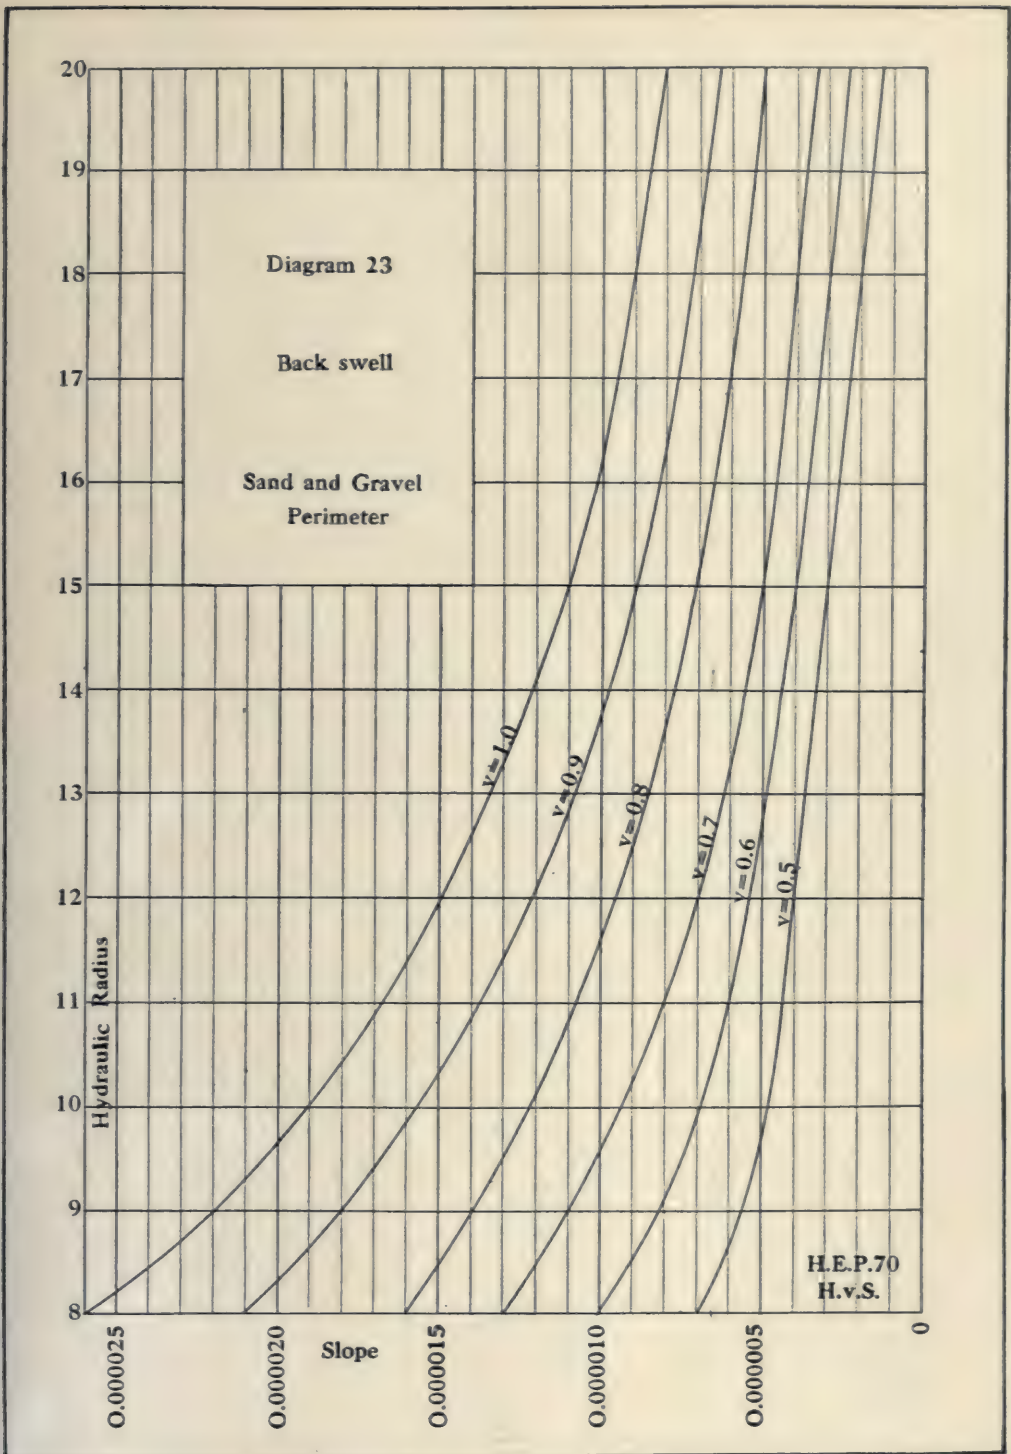

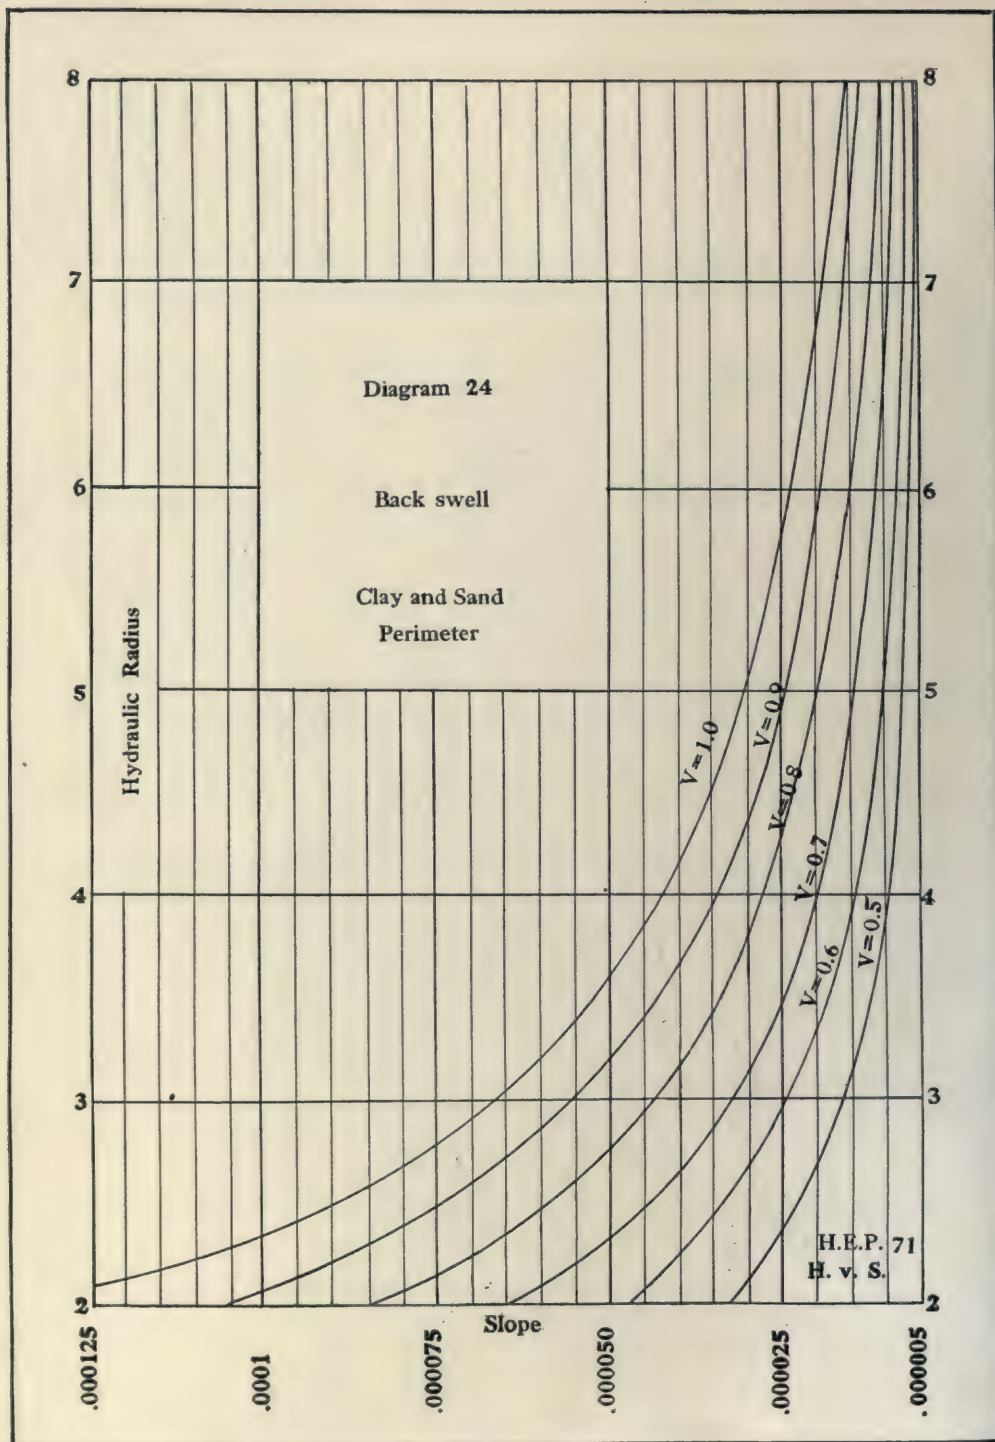



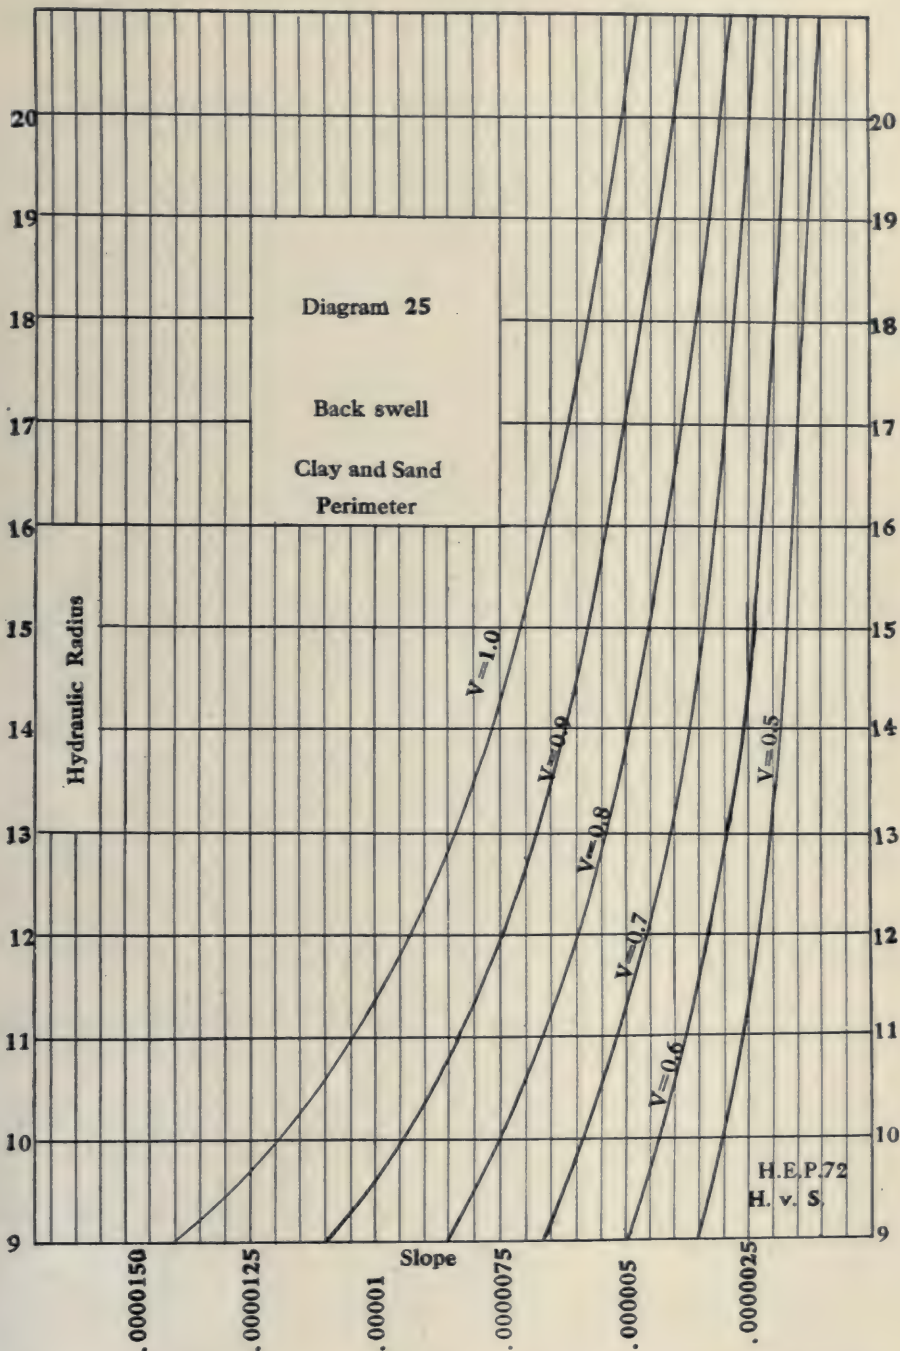

tions continue, which means that the velocity will be much greater and therefore also  $S$ ; for instance, where

$$P = 256, \quad A = 866, \quad R = 3.4, \quad \text{and} \quad V = 3.0, \quad S = 0.00085,$$

and thus the approximate head of the pond can be readily fixed.

In addition to determining the backswell for the volume of the normal flow, it must also be found for other river stages, especially for the high flow, in order that the full effect of ponding the water to a certain height at the dam may become clear.

If the flood flow is, for instance, in this case = 9600 c. sec. feet, the volume passing over the spillway is  $9600 - 2600 = 7000$  c. sec. feet, or 35 c. sec. ft. per linear foot of spillway crest, the overfall being

$$= 4.9 \text{ feet.}$$

At section A the volume of water will be increased approximately by a depth of five feet, and, assuming the banks to slope up uniformly,

$$P = 257, \quad A = 4500, \quad R = 17.9, \quad \text{and} \quad V = 2.13, \quad S = 0.000032, \\ \text{and the fall in first reach} = 0.160;$$

at section B, under like conditions and assumptions,

$$P = 165, \quad A = 3200, \quad R = 19.4, \quad \text{and} \quad V = 3.0, \quad S = 0.000073, \\ \text{and the fall in this second portion of pond} = 0.219;$$

at section C, again assuming uniform enlargement of area,

$$P = 258, \quad A = 3900, \quad R = 15.1, \quad \text{and} \quad V = 2.46, \quad S = 0.000067, \\ \text{and the fall in this reach} = 0.264;$$

$$\text{therefore the total fall in the 12,000 feet of pond} = 0.643 \\ \text{as against 0.104 during the normal flow stage.}$$

Carrying this investigation to the head of the pond, assumed for normal stage, the flood rise at that location will become apparent, and this, compared with the known flood height at that point before the dam is erected, will show what increase will be caused by such a dam.

It is the author's experience that this subject of backswell receives generally but scanty attention, and often is altogether ignored, in con-

sequence of which the first flood brings in its wake numerous damage claims for inundations of lands, highways, and railroad tracks, while bridges and buildings may be endangered, all of which might have been avoided had a proper knowledge of the extent of the backswell been secured before the dam was constructed, as considerable control of it can be secured by its proper design, as will appear later in this discussion. At any rate, the consideration of the height of the spillway is incomplete unless the backswell is fully determined.

ARTICLE 58.—*The length of the spillway* is primarily that which is required to pass the maximum flood flow within the limit of a certain height of overfall over the spillway crest, and this height will be largely determined by the elevations of the natural banks or of the embankments to be erected and by the volume of the flood flow; aside from this consideration the spillway should be as short as possible. However, in alluvial formations it will generally be most advisable to make the spillway length equal to the width of the stream bed, as contracting this is always fraught with danger which will have to be counteracted by costly abutment and embankment structures.

The flood flow is found from a rating table of the river's discharge compiled from flow measurements (Art. 41) or from flow computations (Art. 44); from this the volume to be diverted for the power development is deducted, the residue is to be passed over the spillway. The maximum overfall height having been determined, the weir discharge for this height per foot length is found (Diagram 2), the total volume to be passed is divided by this, and the quotient represents the required spillway length.

*Example.*

Flood flow assumed at .....	= 9000 cub. sec. ft.
Diverted flow assumed at .....	= 1000 cub. sec. ft.
Volume to be passed .....	= 8000 cub. sec. ft.
Maximum overfall height .....	= 3.5 feet
Spillway discharge per foot of length .....	= 21.5 cub. sec. ft.
Spillway length required .....	$\frac{8000}{21.5} = 372$ feet.

As the spillway will be provided with waste flumes, by the aid of which the pond can be drawn down, their discharge capacity will be available for additional flood passage, and they therefore represent a safety factor in this respect.



ARTICLE 59.—*The amount of pressure and resistance is the first subject to be considered when the spillway section is to be designed. The pressure P of a column of water restrained in its natural passage is represented by the product of the pressure area A' and the weight of water W; the area factors are height of water column H and the length of pressed surface.*

In Fig. 20 S is vertical,  $H = S$ , ordinates and abscissæ represent factors of pressure area A' which intersect in pressure plane a b.

$$A' = S \text{ (base)} \times \frac{H}{2} \text{ (half altitude)} = \frac{H^2}{2}.$$

When the water level is below the top of the pressed surface, the pressure area decreases in like ratio, both S and H being reduced by  $h_1$ , or

$$H = S - h_1 \text{ and } A' = \frac{1}{2} (S - h)^2.$$

When the water stands above the pressed surface, the pressure area becomes a trapezoid.






In Fig. 21 S is vertical,  $S = H - h$ ,

$$\begin{aligned} A' &= H - h \text{ (base)} \times \frac{H + h}{2} \text{ (altitude)} \\ &= \frac{H^2 - h^2}{2}; \end{aligned}$$

or expressed in S

$$\begin{aligned} A' &= S \times \frac{S + h + h}{2} \\ &= \frac{S^2}{2} + S h. \end{aligned}$$

The same result is illustrated geometrically in Fig. 22, where triangle b g l represents area due to  $H - h$  and S. Trapezoid b c f l is area when  $H = S + h = \frac{S^2}{2} + S h$ , by which the rectangle b c k l = S h which = parallelogram b c f g, is added to triangle b g l. Or for expression in values of H,  $A' = \frac{H^2 - h^2}{2}$ , being the trapezoid b c f l which consists of half the square a e f l =  $\frac{H^2}{2}$  less half the square a b c d =  $\frac{h^2}{2}$ .

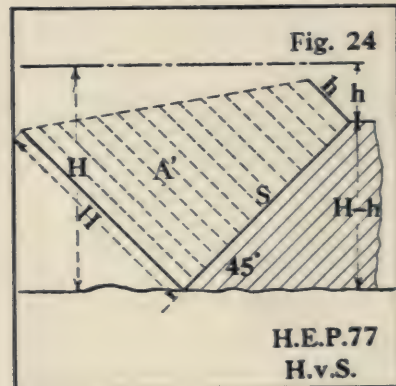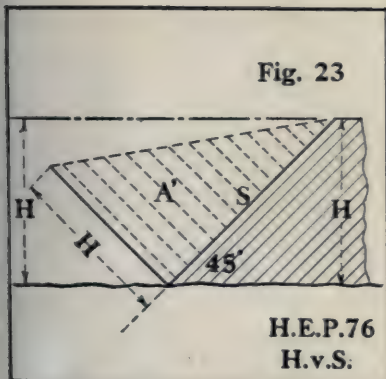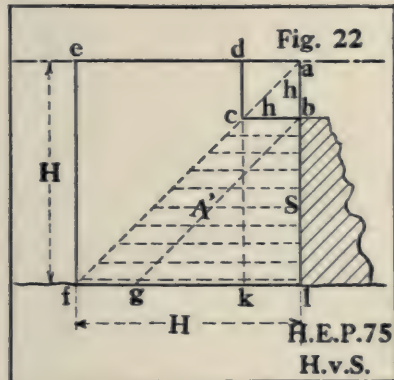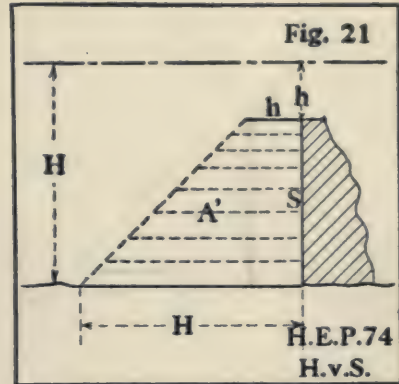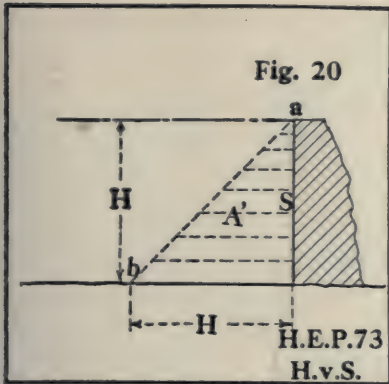

The same pressure area expressions apply when the pressed surface is inclined, but the values vary with the inclination of S.

In Fig. 23 A' is a triangle, S is base, H is altitude;  $A' = \frac{SH}{2}$ .

In Fig. 24 A' is a trapezoid, S is base,  $\frac{H+h}{2}$  is altitude;  $A' = S \times \frac{H+h}{2}$ .

The product of the pressure area and the weight of water (62.5 pounds per cubic foot) is the pressure "P" against the surface, which when the latter is vertical and

$$H = S \quad P = 31.25 H^2 \dots\dots\dots F. 1$$

$$H = S - h \quad P = 31.25 (S - h_1)^2 \dots\dots\dots F. 2$$

$$H = S + h \quad P = 31.25 (H^2 - h^2) \dots\dots\dots F. 3$$

When S is inclined and

$$H = \frac{S}{\sqrt{2}} \quad P = 31.25 H S \dots\dots\dots F. 4$$

$$H = S - h_1 \sqrt{2} \quad P = 31.25 H (S - h_1 \sqrt{2}) \dots\dots\dots F. 5$$

$$H = \frac{S}{\sqrt{2}} + h \quad P = 31.25 S (H + h) \dots\dots\dots F. 6$$

The intensity of the pressure of any volume is concentrated in its gravity plane passing at right angles to the pressed surface through its *centre of gravity G*.

In a triangle lines drawn from apex to bisect opposite sides are gravity lines, and the centre of gravity lies at their intersection and one-third of the altitude above the base.

In a trapezoid the centre of gravity is found as in Fig. 25 by extending the base lines in opposite directions to equal their sum, connecting the ends of these extensions, d i, and connecting bisects of the base lines as b f; the intersection of d i and b f marks the centre of gravity.


The height of the centre of gravity above the base g e =

$$\frac{2ac + ge}{ac + ge} \times \frac{h'}{3} \quad (h' = \text{altitude of trapezoid}).$$

When the pressure acts upon a body, its force is expressed by the product of its intensity and the *lever arm* through which this pressure is applied.




Fig. 25

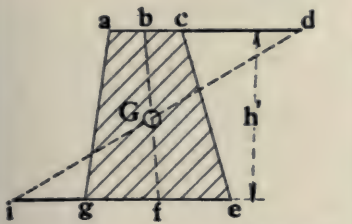


H.E.P.78  
H.v.S.

Fig. 26

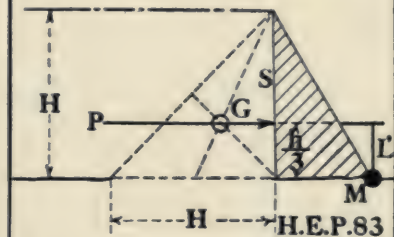


H.E.P.83  
H.v.S.

Fig. 27

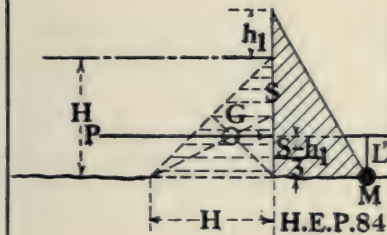


H.E.P.84  
H.v.S.

Fig. 28

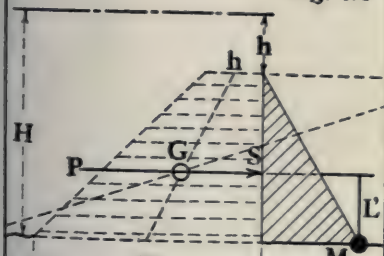

H.E.P.85  
H.v.S.

Fig. 29

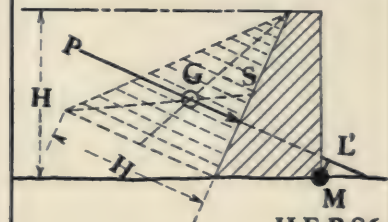

H.E.P.86  
H.v.S.

The lever arm  $L$  is the vertical distance from the pressure line to the turning point  $M$  of the pressed body.

In Fig. 26  $S$  is vertical,  $A'$  is triangle,  $S = H$ ,  $G = \frac{H}{3}$ , and, as the pressure passes through  $G$  in a direction vertical to  $S$ ,  $L' = \frac{H}{3}$ , and the dynamic force  $MP = \frac{PH}{3}$ , and of water  $MP = 10.417, H^3 \dots F. 7$

In Fig. 27  $S$  is vertical,  $H = S - h_1$ ,  $L' = \frac{S - h_1}{3}$ ,

$$MP = 10.417 (S - h_1)^3 \dots F. 8$$

In Fig. 28  $S$  is vertical,  $H = S + h$ ,  $L' = \frac{H + 2h}{H + h} \times \frac{S}{3}$

$$MP = 10.417 (H^3 - 3Hh^2 + 2h^3) \dots F. 9$$

Diagrams 26 to 29 give  $MP$  for different values of  $H$  and  $h$ .

In Fig. 29  $S$  is inclined; the pressure acts vertical to  $S$  at  $M$  through the lever arm  $L'$ , the value of which varies with inclination of  $S$ .

In Fig. 30  $P$  intersects  $M$  and  $L$ , therefore becomes zero, and as  $S$  becomes more inclined  $P$  intersects the base of the body. For the practical solution of the dynamic forces acting on inclined surfaces the pressure is analyzed into its horizontal and vertical components,  $hP$  and  $vP$ .

In Fig. 31  $S$  is inclined  $45^\circ$  and  $= H\sqrt{2}$ ,  $P$  is the total pressure acting perpendicular to  $S$ ;  $a b c d$  is a square of which  $P$  is the diagonal, and  $hP = \frac{P}{\sqrt{2}}$ ,  $S = H\sqrt{2}$ , from F. 4,  $P = 31.25 SH$  and  $hP = \frac{31.25 SH}{\sqrt{2}}$ . Inserting value of  $S$ ,  $= \frac{31.25 H^2 \sqrt{2}}{\sqrt{2}} = 31.25 H^2$ , which is the same as  $P$  in F. 1, when  $S$  is vertical and  $= H$ .

The horizontal component of  $P$  equals  $P$  in Fs. 1, 2, and 3 as per height of water, no matter what the inclination of  $S$  is. The vertical component of  $P$  is the weight of the water area overlying the base  $e f$ .


$MP$  for inclined surfaces is the product of  $hP$  and  $L$ , and therefore the same as expressed in Fs. 7, 8, and 9, to wit: when

$$H = \frac{S}{\sqrt{2}} \quad MP = 10.417 H^3 \dots F. 7$$


$$H = S - h_1 \sqrt{2} \quad MP = 10.417 (S - h_1)^3 \dots F. 8$$


$$H = \frac{S}{\sqrt{2}} + h \quad MP = 10.417 (H^3 - 3Hh^2 + 2h^3) \dots F. 9$$


When a structure is to restrain water,  $P$  and  $MP$  must not only be counteracted but resisted by greater forces, otherwise the effect of these

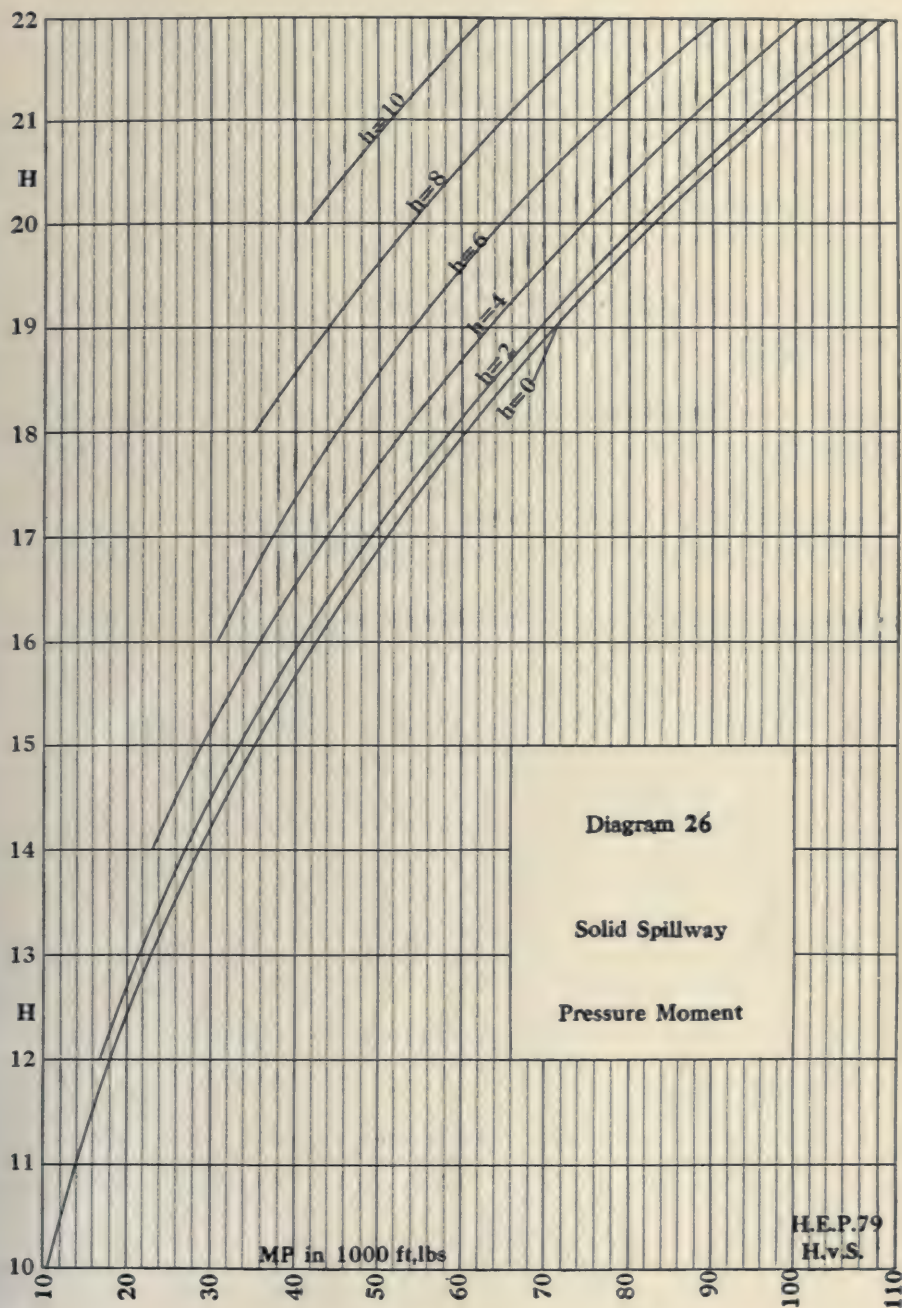



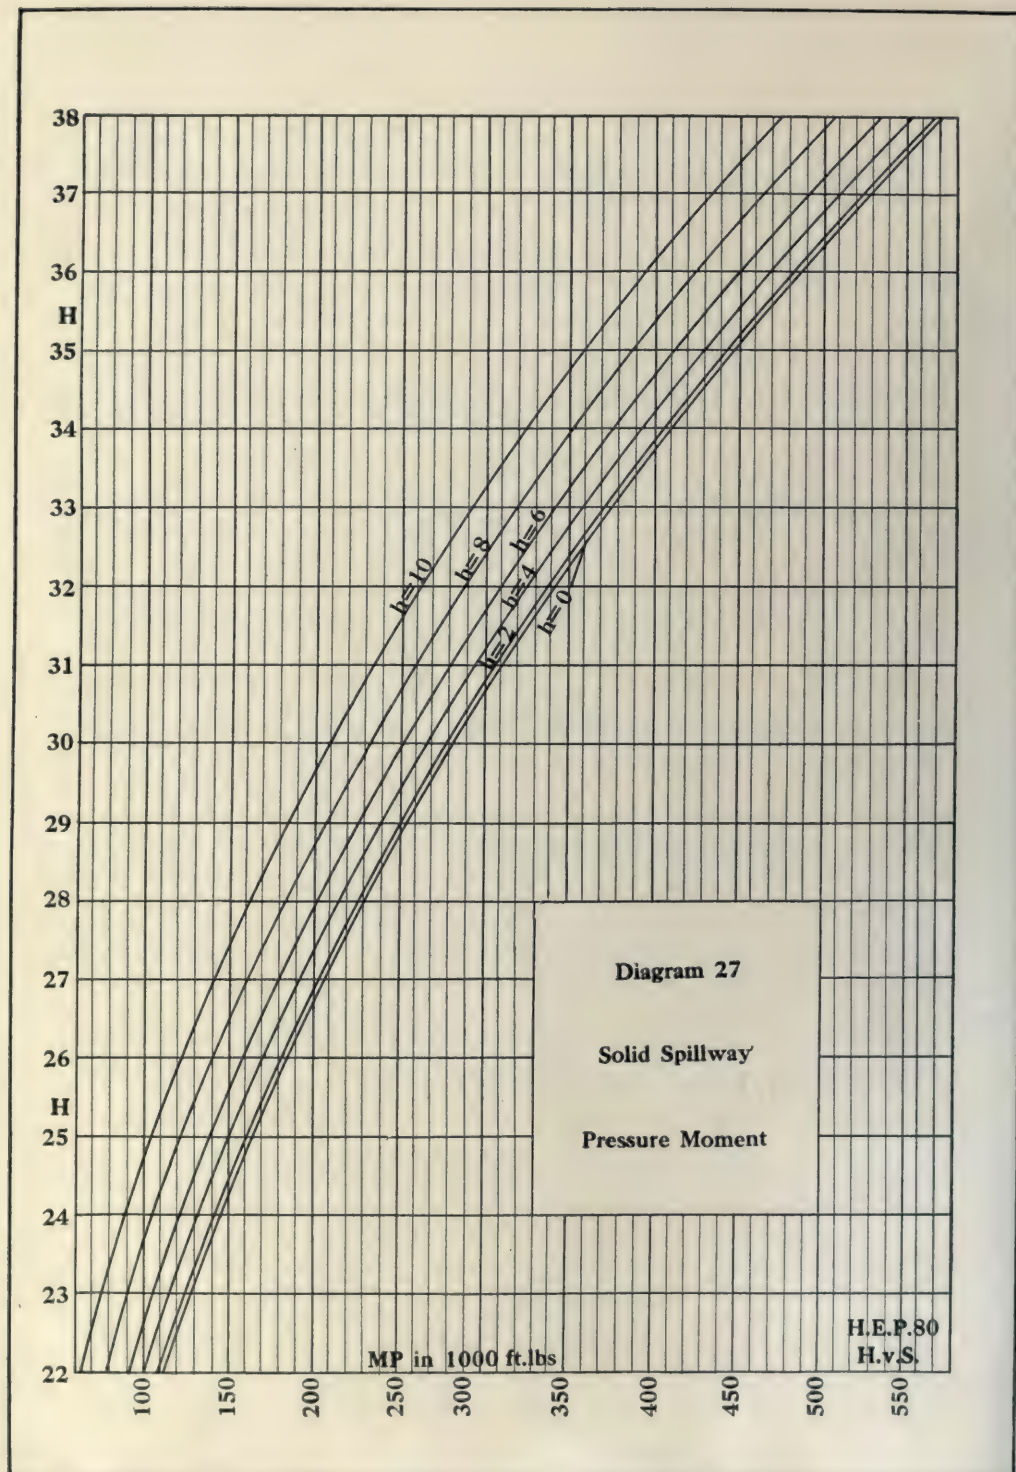


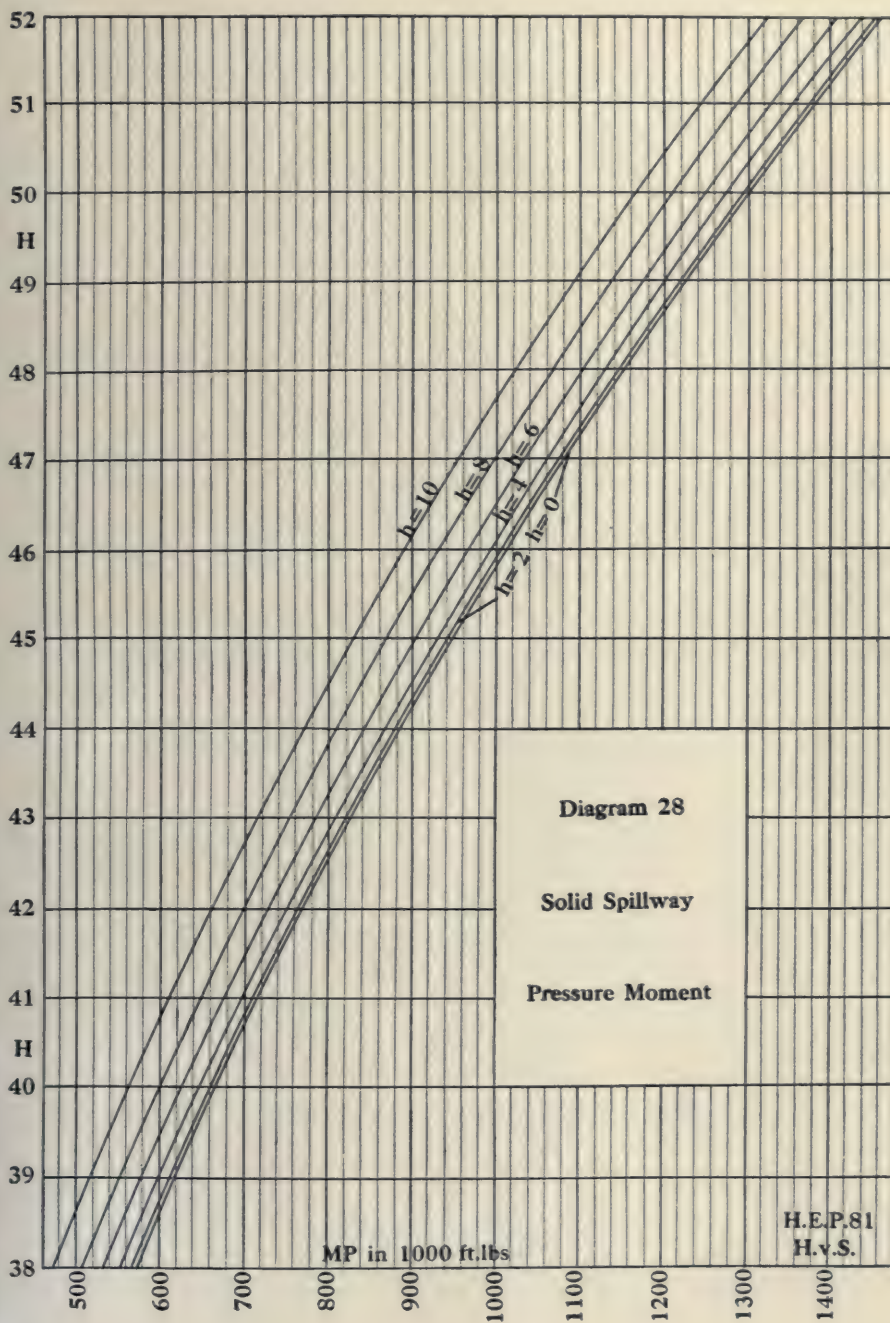


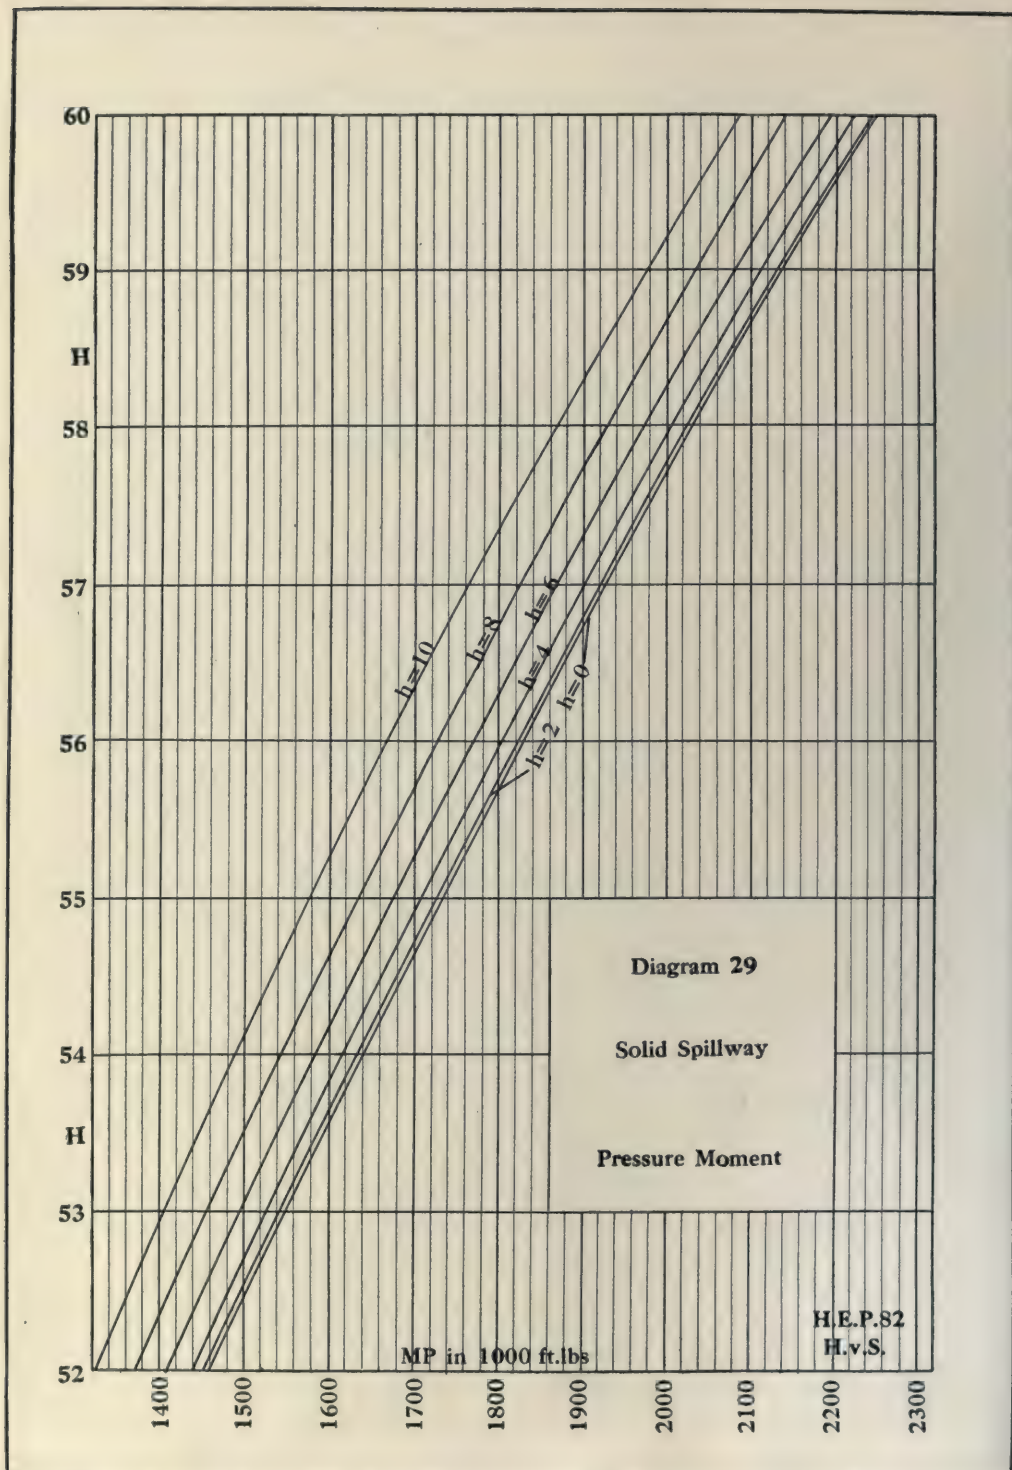



will be to displace the structure by sliding it along the base or any horizontal plane, by overturning it around its toe, crushing its material, or rupturing the structure.

ARTICLE 60.—*Sliding* would be caused by  $hP$ , which must be met by the effective weight  $W$  of the resisting body, being the product of its material weight, plus the vertical water pressure  $vP$  on its horizontal projection, and the friction coefficient " $f$ " developed at the horizontal joints and at the base between the structure and the material on which it rests. When the structure is a homogeneous, impervious mass, its material weight is the product of its area  $A$  and the unit weight  $W$  of the substance composing it, which is not diminished by standing in water; if water

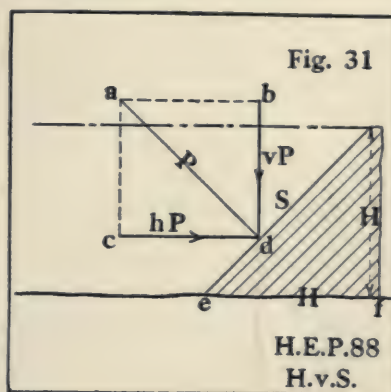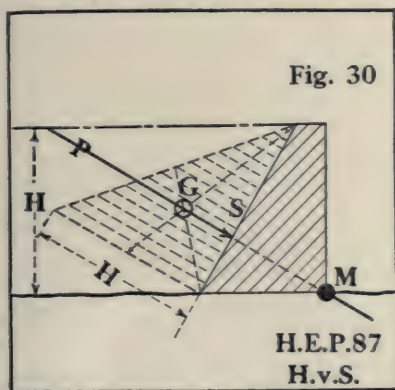

enters under its base and remains there confined, an upward pressure is created which is equal to the product of the area of the base, the depth of its centre of gravity, and 62.5 pounds; if it freely escapes from under the base, no such upward pressure exists. The friction coefficient  $f$  is the proportion of ultimate friction between two masses to the perpendicular pressure,—i.e., the weight of the upper. Ex.: if it requires a force of 600 pounds to move a 1000 pound stone resting upon a horizontal surface,  $f = \frac{600}{1000} = 0.60$ ; when surfaces are connected in any manner, resistance to sliding is represented by the cohesion of the bond or connection which is added to the frictional resistance.

In the designs herein to be considered for spillways the structures are assumed to consist of a homogeneous, impervious mass; water is prevented from entering beneath the base; the foundation is connected to the underlying material and the superstructure is bonded to the foundation.

Resistance to sliding is theoretically found in the weight of the superstructure plus the vertical water pressure; but in practice it is recommendable to ignore the latter, excepting in those designs which are specifically based upon gravity theory, that is when the pressed surface is inclined from the vertical. As a general rule, therefore, the weight of the structure is to equal the horizontal component of the water pressure,

$$A w = \text{or} > h P.$$

ARTICLE 61.—*Overturning* of structure is caused by the dynamic force of the horizontal component of the water pressure,  $h P L'$ , and is theoretically resisted by the moment of weight,  $M W$ , being the sum of the products of weight of structure into its lever arm,  $A w L$ , and of the vertical water pressure into its lever arm,  $v P L''$ , or

$$M W = A w L + v P L'',$$

provided the resultant of these two forces cuts the base of the structure.

In Fig. 32  $G$  is the centre of gravity of the structure,  $M$  its fulcrum or toe,  $O$  is the locus of the gravity plane in the base of the structure,  $O M = L$  the lever arm through which  $W$  acts.

In Fig. 33  $G O = L'$  is the lever arm of  $P$  or  $h P$ ,  $O M = L$  is the lever arm of  $A w$ ,  $N M = L''$  is the lever arm of  $v P$ ,  $G P = P$  or  $h P$ ,  $G W = A w$  or  $A w + v P$ ,  $G M' = R$ , the resultant of  $h P$  and  $G W$ ,  $O' =$  the locus of the resultant in the base of the structure.





When the pressed surface is inclined,  $v P$  is credited to  $W$  as adding to the resistance against overturning, the structure being of a gravity design.

The resultant must always fall into the middle third of the base, for reasons given in next article.

Resisting sliding and overturning guarantees stability of position by  $A w L = \text{or} > h P L'$  and  $O'$  falling in middle third of the base.

ARTICLE 62.—*The crushing or rupturing* of the structure may be caused by the concentration of excessive pressures on parts of it.

In Fig. 34 the weight  $W$  of the rectangular structure  $c d e f$  acts in the gravity plane on the centre of the base  $B$  and is transmitted to the material on which the structure rests. The pressure due to  $W$  is represented by the reaction rectangle  $e f i j = W$ , in which the ordinates  $P, P'$ , etc., represent the pressure and its distribution in magnitude as per length of ordinates. If the material beneath the structure does not yield

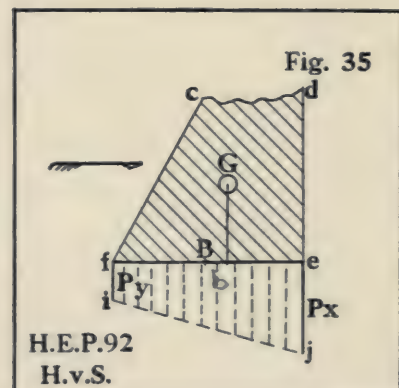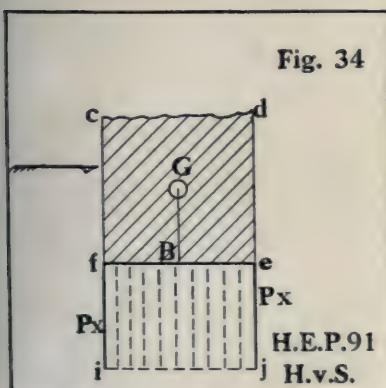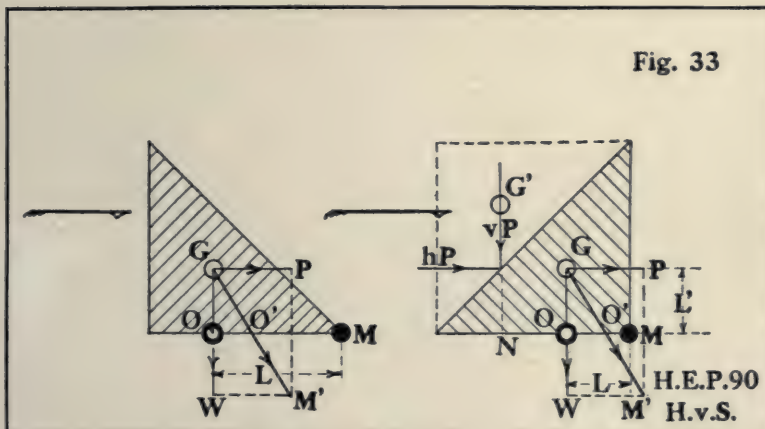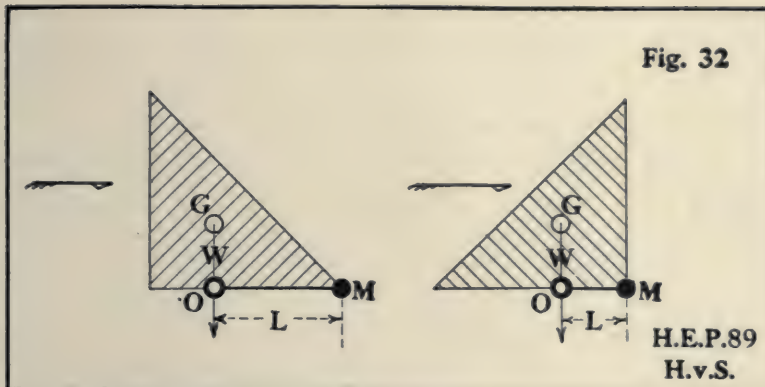



to these pressures, they react on the structure, and the resistance therein developed must be sufficient to safeguard the material against crushing.

Rigidity of foundation is herein presupposed, and therefore the pressures tend to crush the structure's mass.

In Fig. 35 the structure is a trapezoid  $c d e f$ ,  $W$  acts on the base  $B$  at some point near  $e = \frac{B}{2} - b$ ; the pressure is represented by the reaction trapezoid  $e f i j$ ,

$$\text{or } \frac{P_x + P_y}{2} B = W.$$

The pressure is not uniformly distributed over the base, but is maximum at the end nearest to the gravity plane and minimum at the other, its ratio between these being proportional. The mean pressure ordinate lies in the gravity plane produced, because the sums of pressures on both sides of this plane are equal as represented by reaction diagram; the distribution of the pressures therefore depends upon the locus of the gravity plane in the base  $B$  and essentially on its distance from the centre of  $B$ .

Fig. 36 represents the reaction trapezoid  $e f i j$ , the locus of the gravity plane is at  $O$  and its distance from the centre of the base  $B = b$ , which is determinable from the formula for distance of centre of gravity above the base of a trapezoid, to wit:

$$e O = y = \frac{P + 2 P'}{P + P'} \times \frac{B}{3} \quad (P \text{ and } P' = P_x \text{ and } P_y);$$

substituting for  $P'$  its expression from

$$\frac{P + P'}{2} \times B = W,$$

$$y = \left[ \left( P + \frac{4 W}{B} - 2 P \right) \div \left( P + \frac{2 W}{B} - P \right) \right] \frac{B}{3};$$

solving for  $P$ ,



$$P = \frac{4 W}{B} - \frac{6 W y}{B^2}, \text{ inserting } y = \frac{B}{2} - b,$$

$$P = \frac{W}{B} + \frac{6 W b}{B^2}, \text{ assigning to "b" a value of } 0.1 B,$$

$$P = \frac{1.6 W}{B}, \text{ and placing this in } \frac{P + P'}{2} B = W,$$

$$P' = \frac{0.4 W}{B}, \text{ which are the expressions for the maximum and}$$

minimum pressure ordinates in the reaction trapezoid on the base of structure or on any horizontal plane of the structure,  $W$  representing the superposed weight. When  $b$  is a function of the locus of resultant of total pressures against the structure,  $P$ ,  $P'$ , etc., are expressions of total pressures due to structure's weight and of pressure moment of water column restrained by the structure.

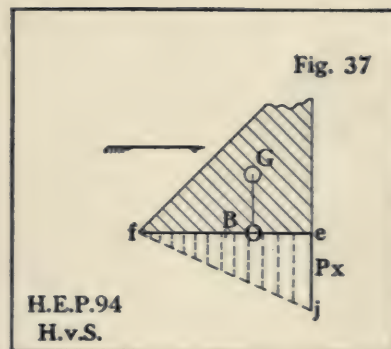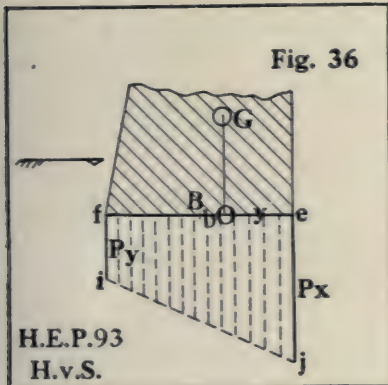


From Fig. 37 it is evident that the distance between the locus of resultant and the centre of the base, " $b$ ", controls the distribution of the pressure.

$$\text{When } b \text{ is } = \frac{B}{6}, P = \frac{2 W}{B} \text{ and } P' = \text{zero},$$

the pressure distribution is then represented by the triangle  $efj$  and the maximum,  $P$ , is double the mean pressure. This condition represents the limit within which the pressure strains are met by compression in the structure; any further moving of  $O$  from the centre of the base, or any increase of  $b$  beyond  $\frac{B}{6}$ , creates tension in the superstructure.

In Fig. 38  $b$  exceeds  $\frac{B}{6}$ , the reaction forces are represented by a positive and negative triangle, the latter represents tension developed at the base of the structure, by which the pressure theories heretofore discussed undergo a complete change.

This condition prevails, therefore, whenever  $b$  exceeds  $\frac{B}{6}$ , and the structure may then be ruptured in the portion where tension stresses are developed. Safety against crushing must therefore be secured by so proportioning the section that the maximum pressure  $P$  is within the limits of the strength of the material, while the pressure resultant  $R$  must fall in the middle third of any horizontal joint and of the base.

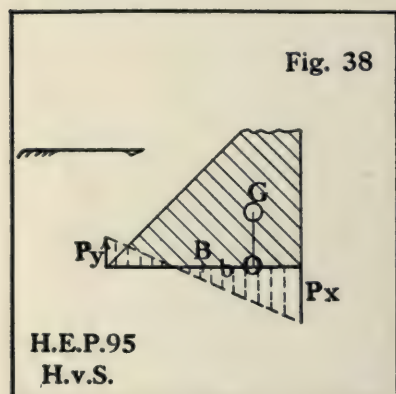

Upon these theories the spillway design must be based, the desideratum being the most economical section in area which meets the requirements, guaranteeing stability of position and safety of structure, which practically resolves itself into obtaining a value for  $M W$  which exceeds  $M P$  by some margin called the safety factor,  $S f$ .

ARTICLE 63.—What a *safety factor* should be must be decided for each case from those conditions which are likely to become important factors in developing the resistance capacity of the structure and those which may tax it.

The character of the foundation is one of these important elements, no matter what the spillway section is. It will be appreciated from the presentation of the stability theories that, with a foundation lacking in rigidity, several of the important theoretical deductions become unreliable in fact, as stated; preventing water from entering beneath structure and placing it on an unyielding mass are essential in theorizing from causes to effects.

When set upon a hard rock ledge and securely keyed into it, the structure may be regarded as having become a part of it, and it will develop its resistances to the fullest capacity. This cannot be expected in alluvial locations; water penetration can be guarded against efficiently



by proper cut-off construction, and rigidity may be obtained by a correctly planned pile-bearing foundation; but, after all, the responsibility is merely transferred to the substance in which the piles stand. In one case in the author's experience the underlying material, to the depth of fifty feet, consisting of clay and sand, bodily moved several inches downstream; these conditions, therefore, when compared with rock location, call for fundamental increase of obtainable safety.

The abutments may enhance the spillway's resistance; when these are natural rock banks, the structure, unless of considerable length, gains from them greater security than from abutments constructed in or against alluvial banks, not merely because there is less possibility of water finding a way around them, which should be absolutely guarded against, but because of the rigidity afforded by the natural bulwarks.

The height of overflow is an important condition; though fully credited in the respective design in accord with sound theory, it is nevertheless obvious that the larger the natural forces the greater the possibilities of failures. In general high overfalls are best avoided, but, where they must be reckoned with, the safety factor should be prudently adapted.

Prevalence of trees and logs passing over spillway must be met by an increase in section over that normally required. In northern latitudes heavy ice is likely to form and subject the structure to abnormal thrust which finds no proper resistance factor in the theoretical design, or ice may gorge upstream of the spillway during the spring break-up, as occurred during the last winter in the Alleghany and Monongahela rivers and brought destruction to several dams.

And finally the height of the spillway itself has a most important place in this category. High dams have been constructed a century or more; not so, however, with spillways; designing a structure a hundred feet or higher over which large volumes of water are pouring with consequential shocks of the leap of a Niagara is quite a problem apart from that of a dam of similar height restraining a pond of quiet water. It would be a serious fallacy to lay down a rule of designing spillways of any and all heights with a fixed safety factor of two or whatever measure.

It is a good enough business axiom to apportion the insurance to the probable loss, and this has its place here; when the failure of a spillway is likely to work great destruction to property and, perhaps, of human life, the possibility of such a happening should be considered sufficient reason for an increase of the safety factor.

The following is suggested as a basis for *determination of the safety factor*:

1. For spillways founded on rock ledge with natural rock abutments .....  $S f = 2.00$
2. For spillways founded on rock ledge with constructed abutments.....  $S f = 2.25$
3. For spillways founded on alluvial material with constructed abutments ...  $S f = 2.50$
4. For overfall in excess of 0.20 of spillway height add per foot of such excess to above 0.10
5. For each five feet of height of spillway in excess of 50 feet add to above ..... 0.10
6. When failure would cause great destruction add to above..... 0.25

*Example.*—For a spillway 40 feet high, founded on alluvial material, with maximum overfall of 10 feet, and not in close proximity (5 miles) to any settlement, the safety factor should be taken at  $2.5 + 0.2 = 2.70$ , or a spillway 65 feet high, on rock bed, with constructed abutments and a maximum overfall of 8 feet, should be designed with a safety factor of  $2.25 + 0.30 = 2.55$ .


ARTICLE 64.—Having determined the height of the spillway, the maximum overfall, and the safety factor, *the theoretical design* is worked out, and by finding the smallest section in area in which the resultant falls in the middle third of the base and  $M W = M P \times S f$ , the other stability requirements will be satisfied until certain limits of height are reached, as will appear in the further discussion.

Fig. 39 represents sections of an equilateral triangle, the perpendicular being the upstream or pressed surface: condition 1, without water pressure,—i.e., when the pond above the spillway is drawn down; condition 2, when the water stands at the top, representative of the low stage, all the flow being diverted to the power station; condition 3, with normal overflow; and condition 4, with highest overflow under which the stability requirements are satisfied. The sections are 15 feet high; their material weight is taken at 140 pounds per cubic foot; the areas contain 112.5 square feet; the weights are expressed in short tons, the pressure ordinates in pounds.

- Sec. I. No water pressure,  $W = 7.875$ ,  $b = 2.5 = \frac{B}{6}$ , max. pressure on the base = 2100 lbs. at the upstream end.
- Sec. II. Water at the top of the section,  $M W = 78.75$ ,  $M P = 17.5$ ,  $b = 0.28$ ; the max. pressure on the base = 1274 lbs.
- Sec. III. Water stands 3.75 feet over the section,  $M W = 78.75$ ,  $M P = 31.6$ ,  $b = 1.5$ , the max. pressure on the base = 1940 lbs.
- Sec. IV. The water stands 6.5 feet over the section,  $M W = 78.75$ ,  $M P = 40.0$ ,  $b = 2.5 = \frac{B}{6}$ , max. pressure on the base = 2800 lbs.



Fig. 39

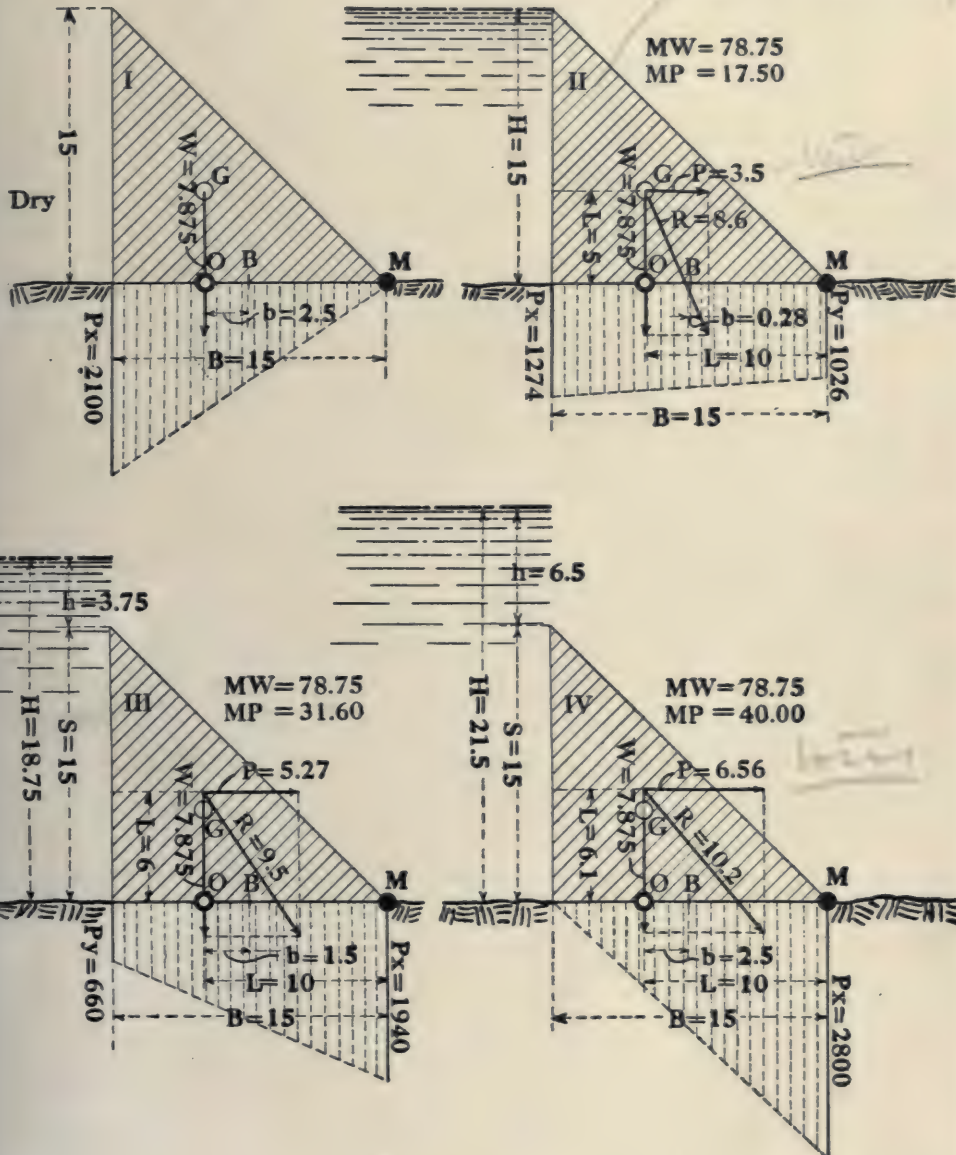

H.E.P.96  
H.v.S.



These are representative of the fluctuating forces to which a spill-way structure is exposed, from the dry pond to the maximum overflow condition, and the reaction diagrams illustrate the shifting of the pressures on the base from the upstream to the downstream end, being a forcible reminder of the necessity of rigidity in the foundation and correct analysis of the pressures for the overflow conditions; any rise above 6.5 feet will develop tension at the upstream end of the base and the structure will become unsafe.

Fig. 40 presents the same triangular sections as in Fig. 39, but in this case the hypotenuse is the pressed surface.

Sec. V. No water pressure,  $W = 7.875$ , max. pressure = 2100;

Sec. VI. The water stands at the top of the section

$P = 5$ ,  $h P$  and  $v P = 3.5$ ,  $W$  is composed of

$A W = 7.875 + v P = 11.375$

$M W$  is made up of  $A W L' = 39.375 + v P L' = 74.375$

$M P$  is made up of  $H P L' = 3.5 \times 5$  as in sec. II = 17.5

$R'$  resultant of  $P$  and  $W = 5$  and  $7.875 = 12$

$b = 2.5 = \frac{B}{6}$  and max. pressure = 1.6 tons.

From this it is evident that this section will not meet the requirements that  $R'$  fall in the middle third when water stands above it, as tension will be developed at the base and, though stability of position is amply safeguarded by a large safety factor, the structure will be endangered by reason of the tension stresses developed at the upstream end of base. Note that  $v P$  does not enter  $R'$ , which represents the total pressure resultant, but that it is a component of  $M W$ , as  $M P$  contains  $h P$  only; also that the pressure on the upstream end of the base is zero, with and without water pressure, because of the influence of  $v P$  in the latter case. The maximum pressure is, of course, increased under water pressure.

Sec. VII, Fig. 40, is a rectangle of the same area as the previous sections; its height is 15 ft., the base 7.5 ft.

Water stands at its top,  $M W = 29.5$ ,  $M P = 17.5$ ,  $b = 2.22$  and the max. pressure 3.17 tons with negative pressure of 0.77 ton at the upstream end.

This section is apparently unstable for any water pressure condition.

H.E.P.97  
H.v.S.



ARTICLE 65.—*The practical design of a solid spillway must conform to other conditions aside from those of stability considerations.*

The top of the structure will be exposed to shocks from waves, logs, and ice, and must be given commensurate thickness; the overflowing water will plunge vertically on the downstream face of the spillway and on the river bed below unless that side is so formed that the volume of maximum overflow follows the spillway face and is guided in a direction by which the river bed will be protected against the water's force. The shocks against the spillway top will be most frequent when the overflow is shallow, then logs and ice hit the structure before clearing it; under these conditions, however, the velocity of the approaching water is low and these shocks are comparatively light. When the river is in flood, the overflow depth is correspondingly great and most of the floatage then clears the crest without touching it; the velocity of the water is, however, high, and if floatage then strikes the top the shock would represent great force. This would be the case when bridges, boat landings, and buildings are carried away, or large trees are precipitated with the caving banks into the stream; or when log and ice jams break loose and are hurled in large masses against the structure. The force of such shocks cannot be estimated, nor can the probability of such occurrences be ignored, and it is proper to take account of these possibilities when designing the spillway.

In practice reservoir dams are given a top width of one-tenth of their height, and that of spillways, generally speaking, should be twice this,—i.e., the top width of the spillway should be two-tenths of the height of the spillway.

The investigation is now confined to the designing of the minimum area section in which

1. The pressed surface is vertical;
2. The top width equals two-tenths of the section height;
3. The downstream face is inclined to receive and guide the overfall;
4. The safety factor against overturning, with maximum overflow, exceeds two;
5. The locus of the resultant of pressures falls into the middle third of the section base; and
6. The maximum pressures do not exceed the safe strength of the material, which will be taken at ten tons per square foot.



A trapezoid represents this section, which will hereafter be referred to as "*the normal solid spillway section*," and its proportions of design are:

Crest width equals two-tenths of height;  
 Base length equals eight-tenths of height;  
 Upstream face is vertical;  
 Downstream side is inclined one vertical in 0.6 horizontal;  
 Structure is of cyclopean, monolithic, or block concrete.

Fig. 41.—Spillway height.....S = 15 feet  
 Crest width.....C = 3 feet  
 Base length.....B = 12 feet  
 Spillway area, section.....A = 112.5 square feet.

In sec. I the upper pool is dry; stability against crushing is the only requirement to be met. The pressures are represented by the weight of the structure, which is taken at 140 pounds per cubic foot;

$$A W = 112.5 \times 140 = 15,750 \text{ lbs.}$$

The locus of the pressure line in the base, b, is found from the height of the horizontal gravity plane

$$G C = \frac{B + 2 C}{B + C} \times \frac{S}{3} = 0.4 S = 6 \text{ feet,}$$

and the length of the horizontal gravity plane

$$g p = \frac{(B - C)}{S} \times (S - G C) + C = 0.56 S = 8.4 \text{ feet;}$$

then

$$b = \frac{B - g p}{2} - \frac{B}{2} = \frac{B - g p}{2} = 0.12 S = 1.8 \text{ feet.}$$

Maximum pressure

$$P x = \frac{R}{B} + \frac{6 R b}{B^2} = \frac{15750}{12} + \frac{170100}{144} = 2493 \text{ lbs.}$$

In sec. II, Fig. 41, the water stands level with the spillway crest; all characteristics are as in sec. I, and  $H=15$  feet.

Water pressure	$P = 31.25 H^2$	= 7031 lbs.
Its lever arm	$L' = \frac{S}{3}$	= 5 ft.
Pressure moment	$M P = 7031 \times 5$	= 35,155 ft. lbs.
Spillway weight	$W = 112.5 \times 140$	= 15,750 lbs.
Its lever arm	$L = B - g \frac{P}{2}$	= 7.8 ft.
Weight moment	$M W = 15,750 \times 7.8$	= 122,850 ft. lbs.
Sliding safety factor	$S s f = 15,750 \div 7031$	= 2.24
Overturning safety factor	$O s f = 122,850 \div 35,155$	= 3.5
Pressure resultant	$R = \sqrt{3.5^2 + 7.875^2}$	= 8.6 tons.
Locus of R in base	$b = 0.5 g p + O R - 0.5 B = 0.43$	
Resultant falls in the middle third.		
Maximum pressure	$P x =$	1790 lbs.
Minimum pressure	$P y =$	1070 lbs.

In sec. III, Fig. 41, the water stands 3 feet above the spillway crest; characteristics are as in sec. 2 excepting  $H$  and  $h$

$$\begin{aligned}
 &H = 18 \text{ feet} \quad h = 3 \text{ feet} \\
 &P = 9,843 \text{ lbs.}, \quad L' = 5.713 \quad M P = 56,243 \text{ ft. lbs.} \\
 &W = 15,750 \text{ lbs.}, \quad L = 7.8 \quad M W = 122,859 \text{ ft. lbs.} \\
 &S s f = 1.6 \quad O s f = 2.18 \\
 &R = 9.27 \text{ tons} \quad b = 1.77 \quad P x = 2,905 \text{ lbs.}
 \end{aligned}$$


All the requirements are met by this section for a spillway of any height up to one hundred feet, provided the following conditions are complied with:

- the structure is properly founded and supported;
- protection against *underwash* is effective;
- the spillway consists of a homogeneous mass of *concrete*;
- the maximum *overflow* does not exceed two-tenths of the height of the spillway.

The *normal* section may be adapted to *abnormal overflow* by adding, for each foot of overflow in excess of the *normal*, a rectangular section *half* a foot wide to the *normal* section; and by reducing the *normal* section by a similar rectangle for each foot *decrease of overfall* from the *normal*.

Fig. 41

Normal Solid  
Spillway Section

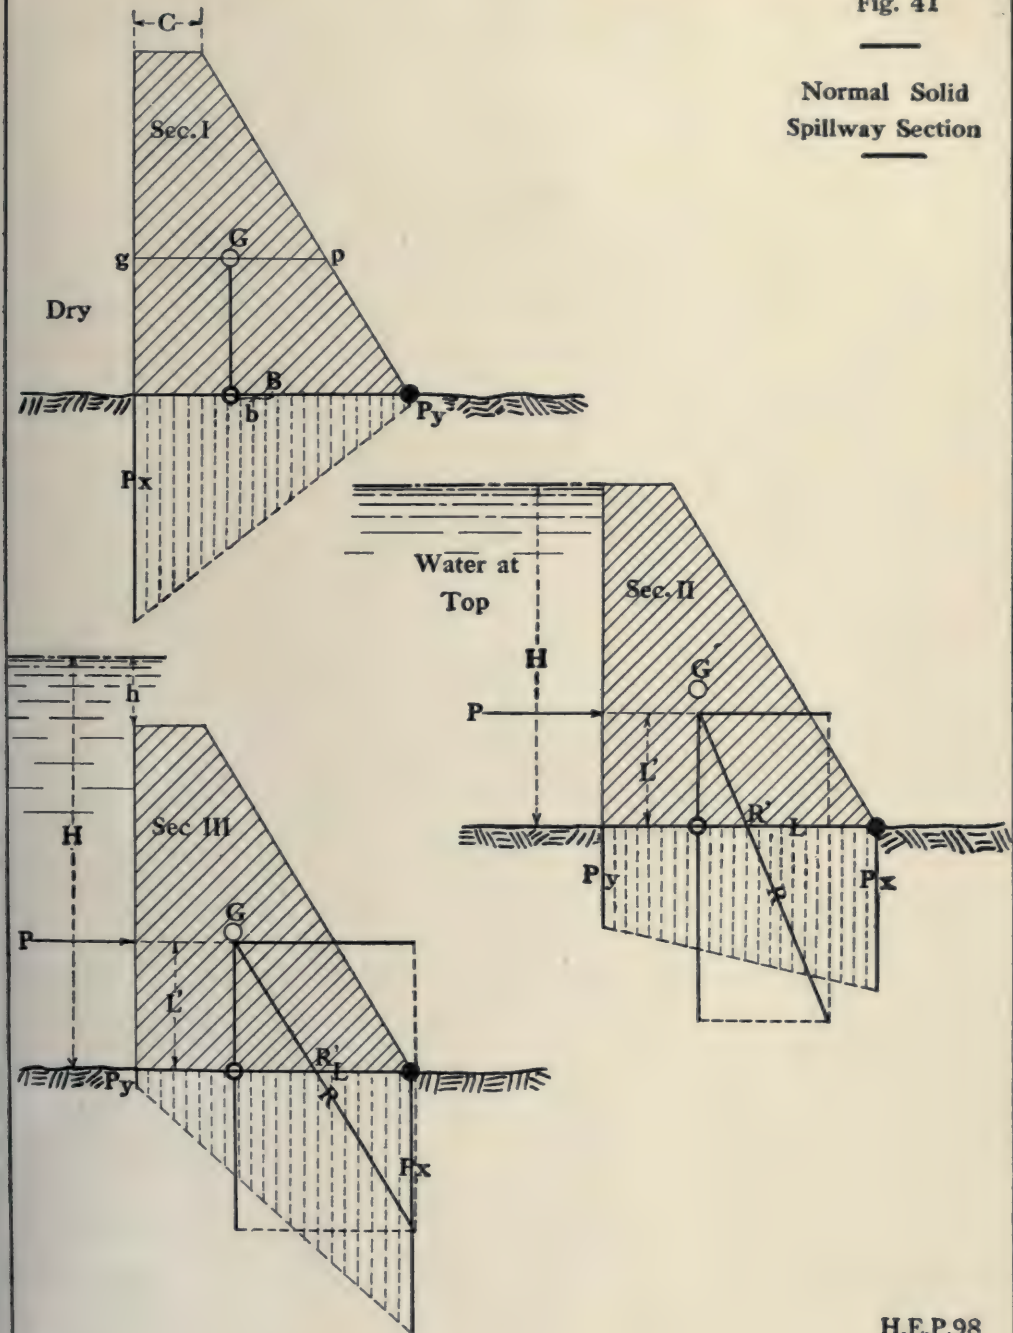

H.E.P.98  
H.v.S.



The *overturning* safety factor may be increased, from the normal, by the addition of a rectangle half a foot wide for each one-tenth increase of such safety factor.

*Deductions and Tabulation of Dimensions, Weights, and Characteristics of the NORMAL SOLID SPILLWAY SECTION.*—These expressions are to serve for the designing of CONCRETE spillways to the limit of 100 feet height; they have been equated for the two fundamental values, height of spillway and of overflow, which must be fixed before the work of designing can be approached; the expressions of weights are in *specific gravity* =  $140 \div 62.5 = 2.24$ .

$$A = \frac{B + C}{2} \times S = 0.5 S^2$$

$$*W = 2.24 A = 1.12 S^2$$

$$A' = \frac{H + h}{2} \times S = \frac{1.2 S + 0.2 S}{2} \times S = 0.7 S^2$$

$$*P = A' = 0.7 S^2$$

$$Ssf = W \div P = \frac{1.12 S^2}{0.7 S^2} = 1.6$$

$$L' = \frac{H + 2h}{H + h} \times \frac{S}{3} = \frac{1.2 S + 0.4 S}{1.2 S + 0.2 S} \times \frac{S}{3} = \frac{1.6 S^2}{4.2 S} = 0.381 S$$

$$= \frac{6h + 3h}{6h + h} \times \frac{5h}{3} = \frac{40h^2}{21h} = 1.905h$$

$$GC = \frac{B + 2C}{B + C} \times \frac{S}{3} = \frac{0.8 S + 0.4 S}{S} \times \frac{S}{3} = 0.4 S$$

$$\text{expressed in } h = 2h$$

$$gp = 0.56 S$$

$$\text{expressed in } h = 2.8h$$

$$L = B - 0.5 gp = 0.8 S - 0.28 S = 0.52 S$$

$$\text{expressed in } h = 2.6h$$

$$*MP = L'P = 1.905h \times 0.7 S^2 = 1.33h S^2$$

$$*MW = LW = 2.6h \times 1.125 S^2 = 2.93h S^2$$

---

\* Apply multiplier 62.5 to find weight in lbs.

$$Osf = LW + L'P = \frac{2.93 h S^2}{1.33 h S^2} = 2.18$$

$$*R = \sqrt{P^2 + W^2} = \sqrt{0.7 S^4 + 1.125 S^4} = 1.325 S^2$$

$$b = \frac{g}{2} p + \frac{P L'}{W} - \frac{B}{2}$$

$$= 0.28 S + \frac{1.33 h S^2}{1.125 S^2} - 0.4 S = 0.118 S$$

$$*P_x = \frac{R}{B} + \frac{6 R b}{B^2} = \frac{1.325 S^2}{0.8 S} + \frac{0.7 S \times 1.325 S^2}{0.64 S^2} = 3.11 S$$

TABLE 10.—CHARACTERISTICS OF THE NORMAL SOLID SPILLWAY SECTION.

$C = 0.2 S$	$B + C = S$	$h = C$	$Osf = 2.2$
$\dagger A = 0.5 S^2$	$\ddagger = 0.5 S (S - n)$	$\S = 0.5 S (S + n)$	
$A' = 0.7 S^2$	$= 0.7 S^2 - n S$	$= 0.7 S^2 + n S$	
$W = 1.12 S^2$	$= 1.12 S (S - n)$	$= 1.12 S (S + n)$	
$P = A'$			
$GC = 2h$	$= 2 (h + 0.95 n)$	$= 2 (h - 0.95 n)$	
$gp = 0.56 S$	$= 0.56 (S - 0.8 n)$	$= 0.56 (S + 0.8 n)$	
$L = 2.6 h$	$= 2.6 (h + 0.9 n)$	$= 2.6 (h - 0.9 n)$	
$L' = 1.905 h$	$= 1.905 (h + 0.9 n)$	$= 1.905 (h - 0.9 n)$	
$SSf = 1.6$			
$Sf = 2.18$	to increase $Osf$ by 0.1 add 0.5 $S$ to the section.		

ARTICLE 66.—The shaping of the crest, of the downstream face, and of the toe of the spillway are the remaining features to complete the practical design.

The crest's upstream edge should be slightly rounded, without, however, giving it an up-slope of any length, the purpose to be attained being to prevent the lodgement on or against it, during low overflow, of floatage; the square edge would be permissible were it not for the likelihood of its chipping off.

From the downstream end of this quarter-round of its upstream edge the crest should be inclined downward at about half an inch per foot.

The downstream edge of the crest should be on a curve of a radius equal to  $\frac{2C}{3}$ , the point of curve being  $\frac{2C}{3}$  from the upstream face plane, and the point of the tangent in a horizontal plane, one foot below crest

\* Apply multiplier 62.5 to find weight in lbs.

† For normal overflow; ‡ for less than normal overflow; § for more than normal overflow; n is feet of abnormal overflow.

point; this curve will be slightly fuller than the parabola of the upper film of the overfalling water, the purpose being to secure a shape of crest to which the falling water will constantly adhere in its passage over it. The same argument underlies the inclination to be given to the *downstream face*, a condition which, as will be seen, is fully met by the normal section.


Fig. 42 shows the parabola C P T in which the ordinates m a, n b, o c, etc., represent the velocity of the water  $V = \sqrt{2g\frac{2}{3}h}$ , h being the height of overflow, and the abscissæ m m, n n, o o, etc., the fall of the water,  $H = 0.5g - t^2$ , H being height of fall, and t time in seconds; from this will be seen that the downstream incline of the normal section practically parallels the parabolic curve up to a point Q about  $\frac{H}{4}$  above the base when the produced spillway face and the parabolic curve approach. This is the point from which the downstream face tangent should be changed into a curve of a radius equal  $\frac{S}{2}$  forming the toe of the spillway, the latter having base and altitude equal to 0.1 B; the water on passing from the toe has assumed a horizontal direction and its force is spent upon its own element.

The change in area from the normal section due to the shaping of crest and of the toe is represented by the addition of 0.025 A to A.

ARTICLE 67.—*Gravity spillways* are types in which the vertical component of the water pressure is utilized as one of the resistance factors, the upstream face being inclined, resembling section VI, Fig. 38, Art. 64. The analysis of the inclined surface, triangular section, has shown that it lacks in stability when the water stands at the top of the section, because the gravity line, and consequently the resultant, falls too close to the turning point, and this can be overcome only by the addition, to the triangular section at its downstream side, of a rectangle, by which, however, the total section area becomes considerably larger than that of the normal solid spillway section. For this reason a solid section, with an upstream inclined face, is not an economical design, and in order to take advantage of the vertical pressure factor the section must be designed, in part at least, hollow.

Timber spillways have been built on this principle for many years, the upstream face being inclined 45° and flatter, but were confined to low structures only; the development of reinforced concrete structures,



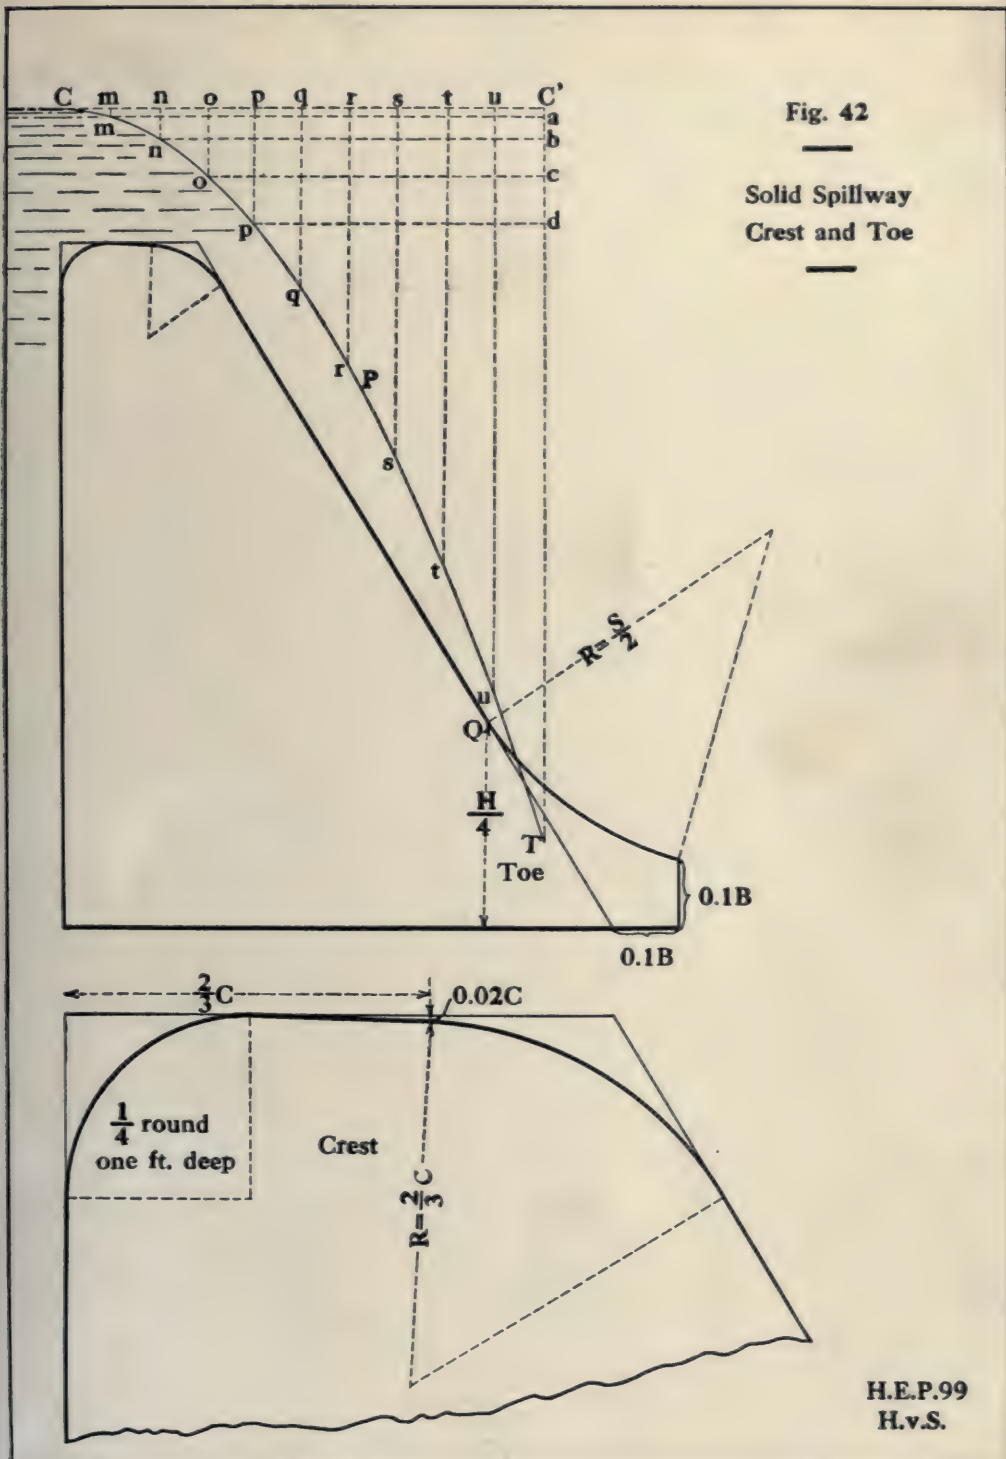

however, has in recent years broadened the practical application of this principle to spillway designs.

Fig. 43 shows a triangular section, I, with its upstream surface inclined  $45^\circ$ , to which is added a rectangle, II, of width equal to the height of the overflow, and to this a downstream triangular section, III, of such inclination that the overfalling water will adhere to it, as found in Article 66, Fig. 42.

Height of section .....	$S =$	15	feet
Pressed face deck .....	$D = S \sqrt{2}$	$= 21.21$	feet
Top or crown .....	$C = 0.2 S$	$= 3$	feet
Downstream side, apron...	$Ap = \sqrt{S^2 + (0.6 S)^2}$	$= 17.5$	feet
Base of sec. I .....	$B' = S$	$= 15$	feet
Base of sec. II .....	$B'' = C$	$= 3$	feet
Base of sec. III .....	$B''' = 0.6 S$	$= 9$	feet
Total base .....	$B =$	27	feet
Overflow .....	$h = 0.2 S$	$= 3$	feet
Total height of water .....	$H = 1.2 S$	$= 18$	feet

#### Pressure factors:

Pressure area .....	$A' = D \times \frac{H + h}{2}$	$= S \sqrt{2} \times \frac{1.2 S + 0.2 S}{2}$
	$= 0.7 S^2 \sqrt{2}$	$= 225 \text{ sq. ft.}$
Pressure .....	$P = A' \times 62.5$	$= 14,062 \text{ lbs.}$
Horizontal component of P	$= h P = P \div \sqrt{2}$	$= 9,500 \text{ lbs.}$
Pressure lever arm .....	$L' = \frac{H + 2h}{H + h} \times \frac{D}{3} \div \sqrt{2}$	
	$= \frac{1.2 S + 0.4 S}{1.2 S + 0.2 S} \times \frac{S \sqrt{2}}{3} \div \sqrt{2}$	
	$= \frac{1.6 S^2 \sqrt{2}}{4.2 S} \div \sqrt{2}$	$= 5.714$
Pressure moment .....	$MP = P L'$	$= 54,283 \text{ ft. pds.}$

#### Resistance factors:

Assuming D, C, Ap to be a concrete-steel shell one foot thick, and omitting for the present the weight of the reinforcing steel:

Weight of D is	$Dw = 21.21 \times 140$	$= 2969 \text{ lbs.}$	
Weight of C is	$Cw = 3 \times 140$	$= 420 \text{ lbs.}$	
Weight of Ap is	$Apw = 17.5 \times 140$	$= 2450 \text{ lbs.}$	$= 5,839 \text{ lbs.}$
Lever arm of D is	$DL = B - 0.5 B'$	$= 19.5 \text{ feet}$	
Lever arm of C is	$CL = 0.5 B'' + B'''$	$= 10.5 \text{ feet}$	
Lever arm of Ap is	$ApL = 0.5 B'''$	$= 4.5 \text{ feet}$	

Structure's weight moment	=	$Dw \times DL + Cw \times CL + Apw \times ApL$	=	75,530 ft. pds.
Vertical water pressure	=	$hP$	=	9500 lbs. =
and its lever arm	=	$B - L''$	=	21.37
its moment	=	$vPL''$	=	203,015 ft. pds.
Sliding safety factor, SSf	=	$W + vP \div hP$	=	1.6
Overturning safety factor	=	$WM + vPM \div hPM$	=	5.2
without WM, OSf	=		=	3.8

and this is the distinctive principle upon which gravity spillway designs are based, namely the ratio of  $L'' : L'$ ,  $21.375 \div 5.625 = 3.8$ .


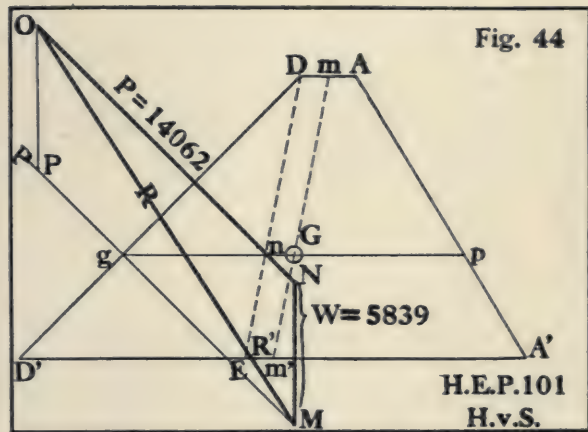


Fig. 44, *Locus of Resultant*.—The height of the statical moment  $GC$  is the same as in a solid body;


$$GC = \frac{B + 2C}{B + C} \times \frac{S}{3} = \frac{2.2S}{2S} \times \frac{S}{3} = 0.366S = 5.5;$$

its locus is in  $mm'$ , connecting the bisects of  $B$  and  $C$ , and is algebraically determined from

$$\begin{aligned} DD' : Dg &= D'E : gn \\ Dg &= S - GC \sqrt{2} &= 0.634S \sqrt{2} &= 13.44 \\ D'E &= 0.5B - 0.5C &= 12 \\ DD' &= D &= 21.21 \\ gn &= 13.44 \times 12 \div 21.21 &= 7.6 \\ gP &= (gn + 0.5C) 2 &= 18.2 \end{aligned}$$

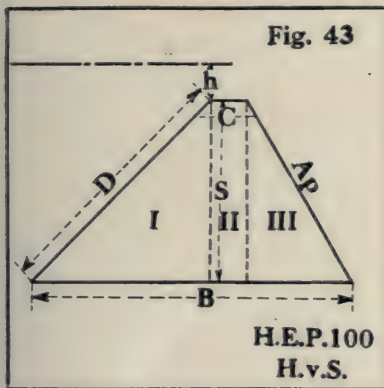

The force diagram is projected by producing P to its intersection with the gravity line at M, laying off MN = W, and completing the parallelogram MNOP, in which the diagonal R represents the resultant of all pressure and R' its locus in the base. Both pressure lines PM and R cut the base in its middle third.

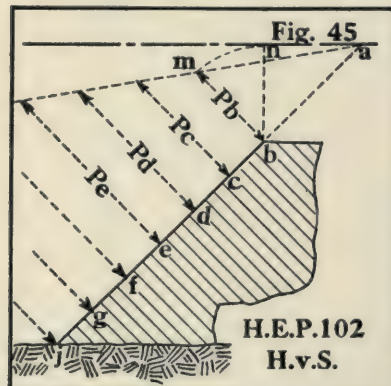

Theoretically this gravity section is therefore safe of position. It now remains to be inquired how the parts of the structure must be designed to meet the strains to which they will be exposed. The upstream face, the deck, may fail under the superimposed weight of the water, and it must be divided into separate spans, fixed at their ends to suitable supports, when they will represent the conditions of a uniformly loaded beam secured at its ends.

The bending moment on the centre of such a beam is expressed by  $M_o = \frac{Ql}{24}$ , in which Q is the product of pressure per foot into length of span in feet, l is the length of span in inches. The pressures due to the various heights of the water at different points on the deck are shown by the force lines Pb, Pc, Pd, etc. on

Fig. 45 Pb at the crown with overflow = 5 ft.

$$= bn \times 62.5 = 5 \times 62.5 = 312.5, \text{ also}$$

$$= ab \times \tan a \times 62.5$$

$$ab = \sqrt{bn^2 + an^2}$$

$$bn = an = 5 \text{ ft.}$$

$$ab = \sqrt{(bn^2) 2} = bn \sqrt{2} = 5 \sqrt{2} = 7.071$$

$$\tan a = bm \div ab$$

$$bm = bn = 5, \tan a = 5 \div 5 \sqrt{2} = \frac{1}{\sqrt{2}}$$

$$62.5 \tan a = 62.5 \div \sqrt{2} = 44.19$$

Pb, Pc, Pd, etc., are = ab + 7 ft. sections  $\times 62.5 \tan a$ , or

$$Pb = (ab + 7) \times 44.19$$

$$Pc = (ab + 14) \times 44.19, \text{ etc., as per Table 11,}$$

in which  $P$  is this pressure per square foot,  $P_i$  per square inch of one ft. of beam, and  $M$  the moment of external forces, heretofore analyzed, expressed for beams of 10, 12, and 14 feet spans.

TABLE 11.—CONCRETE-STEEL GRAVITY SPILLWAYS; OVERFLOW = 5 FEET.

## Moments of Bending Forces.

a.	P	$P_i$	MOMENTS FOR SPANS OF			Spillway height.
			10 ft.	12 ft.	14 ft.	
b.....	312.5	26.0	31,200	44,928	61,152	Crown
c.....	621.8	51.8	62,160	89,510	121,834	5 feet
d.....	931.1	77.6	93,120	134,092	182,516	10 feet
e.....	1240.4	103.4	124,080	178,676	243,196	15 feet
f.....	1549.7	129.1	154,920	223,084	303,644	20 feet
g.....	1859.0	154.9	185,880	267,668	364,324	25 feet
j.....	2163.3	180.7	216,840	312,250	435,006	30 feet
k.....	2477.6	206.5	247,800	356,832	485,688	35 feet
l.....	2788.9	232.2	278,640	401,242	546,134	40 feet
r.....	3096.2	258.0	309,680	445,824	606,816	45 feet
s.....	3405.5	283.8	340,572	490,406	667,498	50 feet
u.....	3714.8	309.6	371,520	534,989	728,179	55 feet
v.....	4024.1	335.3	402,360	579,398	788,626	60 feet

The external forces must be met by the *ultimate resistance* of the material of which the beam is constructed, which, for reinforced concrete, is expressed, as per Article 53, O, by  $M_o = 5505 t^2$ , in which  $t$  is the thickness of the beam in inches, provided the area of the imbedded steel, per foot of beam width,  $q = 0.132 t$ .

When  $M_o = M$ , the conditions represent theoretical equilibrium, and, in order that the structure may be safe,  $M_o$  should be greater than  $M$  by a safety factor of not less than "four." To determine  $t$ , the thickness of the deck, in this case, for example at point Pb:

$$\begin{aligned}
 M &= \text{for 10 ft. span} && 62,160 \text{ inch pds.} \\
 4 M &= 248,640 && = 5,505 t^2 \\
 t &= \sqrt{248,640 \div 5505} && = 6.72 \text{ inches, and} \\
 q &= 6.72 \times 0.132 && = 0.887 \text{ square inch steel}
 \end{aligned}$$

These values for  $t$  and  $q$  at points in the deck, designated as b, c, d, e, etc., applying to different heights from the crown downward, are given in Table 12 for 10, 12, and 14 feet spans.

TABLE 12.—CONCRETE-STEEL GRAVITY SPILLWAYS; VALUES OF  $t$  AND  $q$ .

Spans.	10 ft.		12 ft.		14 ft.		Spillway height.
	$t$ .	$q$ .	$t$ .	$q$ .	$t$ .	$q$ .	
b.....	4.76	0.628	5.71	0.754	6.67	0.880	Crown
c.....	6.72	0.887	8.07	1.065	9.41	1.242	5 feet
d.....	8.23	1.086	9.87	1.303	11.52	1.521	10 feet
e.....	9.49	1.253	11.39	1.503	13.29	1.754	15 feet
f.....	10.61	1.400	12.73	1.680	14.85	1.960	20 feet
g.....	11.58	1.529	13.95	1.841	16.27	2.148	25 feet
j.....	12.55	1.657	15.06	1.988	17.78	2.347	30 feet
k.....	13.42	1.711	16.12	2.128	18.79	2.480	35 feet
l.....	14.23	1.878	17.08	2.255	19.92	2.629	40 feet
r.....	15.01	1.981	18.00	2.376	21.00	2.772	45 feet
s.....	15.73	2.076	18.88	2.502	22.02	2.907	50 feet
u.....	16.43	2.168	19.72	2.603	23.00	3.036	55 feet
v.....	17.10	2.257	20.52	2.709	23.94	3.160	60 feet

If the supports of the deck spans take the form of partition walls, filling the entire space of the interior of the spillway shell as shown in Fig. 46, and are properly designed to take up and transmit the stresses to the foundation, as per section on Fig. 46, the quantities of the concrete and of the reinforcing steel required are those given in Table 13.

The partition walls may be constructed of  $x$  concrete, all the other parts are of  $xx$  concrete. The distribution of the reinforcing steel is also shown in Fig. 46.


TABLE 13.—CONCRETE-STEEL GRAVITY SPILLWAY; MATERIAL BILL FOR 10 FEET OF SPILLWAY ACCORDING TO THE DESIGN PER TABLE 12 AND FIG. 46.

Height, feet.	X Concrete:		XX Concrete:		Reinf. Steel:	
	cub. yds.	1 ft. rise.	cub. yds.	1 ft. rise.	lbs.	1 ft. rise.
<b>10 feet span:</b>						
10.....	7.2	1.00	8.0	1.52	1,230	146.2
20.....	17.2	2.09	23.2	0.99	2,690	150
30.....	38.1	3.25	33.1	1.06	4,190	186
40.....	70.6	2.90	43.7	1.16	6,050	214
50.....	99.5	4.25	55.3	1.22	8,190	215
60.....	142.0	....	67.5	....	10,340	...
<b>12 feet span:</b>						
10.....	6.9	0.97	10.3	1.43	1,600	139
20.....	16.6	2.11	25.0	1.12	2,990	166
30.....	37.7	3.24	36.2	1.07	4,650	211
40.....	70.1	2.89	46.9	1.10	6,760	234
50.....	99.0	3.58	56.9	1.13	9,100	256
60.....	134.8	....	69.2	....	11,660	....
<b>14 feet span:</b>						
10.....	6.5	1.12	10.8	1.70	1,760	166
20.....	17.7	2.14	17.8	1.30	3,430	167
30.....	39.1	3.21	40.8	1.31	5,100	227
40.....	71.2	2.59	53.9	1.42	7,370	249
50.....	97.1	3.31	68.1	1.54	9,860	266
60.....	130.2	....	83.5	....	12,520	....



Fig. 46

Gravity Spillway

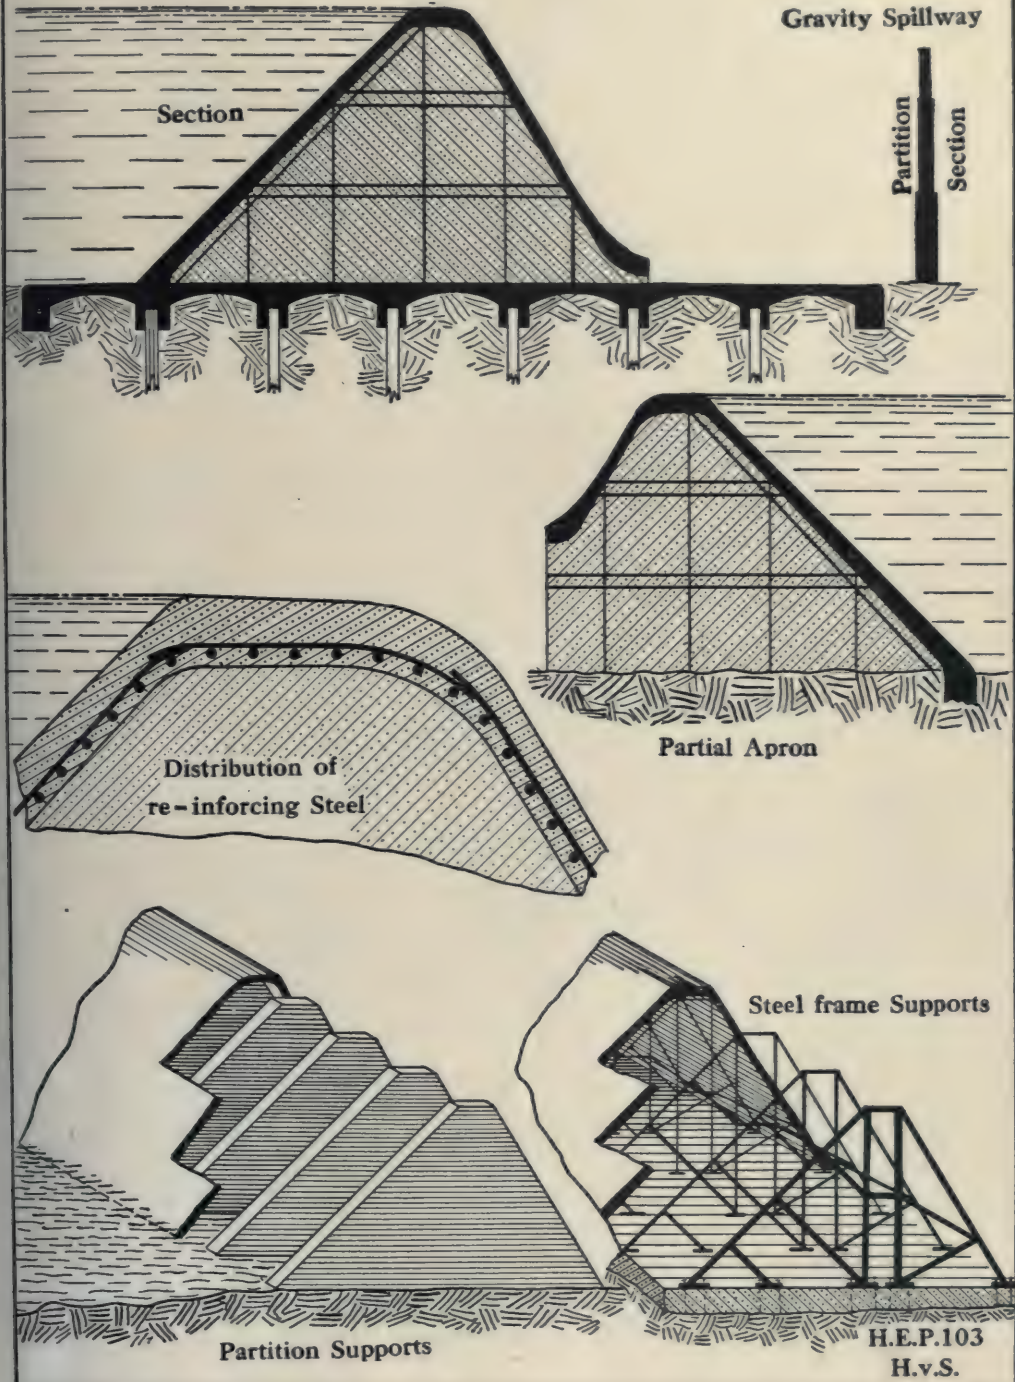

H.E.P.103  
H.v.S.

When a gravity spillway of this type is erected on a hard rock bed, its downstream face, the apron, need not be carried to the spillway toe, but may be shortened one-third or one-half, the chief consideration being whether the vertical fall of the water, passing over the spillway, from the end of the foreshortened apron face, will cause erosion of the bed rock and thereby weaken the structure's footing. A partial apron design is shown in Fig. 46; the reduction in material for this type, as compared with quantities in Table 13, consists of about 4 cubic yards of xx concrete and 600 pounds of steel for 10 feet of structure.

TABLE 14.—CHARACTERISTICS OF THE CONCRETE-STEEL GRAVITY SPILLWAY.

Deck, $D = S \sqrt{2}$	$= 1.414 S.$
Crown, $C = 5$ feet	$= 5$ feet.
Apron, $Ap = S \sqrt{1.36}$	$= 1.166 S.$
Base, $B = S + C + 0.6 S$	$= 1.6 S + 5.$

Crown is 3 feet thick.

Apron is 1 foot thick.

Partitions, from top down for each ten feet height, are respectively 12, 14, 16, 18, 21, and 24 inches thick.

Thickness of deck is as per Table 12.

Steel in deck is as per Table 12.

Steel in crown, apron, and partitions is as per Fig. 46.

The form of the crown and of the apron toe are in accordance with the theory presented for solid spillways in Article 66.

ARTICLE 68. *The Open Spillway.*—The overflow, as has been noted, is an important factor in determining the spillway section, one of its influences being to increase it in area, while the ever-present possibility of the exposure of the spillway to fluctuating pressure strains from this source is, broadly speaking, an undesirable condition. Failures of spillways, in the majority of cases, can be traced to excessive overflow; any arrangement, therefore, which allows of some control of the overflow and thereby reduces the pressure fluctuations is a very desirable one.

When the rise in the upper pool level becomes of practical utility as a power function by offsetting a corresponding rise of the lower level, thus maintaining a constant power head, this condition must be considered in arranging for the permanent lowering of the overflow.

If some of the upper portion of the spillway were removed at the approach of the high water, the excess flow could be passed inside of the spillway height, or nearly so, and the section would not have to be designed for the excessive overflow height; furthermore, the lowering of the



overflow height would materially reduce the upper pool flowage area, which will represent an appreciable economy in the cost of the development.

The effect upon the overflow by the lowering of a portion of the spillway appears from the following example.



Given a spillway 200 ft. long and 30 feet high, the normal or power flow is 2000 cubic second feet and the flood discharge 10,000 sec. ft.; therefore the maximum volume which passes over the spillway is 8000 sec. ft., and the overflow is 5.2 feet.

The discharge through a rectangular opening at the spillway top, Fig. 47, is  $Q = 0.62 C A \sqrt{2gh}$ , where  $C$  is a coefficient = 0.60,  $A$  the area of the opening in square feet,  $h$  the height of the water above the sill of the opening.

If  $h = 16$  ft.,

$$Q = 3 A \sqrt{16} = 12 A.$$

$$A = 8000 \div 12 = 667 \text{ sq. ft.}$$

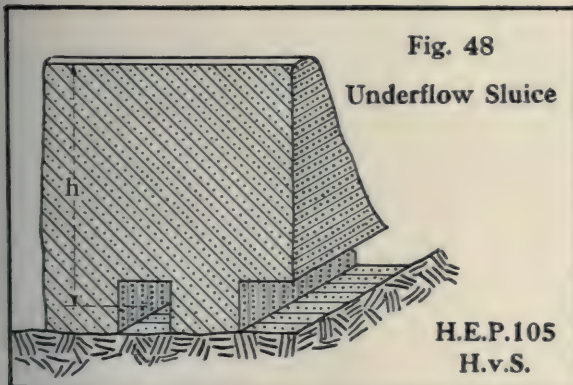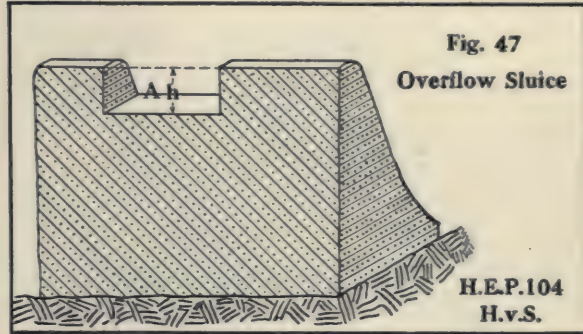

Therefore an opening of about 42 feet length and 16 feet height or two openings each 22 feet long and 16 feet high would discharge the flood flow, practically none passing over the spillway crest, and if these openings are closed during the normal flow periods the required power head may be constantly maintained.

If openings are made near the base of the same spillway the discharge through them, Fig. 48, is  $Q = C A \sqrt{2gh}$ , where  $C$  is a coefficient of discharge through a submerged orifice,  $A$  is the area of the opening in square feet, and  $h$  is the height of the water surface above the centre of gravity of the opening. For this purpose  $C$  is taken at 0.75.



If the opening is 6 feet high, the head  $h = 27$  feet measured from the crest of the spillway and  $Q = 6 A \sqrt{27} = 31.2 A$

$$A = 8000 \div 31.2 = 256.4,$$

and the flood volume of 8000 sec. ft. would be discharged through five openings each 9 feet wide and 6 feet high. The theory of efflux from orifices is developed in Article 74.

This is the theory upon which the design of the open spillway is based. The devices by which this result can be realized may be classified as

- (1) *Overflow sluices*, being separate openings in the top of the spillway;
- (2) *Underflow sluices*, which are similar openings at the base of the structure, and
- (3) *Movable weirs*, representing continuous openings along the top of the spillway.




Any of these must be arranged to be readily opened and closed; they should form a water-tight wall of safe strength when closed, be simple of construction and operation and economical in cost and maintenance.

The closing devices may be classified as stop-logs, drop, lift, and revolving gates, vertical and horizontal valves, needles, wickets, shutters, and bear-traps.

*Overflow sluices*, Fig. 49, are formed by masonry piers, steel or timber trestles, placed upon and secured to the body of the spillway structure; the openings, as has been shown, are determined by the volume of the water to be discharged; an operating platform is placed upon the piers or trestles. The sections of the sluice supports are so designed that the pressures and bending forces against the closed sluice spans and against their own pressure faces are safely resisted; lateral pressures need not be considered, since the accumulation of pressure heads against support sides is readily avoided.

*Stop-logs*, Fig. 50, may be employed to close overflow sluices; they are square timbers placed horizontally one upon another in the sluice span, their ends resting against shoulders arranged in the supports; they are operated by hand or mechanical devices from the operating platform, and can readily be formed into a water-tight curtain.


*Needles*, Fig. 51, are stop-logs placed vertically side by side, footing against a sill secured in the sluice bed, and supported on the top by horizontal strain members or the platform. They are not as readily manipulated as are stop-logs of the horizontal type, and it is also more difficult to make them water-tight.

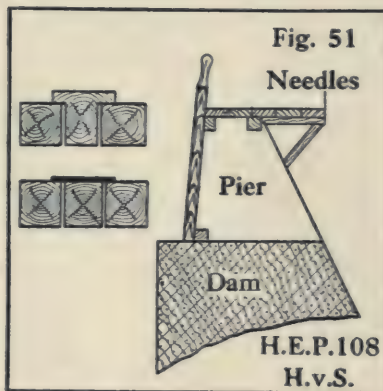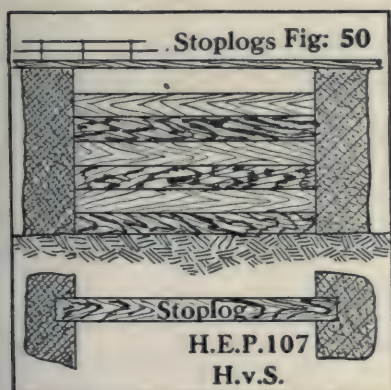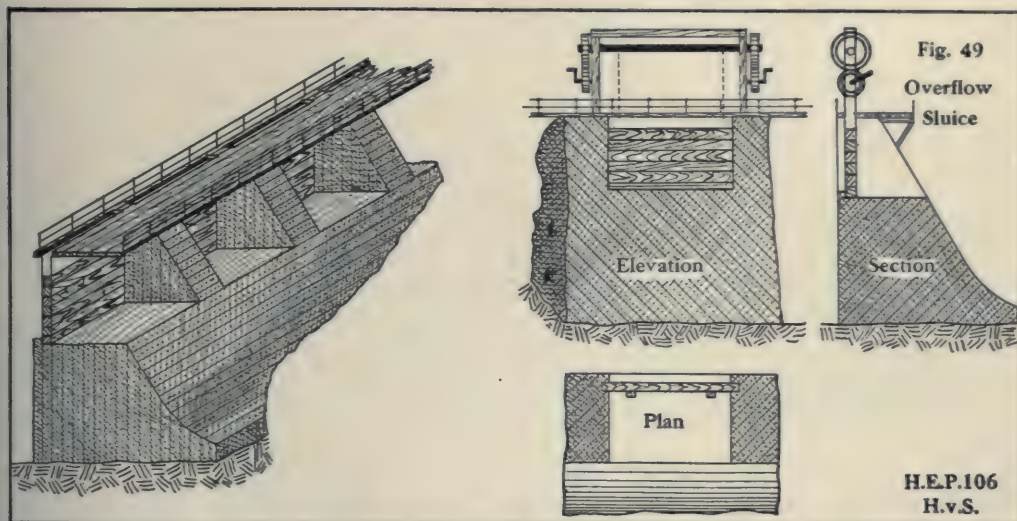

*Valves*, Fig. 52, are timber or steel framed shutters revolving around vertical or horizontal steel shafts, their ends set in side supports or in sluice bed and top strain member, and they close up against the sluice supports and sill; they are operated by hand or mechanically, but it is difficult to prevent leakage along their sides and bottom.



*Gates*, Fig. 53, may be vertical lift, drop, or revolving; they are of timber or steel frames and sheeting and are generally operated by power. Lift and revolving gates must remain suspended above the sluice span when open, requiring extra high supports, or they may be lowered into recesses arranged in the spillway masonry; in the first case they are exposed to the wind pressure and the supports must be designed in accordance; in the latter arrangement the recesses in the spillway are

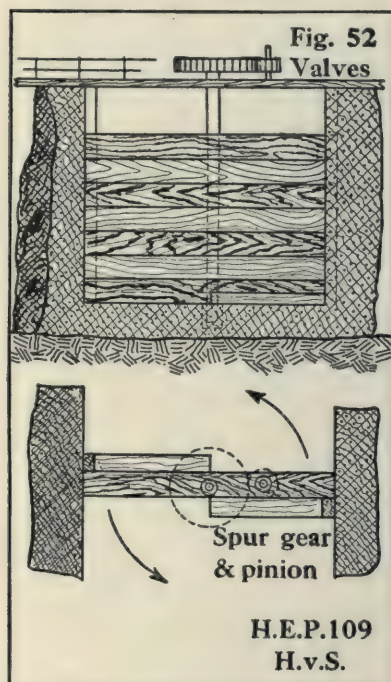

likely to be filled with sand. Gates form effective closing devices and can easily be made water-tight.

*Shutters*, Fig. 54, are constructed of timber or steel and are hinged to a sill; they may also be arranged to operate automatically by folding or dividing them into two or more parts hinged on opposite sides of the sluice bed. When water from a higher level is let in underneath them, they will rise in "A" shape, and may be maintained in that position until the water is withdrawn, when they fall down on their beds.


*Bear-traps* are of this general design.

*Underflow sluices*, Fig. 55, are openings cut out of the spillway body near its base, and may be of rectangular, square, or circular form; they may be closed by lift gates or valves operated from above.

*Movable weirs*, Fig. 56, are devices filling the entire top of the spillway or the greater portion of it, and consist of separate steel trestles placed transversely of the spillway and hinged to the sluice base. When down they lie in a recess formed in the spillway masonry; to erect them the first trestle is raised to a vertical position by means of chains from the abutment or pier and secured by some automatic locking arrangement; after placing a foot-bridge from this first trestle to the abutment or pier, the second trestle is similarly raised, and so on. Trestles are spaced from 8 to 16 ft. centres and their upstream faces are covered with needles. They may be lowered in the same manner as described for their raising. Shutters and bear-traps may also be utilized for movable weirs.



The results aimed at with the open spillway type are to afford ready control of the overflow, to maintain the power head as constantly as practicable, and, generally speaking, to reduce the overflow height, and to accomplish all this without any waste of the water by leakage. It is evident that the ideal flow control will be secured when the overflow height is reduced by horizontal sections of the smallest areas; simplicity and economy of the device and of its operation are of like impor-

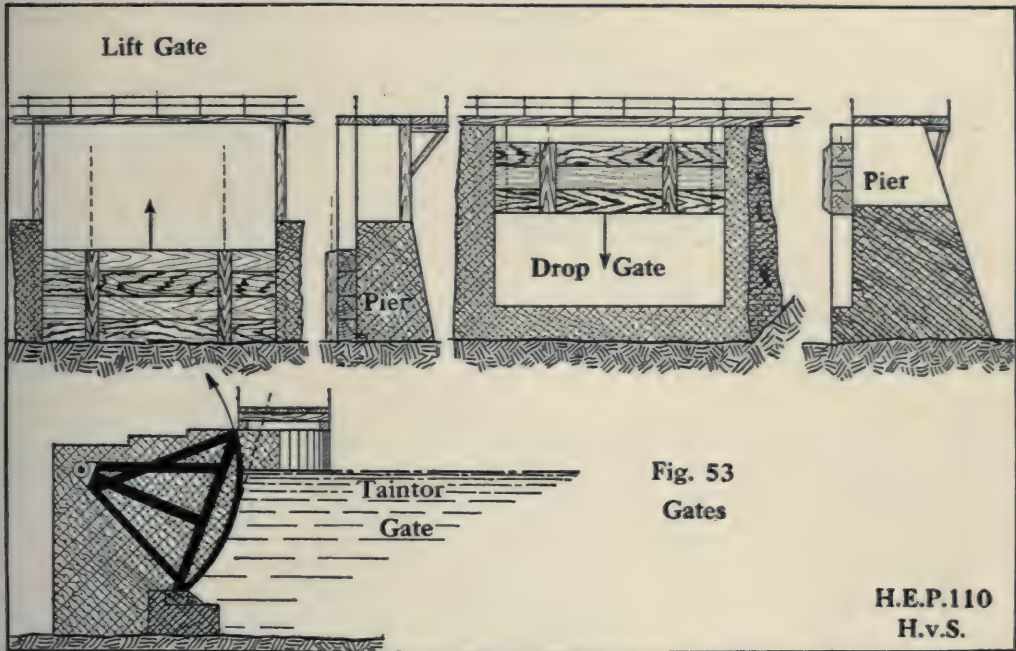


tance. While the movable weir probably represents the most complete method of accomplishing this, it is also among the most costly and complicated and cannot readily be made water-tight; its field of usefulness is rather for navigation works than power plants. Both the over and underflow sluices meet the requirements, the first for the solid, the latter for the gravity spillway.

For gravity spillways the underflow sluice may be a concrete culvert or a steel plate pipe, the intake being fixed in the deck, the sluice passing through the spillway along its base and terminating at the apron toe; the flow through them can be controlled by valves operated from the interior of the spillway. In solid spillways the underflow sluice is inaccessible and weakens the structure by reducing its mass at the point where it is most required.


The overflow sluice forms the most recommendable type of the open spillway, and its closing is best arranged by stop-logs.

The sluices should be designed of rather small than large areas, as the narrower spans require shorter stop-logs which are therefore more readily handled.

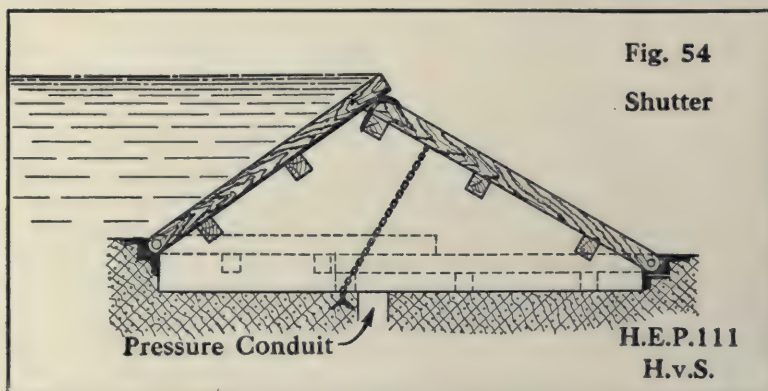

*Example.*—The flood flow is 3000 cub. sec. ft.; the spillway is 200 feet long and the overflow limit 2 feet. The spillway discharge aggregates 1700, and the balance of 1300 cub. sec. ft. is to be passed through overflow sluices.

The overflow sluice area required to discharge 1300 cub. sec. ft. is from  $Q = 3A\sqrt{h}$  with  $h = 6$ ,  $a = 180$  (practically).

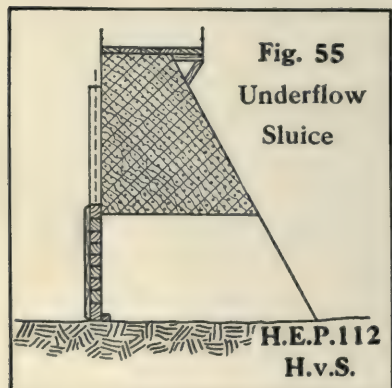

The programme is to divide the total sluice length of 30 feet into suitable units which will be taken at 10 feet; the location of these three sluices should preferably be near the end where the power station is situated, without, however, interfering with the tail-race outflow, if the station is near the spillway. The sluice supports are, most economically, concrete piers of the same section as that of the spillway, with shoulders arranged vertically in their sides to serve as stop-log supports, which may

be as close to the upstream face of the spillway as practicable. The sluice pier then becomes a section of the upper six feet of the spillway section, at the base of which the length of the horizontal transverse plane



is 9.6 feet, this becomes the base of the sluice; the thickness of the pier is determined from the pressures and bending forces against the sluice span which are transmitted to the pier as the end support of a beam of the length of the span.

For a span of 10 feet length, pressure  $P = 6^2 \times 31.25 = 1125$  lbs., and for 10 feet, representing one-half of the two adjacent spans,  $P = 11,258$  lbs. For a pier three feet wide, the pressure per foot  $P = 3750$ , to which is added the pressure against the pier 1125; total pressure against one foot of the pier = 4875 lbs.

The depth of the sluice is taken at 6 feet and the piers should be raised about 2.5 feet to elevate the operating platform to a safe height. The pier becomes 8.5 feet high and its area ..... = 59.5 sq. feet.  
the weight, at 140 lbs. per cub. ft. .... = 8330 lbs.  
The pressure lever arm ..... = 2 ft.,  
and the weight lever arm ..... = 5.9 ft.,

Pressure moment is 9750 ft. pds.

Weight moment is 49147 ft. pds.

Sliding safety factor ..... = 1.7

Overturning safety factor ..... = 5

The bending moment at end supports of 10 ft. span = 112,500 inch pds.  
and for the intermediate pier between two  
sluices ..... = 225,000 inch pds.,  
which is resisted by the working shearing  
strength of concrete taken at 75 lbs. per square  
inch; the pier required therefore is ..... = 21 square feet;  
that of the assumed section is ..... = 28.8 square feet.

As a matter of fact, no economy is secured in this case, or when the required sluice length is only a small portion of the spillway length, by confining the thickness of the piers to their theoretical design, a broader pier can be constructed for less cost by permitting of the use of cyclopean concrete; but when the sluice lengths nearly take up the entire spillway, as may be the case when the spillway occupies a narrow gorge, the pier design is thus determined.


The thickness of the stop-logs is found from the bending moment at the centre of a beam supported at the ends, for this case, and the lowest beam,  $P = wh = 62.5 \times 6 = 375$ . The bending moment  $M = Pl \div 8$



$= 375 \times 10^2 \times 1.5 = 56,250$  inch lbs. The fibre stress of pine being taken at 2000 lbs. per square inch,  $M = Fbh^2 \div 6$ ,  $b$  is the breadth (12"),  $h$  the thickness, therefore

$$h = \sqrt{M \div 2F} = 3.8 \text{ (appr.)}. \text{ In practice the log is } 6'' \times 12''.$$

The operating platform may be of 3-inch planks with guard-rails; the stop-logs can readily be raised and put in place by the aid of hand tools or by hand-power winches.

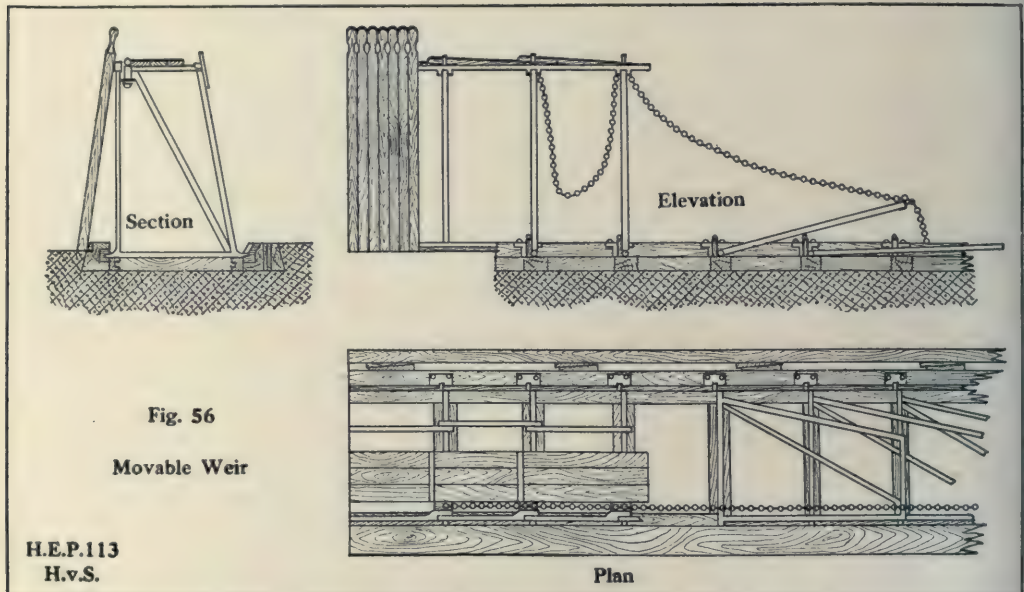

These represent, in the author's judgment, the three important practical spillway types, and in the light of all that has been presented regarding them the closing consideration can now be approached.

ARTICLE 69.—*In determining the spillway type* to be adopted for any specific case, adaptability, first cost, and maintenance are the weights, in their logical sequence of importance, to be applied to the inquiry; and the conditions which must guide the choice to one of these three as the best suited are the character of the river bed, the height of the spillway, and the flood volume. The river-bed formation may, for this purpose, be classified as hard and soft, rock and hard alluvial material being embraced in the first and all other alluvial composition under the second; for the former bearing foundations may generally not be required, while they are essential for any spillway in the soft locations. The spillway

height and consequential weight of the structure may have some influence, so will the volume of flood flow, the latter especially as between the open spillway and the other types.

*Example 1.*—A 30-foot-high spillway, 200 feet long, is to be erected in a rock river bed; the flood flow excess over the power volume is 8000 sec. ft. The solid type is adapted to these conditions, the overflow being 5.2 ft., or inside of the normal section limit, it contains 3330 cub. yds., and may be constructed of cyclopean concrete in which the ratio of manstones of 8 cub. ft. volume to concrete is about 1:3, or the material consists of about 1110 cub. yds. of manstones and 2220 cub. yds. of xx concrete. Manstones, if delivered at site for \$2.50 per cub. yd., may be estimated at \$3.50 per cub. yd. in place; with cement delivered at \$2.50 per bbl., sand \$1.00 per cub. yd., gravel or broken stone at \$0.75 per cub. yd., forming timber at \$25.00 per M ft. b.m., skilled labor \$4.50 per day and common labor \$0.20 per hour, xx concrete may be estimated at \$7.00 per cub. yd. in place.

The estimated cost of the spillway superstructure then is

for 1110 cub. yds. of manstones at \$3.50	\$3,885	
2220 cub. yds. xx concrete at 7.00	15,540	\$19,425,

being practically \$100 per lin. ft. of structure, coffering, preparing bed and foundation not being included.

The gravity spillway of the design given in Article 67 is adapted to these conditions, the overflow being only slightly above the standard therein fixed; the material contained in it for 12 ft. deck spans, according to the design of Article 67, consists of

763 cub. yds. x concrete,
724 cub. yds. xx concrete
93,000 lbs. reinf. steel.

At the same unit cost of material and labor above quoted,

x concrete may be estimated at	\$10.00 per cub. yd. in place,
xx concrete may be estimated at	12.00 per cub. yd. in place, and
reinforced steel estimated at	60.00 per ton of 2000 lbs.



The estimate for the gravity spillway will then be for

762 cub. yds. x concrete at \$10.00 .....	\$7,620.00
724 cub. yds. xx concrete at 12.00 .....	8,688.00
46.5 tons of reinf. steel at 60.00 .....	2,790.00
	<u>\$19,098.00</u>

or practically the same amount as the estimate for the solid type.

The open spillway for these conditions has already been detailed, and the material required in it consists of that given for the solid type less the quantities represented by the three sluice areas, or about 37 cub. yds., which, being divided between manstones and concrete at the stated ratio, makes the estimate

1098 cub. yds. manstones, \$3.50 .....	\$ 3,843.00
2197 cub. yds. xx concrete 7.00 .....	15,397.00
	<u>\$19,222.00</u>
and for three sets of stop-logs and the operating platform	250.00
	<u>\$19,472.00</u>

which is also practically the same estimate as the former two.

The maintenance will be very small, if any, for the solid and the gravity type, and only that for the renewals of stop-logs in the open spillway. Operating charges are alike for the first two, while the open spillway calls for constant attention, which, however, when the power station is near or at the spillway, can readily be furnished by the station personnel, but if the station is at a considerable distance from the spillway, an attendant should be located at that point.

Summing up the comparison for the rock location, it appears that each of the three types is adapted to the requirements, that the first cost of all three differs but slightly, and that neither the solid nor the gravity type involves any maintenance or operating charges, which, however, is the case with the open spillway; whether the advantage afforded by the last in controlling the flood flow, reducing the flowage areas, and removing one of the most common causes of danger to spillways is of sufficient weight to recommend it in preference to the others must be decided largely from the typical conditions of the case to be served. In this connection it is well to note that the open spillway



arrangement affords a ready opportunity to utilize the storage capacity of the upper pool in low-flow periods by accumulating water during the non-operating period of the plant.

*Example 2.*—The same structure is to be erected in a soft alluvial location, for which the former comparisons will prevail, with the addition of the foundation cost, which will be somewhat higher for the gravity type than for either of the other two, or practically in ratio to the width of the spillway base, which, according to the designs herein outlined, is 27 feet for the solid and open and 53 feet for the gravity spillway; the cost of coffering is also likely to be greater for the structure with wider foundation.

*Example 3.*—When the height of the spillway exceeds 30 feet, a new element enters the search for the most recommendable type,—that is, the location therein of the power equipment. The specific treatment of this programme will be found in the description of power stations in Article 78; suffice it to state here that for such spillway requirements, in connection with the direct development programme, the arranging of the power station in the interior of a gravity spillway is perfectly practical, and represents a considerable saving in the first cost of the plant and, in addition, secures the highest obtainable efficiency from power functions, flow and fall.

ARTICLE 70.—*Timber spillways* have played an important part in the mill-power plants of the past, and, while the advent of concrete construction and the rapid increase of the cost of timber have well-nigh discontinued their use, occasions may arise where they deserve consideration. For low-fall developments in localities where timber is plentiful while concrete material is not so, transportation facilities being limited, this type may prove recommendable because a masonry or concrete structure would be prohibitive in cost. The chief objections to timber spillways are the difficulty of constructing and maintaining them watertight and the cost of keeping them in repair. As timber is preserved best when constantly saturated, it would be preferable if water passed through and over such a spillway at all times; but when the conserving of all the flow for power purposes is a fundamental requirement of the development programme, as will often be the case, this safeguard against early decay of the timber must be forfeited and the limit of the structure's endurance becomes a factor in the determination of its availability,—that is, the maintenance cost of a timber spillway should be taken at

not less than five per cent. per annum of its first cost, whereby it could be practically renewed in twenty years.

The stability of timber spillways is determined in like manner as of the types heretofore considered,—that is, sliding and overturning must be resisted by the weight of the material with which the framed structure is filled, which may be rock, gravel, or sand, a mixture of the latter two being preferable because it represents the most compact mass. The weight of such a fill may be taken at about 94 pounds per cubic foot, or for the purpose of stability discussion at 1.5 that of water. In a crib structure of 8 feet bays the ratio of timber to filled area is about as 1 to 4.

The design of the timber spillway should be adapted to uniformity of shaping and framing the material. The upstream face may be vertical or inclined; the downstream side should conform to the inclination found to represent closely the parabolic curve of the overfalling water, but for structural reason it is best formed in steps of short threads so that floatage will not strike them; the rise of the steps should be of even number of feet to facilitate uniform framing, the threads should be of a width to make up the desired slope.

*Fig. 57, section 1, suggests a timber crib spillway design in which S is vertical, B = 1.5 S, C = 0.5 B, and the stepping is arranged to form the standard overfall slope*

$$\begin{aligned}
 S &= 20 \text{ ft.}, B = 30 \text{ ft.}, C = 15 \text{ ft.}, \\
 A &= 408 \text{ sq. ft.}, \text{ mean area of timber per lin. ft.} = 86 \text{ sq. ft.}, \\
 &\quad \text{mean area of fill per lin. ft.} = 322 \text{ sq. ft.}, \\
 P' &= 0.7 S^2 \times 62.5 = 17,500 \text{ lbs.}, \\
 W &= 322 \times 94 = 30,268 \text{ lbs.}, \\
 SSF &= 1.7, \\
 L' &= 24 + 8 \div 24 + 4 \times (20 \div 3) = 7.65, \\
 MP &= 17,500 \times 7.65 = 133,875 \text{ lbs.}
 \end{aligned}$$


The irregularity of the timber and fill distribution renders a precise determination of L impracticable; if the body is considered as of a homogeneous mass, the form being transformed into a rectangle of similar area, or 20 feet high and 22.5 feet long, the error as relating to L will be unimportant and on the side of safety; or

$$L = 11.25, MW = 340,515 \text{ ft. lbs.}, \text{ and } OSF = 2.25.$$




**Fig. 57**  
**Timber Spillways**

**Sec. I**

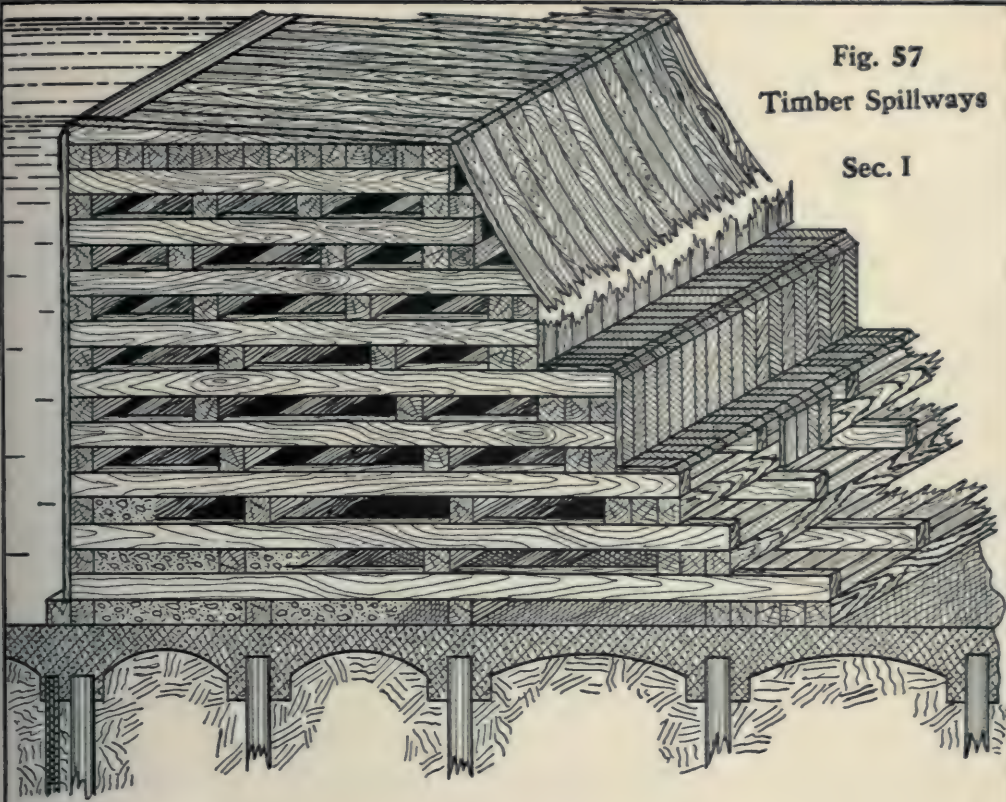

**Sec. II**

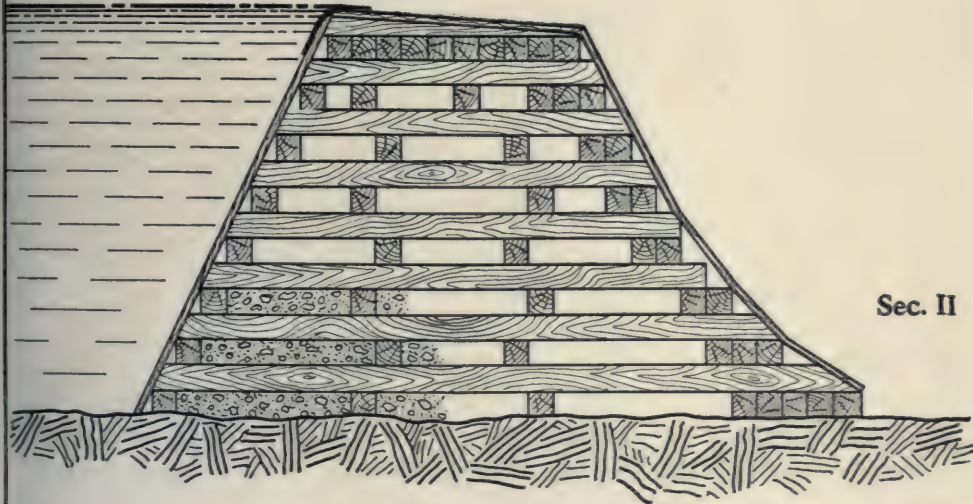

**H.E.P.114**  
**H.v.S.**



The framing is shown in the figure, consisting of alternate longitudinal and transverse square timbers; the former are staggered one above another excepting in the upstream face, the latter are placed 8 feet centres; the longitudinals are doubled at the apron end and are laid close in the top streak under the crown. The entire structure is covered with 3-inch planking, to make it as water-tight as possible, prevent the washing out of any of the filling material, and protect the crib timbers. The crown is given a slight slope to prevent the lodgement of floatage; its upstream edge is rounded and sheeted with iron plates.

The substructure of a timber spillway is of the same type as for concrete spillways, consisting of the cut-off, the bearing piles, if the location is in soft material, and of the apron; for the structural type of the latter heretofore described, a rock-filled trench may be substituted, that is if heavy rock is available, and the trench should be not less than three feet deep, and its width should be equal to half of the spillway height in order to insure that all of the overfall strikes this rock fill. A gravel and earth fill may be placed against the upstream side of the spillway, but it should not be expected to add to the resistance weight of the structure, as the upstream side will always be exposed to the hydrostatic head of its full height. As a matter of fact, this upstream side will sooner or later fill in from the sediment and silt carried by the stream.

TABLE 15.—APPROXIMATE QUANTITIES OF THE MATERIAL REQUIRED FOR TIMBER SPILLWAYS OF THE DESIGN HERE DESCRIBED IN LENGTHS OF EIGHT FEET AND FOR VARYING HEIGHTS.

Height.	12 × 12 timbers, ft. b.m.	Wrought iron drifts, lbs.	3 × 12 planking, ft. b.m.	Spikes, lbs.	Spillway fill, cub. yds.	Apron fill, cub. yds.
10.....	3,000	250	900	430	26	5
12.....	3,800	300	1,050	500	32	5.5
14.....	4,700	355	1,200	570	42	6
16.....	5,800	410	1,350	640	55	6.5
18.....	7,000	475	1,500	710	70	7
20.....	8,300	545	1,650	780	90	8
22.....	9,700	620	1,800	860	115	9
24.....	11,000	700	1,970	940	145	10
26.....	12,300	785	2,150	1,020	180	11
28.....	13,700	875	2,300	1,100	220	12
30.....	15,000	965	2,500	1,180	260	13
32.....	16,400	1,060	2,700	1,260	300	14
34.....	17,800	1,160	2,900	1,340	340	15.5
36.....	19,200	1,265	3,100	1,420	360	17
38.....	20,600	1,375	3,300	1,510	400	18.5
40.....	22,000	1,500	3,500	1,600	450	20

*Sluices* of any type may be arranged in a timber spillway. To decide between timber and concrete spillways is practically wholly a question of comparative cost and of the maintenance and repair charges.

Diagram 30 gives the approximate first cost of the timber spillway superstructure of the types here described, per linear foot of the spillway, and comparatively with the cost of concrete spillways for different heights and varying market values of timber and of concrete, both placed in the structure.

Fig. 57, section II, shows a modification of the timber spillway, the upstream side being inclined on half horizontal in one vertical and the apron fully sheeted to the shape of the overfall curve; its characteristics are:  $S = 16$  ft.,  $B = 1.75 S$ ,  $C = 0.357 B$ .

ARTICLE 71.—Occasionally it may be desired to *construct the spillway at first to only a part* of the total height to be ultimately utilized; this is practicable both with the solid and the gravity types. For the first the downstream slope should then be left in steps with dowels, in order to secure the best practicable connection for the future addition to the original section; the foundation and the apron must be sufficient for the final height. For gravity spillways the partitions are likewise stepped on the apron side and are covered with a timber instead of the concrete-steel apron, the latter being constructed when the spillway is completed to its final height.


Or it may be desired to raise an existing spillway, which may also be practicable but cannot be treated in a general manner; each such case must be considered from its own conditions.

ARTICLE 72. *Spillway Abutments*.—The spillway terminates in abutments which may be of natural rock walls when the location is in a palisaded gorge; but in the majority of cases the spillway does not complete the empounding of the watercourse, and the additional structures, which are required to dam the river, are joined on the spillway, and the abutments then form the connecting links.

Abutments should be of the same height as the adjoining reservoir structures, not less than three feet above the maximum overflow level, and in outline they must be of sufficient dimensions to cover completely the ends of the banks which they are to protect against the overflowing water; they have, however, little in common with bridge abutments, partaking rather of the character of retaining walls. For solid spillways the section proper needs no abutment, which is formed around and



overlapping it on all sides as much as the section of the adjoining reservoir structures require; for gravity spillways the abutment becomes a complete wall, forming, in part, the end partition of the spillway; while for timber spillways the abutment is a separate structure throughout.

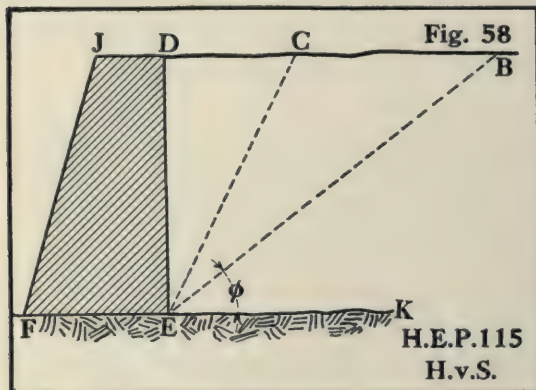


The abutments may be of timber, masonry, concrete, or of concrete-steel construction, their design being based upon the theory of *earth-retaining structures*.

Fig. 58, B E K, is an earth bank,  $\phi$  its angle of repose, B E the slope of rest; a wall, D E F J, is erected and the space between it and the bank B D F is filled with similar material as is in

the bank. It is assumed that if the wall is suddenly removed a portion of the fill, represented by C D E, would follow after it, and the slope of rupture, C E, is accepted as being the bisect of an angle  $= 90^\circ - \phi$ .


This theory is not well proved,—that is, as to the locus and form

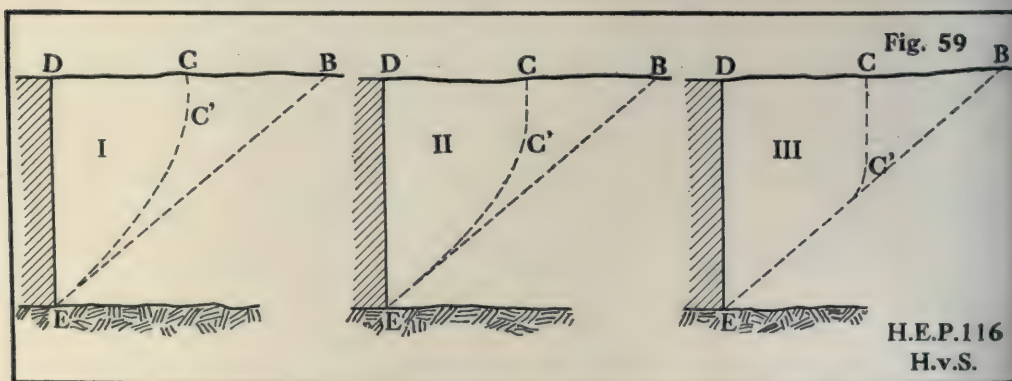



of the line of rupture; it may be accepted as representing the conditions of a sand bank, provided it is dry.

The author has examined a number of slides in canal banks of from 20 to 40 feet high, chiefly of clay, gravel, and sand formation, with a view of determining the causes and effects of such subsidences, and has found the lines of rupture to be always vertical for one-third to one-half



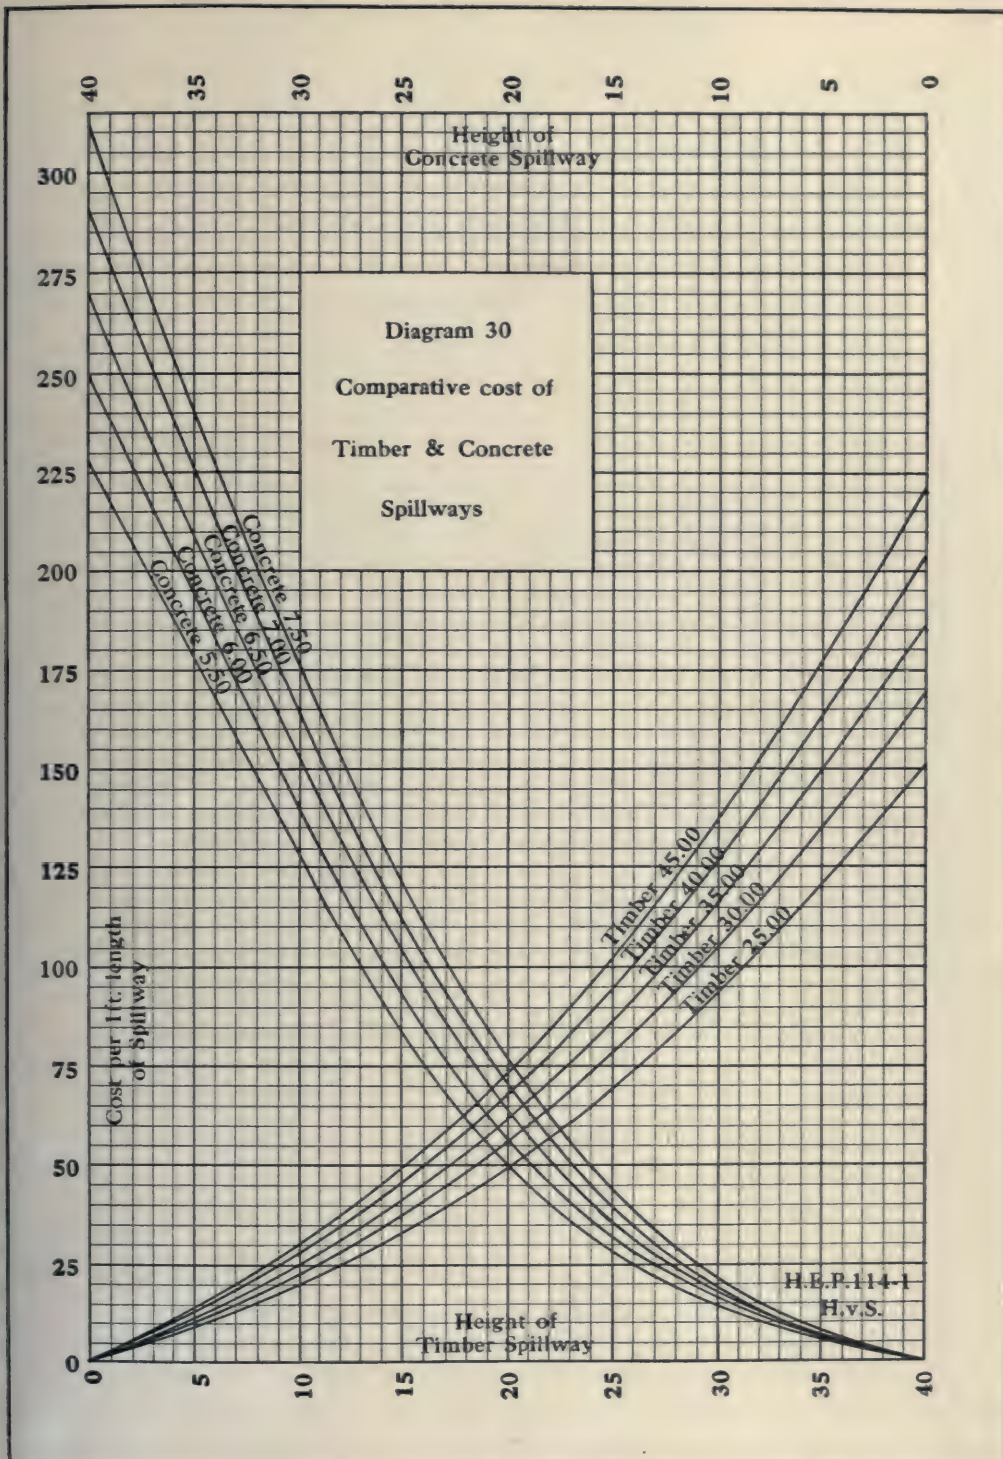

of the height, then sloping along the plane of rest, approximately as shown in Fig. 59, section I, for clay, gravel, and sand, section II, for clay and gravel, and section III, for clay. The slopes of these three, when containing only normal quantities of water, were found to be practically the same, being from 1.5 to 2.5 horizontal to one vertical; the locations and lines of rupture were likewise similar in each case, the surface break C being generally midway of DB, the top of the slide vertical and then generally curving to the toe of the slide at E, and the vertical sections increased in length as the ratio of sand and gravel decreased.

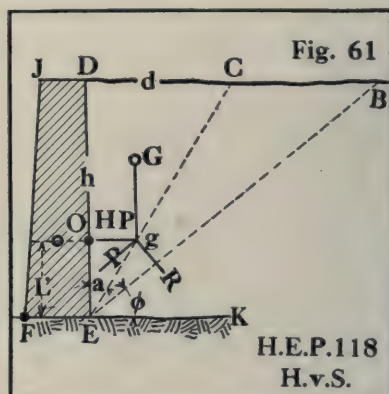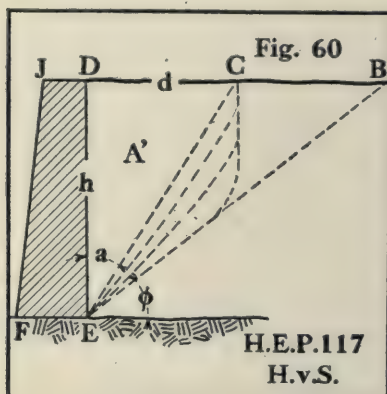

The forces to be resisted by the retaining structure originate in the wedge-shaped portion of Fig. 60, CDE, which would fall if the wall were removed; the area of this part  $A'$  is some fraction of the rectangle  $hd$ , which will here be assumed in accordance with the observations above detailed to have the following values for different materials:

for sand or half gravel and sand or loam  $A' = 0.5 hd$ ,  
 for clay, gravel, and sand .....  $A' = 0.6 hd$ ,  
 for clay and gravel .....  $A' = 0.7 hd$ ,  
 for clay .....  $A' = 0.8 hd$ ,

provided that the subdrainage of the fill is sufficient to prevent any accumulation of water in the bank or against the wall.

$h$  = height of retaining wall, and  $d = h \tan \frac{90^\circ - \phi}{2} = h \tan a$ ;

$A' = rh^2 \tan a$ , in which  $r$  is the ratio of the area  $hd$  of the falling part as per class of material;




$W' = w'rh^2 \tan a$ , in which  $w'$  is the weight in lbs. per cubic foot of the material of which the fill consists;

$W'$  is assumed to act in the gravity line  $Gg$  of Fig. 61, on the line of rupture  $CE$ ;

$GR$  represents the reaction of the bank and

$$P = W' \times \frac{d}{h} \text{ the reaction of the wall}$$

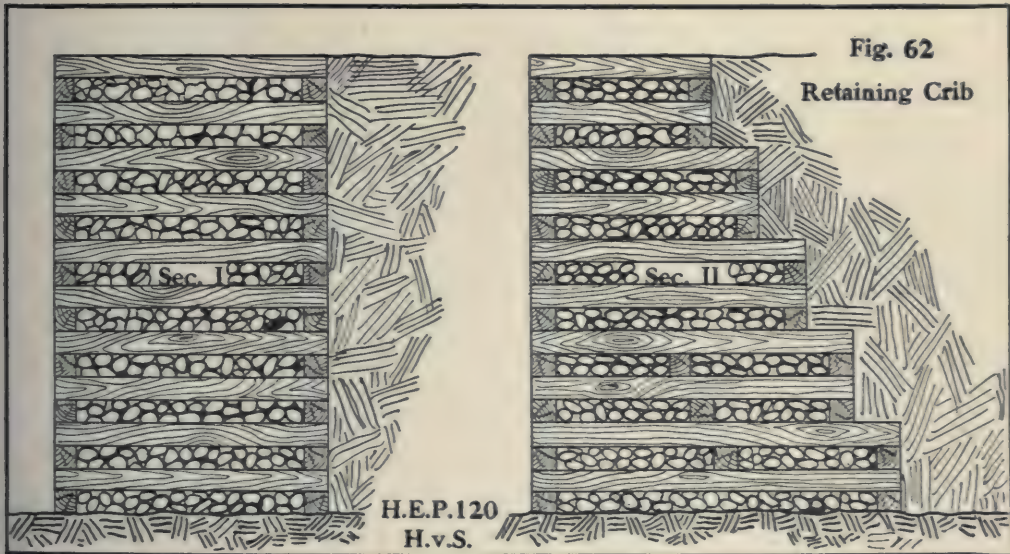

$= W'rh d \times \frac{d}{h} = wrd^2 = wrh^2 \tan^2 a$  and its horizontal component  $HP = P \cos \phi = w'rh^2 \tan^2 a \cos \phi$ , which is the force to be resisted by the wall and is assumed to be concentrated at a point  $O$ , being  $\frac{h}{3}$  above the base  $EF$ .

The moment of pressure is the product of  $P$  into the lever arm  $L' = \frac{h}{3}$

$$MP = \frac{w'rh^3}{3} \tan^2 a \cos \phi.$$

Diagrams 31, 32, and 33 give values of  $MP$  for different heights and classes of material; the weight  $w'$  and the angle of repose  $\phi$  are those given in Article 52.



The wall should be designed for a safety factor of "2" or  $MW = 2$  MP. Ex. 1 of a timber retaining crib 20 feet high, the fill being of gravel and sand;

$$\begin{aligned}\phi &= 28^\circ, a = 31^\circ, \tan a = 0.60, \cos \phi = 0.883, r = 0.5, \\ &h = 20, w' = 94; \\ A' &= rh^2 \tan a = 0.5 \times 20^2 \times 0.60 = 120 \text{ sq. ft.}; \\ W' &= wrh^2 \tan a = 120 \times 94 = 11,280 \text{ lbs.}; \\ P &= wrh^2 \tan^2 a = 11,280 \times 0.6 = 6,768 \text{ lbs.}; \\ HP &= wrh^2 \tan^2 a \cos \phi = 6768 \times 0.883 = 5,976 \text{ lbs.}; \\ MP &= \frac{wrh^3}{3} \tan^2 a \cos \phi = 5976 \times 6.66 = 39,800 \text{ ft. lbs.}\end{aligned}$$

Fig. 62, section I, is a crib 20 feet high and 12 feet wide filled with gravel and sand.

$$\begin{aligned}A &= 240 \text{ sq. ft.}, & A \text{ fill} &= 0.75 A = 180 \text{ sq. ft.}, \\ w &= 94 \text{ lbs.}, & L &= 6 \text{ ft.}, \\ W &= 180 \times 94 & &= 16,920 \text{ lbs.}, \\ MW &= WL = 16,920 \times 6 & &= 101,520 \text{ ft. lbs.}, \\ SSF &= 16,920 \div 11,280 & &= 1.5, \\ PSF &= 101,520 \div 49,800 & &= 2.04.\end{aligned}$$

Fig. 62, section II, represents the practical design of such a timber crib abutment with its bank side stepped.


Fig. 63, section I, is of a gravity retaining wall of cyclopean or monolithic concrete 20 feet high and 8 feet wide.


$$\begin{aligned}A &= 160 \text{ sq. ft.}, & w &= 140 \text{ lbs.}, & L &= 4 \text{ ft.}, \\ W &= 22,400 \text{ lbs.}, & MW &= 89,600 \text{ lbs.}, \\ SSF &= 2 & PSF &= 2.25.\end{aligned}$$

Fig. 63, section II, shows the practical design with a battered face and footing.


Diagram 32 gives quantities of material required for gravity-concrete retaining walls of different heights.

*Concrete-steel retaining walls* consist of a vertical concrete-steel curtain wall divided into spans of equal lengths by concrete-steel counter-

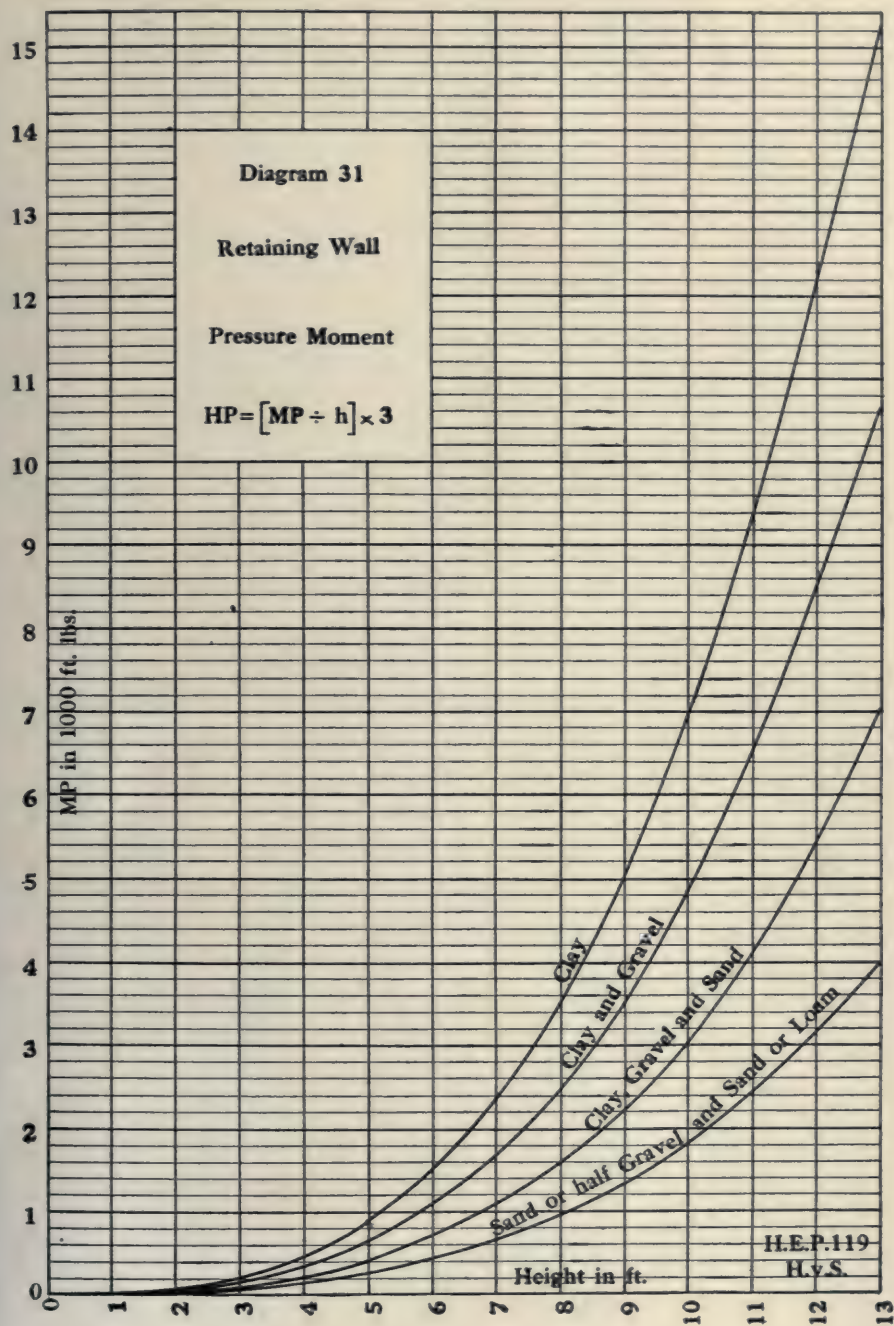

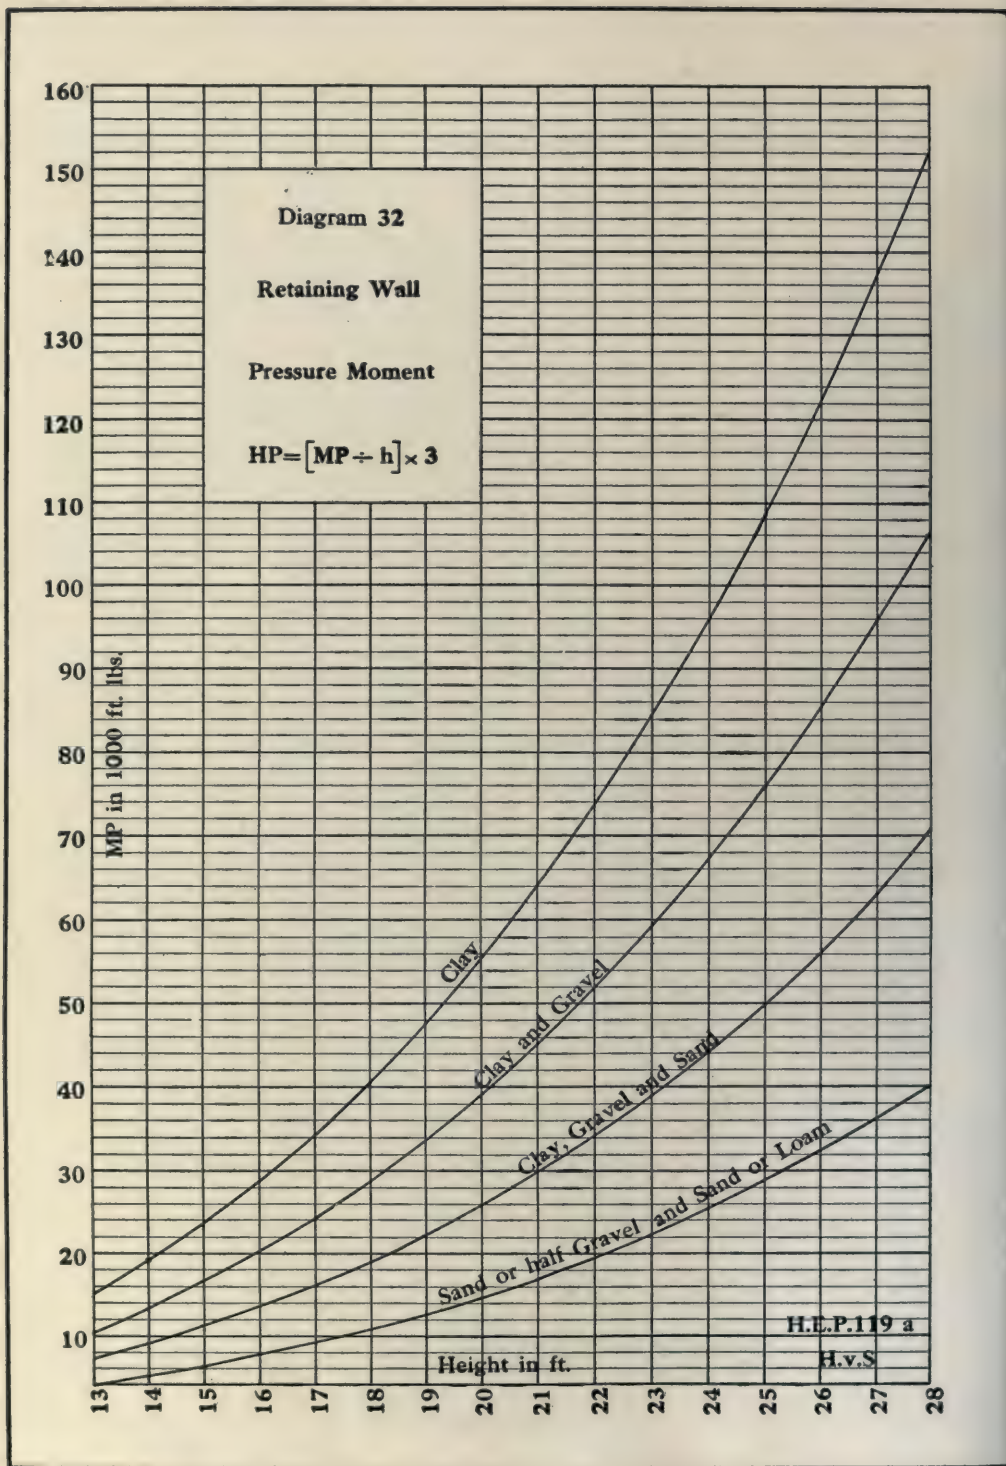



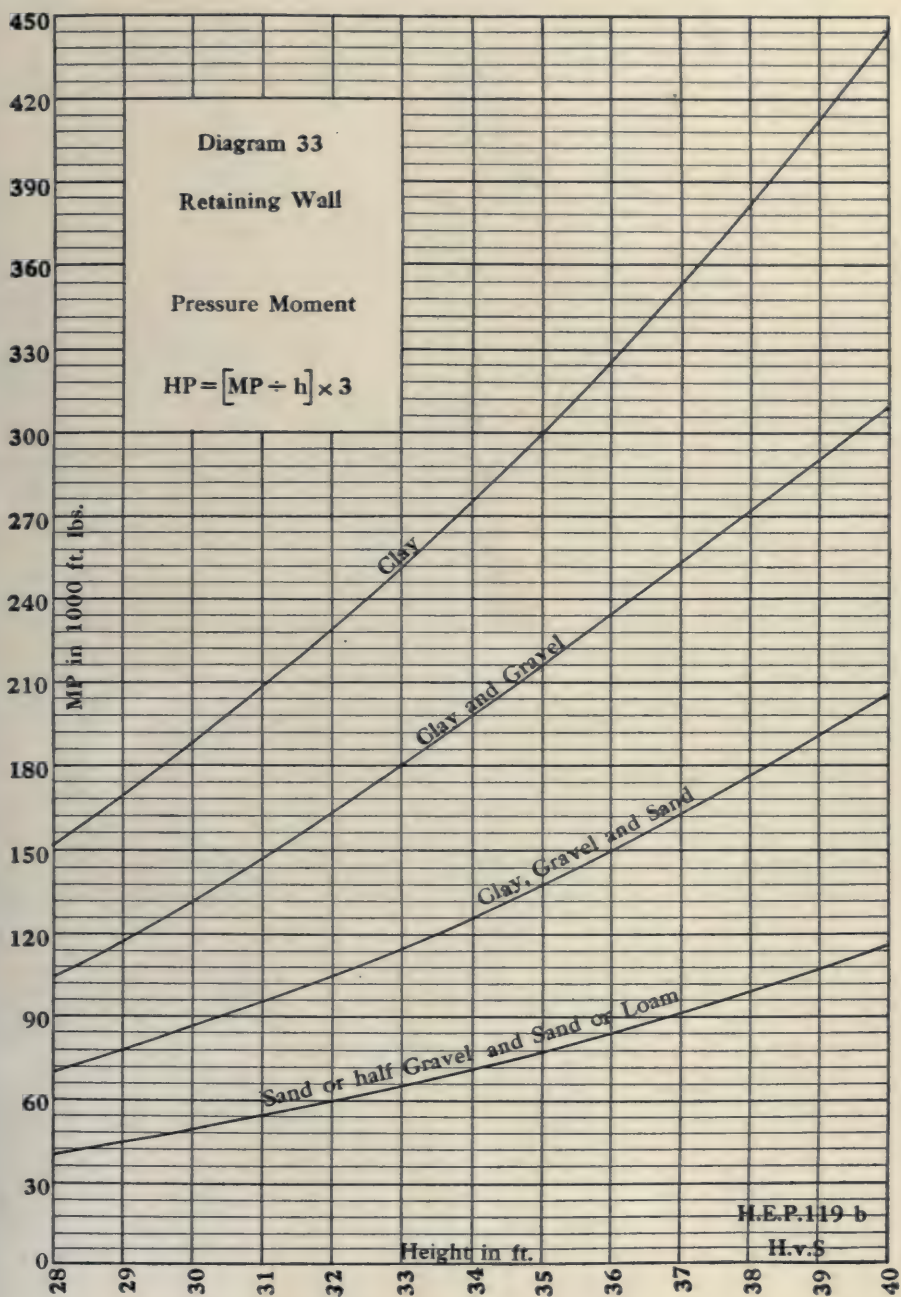


forts. The overturning forces are transmitted to and resisted by the counterforts, the curtain wall between them being designed as beams fixed at both ends and uniformly loaded.

Fig. 64, sections I and II, HP as before =  $wh^2 \tan^2 a \cos \phi$ ; the thrust at the counterforts is

HPsp =  $wh^2 \tan^2 a \cos \phi \times \text{span}$ , and the bending moment at FE

$$M_o = \frac{w'rh^3}{3} \tan^2 a \cos \phi \times \text{span ft. lbs.}$$

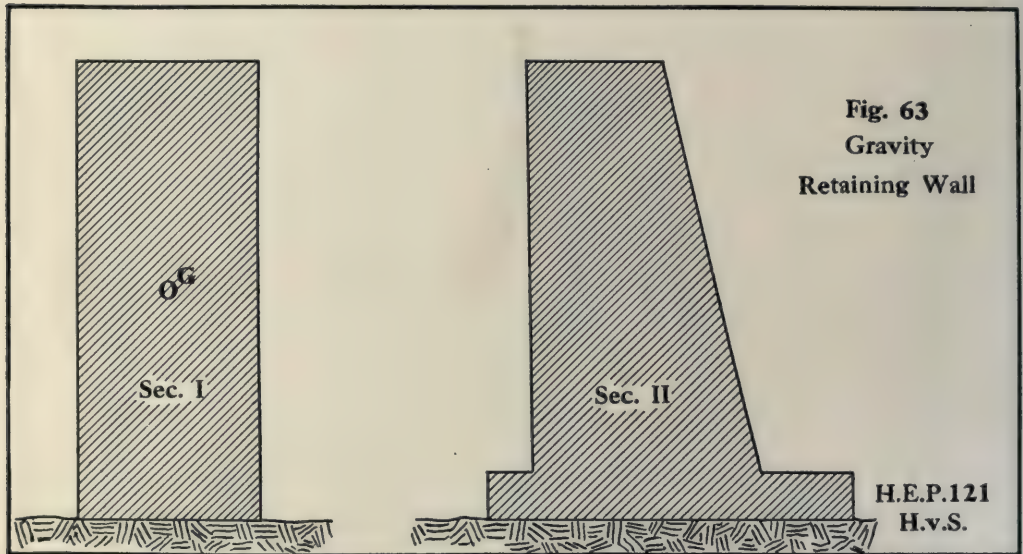

$Mo4$  in inch pounds, in which 4 is the assumed safety factor, is the force which must be safely resisted by the section at the base of the counterfort the top of which, at the crest of the retaining structure, may be the practicable minimum. The force against the wall between counterforts is assumed to be the uniform pressure of  $HP = w'h^2 \tan^2 a \cos \phi$  acting at a point which is  $\frac{h}{3}$  above the base.

Fig. 64, section III, ABC represents the pressure area acting against the wall BC.

$A' = \frac{hb}{2} = HP$ ; considering the wall to consist of  $x$  horizontal beams each one foot high and of the length of the span, and denoting

the vertical distance of the centre of the beam to the top of the wall by  $n$  feet, then is the load per linear foot of beam

$$W \text{ at } B = \frac{2HP}{2h} \text{ and for any successive beam } x \text{ from equation}$$

$$h : n = b : x, \text{ and } x = \frac{2HPn}{h^2}.$$

The bending moment against a beam *fixed* at both ends and uniformly loaded is  $M_o = \frac{2HP}{12h} \times \frac{1^2}{12} = \frac{HP l^2}{72h}$ ; with a safety factor of 4  $M_o 4 = \frac{HP l^2}{18h}$  to which the concrete-steel wall at the bottom must be adapted.

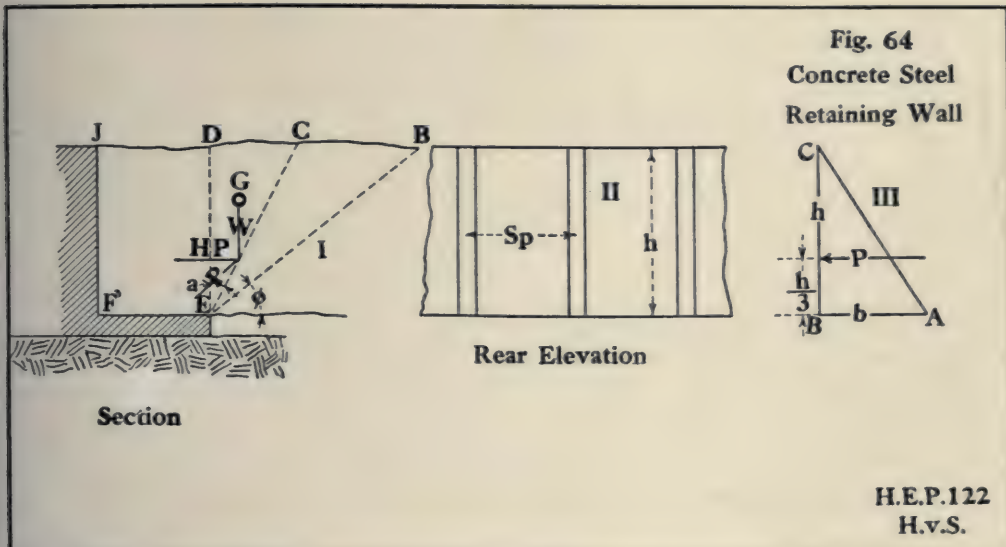


Fig. 65 shows the section and elevation of a concrete-steel retaining wall. Counterforts are spaced 10 feet and are constructed of  $x$  concrete; curtain walls are of  $xx$  concrete.

$$h = 20 \text{ feet, } \phi = 28^\circ, \quad r = 0.5.$$

Counterforts                      HP = 5976 lbs.,  
    MP = 39,800 ft. lbs.  
 for a span of 10 feet      MP = 398,000 ft. lbs.  
    Mo 4 = 19,104,000 inch lbs.,

for a section 12 inches wide the depth at the bottom of the counterfort




section "t" is, from Art. 53,

$$3620 t^2 = 19,104,000,$$

$$t = \frac{19,104,000}{3620} = 72.6 \text{ inches},$$

and the steel area  $q = 0.077 t = 5.6 \text{ sq. inches};$

the practical section is 12 inches wide and 6 feet deep.

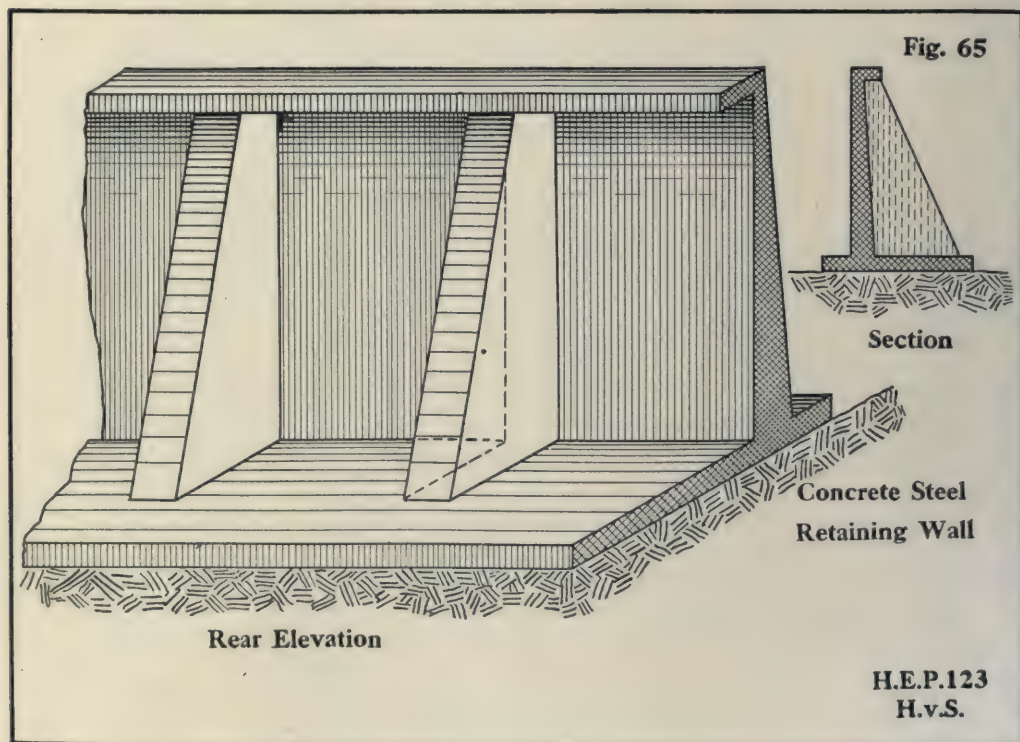

*Curtain wall*, the bottom beam from

$$M_o 4 = \frac{H P l^2}{18 h} = \frac{5976 \times 120^2}{18 \times 20} \times 4 = 239,040 \text{ inch lbs.};$$

the actual length between counterforts is only 9 feet, but it is taken at the full span; thickness  $t$  is from

$$5505 t^2 = 239,040, \quad t = \sqrt{\frac{239,040}{5505}} = 6.6 \text{ inches};$$

the minimum practical section of the wall will be 12 inches at the bottom and 8 inches at the top with the proper section of reinforcing steel.

Returning to the consideration of the *spillway abutment*, it has already been noted that it is a retaining wall only in part,—that is, the portion covering the spillway end is not chargeable with resistance to bank pressures which at that point are transmitted to the spillway proper; only the top and the downstream portion of the abutment, which overlap the spillway, partake of the duties of retaining walls and should be designed in accordance with the theory herein developed and as shown on Fig. 65 in plan, elevation, and section.

Approximate quantities of material required for concrete-steel abutments of various heights have been given in Part I, Diag. 12, Article 23.

*The selection of the spillway abutment type* is practically entirely determined by a consideration of cost; the crib abutment, like the timber spillway, will in time call for repairs, however, of no such cost and frequency as in the case of the spillway; the gravity and concrete-steel structures are both of like permanent character.

In many cases waste-flumes, as will be noted later on, are most economically arranged through the abutments, in which event the concrete-steel type has the decided advantage on account of its small transverse section as compared with the others; this is also true when the water is to be diverted from the upper pool by means of a pressure line, the intake to which is frequently most conveniently and economically arranged through the abutment.

**ARTICLE 73. *Reservoir Dams.***—When the spillway completes the closing of the river valley and the empounding of the upper pool,—*i.e.*, in case the river flows between natural rock banks, which rise above the greatest flood level,—no other control works are required in connection with the dam; but where this is not the case, as in the event of the spillway taking up only a portion of the river valley, generally the natural width of the stream, and the main valley banks are at a distance from the river proper, the reach from the spillway to these banks, where they rise to the required height above the greatest overflow, must be closed by additional structures, which really form *the dam*, serving the purpose of empounding only,—that is, no flow is to pass over it at any time. These structures may be of a variety of types, generally classified as reservoir embankments and bulkheads, the first consisting of rock or earth or both, the latter of masonry, concrete, or concrete-steel.




*Earth and rock-fill dams* have been constructed for centuries to the greatest heights. Their design must be such that the weight represented by their section safely resists the hydrostatic pressure of the water which stands against them, that no water passes under or through them, and that their exposed slopes are safeguarded against erosion due to rainfall. The stability theories heretofore developed in connection with spillways and retaining walls also apply in this case, and, as the pressed surface of these structures is always inclined from the vertical, the pressure theories involved are specifically similar to those discussed in behalf of gravity spillways, with this exception, however, that, instead of  $H$  exceeding the height of the structure, as in the spillway, it is always less than the height of the dam, the highest water level should not rise nearer than 3 feet to the dam crest. Assuming the limits of spillway overflow as before at 0.2 of their heights, and providing this minimum clearance of 3 feet, the height of reservoir structures  $H'$  will be at an elevation, referred to the footing level of the spillway, of  $H' = 1.2 S + 3$ , while their actual height will depend upon the elevation of the location they occupy.

*Preventing water from passing under or through* a rock or earth-fill dam can be accomplished successfully only by an efficient *cut-off* below its foundation and a *core* of some impermeable material in its body. The subject of cut-off is to be treated identically as heretofore discussed in connection with the spillway foundation, and everything that has been there presented applies here; and the core is the upward continuation of the cut-off, and like it may be of various types,—namely, a timber or steel curtain, clay or concrete wall, the choice depending upon the height of the structure, availability of material and its comparative cost. The core is joined to the abutment and a drain-pipe is placed at its base on the upstream side, passing through the abutment and discharging below the spillway.

Fig. 66 shows the section of an earth and rock-fill reservoir embankment, being chiefly conditioned with a view to the preservation of its slopes, and when this is fulfilled its area and the corresponding weight are largely in excess of those required for its stability against the active pressures. The upstream slope is constantly exposed to the water, which may penetrate into the material and have a tendency to wear away the surface, which can be counteracted only by giving it an inclination of not less than two and one-half horizontal in one vertical, and provided the material of which it is formed is of the proper kind and is placed in



the manner which will be further on described. At the water surface especially will the wave action, ice, and impact of floatage make inroads into the unprotected bank, and the upper portion of this slope, for a depth covering the entire range of surface fluctuations, must be covered by a *pavement* properly laid, and in fact it is good practice to extend this pavement to one-third the water's depth. When the best material for earth dams cannot be obtained, it may be advisable and prove economical

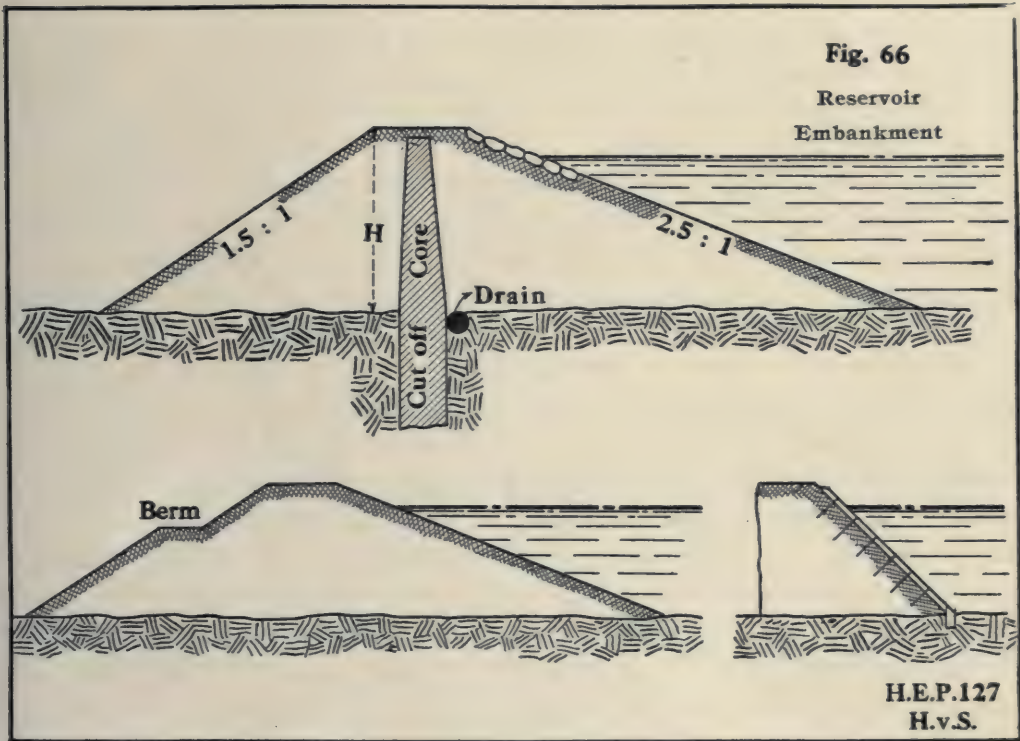



to flatten the upstream slope and cover it entirely with a blanket of concrete of a lean mix, which may be maintained in position by driving iron rods one inch in diameter and eight feet long, spaced 8 ft. c. to c., into the bank, their upset ends being imbedded in the concrete sheet; such rods are most conveniently driven by means of a pipe hammer, a five-feet long piece of inch-and-a-half iron pipe closed at one end, which is slipped over the rod and used as a driver, being exchanged for a shorter piece as the rod goes down. As the downstream slope is exposed to the rainfall, its inclination should be at least one and one-half horizontal in one vertical and it should be covered with *grass turf*; the Bermuda variety

is especially valuable on account of its long roots and thick growth. When the slope exceeds 30 feet in length, it should be broken midway by a horizontal *berme*, not less than five feet wide, to check the down-flow of the run-off and thereby break its force. The *crest* should be of a least width equal to half the height and slightly rounded upward in the centre to prevent the collection of pools of water; it should preferably *not* be used as a highway, but, if serving this purpose, it should be covered with road-metal. It is a good practice to plant *trees* along the crest, as their roots will strengthen the bank; they should, however, not be set closer than five feet to the break of the crest into slope, nor should they be of rapid growth or of widely branching type which present large surfaces to the wind.

*The selection of the material* for reservoir embankments deserves the most careful consideration. There is a great difference between the requirements of a railroad embankment and one to maintain a reservoir; in the former proper drainage and the confining of the slope toes will generally be a sufficient guarantee for its permanency, and apparent weak places are readily accessible and can be strengthened in time; not so with the reservoir structure, one side of which is constantly submerged, where leaks are not easily traceable and are more difficult of access. The desideratum is an impervious, homogeneous mass, which may be classed as *puddle*, consisting of such proportions of gravel, sand, and clay that the voids in the mass are practically filled. Gravel, from the largest size passing a six-inch ring down to coarse sand grains, packs with 34 per cent. of its volume in voids, and if deposited in shallow layers, not exceeding six inches in depth, and covered with a two-inch layer of fine sand, the latter can be completely washed into the gravel strata, as can a succeeding layer of one inch of clay or preferably loam. This represents an expensive programme and will rarely be adopted, but is outlined here as yielding the ideal conglomerate for reservoir banks. In practice gravel, sand, and loam are spread jointly in 6 to 8 inch deep layers by means of horse-scrapers, well watered from sprinkling carts, and compacted with heavy iron rollers; all operations and handling of materials should be so arranged as to co-operate in the most thorough compacting of the mass. This treatment would be incomplete without recording a most emphatic warning against the dumping of material from cable-way or derrick buckets or from tram-cars operating on a trestle, as material so deposited *does not compact nor mix* as required for reservoir embankments.



Fig. 67  
Reservoir Bulkhead

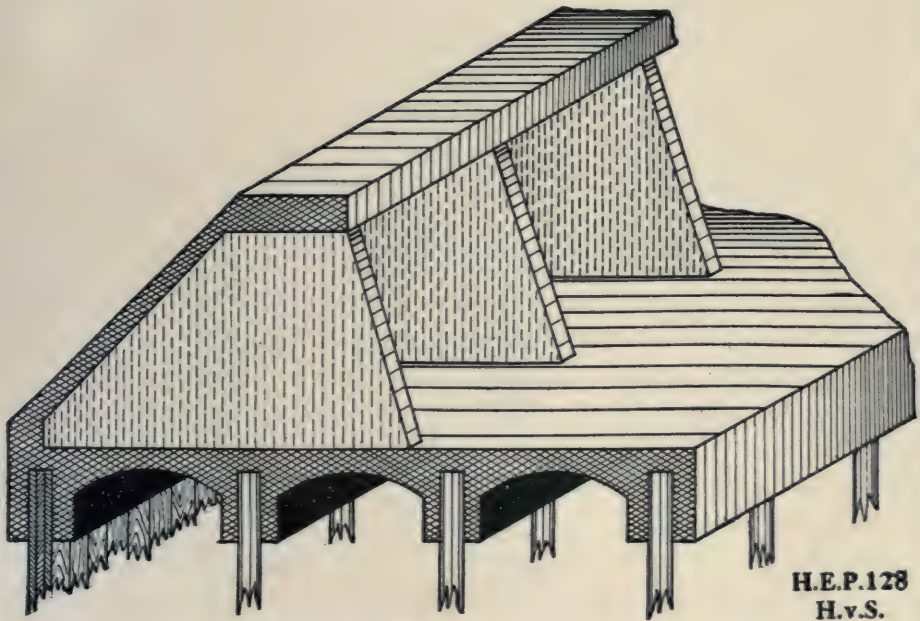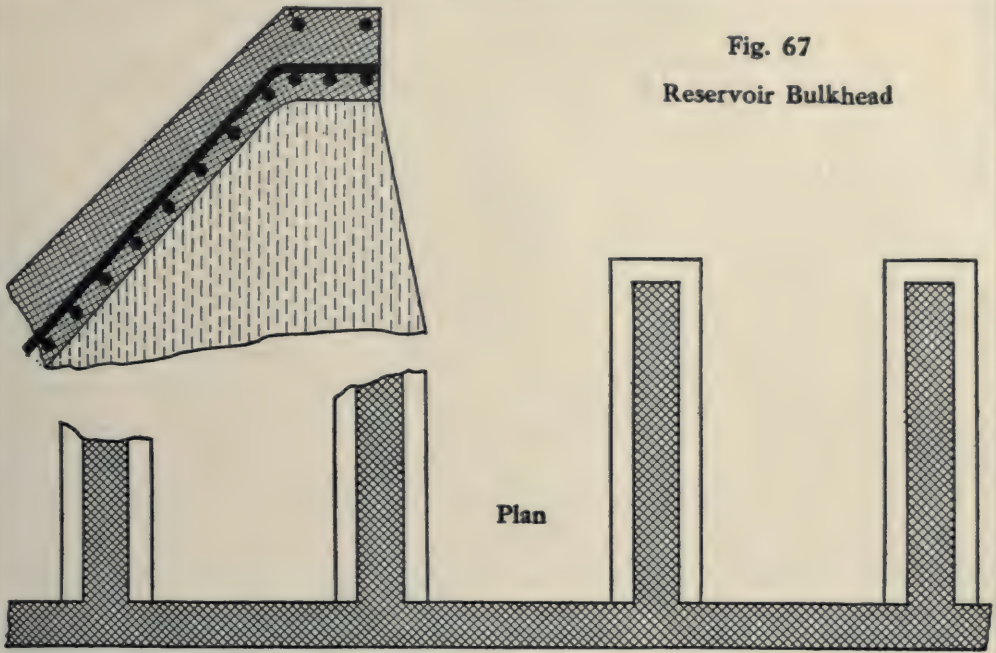



*Clay should be used but sparingly*; in large masses it represents the most unstable and treacherous material, and should be shunned, for the purpose of reservoir embankments, as quicksand in a railroad cut. Clay expands and contracts, in ratio of its degree of dampness, to such an extent that no bank largely formed of it, no matter of what dimensions, represents stability or permanency.

*Sand*, confined in place, forms an excellent bank material, and, as before stated, when combined with gravel and loam, it yields the best.

An earth embankment with a concrete core consists of two parts,—the upstream and the downstream,—the exposure and wear of which differ greatly; the former is submerged and subjected to wave action and whatever effect floatage and ice may have upon it, while the latter merely adds to the weight of the whole and is exposed to the rainfall. It appears, therefore, altogether logical that the two parts should be differently composed; for instance, the upstream section might be built of the before-described puddle, and the downstream of a loose rock-fill with sand and loam washed into the voids and a sufficient thickness of loam slope covering on the top of it to give sustenance to a grass turf. If the core-wall is of sufficient stability, such an embankment will be fully as effective as if it were formed entirely of puddle material, while, with rock available in the vicinity, its cost will be considerably less.

*The hydraulic-fill dam* is a specific type of earth dam, because of the method of its construction, which consists in washing the desired material from a higher bank, conducting it in flumes passing above the dam site, and depositing it in a semi-liquid state. By this process a very compact and thoroughly mixed mass may be secured, and this represents the best method, provided suitable material is in close proximity at such elevations that it can be sluiced by gravity for the major portion of the dam, and provided that the cost of pumping is not too great. Some high structures of this class have been erected on the Pacific coast.

Approximate quantities required for earth embankments of various heights are given in Diagram 14, Article 26.

*Concrete-steel bulkheads* (Fig. 67) are available for reservoir duty. They consist of an inclined concrete-steel shell supported by buttresses of like construction, their designs being based upon the same theories heretofore developed in connection with the gravity spillway, with this important exception, however, that no water is to pass over them, as they should rise to the same height as that given for reservoir embankments.


The connection of such bulkheads with the spillway is by means of concrete-steel abutments, and, in alluvial locations, they are founded upon bearing piles and concrete base with a cut-off in the manner described for the spillway. Diagram 15, Article 26, gives approximate quantities of materials required for concrete-steel bulkheads of various heights.

The decision as to the type of reservoir structures is, like that of abutments, chiefly a matter of cost comparison.


ARTICLE 74. *Appurtenances of Spillways and Dams.*—Provisions must be made to unwater the upper pool in order to examine and repair the dam works on that side and to remove accumulations of sediment and drift. Underflow sluices, already described in connection with the open spillway design in Article 68, are available for this purpose, and can be arranged through the spillway, the abutments, or reservoir dam, being formed of wooden stave or steel plate pipes or of concrete-steel culverts or conduits.

*The theory of discharge through submerged orifices* is based upon the fundamental law of flow of water, expressed

by  $v = \sqrt{2gh}$ ,  $v$  being the velocity per second, in feet, with which a body, falling freely in a vacuum, passes through the height  $h$ ,  $g$  representing the acceleration of gravity in feet per second = 32.2 ft., which of course changes with the distance from the centre of gravity, the earth's centre, the above value being sufficiently correct for these requirements.

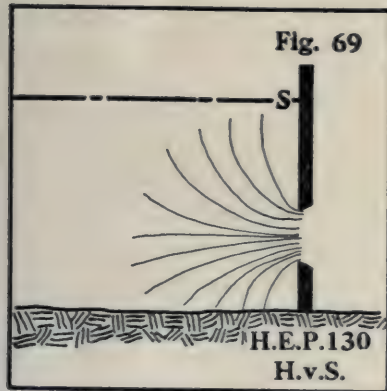

opening,  $S$  is the surface level of the water; then  $Sl - ml = Sm$  is the head  $H$  under which the water passes through the opening. The theoretical discharge would therefore be expressed by  $Q = \text{area of opening in square feet into } v \text{ theoretical velocity}$ , but actually both of these factors are reduced from their theoretical values by coefficients of area and of velocity.

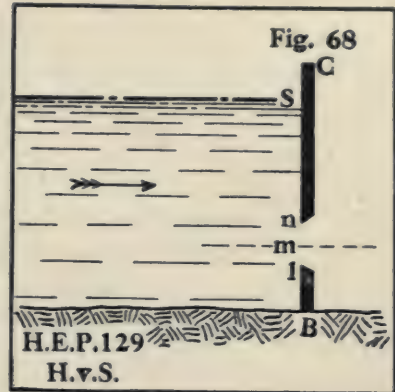

In Fig. 68  $CB$  is a partition or wall,  $nl$  is a square, rectangular, or circular



Fig. 69 illustrates the characteristics of the actual approach of the water to such an opening, from which it is evident that a considerable part finds its way to the opening along curved paths, by which some of the energy which moves the water is lost in friction, and the theoretical velocity due to  $H$  is not fully realized when the water reaches the opening; this reduction is expressed by a coefficient of velocity which has been fixed from the results of many observations, for the practical application to this purpose, at a value of about 0.98.

Fig. 70 shows the manner in which the water enters the opening and the characteristics of its flow in its passage through the orifice, indicating the close adherence of the films of water to the full perimeter of the opening at the upstream edge, and how, by continuing for a time their curved approach directions, a distinct contraction is formed in the body of the moving water at  $CC'$ , followed directly by its gradual expansion, and by experiments carried on for long periods it has been found that

$$CC' = 0.7854 \text{ nl, and } mm' = 0.5 \text{ nl.}$$

It is apparent that  $CC'$  represents the smallest efflux section and in it must prevail the highest velocity, which, however, cannot exceed the velocity of origin, namely that due to the head  $H$ . The greatest volume of discharge is therefore represented by that passing through the section at  $CC'$ , which is the actual volume, to wit:

$$Q = \text{area at section } CC' \times \text{theoretical velocity} \times 0.98,$$

$$CC' : 1n = 0.7854 : 1 \text{ when}$$

$$1n = 1 \times 1 \text{ then } CC' = 0.7854^2 = 0.616, \text{ or when}$$

$$1n = 2 \times 5 \quad CC' = 1.57 \times 3.927 = 6.16, \text{ or,}$$

if the entrance be of circular form, the area being  $= 0.7854 d^2$ , and  $d = 1$ ,

$$\text{then } CC' = 0.7854^2 = 0.616;$$

in other words, 0.61675 is the coefficient of contraction, and the ratio of the actual opening area, of whatever shape, which may be accepted as the efflux area and as the actual discharge through an opening in a thin vertical wall is



$$Q = 0.61 a \times 0.98 \sqrt{2gh} = 0.604 a \sqrt{2gh} = 4.85 a \sqrt{h}.$$



In Fig. 71 the same principles are applied to an underflow sluice,  $nl$  is the entrance or intake through which the water enters from the upper pool and, as before, contracts at  $CC'$ ; by this contraction, in the interior of a closed conduit, a vacuum is formed around the body of flowing water, and the latter, acting under the influence of the original energy, expands again, and, as appears from many experiments, its velocity is not reduced by reason of its flow area being increased, but the volume of efflux at  $EE'$ , the section where the entire area of the conduit is again filled with water, is greater than at  $CC'$ . This increase has been determined at about 25 per cent. over the efflux from a thin-wall opening, by which the coefficient of discharge from an underflow sluice becomes  $0.61675 \times 0.98 \times 0.25$

$= 0.7555$ , and therefore  $Q = 6a \sqrt{H}$ , provided the free efflux is at or near the section  $EE'$  where the water first refills the conduit section, which point is about  $2.75 nl$  from the intake section  $nl$ .

The same characteristics prevail if the conduit protrudes into the upper pool for a similar length  $= 2.75 nl$ , but, when it becomes longer than this, energy is expended in overcoming perimeter roughness, which in turn diminishes the velocity and therefore reduces the discharge; this enters upon the theory of "flow through pipes," which is treated in like detail in connection with the discussion of diversion works. Many refinements may be added to above outlined theory when the application is for the purpose of accurately measuring volumes by efflux

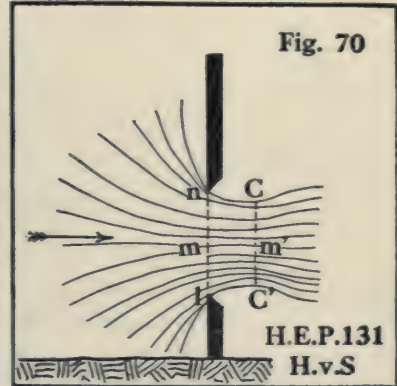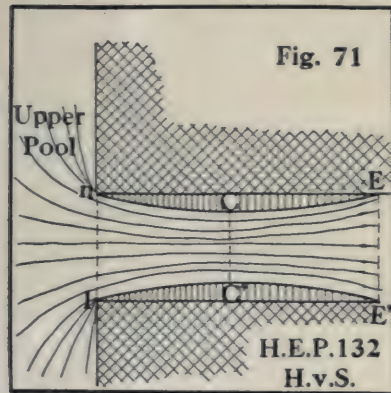

from orifices, but, for the designing of works herein considered, no commensurate advantages can be secured by such reasoning, and the values are sufficiently correct for this practical use when expressed, for square and rectangular openings, by  $Q = 6a \sqrt{H}$ , and for circular openings, by  $Q = 4.75 d^2 \sqrt{H}$ , where  $H$  is always the head above the centre of the intake,  $a$  is area of the intake in square feet, and  $d$  is diameter of a circular intake.

The areas of the underflow sluices required to *draw down the upper pool in a given time* can be determined only if the storage volume is known; if this were  $A$  and the head maintained constant, then a quantity equal to  $A$  would pass through the sluice in  $A \div 6 a \sqrt{H}$  seconds of time, and with a constantly dropping head the time  $t = 2 A \div 6 a \sqrt{H}$ ; this, however, represents only the stored volume, to which must be added the continuous flow.

*Example.*—Given an upper pool one mile long, 200 feet wide, and 30 feet deep at the spillway, representing a total storage volume of about 16 million cubic feet, to which is to be added the continuous low-flow volume of 1000 cubic second feet, and the pool is to be unwatered in 6 hours; then for the storage volume alone from  $t = 2A \div 6 a \sqrt{H}$ ,  $21,600 = 32,000,000 \div 30a$ ,  $H$  being taken at 25 ft.,  $a = 32,000,000 \div 648,000 = 50$  sq. ft., to which must be added sufficient sluice area to discharge the continuous flow of 1000 sf. flow  $= 1000 \times 21,600 = 21,600,000$  cubic feet,  $21,600 = 43,200,000 \div 30 a$ , and  $a = 43,200,000 \div 648,000 = 67$  sq. ft., or the total sluice area required being  $50 + 67 = 117$  sq. ft., which, if arranged in two sluices, would call for an area in each of 60 square feet, and the practical dimensions would be  $8 \times 8$ , or if circular, each sluice would be represented by an 88-inch pipe.

*In open spillways* the area of sluices will always exceed that required for unwatering the upper pool, as they are proportioned to control the flood discharge of the stream.

The construction designs of sluices have been treated generally in connection with open spillways in Article 68, and so have the different gate devices.

When *sluices* are arranged *through reservoir dams* or embankments, the considerations involved do not differ from those herein discussed; the structural designs must provide sufficient safeguards against erosion of any portion of the embankment at the sluice entrance and along its location through the body of the fill.

*The operation of the gates* is most conveniently arranged by a well rising upward from the sluice in the downstream portion of the embankment and terminating at some convenient elevation in a gate-house.

When *log chutes* are required, they may be of the general design of overflow sluices, as described in connection with the open spillway in Article 68, with the addition of *floating booms* to intercept and guide the logs into the sluice, a sufficient *operating platform* above the log chute



from which the logs can be steered through the sluice, and, if the sluice floor is more than 5 feet above the lower pool level, of a *log apron* below the sluice, which consists of an *incline* formed of timber trestles or cribs along which the logs will pass into the lower pool without being damaged; the incline should not be steeper than 3 horizontal in one vertical and the depth of the water at the incline toe should equal half the vertical height of the apron. The log chute is best placed at that end of the spillway where the abutment can be utilized to give support to the log apron, and, if its operation does not interfere with the diversion or power station programme, the power end of the spillway is the preferable one.


In many States the law requires the placing of *fish-ladders* in any structure which obstructs the normal flow of streams, in order to enable the migrating species to reach the upper parts of the watercourse during the spawning periods. The design for fish-ladders may be selected from a variety of types, generally consisting of a trough leading from the spillway crest, at a shallow overflow sluice, to the lower pool. The inclination of the fish-ladder should be from 8 to 10 horizontal in one vertical, its width not less than 6 feet, and the depth such that water will stand not less than 18 inches deep in the steps of the ladder as shown in Fig. 72, where the arrows indicate the leaping or swimming passage of the fish. The structure is best placed at a spillway end where it may find support at the abutment, which latter is to be extended sufficiently downstreamward; the ladder proper may be supported on timber or steel trestles or on masonry piers, the choice depending chiefly upon the exposure of the ladder to the overflowing water. In open spillways, where the overflow is under control, fish-ladders may be of timber construction, with proper consideration for winter conditions; in connection with solid spillways of considerable overflow, fish-ladders should be of masonry construction. For high spillways the ladders are best arranged in several flights.

*Ice-Fenders*.—In northern latitudes where ice forms 6 inches and thicker, the resultant thrust against the spillway can be greatly diminished by securing ice-fenders to the upstream face of the solid spillway; these consist of two or more 12-inch square timbers placed as stringers one upon another with staggered joints and secured to the spillway by means of screwbolts set in the masonry; the top stringer is flush with the spillway crest, with an up-slant so that ice will rise up under pressure.


*Flashboards* are devices by which the upper pool level is temporarily raised for the purpose of accumulating an increased volume of water





Fig. 72

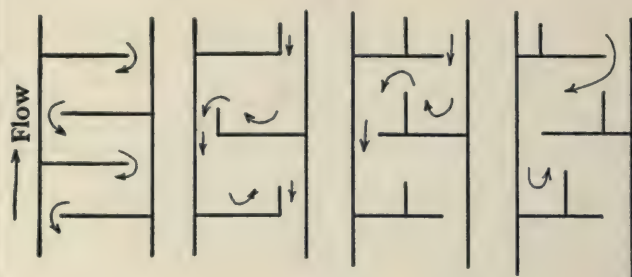


Timber Fishladder

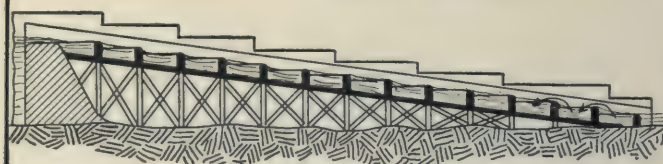


Longitudinal Section

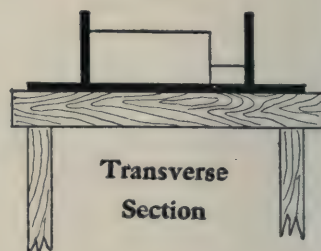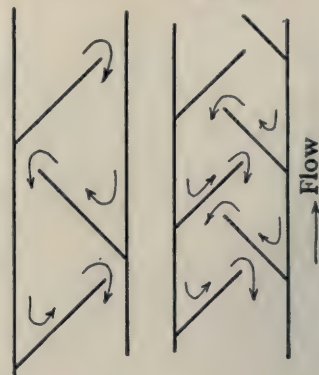

Transverse Section

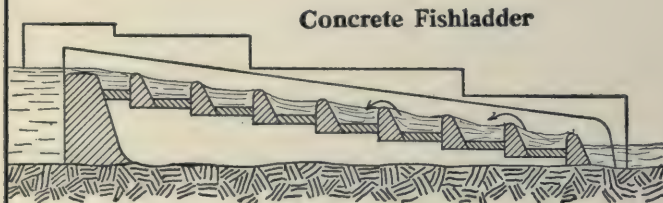


Longitudinal Section

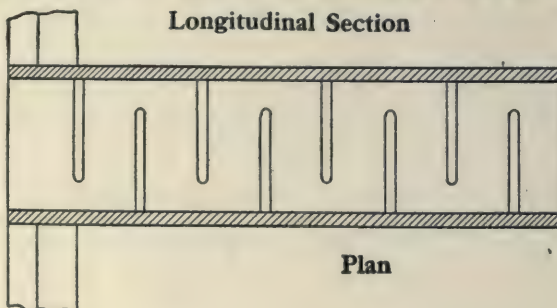

Plan





Transverse Section

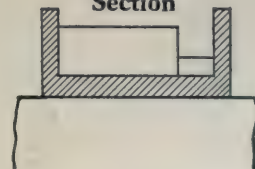

H.E.P.133  
H.v.S.

Fig. 73

Flashboards

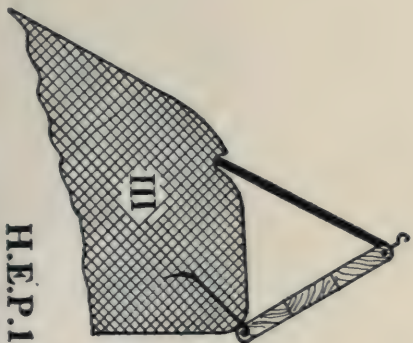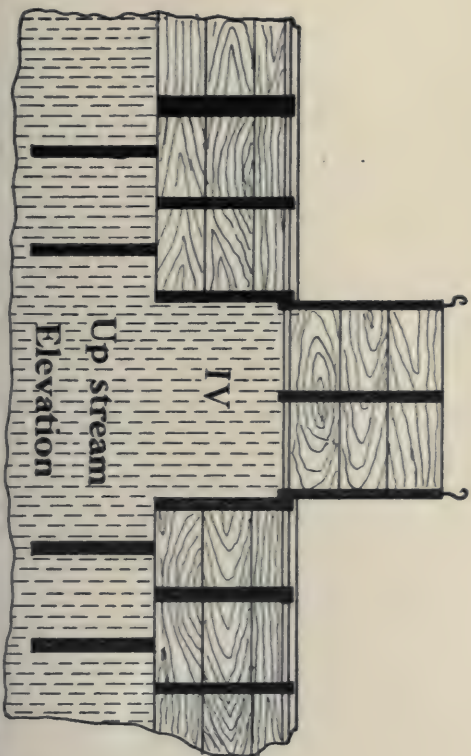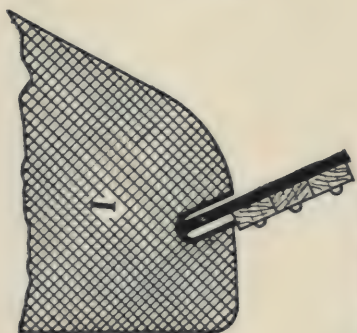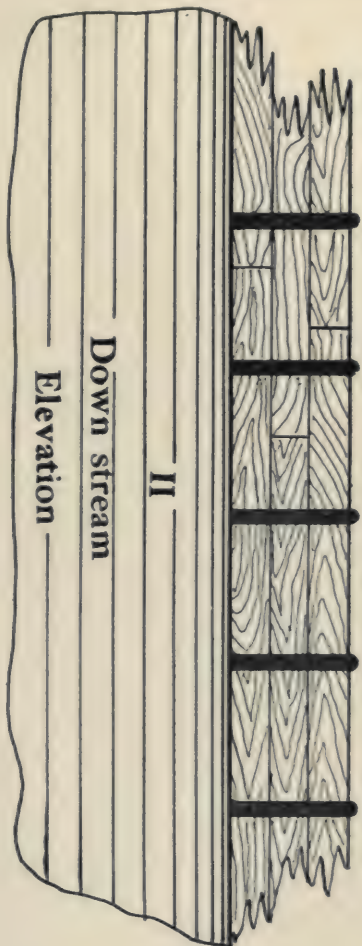

H.E.P.134  
H.v.S.


during a non-operating period. In this manner the upper pool *by pondage* is utilized as a storage reservoir, principally during the low-flow periods, by placing some movable addition upon the spillway crest, arresting and holding the natural flow in the upper pool, no water being allowed to overflow the spillway or pass through the turbines during a certain period, generally some portion of the night, and then using the natural flow plus the accumulated volume during the operating period. When this proceeding is feasible,—which is not always nor generally the case, because it interferes with and disturbs the natural conditions of the flow in the stream and thereby is likely to interfere with the rights and ownership, in and to the water, of others,—and when the operating period can be confined to ten hours, the power output of the continuous flow can in this manner be practically doubled.

Many different devices are employed for flashboard service, mechanical, automatic, and hand operated, but their selection should be guided by the conditions under which they are to be used as relating to seasons, periods, and frequency of their service. When they are to be employed during the winter, in northern latitudes, the ice conditions must be considered. Fig. 73 shows different types of flashboards. In sections I and II a *plank flashboard* is set on edge upon the spillway crest resting against strain pins, inclined downstreamward and placed into holes left in the spillway masonry, or between such strain pins, the latter being arranged in a double row and staggered; these planks may be so placed by being handled from a platform above or from flat-boats held in place above the spillway by guide-lines secured to shore points or to a ferry line crossing the stream above the spillway. This type of flashboards answers well during open seasons for short spillways; the strain pins are of one-inch wrought iron; it is advisable not to fix them permanently into the masonry, but to leave holes into which they are readily set; the planks should be two inches thick and from 8 to 12 inches wide, though the narrower size will be found preferable on account of the greater ease of handling them; and the planks have secured to them, on their sides, iron hooks so set that they can easily be grappled into. The planks must be of uniform thickness and edged so that they will match up to a water-tight wall in any position. It requires two men to set or remove these flashboards; they are inexpensive and can be quickly handled.

Sections III and IV show a *shutter flashboard* framed of two or three planks in lengths from 6 to 10 feet and swung from rod hinges on the



upstream side of the spillway. The shutter is bound by iron strapping and has secured to it two or more strut rods by which the shutter is supported in an upright or inclined position when erected, these rods falling into recesses or grooves left in the spillway crest for that purpose. They are operated by hand, being raised to the surface, strut rods thrown over on the downstream face, and the shutter then raised up where it will be held by the water pressure of the rising upper pool; or the shutters may be arranged to rest against stationary or removable strain pins as in the case of the plank flashboard.

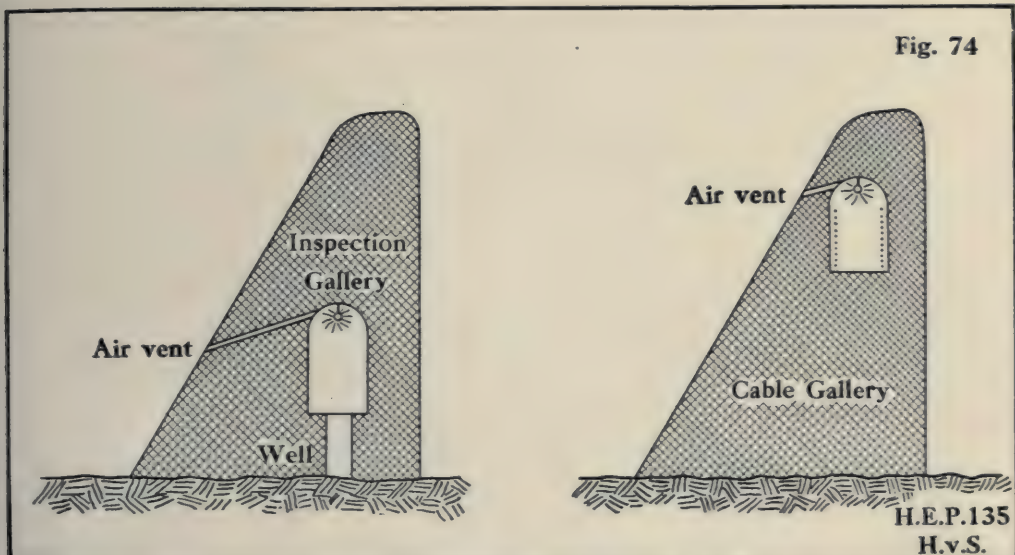


*Wells and galleries* are arranged in solid spillways for the purpose of inspection, means of communication and location of wire cables; as shown in Fig. 74. Access to these is had through the downstream side of the abutments and a casemate entrance arranged in the downstream slope of the embankment. They are formed of the least required dimensions; air-vents of two-inch galvanized iron pipe are placed 10 feet c. to c. from the gallery wall to the spillway apron face, with a slight downward drop to prevent water from passing through them.


*Bridges, foot-walks, and operation platforms*, for one purpose or another, of timber or steel construction, may be arranged on the spillway.

ARTICLE 75.—*Diversion works* comprise the structures conducting the water to the power station; they may be classified as canals, flumes, and pipe lines.

*Canals* serve to divert volumes exceeding 500 cubic second feet; their design is based upon the theory of *flow in open channels*. Fig. 75, section I, represents an open channel section the bed of which, AB, is in a horizontal plane, and, if this condition prevails from the source to

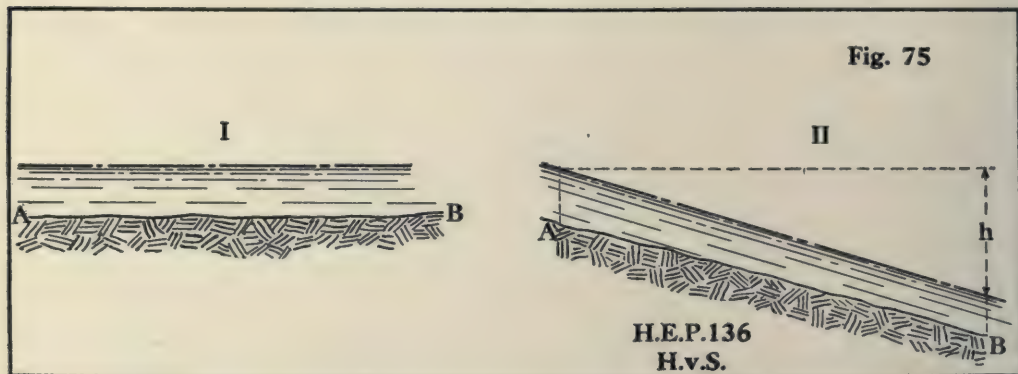

the terminal, *the water does not flow*; in section II the bed AB is downwardly inclined and the water *flows* through it, its surface assuming a *slope* similar to that of the channel bed; the vertical difference of the horizontal plane of the water surface at A and B, or at any two points,

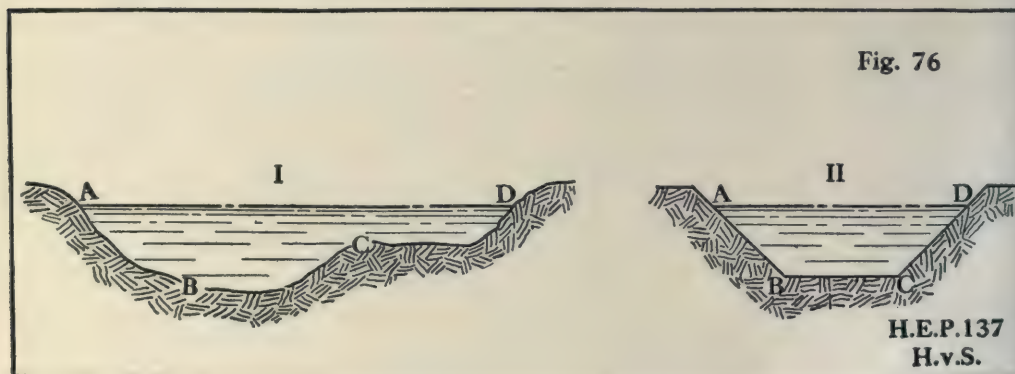

is the *head*  $h$  between such points, which causes the flow and which is generally expressed in terms of slope  $S = h \div d$ , where  $d$  is the length of the channel AB and both are in like units, also called the *hydraulic gradient*.

Fig. 76, section I, represents the natural section of a stream, section II that of a constructed channel; ABCD is the *wet perimeter*, "P"; the cross sectional area A of the stream, divided by the developed length of

the wet perimeter, is the *hydraulic radius* "R." The flow in open channels depends upon the values of S, A, P and the degree of roughness "n" of P, and, from the relations of these, expressions have been developed, as the results of many observations and experiments, for the mean velocity of the flow, the basic form of which is:

velocity = coefficient into the square root of  $R \times S$ ,

$$v = C \sqrt{RS},$$

in which C is the variable quantity which, according to the present acceptation as deduced by Ganguillet and Kutter from results found by M. Bazin, is expressed as

$$C = y \div [1 + (x \div \sqrt{R})],$$

$y = a + (1 \div n) + (m \div s)$ , and  $x = [a + (m \div s)] \times n$ , in which

1 is a constant = 1.811 ft.,

a is a constant = 41.6,

m is a constant = 0.00281, and

n is variable;

its values for the application to diversion canals are for

channels lined with dressed planks or smooth concrete	= 0.010
channels lined with rough planks or rough concrete	= 0.012
channels lined with smooth natural rock	= 0.017
channels lined with hard gravel, clay, and sand	= 0.025
channels lined with soft alluvial materials	= 0.03

Ex.—A = 1000 sq. ft., P = 128 ft., R = 7.8,

S = 0.0005, n = 0.025

$y = 41.6 + (1.811 \div 0.025) + (0.00281 \div 0.0005) = 119.64$

$x = [41.6 + (0.00281 \div 0.0005)] \times 0.0005 = 1.18$

$x \div \sqrt{R} = 0.42$

$C = 119.64 \div 1.42 = 84.3$

$V = 84.3 \sqrt{7.8 \times 0.0005} = 5.26 \text{ sec. ft.}$

Values for the factors "y" and "x" for different slopes and perimeter conditions are given in Tables 16 and 17.



TABLE 16.— $y = a + (1 + n) + (m + S)$ .

S.	n = 0.010	n = 0.012	n = 0.017	n = 0.025
.0001.....	250.8	220.7	175.7	142.1
.0002.....	236.7	206.6	161.6	128.1
.0003.....	232.0	201.9	156.9	123.4
.0004.....	220.7	199.6	154.6	121.1
.0005.....	228.3	198.2	153.2	119.6
.0006.....	227.4	197.3	152.3	118.7
.0007.....	226.7	196.6	151.6	118.0
.0008.....	226.2	196.1	151.1	117.5
.0009.....	225.8	195.7	150.7	117.2
.001.....	225.5	195.4	150.4	116.8

TABLE 17.— $x = [a + (m + S)] \times n$ .

	0.70	0.84	1.18	1.74
.0001.....	0.70	0.84	1.18	1.74
.0002.....	0.56	0.67	0.95	1.38
.0003.....	0.51	0.61	0.87	1.27
.0004.....	0.48	0.58	0.83	1.22
.0005.....	0.47	0.57	0.80	1.18
.0006.....	0.46	0.55	0.79	1.16
.0007.....	0.45	0.54	0.77	1.14
.0008.....	0.45	0.54	0.77	1.13
.0009.....	0.44	0.53	0.76	1.12
.001.....	0.44	0.53	0.75	1.11

Analyzing the flow formula and the influence of its variable factors upon the resultant velocity value, in its special application to the designing of diversion channels, the range of the coefficient of roughness can be limited to those conditions of lined channels by which permanency of prism is absolutely guaranteed, as only in extremely rare cases would a power canal present any other conditions; that means that the first three values of "n" fully cover the various perimeters to be met with in this subject, and that the value of "y" is between 150 and 250 and of "x" between 0.4 and 1.2, and within this scope the values of the other pertinent expressions in the flow formula, such as  $x \div \sqrt{R}$  and of "C," are given in the following tables.

TABLE 18.— $[1 + (x \div \sqrt{R})]$ .

R	x = 0.4	x = 0.5	x = 0.6	x = 0.7	x = 0.8	x = 0.9	x = 1
1.....	1.4	1.5	1.6	1.7	1.8	1.9	2
2.....	1.28	1.35	1.42	1.50	1.57	1.64	1.70
3.....	1.23	1.30	1.35	1.40	1.47	1.52	1.60
4.....	1.20	1.25	1.30	1.35	1.40	1.45	1.50
5.....	1.18	1.22	1.27	1.31	1.36	1.40	1.45
6.....	1.16	1.20	1.25	1.29	1.32	1.37	1.40
7.....	1.15	1.19	1.23	1.26	1.30	1.34	1.38
8.....	1.14	1.18	1.21	1.24	1.28	1.32	1.35
9.....	1.13	1.17	1.20	1.23	1.26	1.30	1.33
10.....	1.12	1.16	1.19	1.22	1.25	1.28	1.32

This completes the analysis of the factor "C" in the flow formula.

*Example.*— $n = 0.012$ ,  $S = 0.0003$ ; the channel is to divert 3000 cub. sec. ft. at a maximum velocity of 5 ft.,

$$A = 600 \text{ square feet,}$$

the side slopes of the canal are to be 1.5 horizontal in one vertical,

$$P = 113 \text{ ft. and } R = A \div P, = 600 \div 113 = 5.3,$$

$$y \text{ from Table 16} = 201.90,$$

$$x \text{ from Table 17} = 0.61,$$

$$[1 + (x \div \sqrt{R})] \text{ Table 18} = 1.26, \text{ and therefore}$$

$$C = y \div [1 + (x \div \sqrt{R})] = 201.9 \div 1.26 = 160.$$

Values for "C" for above y, x, and R are given in Table 19.

TABLE 19.— $C = y \div [1 + (x \div \sqrt{R})]$ .

y	1.1	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0=[1+(x÷√R)]
250.....	227	208	192	179	167	156	147	139	132	125
240.....	218	200	184	171	160	150	141	133	126	120
230.....	209	191	177	164	153	144	135	128	121	115
220.....	200	183	170	157	147	137	130	122	116	110
210.....	191	175	161	150	140	131	123	117	110	105
200.....	182	166	154	143	133	125	117	111	105	100
190.....	173	158	146	136	127	119	112	105	100	95
180.....	164	150	138	129	120	112	106	100	95	90
170.....	154	141	131	121	113	106	100	94	90	85
160.....	145	133	123	114	107	100	94	90	84	80
150.....	136	123	115	107	100	93	88	83	80	75

Continuing the solution of the previous example, "C" can be taken off Table 19 by interpolation and the velocity found from

$$v = C \sqrt{RS}, \sqrt{RS} = \sqrt{5.3 \times 0.0003} = 0.0398.$$

$$v = 160 \times 0.0398 = 6.368.$$

Velocity in a diversion canal should not be excessive; as a rule, it will be important to conserve the available head wherever practicable, and the design of the canal affords one of the important opportunities to

practise this economy. Only where the excavation of the canal prism presents a very costly undertaking, such as when it has to be located through a hard rock ledge, or in case the value of the necessary right of way is practically prohibitive and when the canal section therefore must be kept at a minimum, are high velocities excusable; five feet per second is a good limit to be adopted for the flow in a diversion canal, and within this limit the value of "v" is given for different slopes and R in the following Tables 20 to 24.

TABLE 20.—VELOCITY FOR  $S = 0.0001$ .

R	C	n = 0.010		0.012		0.017	
		$\sqrt{RS}$	v	C	v	C	v
1.....	147	0.01	1.47	120	1.20	81	0.81
2.....	168	0.014	2.35	138	1.93	96	1.34
3.....	178	0.017	3.02	149	2.53	104	1.77
4.....	186	0.02	3.92	155	3.15	111	2.22
5.....	191	0.022	4.20	160	3.52	116	2.55
6.....	195	0.024	4.68	164	3.93	119	2.85
7.....	198	0.026	5.34	167	4.34	122	3.17
8.....	201	0.028	....	170	4.76	124	3.47
9.....	203	0.03	....	172	5.16	126	3.78
10.....	205	0.03	....	174	5.40	128	3.96

TABLE 21.—VELOCITY FOR  $S = 0.0002$ .

R	C	n = 0.010		0.012		0.017	
		$\sqrt{RS}$	v	C	v	C	v
1.....	151	0.014	2.11	123	1.72	83	1.16
2.....	170	0.02	3.40	140	2.80	97	1.94
3.....	179	0.024	4.29	149	3.57	105	2.52
4.....	185	0.028	5.18	155	4.34	111	3.11
5.....	190	0.031	5.89	159	4.93	114	3.53
6.....	193	0.034	....	162	5.50	117	3.98
7.....	196	0.037	....	165	....	120	4.44
8.....	198	0.040	....	167	....	122	4.88
9.....	200	0.043	....	169	....	124	5.33
10.....	201	0.045	....	170	....	125	5.62

TABLE 22.—VELOCITY FOR  $S = 0.0003$ .

R	C	n = 0.010		0.012		0.017	
		$\sqrt{RS}$	v	C	v	C	v
1.....	152	0.017	2.58	124	2.10	84	1.42
2.....	171	0.024	4.10	140	3.36	97	2.32
3.....	179	0.030	5.37	152	4.56	105	3.15
4.....	185	0.034	....	156	5.30	111	3.77
5.....	189	0.038	....	159	....	114	4.33
6.....	192	0.043	....	162	....	117	5.03
7.....	195	0.046	....	164	....	119	5.47
8.....	197	0.049	....	166	....	121	....
9.....	198	0.053	....	168	....	123	....
10.....	200	0.055	....	169	....	124	....



TABLE 23.—VELOCITY FOR  $S = 0.0004$ .

R	C	n = 0.010		0.012		0.017	
		1 RS	v	C	v	C	v
1.....	154	0.020	3.08	125	2.50	85	1.70
2.....	171	0.028	4.78	141	3.94	98	2.74
3.....	180	0.034	6.12	150	5.10	105	3.57
4.....	184	0.040	....	157	6.28	110	4.40
5.....	188	0.045	....	159	....	113	5.08
6.....	191	0.049	....	161	....	116	5.68
7.....	193	0.053	....	163	....	118	....
8.....	195	0.056	....	165	....	120	....
9.....	197	0.060	....	167	....	122	....
10.....	199	0.063	....	168	....	123	....

TABLE 24.—VELOCITY FOR  $S = 0.0005$ .

R	C	n = 0.010		0.012		0.017	
		1 RS	v	C	v	C	v
1.....	154	0.024	3.68	125	3.00	85	2.04
2.....	175	0.031	5.30	141	4.37	98	3.04
3.....	179	0.039	....	150	5.85	105	4.09
4.....	184	0.045	....	156	....	110	4.95
5.....	188	0.050	....	158	....	113	5.65
6.....	191	0.055	....	161	....	116	....
7.....	193	0.059	....	163	....	118	....
8.....	196	0.063	....	165	....	120	....
9.....	197	0.067	....	167	....	122	....
10.....	199	0.070	....	168	....	123	....

By aid of the tabulated values in these nine tables all problems relating to the flow in a diversion canal or flume can be solved or checked; the frequent query, of what the slope would be in a canal of certain prism and a given velocity of flow, is thus solved.

*Example.*—To divert 800 cubic second feet at a velocity of approximately 5 feet per second in a rectangular sectioned canal 5 feet deep and 32 feet wide; what will be the slope?

$$A = 800 \div 5 = 160 \text{ sq. ft.}, R = 160 \div 42 = 3.8, n = 0.012,$$

and velocity to be about 5 feet per second.

From Table 22 in column of  $n = 0.012$ , and between values for  $R$  of 3 and 4, the desired velocity appears and the slope is 0.0003. It must be noted that the slope is expressed in the ratio per foot of length, a slope of  $0.0001 = 1.2$  inch per 1000 feet and 6.33 inches per mile.

Location, construction, and operating conditions are the main considerations for the designing of the diversion canal.

The location should be the economically shortest, which is determined by the cost of the right of way and of the construction, and is most readily proved by the method of elimination,—that is, by making paper locations based upon the survey and boring data and finding the excavation quantities and slope areas for a flow section of one-fifth of the maximum volume to be diverted, thus assuming a trial velocity of five feet. Deviations from a tangent alignment will generally prove justifiable to avoid side-hill cuts, buildings, road crossings, rock outcrops, swamps, and to secure uniformity of the prism, but curvature should be limited to  $3^\circ$ .

The slope in curved channels is greater than in straight; the excess is determined from Humphrey and Abbott's formula,

$$hc = v^2 \times 6 d \div 536 p,$$

where  $v$  is the mean velocity,  $d$  the total angle of the curve expressed in radians ( $1^\circ = 0.01745$ ), and  $p = 3.1415$ .

*Example.*—In a channel with  $v = 5$  ft., on a  $3^\circ$  curve 900 ft. long, the curve slope  $hc = 5^2 \times 6 \times 27 \times 0.01745 \div 1683$ ,

$$= 70.6725 \div 1683 = 0.42,$$

which must be added to the slope in a straight channel of the same length, or, if the general slope in this case is 0.00015, the total slope in this curve is  $0.135 + 0.042 = 0.177$  ft.

The construction considerations to be weighed for the purpose of deciding upon the location and design of the canal pertain to the excavation of the prism, the lining of the bed and slopes, and the revetting of the superbanks.

Excavation cost depends upon the character of the material, the quantities to be moved, and the disposition which may be made of the spoils; all these, together with the depth and width of the cut, will influence the methods which secure the most economical excavation. Rock is most cheaply removed in the dry; the principal operations involved in excavating hard rock, a classification which includes those formations which can be excavated in large masses only by the use of explosives, are drilling, blasting, loading, and disposing.

Rock drilling may be done by hand tools or by machine drills operated by steam or compressed air; only machine drilling will be here considered.



This operation requires a runner and helper, power being supplied from a central plant. The output varies with the depths of the holes, being from 50 to 60 linear feet for 10 and 20 feet depths per shift of 10 hours. To the operating cost must be added the power cost for 10 horse-power per drill, the drill repairs and drill sharpening; with present wages drilling costs from 10 to 15 cents per linear foot, depending on the hardness of the rock and the depth of the holes.

*The breaking of the rock* for the purpose of loading for removal requires from 1 to 1.5 pounds of 60 per cent. dynamite, according to its hardness, per cubic yard of output, and with present cost of explosives a charge of 15 cents per cubic yard should be made for blasting. The broken rock may be *loaded by hand*, or machinery, into carts, derrick or cable-way buckets, or dump cars, and the cost varies in accordance with the method employed; the output of hand loading averages 10 cubic yards per man per 10-hour shift, by steam shovel it will be between 40 and 60 cubic yards per hour. *Disposal cost* depends entirely upon the length of *haul*. With present wages rock excavation will cost from 75 cents to \$1.50 per cubic yard.

*Earth is removed* more cheaply by dredging than by dry excavation; the cost of dredging will be generally from 15 to 30 cents, depending upon the hardness of the material and the distance of the disposal. *Dry earth excavation* may be done by hand tools, horse and power scrapers, or by steam shovels, the operations consisting of loosening, loading, and disposing; the output and cost depend upon the methods employed, the character of the material, depth of cut, and distance of haul. With present wages the cost will be from 25 to 50 cents per cubic yard. Comparatively, the cost of rock excavation is about three times that of earth, and dredging about 0.6 of earth excavation. *The quantity of earth excavation* is about 1.2 of the flow area up to the water level, and approximately one-third of that area for every foot vertical above water surface.

*Example.*—For a canal which is to divert 1000 cub. sec. ft. at a velocity of 5 ft. per sec. the quantity to be excavated to the water level is  $= 200 \times 1.2 = 240$  cub. ft. per linear foot of canal, and to a height of 5 ft. above the water level it is  $= 240 + (200 \times 1.66) = 570$  cub. ft. or about 22 cub. yds.

For side-hill locations the quantities must be determined from cross-sections taken at intervals of 10 feet.



*The bed and canal sides* (Fig. 77, 1) in rock location should be finished as smooth as practicable, in order to realize the highest flow efficiency, which will generally require hand-tool finishing of the bed, while the sides should be cut out by channelers, which with present wages costs from 15 to 18 cents per square foot surface, depending upon the hardness of the rock and the depth of the channel cut. In alluvial locations the bed and canal slopes should be covered with a lining, in order to guarantee the permanency of the prism and reduce the roughness to a minimum and thereby secure the best flow efficiency. *Canal lining* may be of timber or concrete-steel. Timber lining (Fig. 77, 2, 3, and 4) consists of 3-inch planking laid longitudinally upon 12 × 12 inch timber sills spaced 8 ft. c. to c. and imbedded in the bed material, being secured in place by connection to bearing piles from 8 to 16 ft. long, or by iron rods of the type described for the lining of a reservoir embankment slope in Article 73. A lining of concrete-steel (Fig. 77, 5, 6, and 7) may be laid upon transverse timber sills, as above, or upon concrete sills 8 inches square, which need no further support unless the underlying material is mud, when piles must be driven. The concrete lining is 6 inches thick for sills 8 ft. centres, and is connected with the sills by one-inch dowels set 4 ft. c to c. The concrete lining contains reinforcing steel. The canal slopes should be no steeper than 1.5 horizontal in one vertical; they may be lined in the manner described for the bed, being structurally continuous of the bed lining and terminating, when of timber, one foot below the normal flow level in a *berme* (shown in Fig. 77, 2), and, when of concrete, 2 feet above such elevation (as shown in Fig. 77, 5).

*The superbanks* of the canal should be sloped at two horizontal in one vertical and *paved*.

Views 7 and 8 show a rock canal with channelled sides and paved superbanks, Views 9, 10, 11 an earth canal with timber lining.


From these data estimates for various locations and prisms can readily be compiled, and their comparative cost will point to the most economical.

*Appurtenant structures to diversion canals* are those required for the safeguarding of the superbanks against erosion from surface run-off, interception of unavoidable lateral stream sources, the devices controlling the flow in the canal, and means of overhead crossings.

Ordinary run-off from rainfall is best intercepted by a longitudinal paved drain located at the top of the superbanks, from which laterals

244

View 7

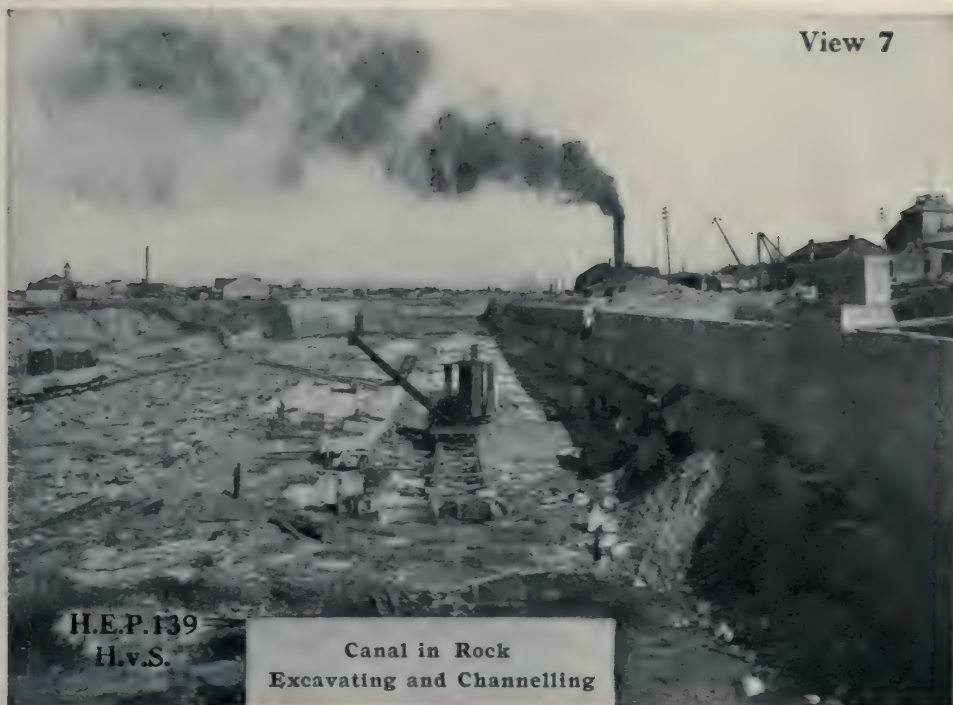

H.E.P.139  
H.v.S.

Canal in Rock  
Excavating and Channelling

View 8



Canal in Rock  
with Channelled Sides  
Completed

H.E.P.140  
H.v.S.



View 9



Canal in Earth,  
Timber lined  
Laying the Sills

H.E.P. 141  
H.v.S.

View 10




H.E.P. 142  
H.v.S.

Canal in Earth,  
Timber lined  
Planking



Fig. 77

Diversion Canal

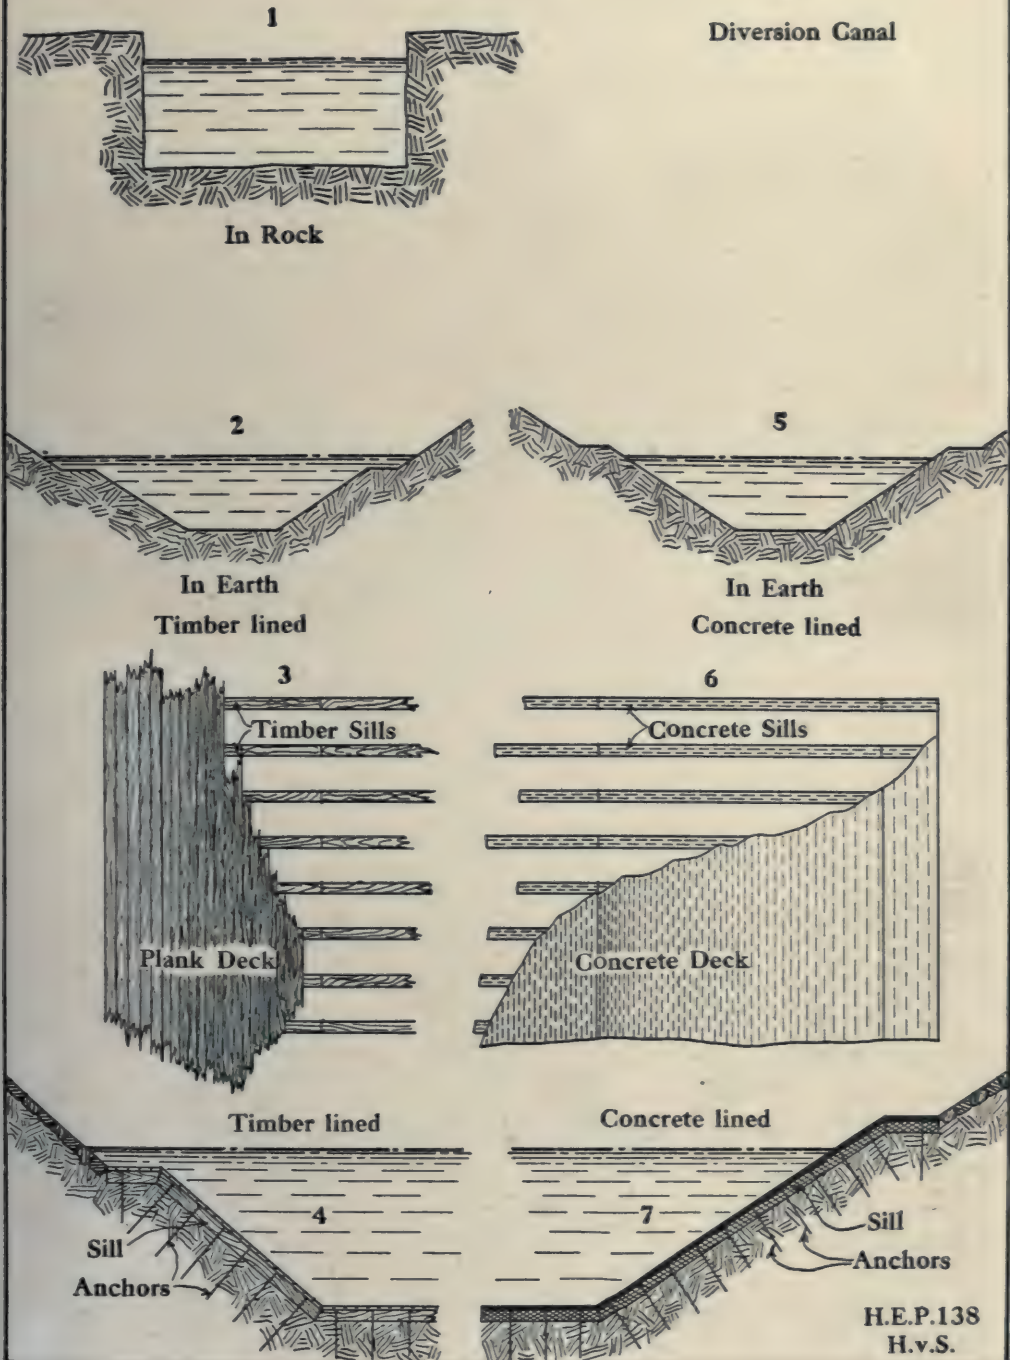

H.E.P.138  
H.v.S.

of similar type are led down the slopes at intervals, depending upon the volume likely to accumulate, of from 100 to 300 feet. When the canal traverses *ravines* which form stream sources after heavy rainfall, provision must be made to pass such flow under the canal by means of concrete culverts, unless the ravine can be made part of the diversion canal by securely cutting off its terminal and connecting the canal banks with those of the ravine; when the volume which may pass down the ravine is likely to exceed 0.1 of the canal flow area, an *overflow* must be constructed in the canal bank to pass the excess. Generally speaking, it will always prove the safer practice to care for such exterior flow sources by passage under the canal, the structure being of the concrete culvert type *and of ample dimensions*.

The *canal entrance* is guarded by *headgates*, which should afford complete and ready control of all flow into the canal; they may be of a variety of types as suggested by the volume of the flow and the operating requirements. *Stop-logs*, which were described in connection with the open spillway in Article 68, are a simple, effective, and inexpensive device for headgate service, being placed and operated in the same manner as when employed for the closing of overflow sluices. *Needles*, also described in Article 68, may be used, or lift-gates of timber or steel framing. A *foot-bridge* is arranged at the headgate crossing and serves as an operating platform. Some headgate designs are shown in Fig. 78 and in Views 12, 13, and 14.

An *intake* to the canal is frequently arranged above the headgates for the purpose of creating a readily accessible pool in which floatage can be intercepted and prevented from passing into the canal; it may also be the means of securing a more complete diversion of the low flow into the canal.

A *forebay* is likewise arranged at the terminal of the canal, being simply a gradual enlargement in which the velocity of the flow is reduced before the water enters the power house; its dimensions are decided by those of the power house and by the character of the turbine installation.

A *waste weir* should be arranged near the end of the canal, being practically a short open spillway with one or two overflow sluices; floatage, ice, and surplus flow may be passed over it.


*Bridges* are often required across a canal for operating purposes and to accommodate public traffic.

Diversion is secured by *flumes* when the volume is less than 500 sec. ft. Flumes are rectangular or elliptical timber conduits of designs and construction shown in Fig. 79; they are supported on timber trestles


View 11




View 12

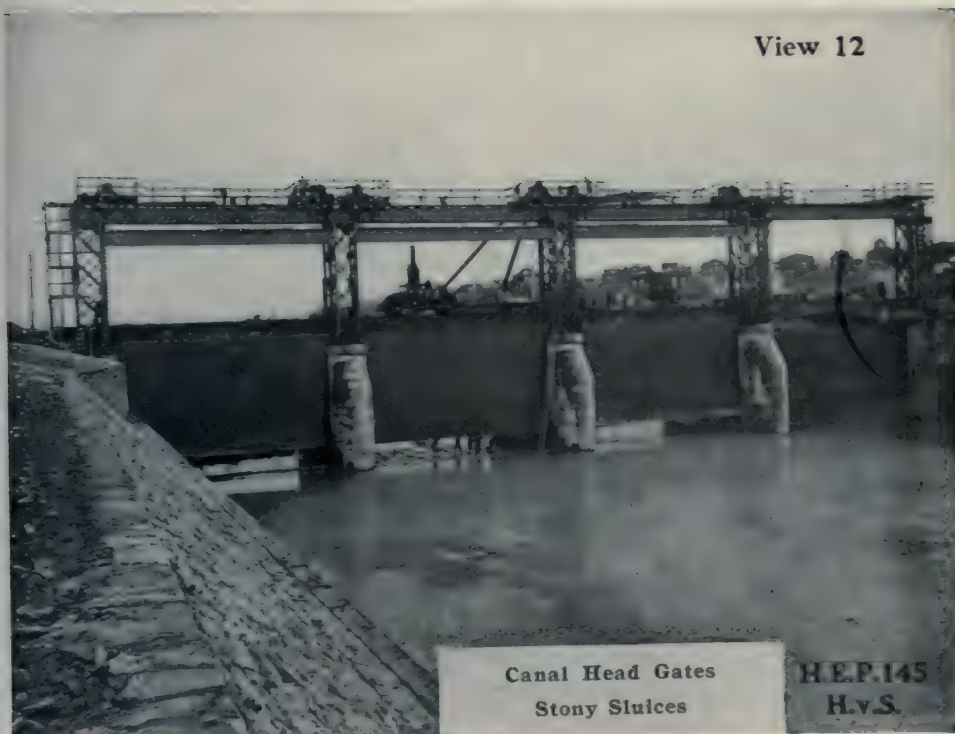




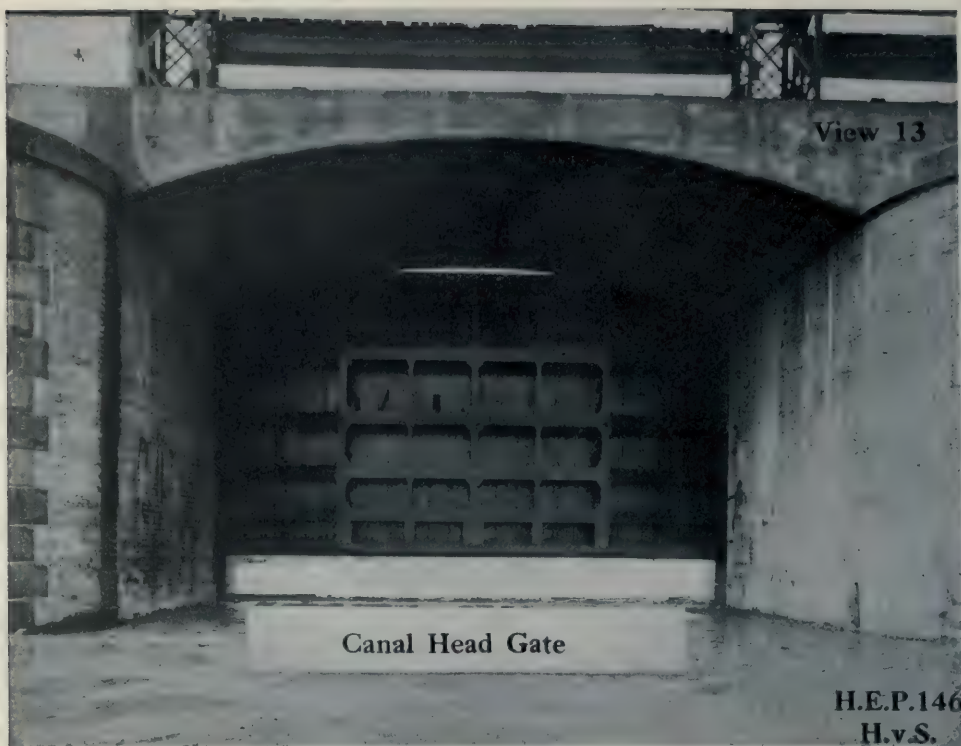


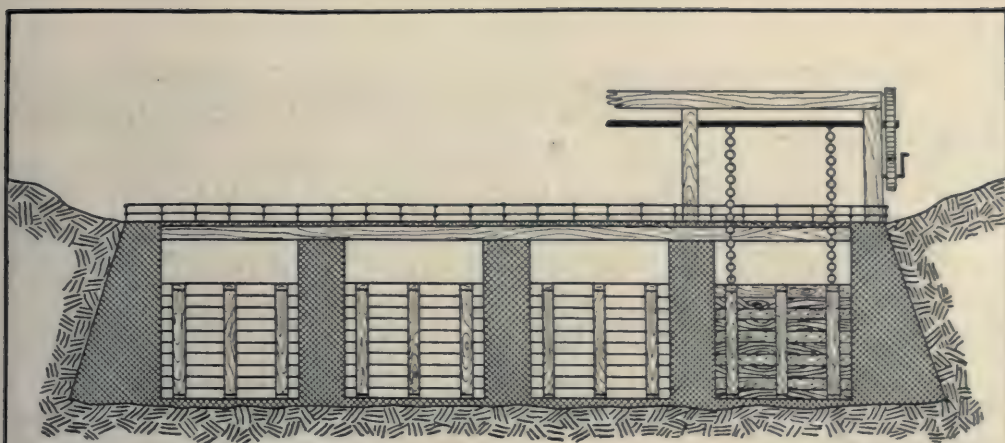


Front Elevation

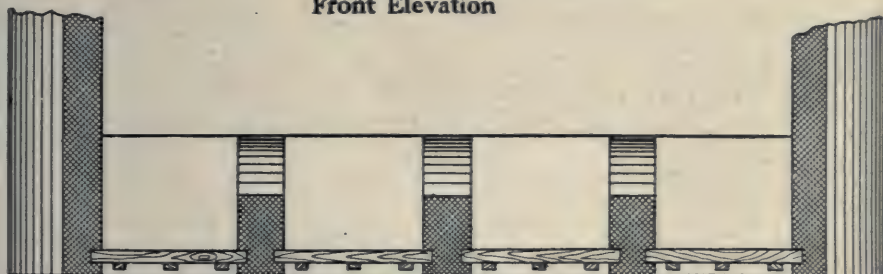

Ground Plan

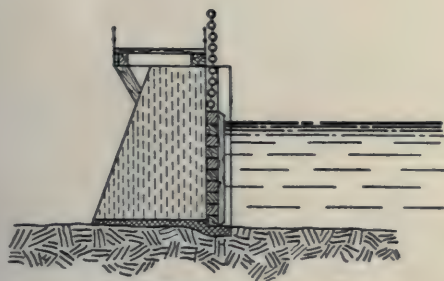

Section

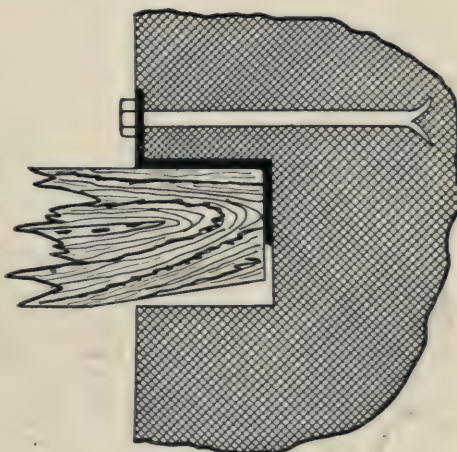

Detail of  
Gate Seat

Fig. 78  
Canal Head Gate

H.E.P.144  
H.v.S.

or masonry piers or are placed on timber sills resting upon the surface of the ground. They should be water-tight, and their section is best confined to that required for the passage of the volume of water to be diverted, so that all parts of the conduit remain in a constantly saturated condition. The top should be covered with removable planks to protect the water surface against the sun and cold. The flow in flumes follows the laws found for open channels. The flume entrance is guarded by gates of stop-log, needles, or lift type.

*Diversion in Pipes.*—When the volume to be diverted is less than 500 sec. ft., or when the construction cost of a canal or flume is abnormally high, diversion in pipes may prove more economical; in high-head developments the final passage of the water to the turbines is always through pipes.

*The flow of water in pipes* is based upon the same general theory as that developed for flow in open channels, in accordance with the fundamental formula of  $v = C \sqrt{RS}$ , which has been analyzed in Article 75. The sizes of pipes for diversion service will generally be between 2 and 8 feet in diameter, the velocities from 2 to 6 feet per second, and the slopes from 0.001 to 0.0001.

TABLE 25.—VALUES WITHIN THE ABOVE LIMITS OF A, R, AND  $\sqrt{R}$ .



Diameter, inches.	Area, sq. ft.	Hydr. radius, R.	$\sqrt{R}$ .
24.....	3.124	0.500	0.707
30.....	4.909	0.625	0.791
36.....	7.067	0.750	0.866
42.....	9.621	0.875	0.935
48.....	12.57	1.0	1.0
54.....	15.90	1.125	1.061
60.....	19.64	1.25	1.118
66.....	22.76	1.375	1.173
72.....	28.72	1.50	1.225
78.....	33.18	1.625	1.275
84.....	38.48	1.75	1.323
90.....	44.18	1.875	1.370
96.....	50.26	2.0	1.414

TABLE 26.—DISCHARGE VOLUME IN CUBIC SECOND FEET FOR VARIOUS SIZE PIPES AND VELOCITIES.

Diameter, inches.	2	2.5	3	3.5	4	4.5	5	5.5	6 ft. p. sec.
24.....	6.3	7.8	9.4	11.0	12.5	14.1	15.7	17.3	18.8
30.....	9.8	12.3	14.7	17.2	19.6	22.1	24.5	27.0	29.4
36.....	14.1	17.6	21.2	24.7	28.3	31.7	35.3	38.8	42.3
42.....	19.2	24.0	28.8	33.6	38.4	43.2	48.0	52.8	57.6
48.....	25.1	31.4	37.7	44.0	50.2	56.5	63.8	69.1	75.4
54.....	31.8	39.7	47.7	55.6	63.6	71.5	79.5	87.4	95.4



Fig. 79

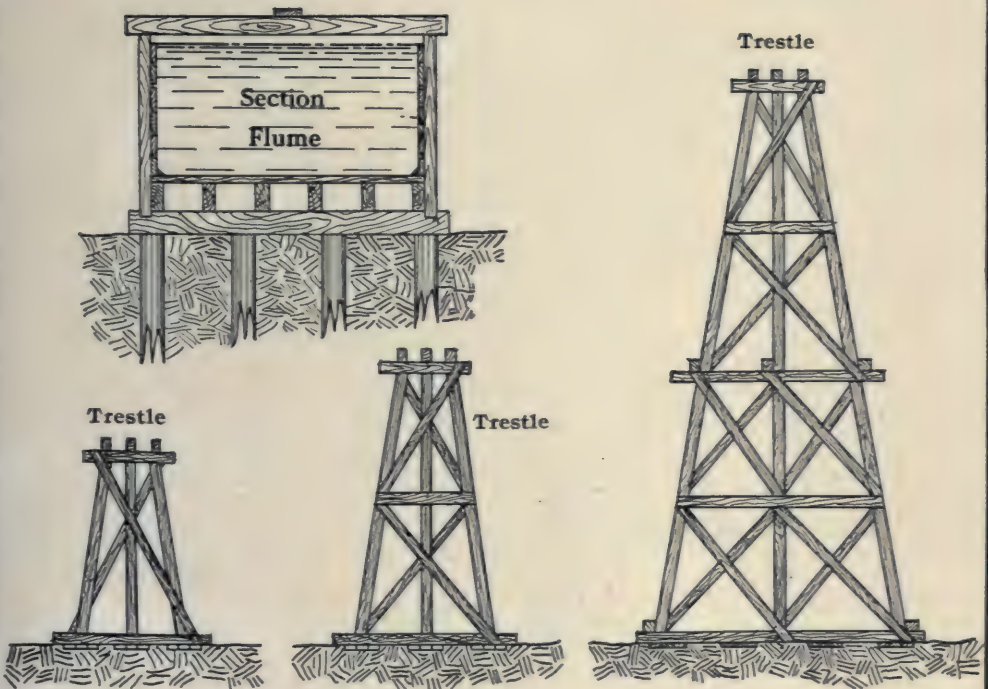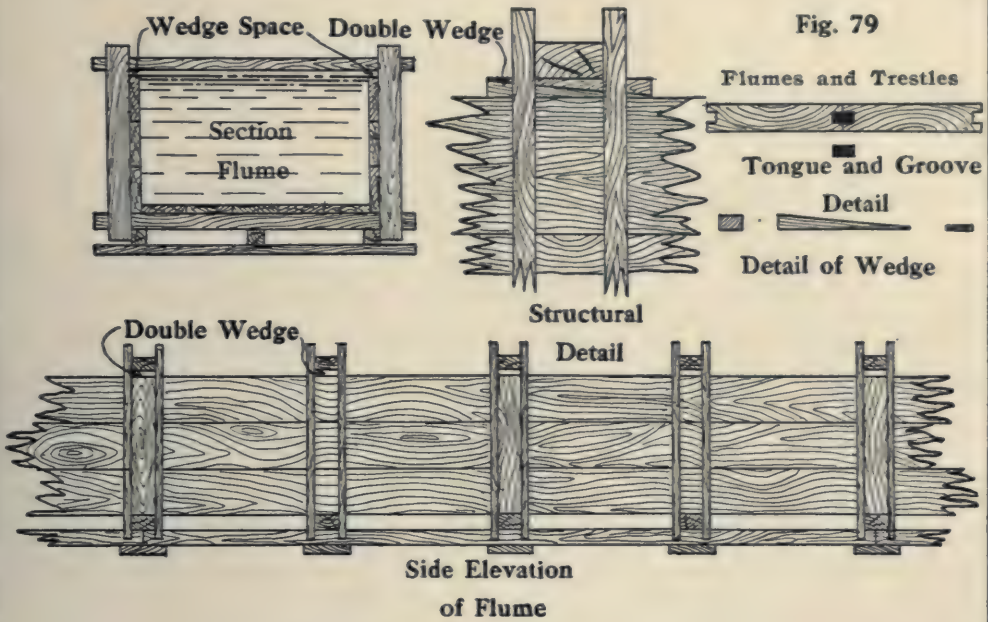

H.E.P.148  
H.v.S.

TABLE 26.—DISCHARGE VOLUME IN CUBIC SECOND FEET FOR VARIOUS SIZE PIPES AND VELOCITIES.—*Continued.*

Diameter, inches.	2	2.5	3	3.5	4	4.5	5	5.5	6 ft. p. sec.
60.....	39.3	49.1	58.9	68.7	78.5	88.4	98.2	108.2	117.8
66.....	47.5	59.4	71.3	83.2	95.0	106.9	118.8	130.7	142.5
72.....	56.5	70.7	84.8	98.9	113.5	127.6	141.8	156.0	170.2
78.....	66.4	82.9	99.5	116.1	132.7	149.3	165.9	182.5	199.1
84.....	76.9	96.2	115.4	134.7	153.9	173.2	192.4	211.6	230.9
90.....	88.3	110.4	132.5	154.6	176.7	198.8	220.9	243.0	265.1
96.....	100.5	125.6	150.8	175.9	201.0	226.2	251.3	276.4	301.5

The value of "C" has been established by observations and experiments of flow in pipes, and is accepted as,

for smooth concrete pipes of ten years' service,  $C = 120$ ,

for wooden stave pipes of ten years' service,  $C = 115$ ,

for steel plate, riveted pipes of ten years' service,  $C = 110$ .

Tables 27, 28, and 29 give velocities for values of R, represented by diameter of pipe, and of S, for the above three expressions for C.

TABLE 27.—VELOCITIES WHEN  $C = 110$ .

Diameter, inches.	.0001	.0002	.0003	.0004	.0005	.0006	.0007	.0008	.0009	.001 = S.
24.....	0.78	1.08	1.35	1.56	1.74	1.91	2.06	2.20	2.34	2.46
30.....	0.89	1.22	1.54	1.78	1.98	2.18	2.35	2.51	2.67	2.80
36.....	0.95	1.33	1.64	1.90	2.43	2.32	2.50	2.69	2.85	3.00
42.....	1.02	1.44	1.77	2.04	2.28	2.50	2.72	2.88	3.06	3.23
48.....	1.10	1.56	1.01	2.20	2.46	2.70	2.93	3.11	3.30	3.48
54.....	1.16	1.65	2.01	2.32	2.59	2.83	3.09	3.28	3.48	3.67
60.....	1.23	1.74	2.13	2.46	2.75	3.01	3.28	3.47	3.69	3.89
66.....	1.20	1.82	2.24	2.58	2.88	3.16	3.44	3.64	3.87	4.08
72.....	1.34	1.90	2.33	2.64	3.00	3.27	3.60	3.78	4.02	4.25
78.....	1.40	1.98	2.44	2.80	3.14	3.43	3.76	3.96	4.20	4.44
84.....	1.45	2.05	2.53	2.90	3.23	3.55	3.84	4.10	4.35	4.57
90.....	1.50	2.12	2.60	3.00	3.35	3.67	4.01	4.24	4.50	4.74
96.....	1.55	2.19	2.66	3.12	3.46	3.79	4.16	4.38	4.65	4.91

TABLE 28.—VELOCITY WITH  $C = 115$ .

Diameter.	.0001	.0002	.0003	.0004	.0005	.0006	.0007	.0008	.0009	.001
24.....	0.81	1.14	1.40	1.62	1.81	1.98	2.13	2.29	2.43	2.56
30.....	0.91	1.28	1.57	1.82	2.03	2.22	2.40	2.57	2.73	2.87
36.....	1.00	1.41	1.73	2.00	2.24	2.44	2.65	2.83	3.00	3.16
42.....	1.07	1.51	1.85	2.14	2.40	2.61	2.85	3.06	3.21	3.40
48.....	1.15	1.63	1.99	2.30	2.57	2.80	3.06	3.29	3.45	3.65
54.....	1.22	1.73	2.11	2.44	2.73	2.96	3.25	3.50	3.66	3.87
60.....	1.28	1.81	2.19	2.56	2.86	3.12	3.42	3.65	3.84	4.06
66.....	1.35	1.91	2.32	2.70	3.02	3.30	3.59	3.85	4.05	4.27
72.....	1.41	1.99	2.43	2.82	3.15	3.44	3.75	4.05	4.24	4.46
78.....	1.46	2.07	2.51	2.92	3.28	3.57	3.90	4.20	4.38	4.63
84.....	1.52	2.15	2.61	3.00	3.40	3.71	4.07	4.40	4.66	4.82
90.....	1.54	2.23	2.72	3.14	3.50	3.83	4.17	4.50	4.71	4.95
96.....	1.62	2.29	2.80	3.24	3.64	3.94	4.35	4.66	4.86	5.15



TABLE 29.—VELOCITY WITH  $C = 120$ .

Diameter.	.0001	.0002	.0003	.0004	.0005	.0006	.0007	.0008	.0009	.001
24.....	0.93	1.30	1.61	1.86	2.07	2.28	2.45	2.63	2.79	2.94
30.....	1.07	1.52	1.85	2.14	2.40	2.62	2.83	3.02	3.21	3.38
36.....	1.14	1.61	1.95	2.28	2.55	2.79	3.00	3.22	3.42	3.60
42.....	1.22	1.73	2.10	2.40	2.73	2.98	3.26	3.43	3.66	3.82
48.....	1.32	1.87	2.25	2.64	2.95	3.22	3.50	3.74	3.96	4.17
54.....	1.39	1.97	2.40	2.78	3.10	3.40	3.69	3.95	4.17	4.39
60.....	1.48	2.10	2.56	2.96	3.32	3.62	3.93	4.21	4.44	4.68
66.....	1.55	2.19	2.68	3.10	3.52	3.80	4.10	4.42	4.65	4.90
72.....	1.60	2.26	2.76	3.20	3.58	3.92	4.25	4.58	4.80	5.06
78.....	1.68	2.38	2.90	3.36	3.76	4.11	4.45	4.80	5.04	5.31
84.....	1.74	2.46	3.00	3.48	3.90	4.26	4.62	4.98	5.22	5.50
90.....	1.80	2.55	3.10	3.60	4.03	4.41	4.76	5.12	5.40	5.69
96.....	1.86	2.65	3.22	3.72	4.16	4.55	4.94	5.30	5.58	5.88

Location, kind and size of pipe are to be determined when planning a pipe line; velocity and slope are fixed by the volume to be diverted and the diameter of the pipe.

*The location of a diversion pipe line* is to be chosen to secure the economically shortest in distance while insuring the preservation of the pipe. Any kind of pipe wears longer if lying entirely above the surface of the ground with air freely circulating all around it; it can then be readily examined, repainted, and kept in proper condition; therefore, if avoidable, pipe should not be wholly or partially buried. Thorough underdraining should be provided, so that no water will accumulate beneath it at any point.

In Fig 80 the straight line  $ln$ , connecting the upper and lower pool surfaces, is the *hydraulic gradient*; no part of the pipe line should rise more than 25 feet above this gradient, but may otherwise vary in elevations and grades. The pipe must be anchored at intervals of 50 feet to concrete benches, shown in Fig. 80, 2, their dimensions depending upon the character of the material in which they must be placed and size and slope of pipe; the pipe proper is connected to the supporting structures by steel rods fastened to steel collars around the pipe; the rods should have turnbuckles to compensate for temperatures, that is extreme heat or cold; this device is shown in Fig. 80, 3. By the aid of Tables 27, 28, and 29 all problems of flow, discharge, and slope can be readily solved.

*Example.*—Required the diversion of 80 cubic second feet, total head 400 ft. Only steel plate pipe is available under such a head.  $C = 110$ .



From Table 26 find the size and velocity to yield the required discharge: in a 54-inch pipe with a velocity of 5 ft. discharge is 79.5 cub. sec. ft., in a 60-inch pipe with a velocity of 4 ft. discharge is 78.5 cub. sec. ft., in a 66-inch pipe with a velocity of 3.5 ft. discharge is 83.2 cub. sec. ft., and from Table 37 find  $S$  for 66-inch pipe and 3.5 ft. velocity = .0003. If a smaller size pipe is preferred,  $R$  is found from Table 25, say for

54-inch pipe  $\sqrt{R} = 1.061$ , then from  $V = C \sqrt{RS}$ , and

$$V \div C \sqrt{S} = \sqrt{S}, \text{ or } 5 \div 110 \times 1.061 = \sqrt{S}$$

$$(5 \div 116.710)^2 = \sqrt{S}, \text{ or } S = 0.0019.$$

The question of recommendable size of pipe is to be determined from balancing the excess pipe cost and the net earning value of the head represented by the difference in slope between the two sizes of pipe compared.

*Example.*—For the requirements of the last example, the line is 3500 feet long; 66-inch pipe costs \$2.00 per linear foot more than the 54-inch pipe, the excess cost of the larger size pipe is therefore \$7000.00; the difference in head will be 0.0019 — 0.00073 or  $0.00127 \times 3500$ , being 4.09 feet, which, with a flow of 80 cub. sec. ft., represents about 26.2 electrical horse-power (consult Diagram 3). If the net value of the current is \$15.00 per horse-power per year, the amounts to be balanced against each other are

interest at 5 per cent. on excess pipe cost of \$7000.00 = \$350.00,


and net receipt from power represented by 4.09 feet  $h = 393.00$ ;

in other words, the value of the head saved is greater than the interest on the investment and therefore the larger size pipe is recommendable.

The difference of first cost of the three types of pipes is small; the concrete-steel pipe is imperishable and calls for no maintenance expenditures; wooden stave pipe wears as well as does steel plate pipe, provided it is kept filled with water at a uniform pressure at all times; steel pipe requires recoating every third year.

The flow in pipes is controlled by valve gates of different types, which are placed at the intake, which latter must also be guarded by a *trash rack*, consisting of flat iron bars set in an iron frame, half inch centres, and secured to the pipe intake. Such an arrangement is shown in Fig. 81.


**Fig. 80**  
**Pipe Line**  
**and Details**

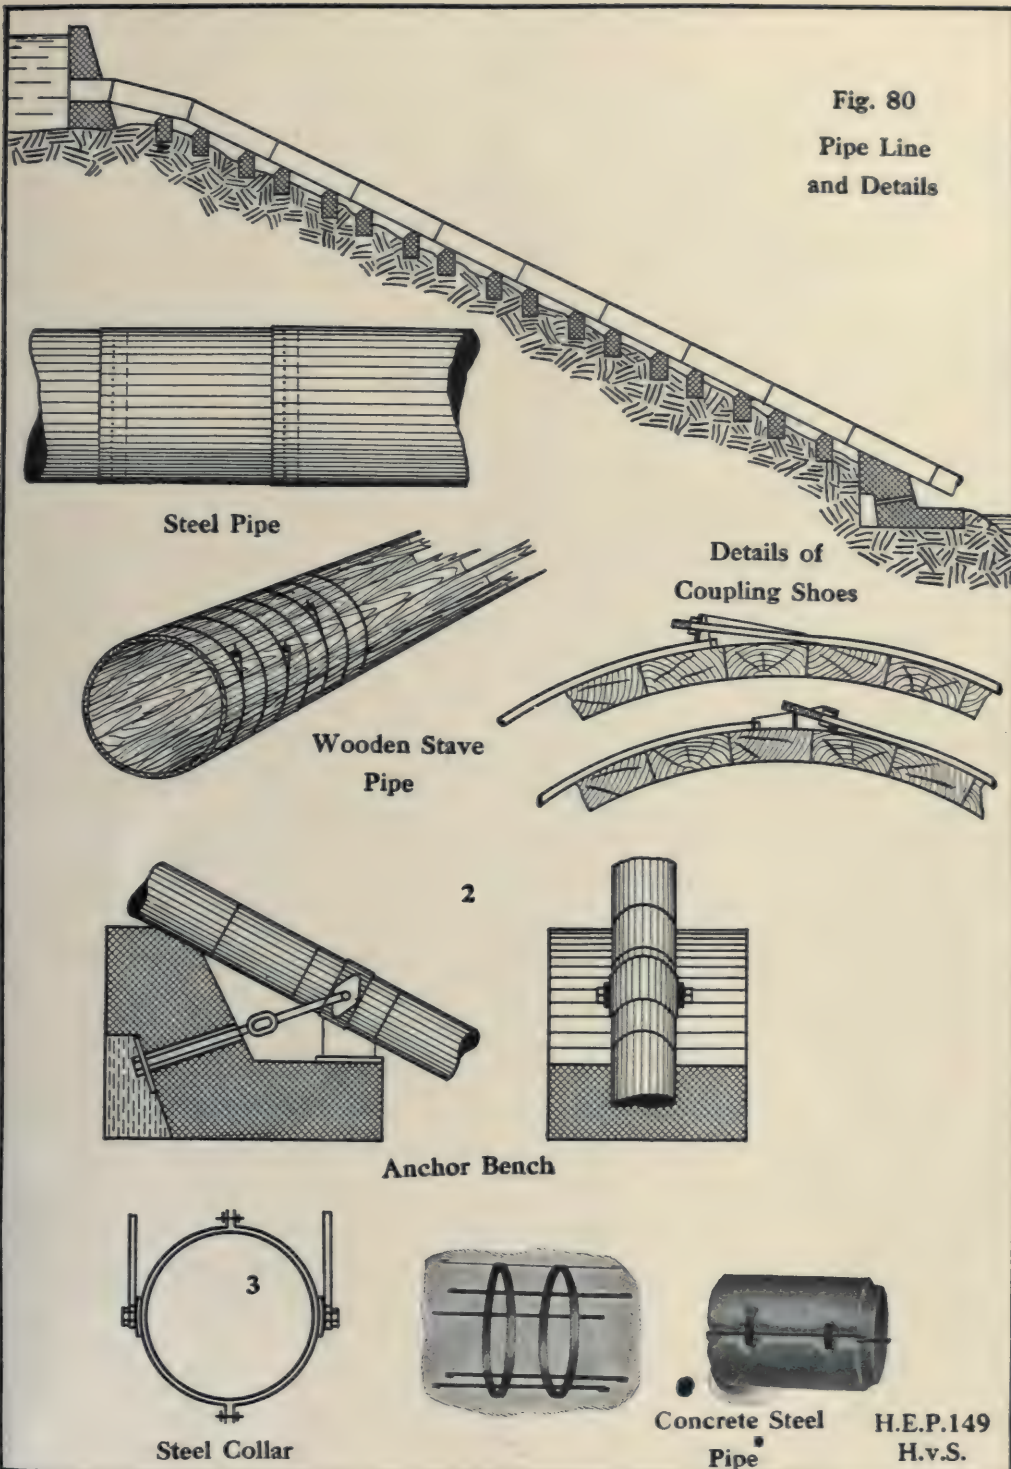

**H.E.P.149**  
**H.v.S.**



ARTICLE 76.—The diversion terminates at the *power house*. The *location* of this structure is determined as fully discussed in connection with the topic of development programmes in Article 48. Its type depends primarily upon the head. For low-head developments it will generally be located at the spillway or closely below it; with a medium head, from 30 to 60 feet, the power house may be at the spillway or at

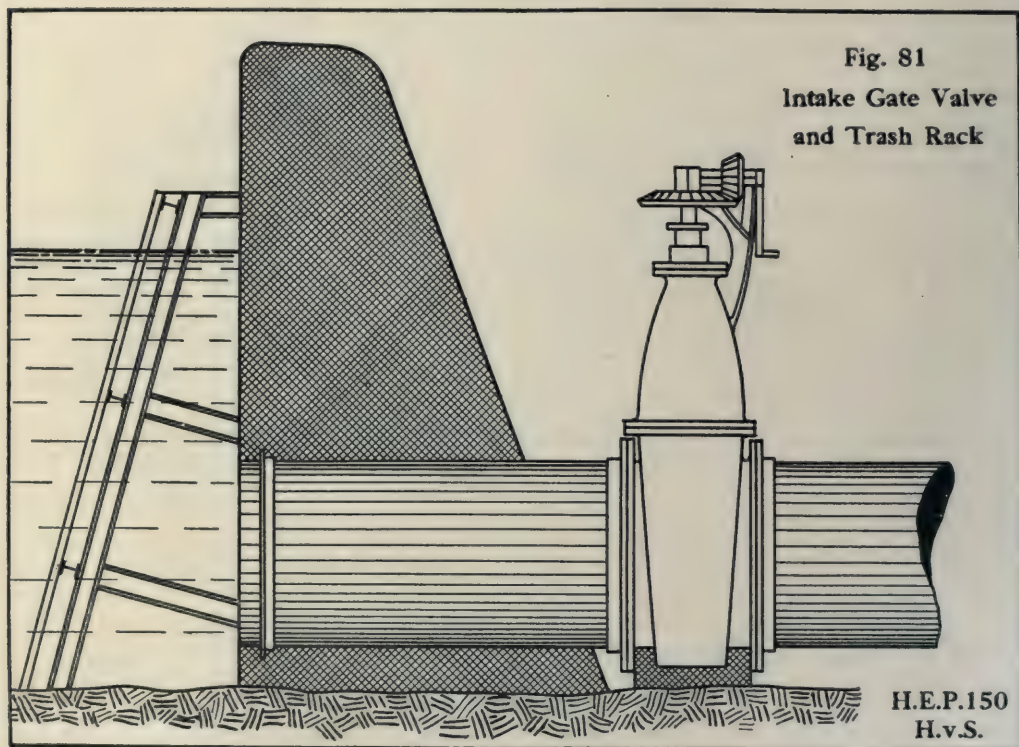

the end of the diversion works; while for high-head developments it will always be at the terminal of a pressure line. Generally speaking, the location should be selected with a view to secure a good foundation, unobstructed efflux of the water,—that is, unimpeded by the overfall from the spillway, islands, rocks, or shoals,—convenient access to the building for conveyance of the equipment, protection against flood rise, ice, and logs, and, if practicable, the power house should be on the side of the river where the transmission line leads out.

The *foundation* considerations are the same as those described for the spillway, as the power house, in a sense, fulfils the functions of a




dam; the arrangement and construction of the power-house foundation are, therefore, similar to those outlined in Article 56 and the approximate quantities of material as given in Diagram 12. Here, as in the spillway case, the *cutting-off* of substrata, by which water might pass under the foundation, is of vital importance; in fact the power-house foundation in an alluvial location is best entirely surrounded by a substantial cut-off wall, the foundation proper overhanging the cut-off at least three feet. The sliding of the structure, under the pressure from the upper level water, must be likewise considered and guarded against, and an apron should be placed along the entire downstream side, being from 8 to 16 feet wide according to the depth of the water in the tail-race.

For plans of power-house foundation reference may be made to Plan 18, illustrating those for spillways. View 15 shows the foundation of a power house in an alluvial location, consisting of bearing piles, a timber grillage secured to them, and concrete placed between grillage frame and upon it. This was completely enveloped by a cut-off consisting of sheet piling and concrete wall.

*The substructure* of the power house, Fig. 82, elevates the station above the lower pool, supports it, and forms the pits into which the water from the turbines is discharged and by which it passes into the tail-race or directly into the lower pool. Power-house substructures are of practically one type, rectangular in plan, the length depending upon the number of power units, from 12 to 18 feet for each, according to the size of turbines, and the width conforming to that of the superstructure. The substructure consists of the forebay wall, Fig. 82, 1, which extends along the upstream side and must resist earth or hydrostatic pressures and supports the upper portion of the station, the end walls, Fig. 82, 2, also resisting lateral pressures and supporting the station building, the pit walls by which the different chambers are separated from each other and which must be designed for lateral pressure on one side in the event of the adjacent pit being unwatered; the pit floors and the pit roof complete the substructure. The walls may be of masonry, monolithic or block concrete, the floor and roof of concrete or concrete-steel. The substructure is therefore enclosed by walls except on the downstream ends, Fig. 82, 4, and these are arranged for the reception of gates or stop logs to enable the emptying of any of the pits. The height of the substructure is regulated by the water level in the lower pool, but the depth of water in the pits at the lowest level should not be less than five feet, as there

should be a four-feet water cushion below the discharge ends of the draft tubes. There is no objection that the highest lower pool water should stand at the under side of the pit roof.

View 16 shows such a power-house substructure as here described, and which may be termed a standard type; it is placed upon the foundation shown in View 15, this being the upstream elevation, while View 17

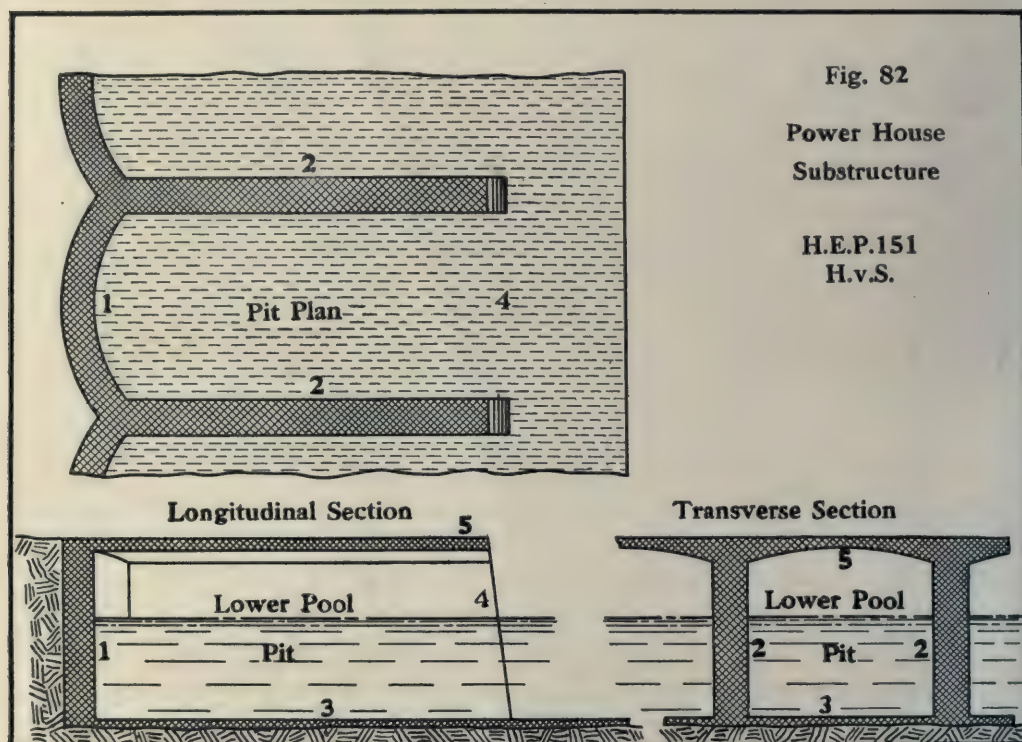


is of the downstream side. In this case the walls are all constructed of concrete blocks three feet thick, tongued and grooved all around; the floor and roof are of concrete-steel.

The superstructure houses the power equipment, and, depending upon the head, may be arranged for drowned or dry turbine installation. In the first case, Fig. 83, the turbines are placed in isolated bays into which the water enters freely with the upper level elevation, and passes through the turbines into the pit below; the pit roof forms the turbine-bay floor. The width and length of the turbine bays, Fig. 83, 1, are regulated by the installation space required for the turbines, gener-




264  
View 15

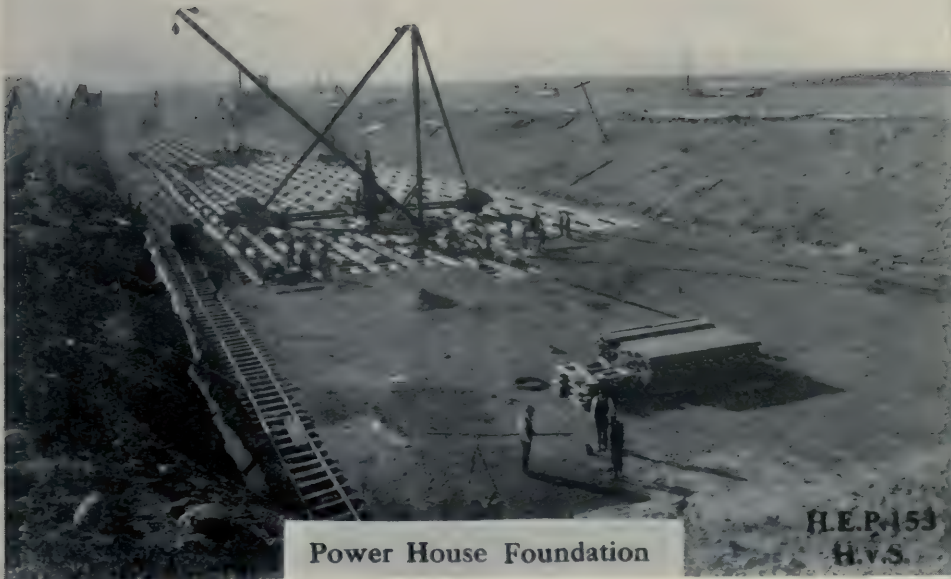

Power House Foundation

H.E.P. 153  
H.V.S.

View 16

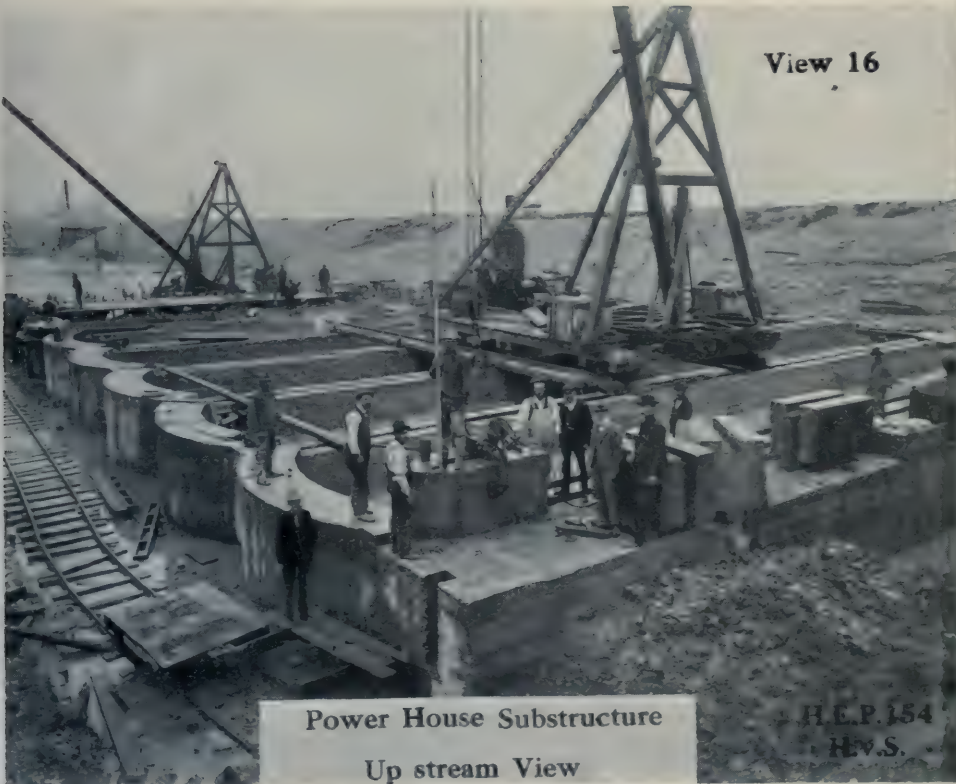


Power House Substructure  
Up stream View


H.E.P. 154  
H.V.S.



View 17

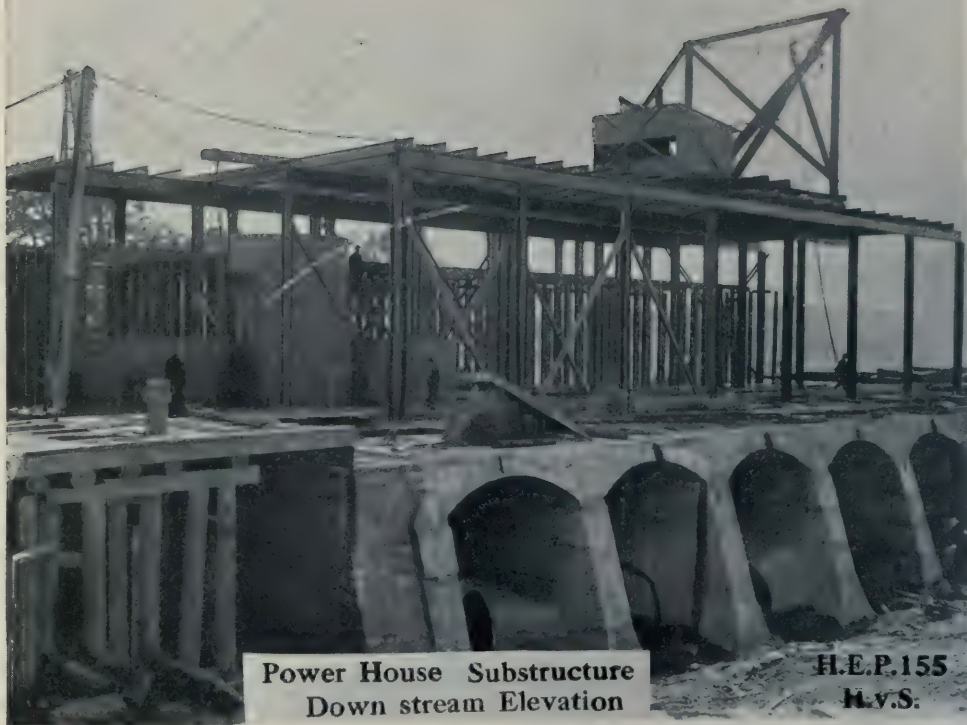

View 18

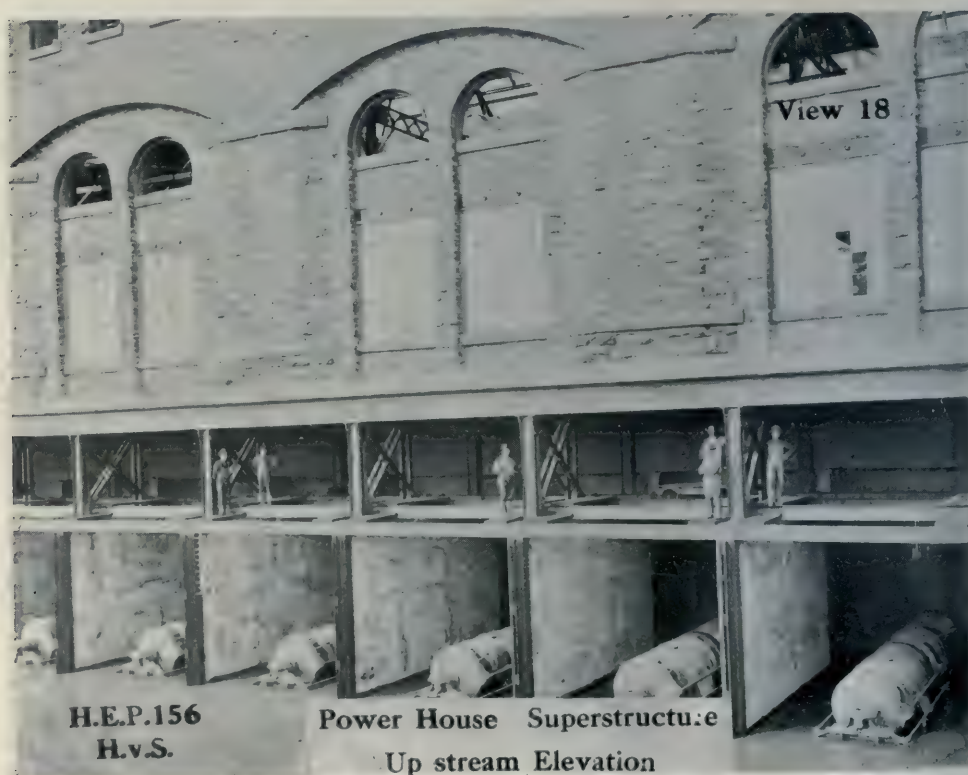


View 18a



H.E.P.157  
H.v.S.


Power House Up stream View

View 19

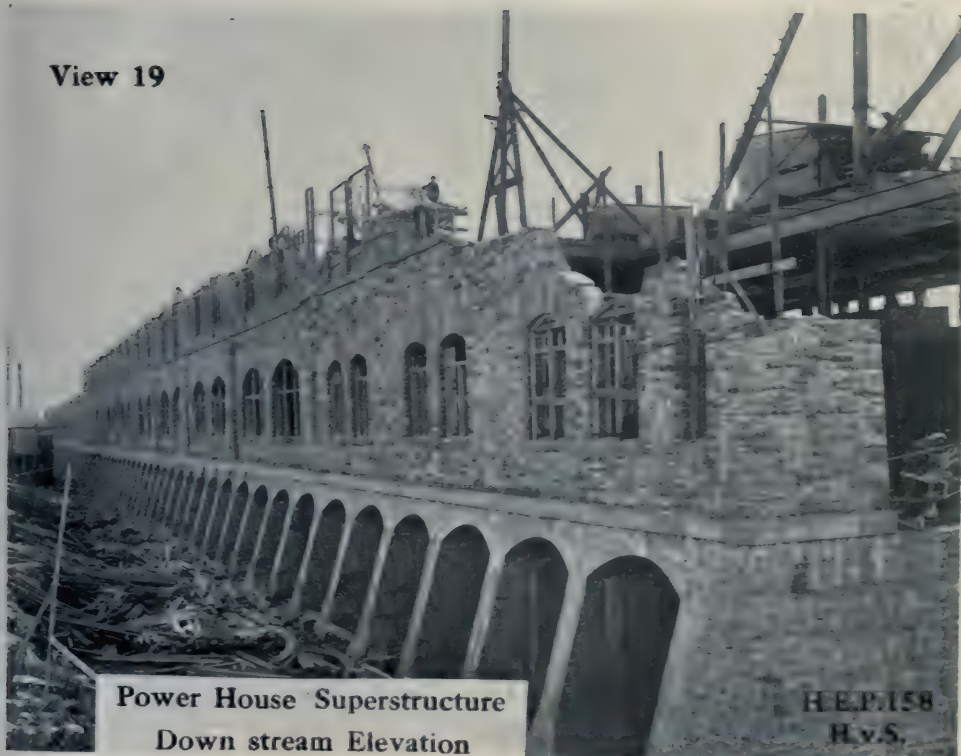

Power House Superstructure  
Down stream Elevation

H.E.P.158  
H.v.S.

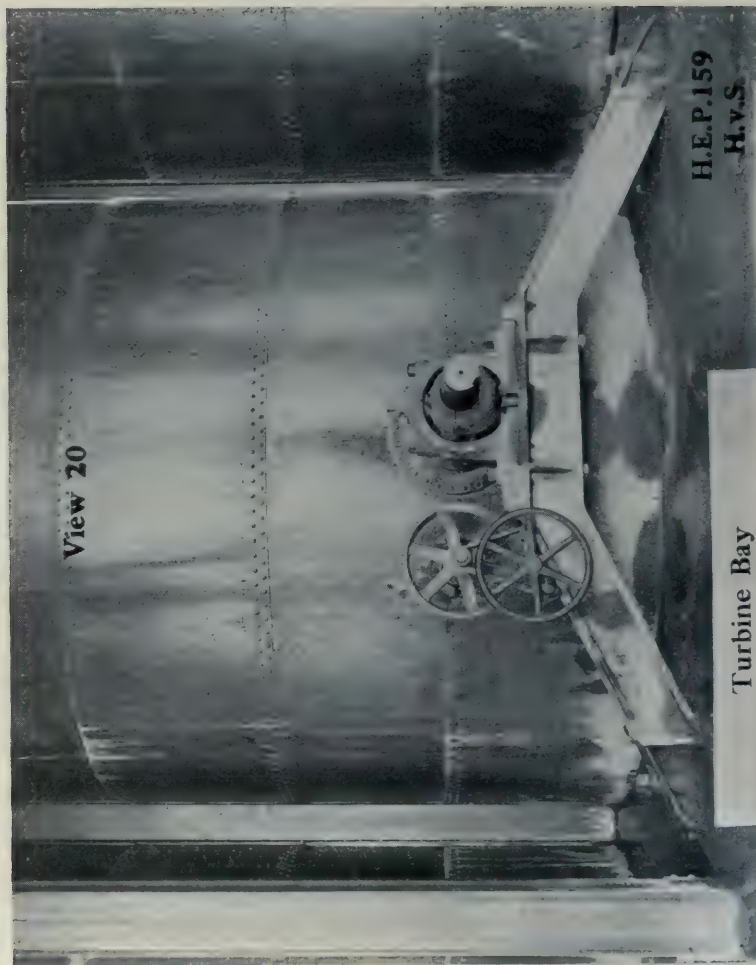


View 20

H.E.P. 159  
H.V.S.

Turbine Bay



ally from 10 to 18 feet wide and from 15 to 40 feet long; their height is controlled by the upper level. The side walls or partitions, Fig. 83, 2, are best constructed of concrete-steel, and must be designed to resist lateral hydrostatic pressure existing when the adjacent bay is unwatered. The downstream end of the turbine bay, Fig. 83, 3, is closed by a masonry or concrete wall or a steel-plate bulkhead of semicircular design with a

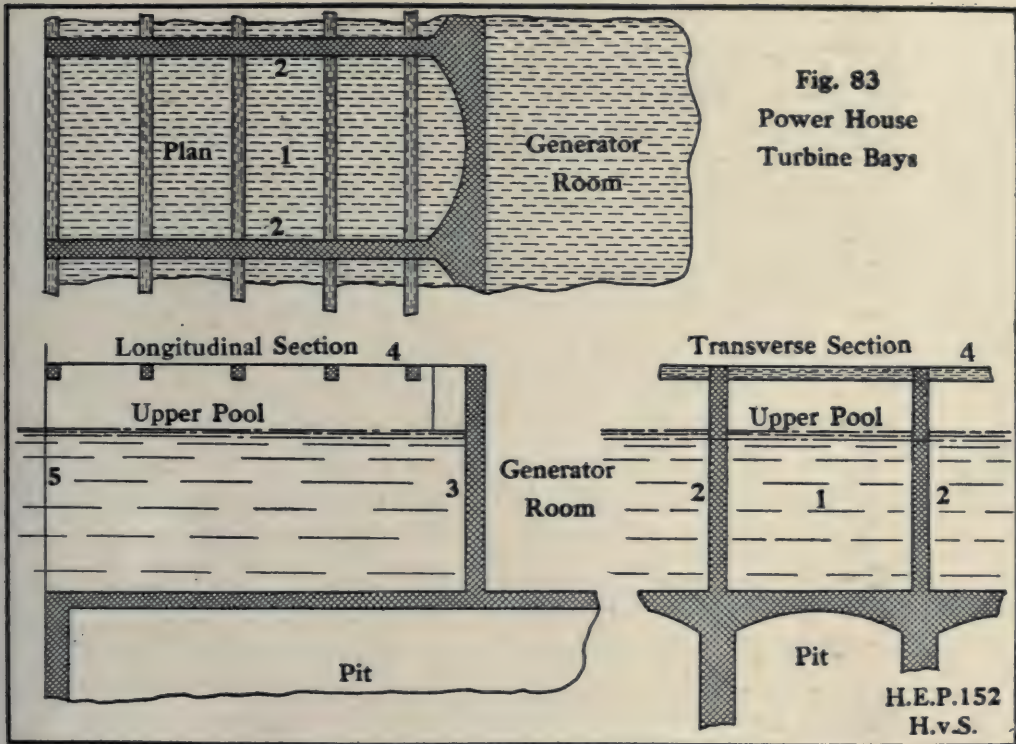

radius equal to half the width of the bay and secured to the floor and partitions; either of these must resist the hydrostatic pressure due to the upper level head. The partition tops, Fig. 83, 4, are connected by steel members, concrete-steel beams or arches.

Views 18 and 19 are of superstructures of this standard type placed upon the substructure shown in Views 16 and 17. The bays are dimensioned to accommodate a line of four horizontal turbines; the head is 20 feet. In this plant the steel-plate bulkhead was first introduced; a separate view of this from the downstream side is given in View 20. All the views from 7 to 20 are of the hydro-electric plant at Sault Ste. Marie, Mich.,

which was designed by the author and constructed under his supervision (1897 to 1902).

For medium or high-head developments the superstructure of the power house simply becomes a building in which the equipment is placed, consisting of a floor, being the pit roof, and of suitable walls and roof; the turbines are encased, water being supplied to them by pipes or penstocks and discharged into the pit. It is to be deplored that little if any thought is generally bestowed upon the architectural appearance of the power-house superstructure; as a rule, it is of the character of the plainest factory structure; castellated tops or a heavy end tower would be entirely in harmony with the building's purpose and give it a most pleasing appearance; in this respect some of the hydro-electric power houses on the European continent may well be taken as models.

This discussion of power-house types is well illustrated by the following standard designs adapted to different heads and installations. These were all prepared by the author in connection with different projects and some of them have been constructed.

Fig. 84 shows section and elevation of a power house adapted to the lowest head. When less than 12 feet is available, turbines are best placed on vertical shafts, as there is not sufficient head to drown them, the water depth above them should not be less than four feet, and the vertical depth of the turbine runner is about half of its diameter. The foundation is indicated by No. 2 in the figure, the pit by No. 1, turbine bay No. 6, pit walls No. 4, bay partitions No. 7, pit roof No. 6, bulkhead wall No. 8, turbine No. 5, and generator No. 9. The water enters freely into the turbine bay and flows out of the pit. The generator in this case is directly coupled to the vertical turbine shaft, being of what is known as the umbrella type, and is placed on a floor arranged above the turbine bay, supported by the partitions and the bulkhead wall. Note the depression in the pit below the turbine, by which the necessary four-foot water cushion is secured without carrying the entire pit to that depth, which represents some saving in cost. The foundation is the standard pile-bearing type with upstream and downstream aprons. This type of power-house design is available for all low-head situations, the installation being, however, most frequently gear connected, as umbrella-type generators do not as yet form standard electric equipment in this country, though they are being used now more frequently in



Generators

Direct  
connected


Fig. 84

Power House


low head

Vertical Turbines

Drowned

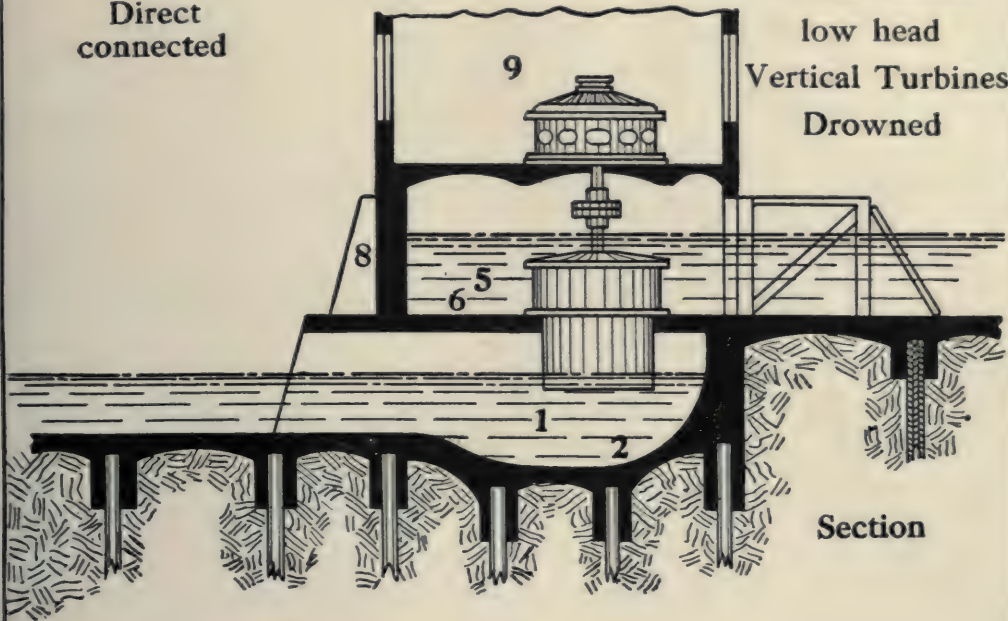

Section

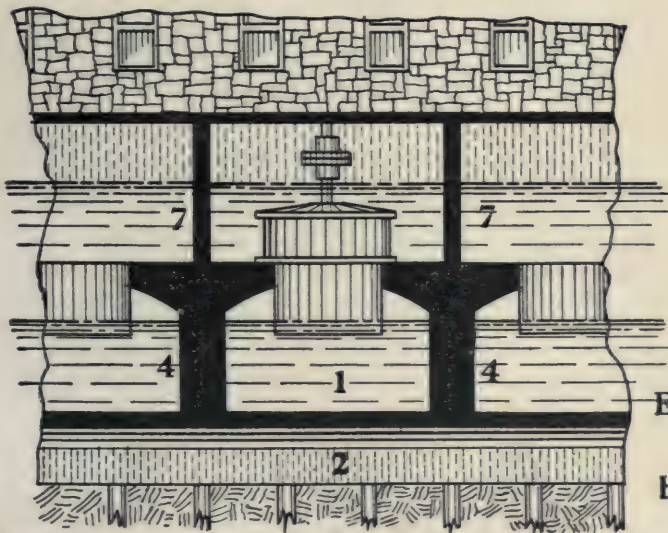

Elevation

H.E.P.160  
H.v.S.



Europe than the horizontal shaft installation, securing higher efficiency of output. The Niagara Falls plant is so equipped.

Fig. 85 shows the design for a power house with low head in which the turbine bay is arranged, outside of the power building proper, in the forebay. This type is met with frequently in the older plants; it possesses no advantages nor represents economies over the one described in this article; as a matter of fact it adds to the masonry construction. The installation here shown is of a double horizontal turbine drowned, the turbine bay being closed downstream by a masonry bulkhead with a cast-iron head through which the turbine shaft passes; the exit from the pit is in a longitudinal direction to escape interference to free outflow caused by the overfall from spillway.

In Fig. 86 will be recognized the standard low-head design heretofore described, being the arrangement of the plant at Sault Ste. Marie, Mich. The turbine installation consists of two pairs of horizontals; as many as four pairs of wheels have been thus arranged. Note the closing of the downstream end of the turbine bay by the steel-plate bulkhead and compare it with the masonry bulkhead on the design of the previous plant; the cost is about one-third and much valuable space is saved.

Fig. 87 represents a design which is much used in Europe, in which the turbine installation is of the serial type, utilizing fluctuating heads with equal efficiencies. The design differs chiefly from those described in the arrangement of the pit, the discharge being from two levels as the fluctuations of the upper and lower pools may require. The turbines can be only of the vertical type, and abroad the generators are generally direct connected. This design should be used much more frequently than it is in this country, especially on the rivers in the South which are subject to great fluctuations. The foundation is represented by No. 2 of the figure, the pit by No. 1, the turbine bay by No. 5; 3, 6, and 8 are practically bulkheads, 6 being depressed downward to make water seal with lower level at C. The installation consists of a double vertical turbine, 13 and 14, the first discharging upward, the latter downward, and a third vertical wheel, No. 12, also discharging downward; 12 and 13 use the upper pit channel; 14 the lower. The water enters wheels 13 and 14 at 15; 11 is a water thrust bearing; 10 is the generator; 16 is a stop-log gate closing the entrance to the turbine bay. There is nothing complicated about this design nor is it one of greater cost than the


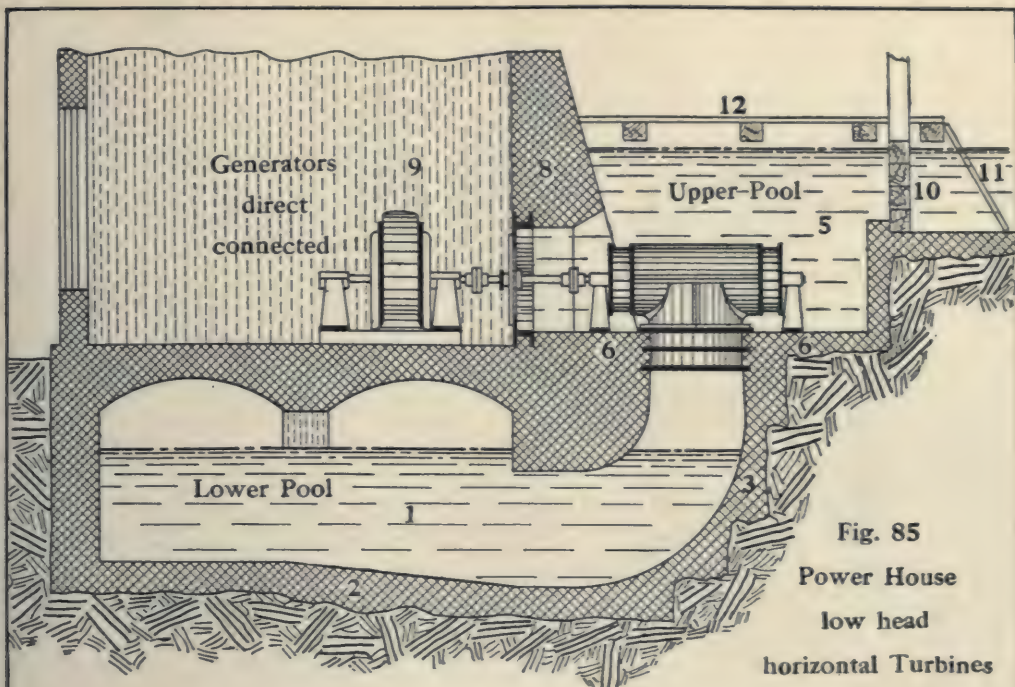





Fig. 85  
Power House  
low head  
horizontal Turbines  
drowned in  
forebay

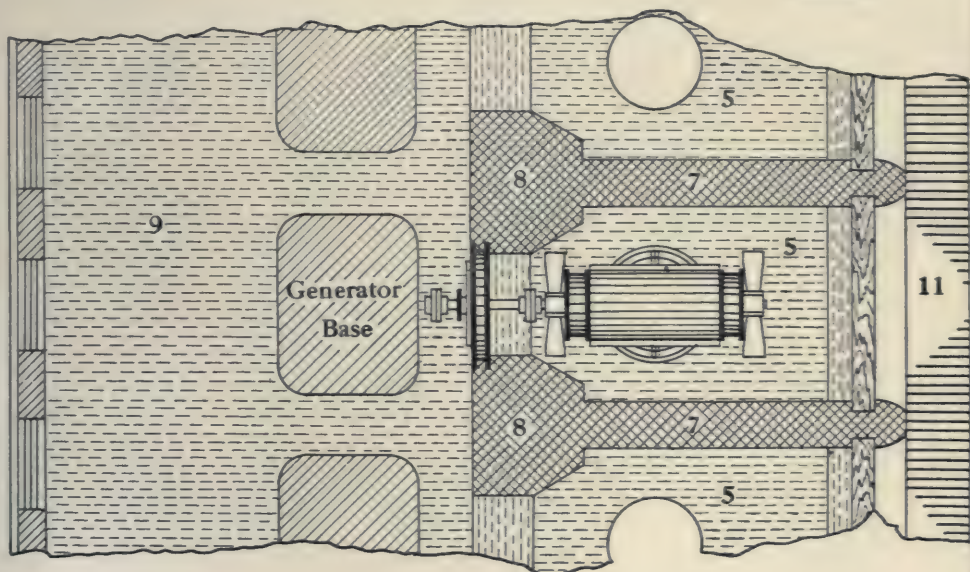


H.E.P.161  
H.v.S.



Fig. 86  
Power House  
for low head and  
horizontal turbines  
Drowned.

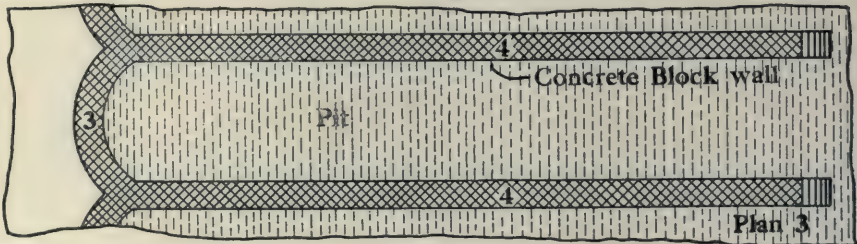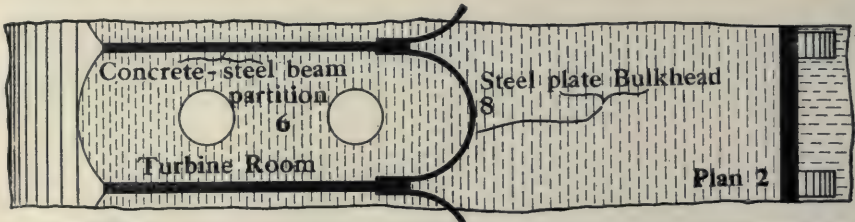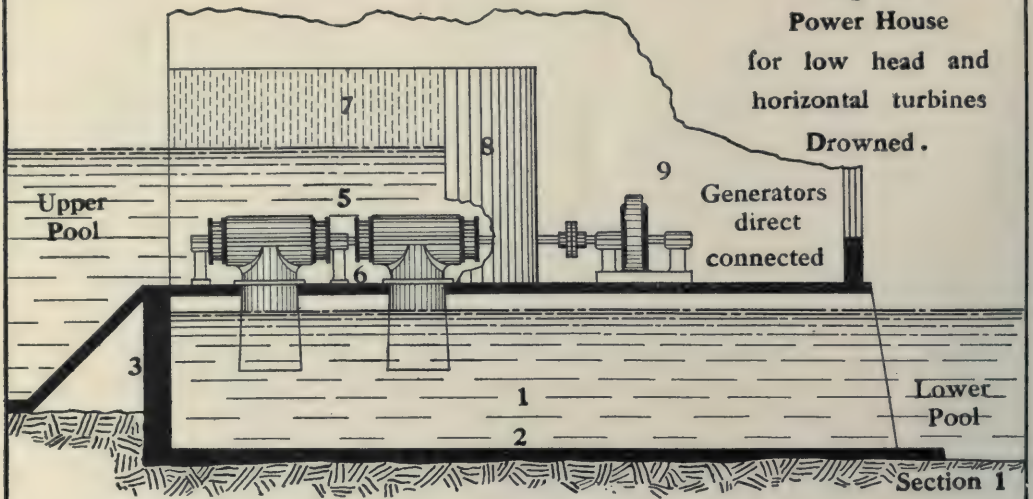

Up Stream  
elevation

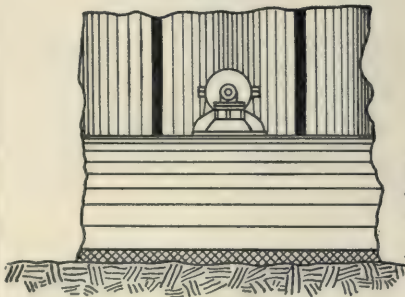


Down Stream  
elevation



H.E.P.162  
H.v.S.



Fig. 87  
Power House  
fluctuating head  
Serial Turbines

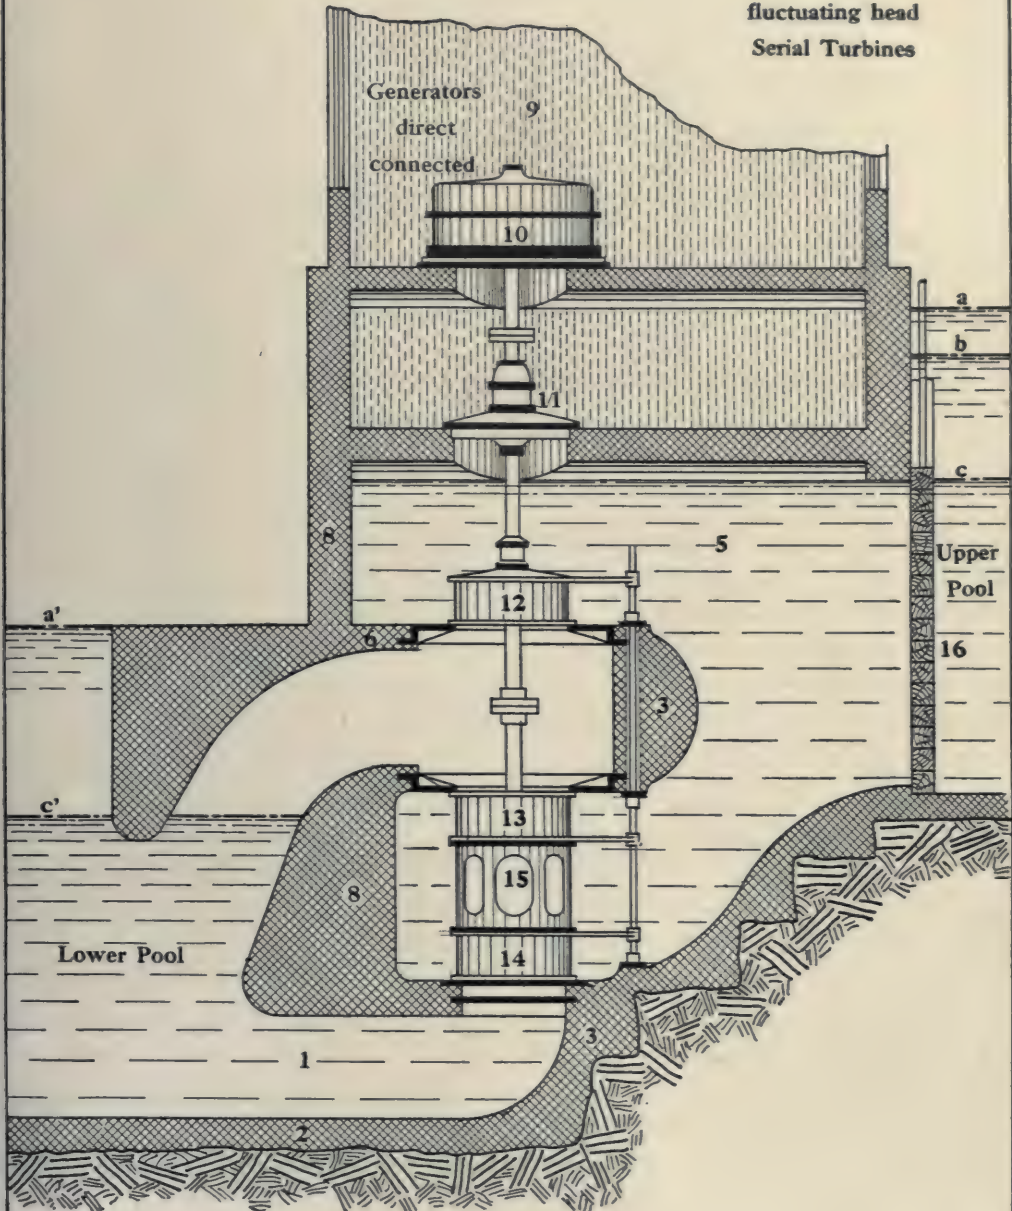

H.E.P.163  
H.v.S.

others, while it represents the only plan by which an efficient output can be secured from a fluctuating head.

Fig. 88 represents the general practice for low head, the installation being of double verticals discharging by union draft tube. No. 1 is the pit, No. 5 the turbine bay, 13 and 14 the turbines, 11 the thrust bearing, and 15 the generator; 3 and 6 show the forebay wall, 8 the bulkhead.

Fig. 89 represents the general type of power house for medium-head developments; foundation, pit, and operating floor are the constituent parts, and little variety is called for. No. 1 shows the pit, of the same design and construction as in the standard low-head type, unless for high heads, when the accompanying pressures must be properly provided for. The supply pipe enters through the house wall, terminating in the turbine case, from which the water escapes by the draft tube.

This same arrangement answers for the highest heads.


Power-house designing, in the author's judgment, follows too much in old established routes. As the focus and realization of an enterprise comparing, in point of investment and earning value, well with the most important of other lines, it deserves the greatest amount of care. There is a tendency to overdo the heavy dimensioning of walls and allot unnecessarily large areas for the equipment installation; this would be avoided if each part of the structure were independently designed for the duties it is to fulfil. Just as the spillway or a retaining wall is designed, so should the forebay, pit and end walls, turbine bay, partitions, floors, and roof be carefully and individually designed, and the space required for the electric equipment should be laid down from the known dimensions of floor frames and what is required for convenient operating space; anything more than this becomes an expensive superfluity, as it entails more yardage in every wall, more roof and floor areas, and other costly excesses over what is necessary for the purpose.

A desire to incorporate in a power-house design the elements of highest obtainable efficiency with economy of cost of construction and maintenance led the author to develop a power-house design where the interior of a gravity spillway may be utilized as the power station, and by which, it is believed, these ideals can be secured under proper conditions. This design is described in detail and illustrated in Article 78 of this part.

ARTICLE 77. *Appurtenances to the Power House.*—At the entrance of the turbine bays *trash racks* are placed to intercept all floatage. They generally consist of flat steel bars arranged closely to form a rack held in



Fig. 88  
Power House  
for low head and  
double vertical  
Turbines drowned

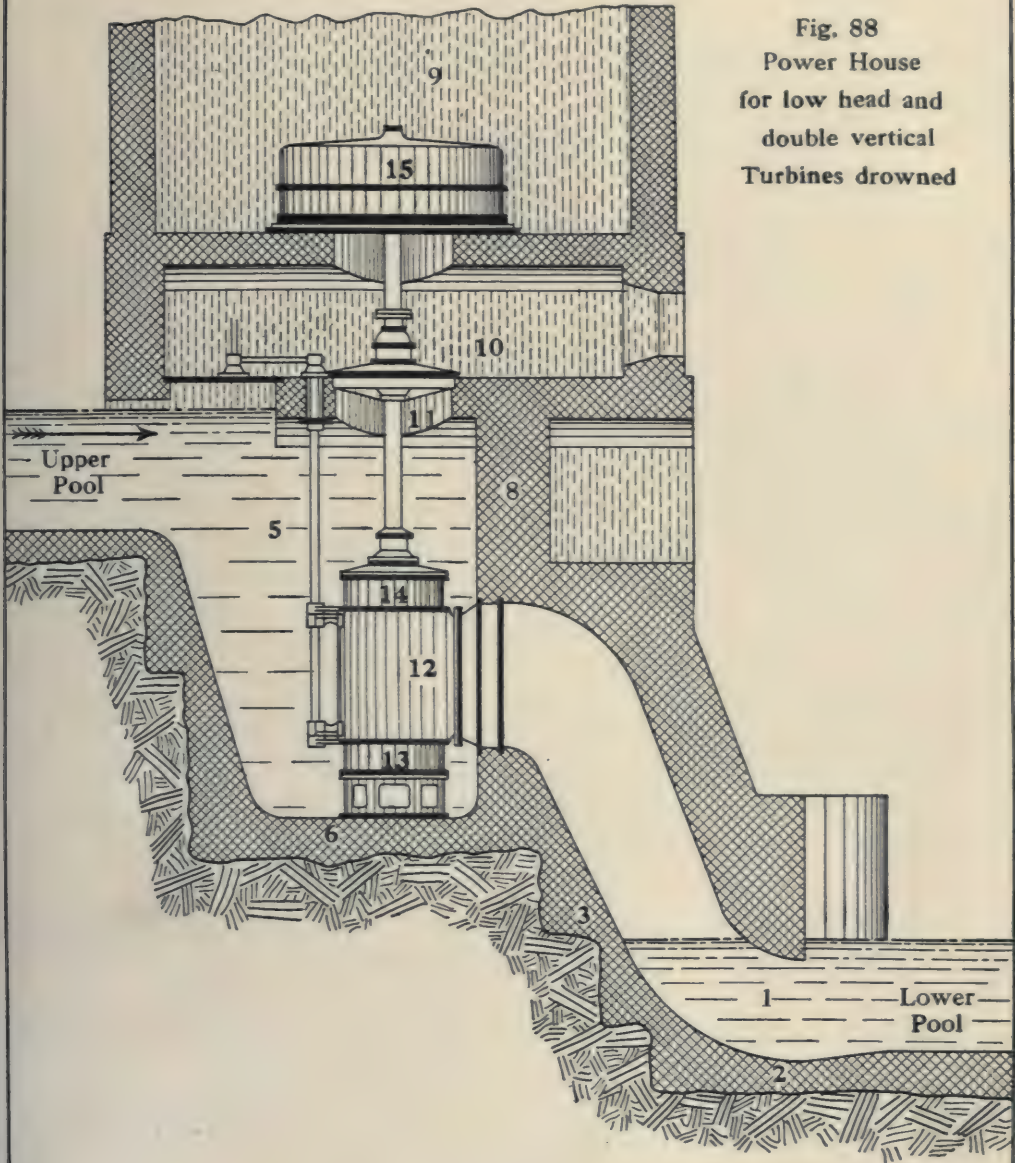

H.E.P.164  
H.v.S.



a suitable frame; the latter is secured to the structure so that it inclines downstreamward; this general arrangement is shown in Fig. 90; the details depend upon the height of the water and the width of the turbine-bay entrance.

There is not much latitude of design in trash racks. They should be amply strong, and in this regard the winter conditions, as to anchor or float ice accumulations, must be well understood; the former will be treated specifically later on. *An operating platform* is required above the trash rack so that it can be conveniently raked and the floatage disposed of.

The upstream turbine-bay entrance and the downstream pit ends are arranged to be closed temporarily for the purpose of unwatering either chamber and rendering them accessible for repairs to equipment, etc. There are a variety of devices used for this purpose, but, as in the case of open spillway or other parts where gates are required, the author favors the simplest arrangement, such as stop-logs or needles, which are readily handled and quickly renewed; no other device, unless complicated and costly, can be operated more conveniently and cheaply than stop-logs. These have been fully described in Article 70.

*A traveller* is frequently provided in the power house for the handling of the equipment; it is placed overhead in the operating or generator room and equipped for electric operation.

*A machine shop or repair room* should always be set aside in the power house. Oil and waste stocks should not be kept in the operating room.

ARTICLE 78. *The Submerged Power-House Design.*—The gravity spillway type is analyzed and a standard design for it detailed in Article 67. From this will be noted that one of the distinct features of this type, as compared with other spillways, is the fact that there remains a spacious interior enclosed by the walls forming the spillway, which, of necessity to serve their purpose, must be safe against rupture and must further be absolutely water-tight, both conditions which render this interior space safe and suitable for utilization of some purpose or other, and why not to place the turbines and the generators therein and operate them?

As has been emphasized on different occasions in this volume, it is highly desirable that the power house be located close to the spillway, so that the conversion of the natural energy into useful work may be carried on in closest proximity to the origin of the natural forces, which

Section



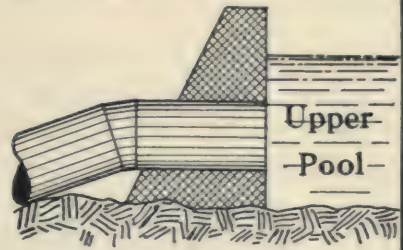


Fig. 89

Power House  
medium head  
Horizontal Turbines  
Cased


Elevation

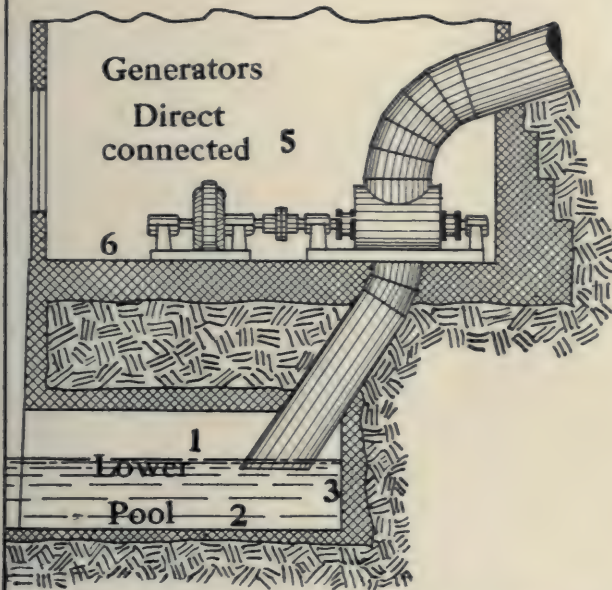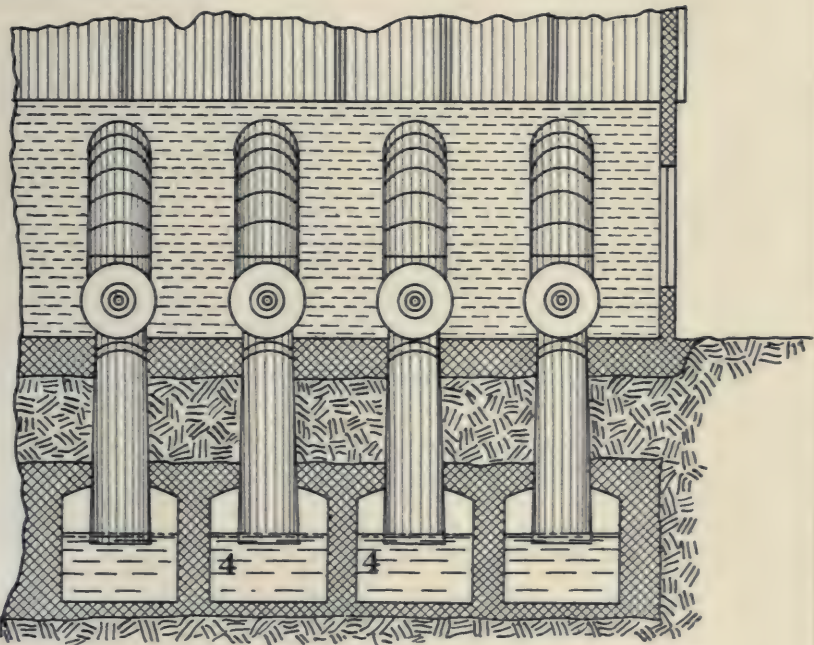

H.E.P.165  
H.v.S.



is *at the spillway*, unless in the case of the necessity of a diversion programme. It is the aim of all industrial enterprises to locate as near as practicable to the point of raw material; that is exactly the case here, as it costs as much (and generally more) to transport water and head as any other class of staples; not only is it a costly undertaking, but, much more to the point, it is a wasteful process, this transporting water

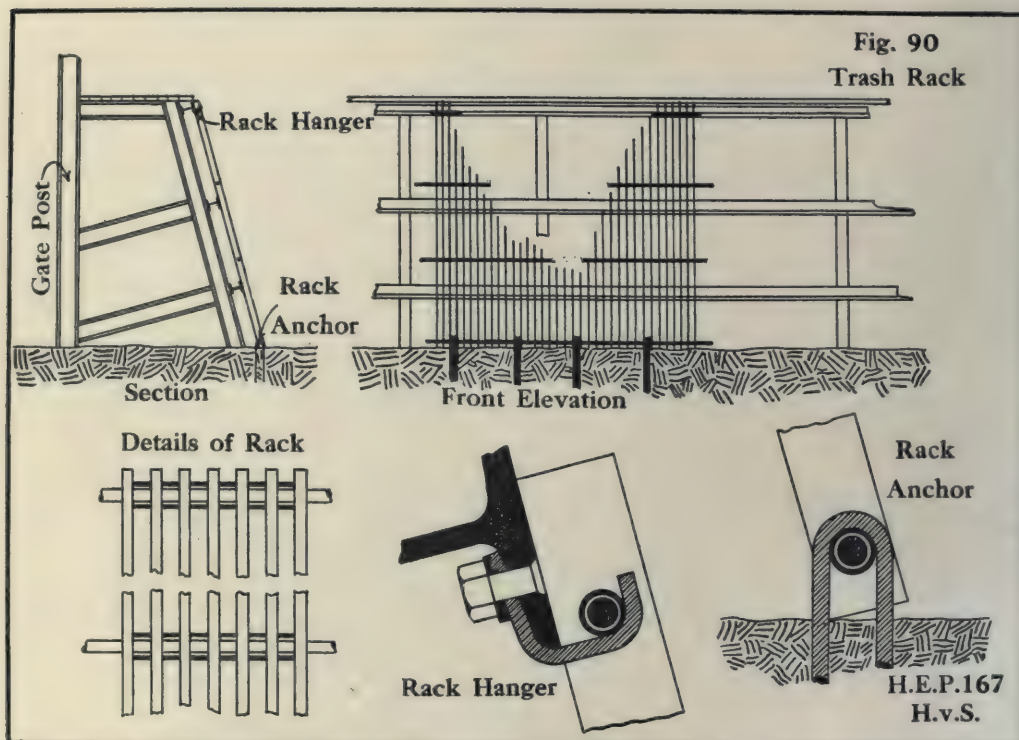

for any distance from the spillway to the power house, as water does not move unless fall or head is expended and that is lost forever. The spillway has a secure foundation, and it, with the walls, practically forms a house, excepting that it is not of the conventional shape; its walls incline toward each other and jointly form the roof; at any rate, it represents a substantial structure, and if it is sufficiently roomy there is no reason why it could not be utilized for the purpose of a power station. The question of dimensions is readily determined when the fall and power output are known. Generally speaking, the submerged power house can be arranged when the fall exceeds 25 feet and the fluc-



tuations of river stage remain within five feet; the output does not generally put a limitation on the use of this design, as the entire spillway length is available.

Fig. 91 shows the general arrangement, which can be varied to suit different conditions.

In the section No. 1 shows the walls of the spillway, the deck and apron and crown; one of the partitions arranged transversely of the spillway structure, as appears more plainly in the partial elevation and longitudinal section; these partitions, or they may take the form of steel frames, need not occupy the entire transverse space from deck to apron, their central portions can be omitted, leaving an arch opening, which, if need be, reinforced by a steel member, represents the strength of support for deck and apron in the same degree as if it were solid. This statement needs no more argument than the fact that a wall containing a door, properly framed, will support the same weight safely as it would if it were solid.

No. 2 shows a vaulted chamber arranged longitudinally in the interior of the spillway, its floor of concrete-steel arches resting upon transverse walls, really the bottom sections of the partition widened in section, and its walls and ceiling being formed by one continuous dome-like structure, generally of hollow brick tile, or of ferro-inclave. A considerable space is left between this chamber and the shell of the spillway structure, allowing of free circulation of air currents around it. The length of this interior chamber depends upon the number of power units, generally one unit can be installed between two spillway partitions. The power chamber or operating room, or by whatever name it becomes known, is continuous and need not be subdivided for purposes of design of construction, though it may be desirable to partition off a repair shop and perhaps an office room. This vaulted room may be compared with the superstructure of the general power-house design, while its supports are identical with the ordinary substructure containing the pits and turbine bays. All of this is readily recognized from the sections shown, and, as a matter of fact, the structural arrangements are subject to such a variety of designing as may be suggested by different conditions and requirements.

No. 5 shows the feed-pipe intake passing through the spillway deck; it may be as shown, or higher up; the feed pipe may lead in straight or with a quarter turn,—all matters of detail for particular cases; at any

rate, the water is drawn from the upstream side of the spillway, led into the turbine case, which, as here shown, is that of a vertical shaft wheel; it may be of the horizontal type, in fact of any of the installations which will appear further on as part of the discussion of hydraulic equipment, all depending upon the required output and available space. In a plant recently designed the installation consisted of a line of two 54-inch turbines on one horizontal shaft driving one generator.

No. 6 is the supply pipe, and at

No. 7 is shown a valve gate by which the flow in the pipe is fully controlled; this is also a subject of detail, offering no difficulty of solution.


No. 8 is the turbine case, already discussed.

No. 9 shows the draft tube passing into the pit. Note the depression in the pit excavation below the draft tube, also the depression of the outflowing water surface at No. 4; this will actually exist whenever water is passing over the spillway, excepting during storm flow, representing the siphon action of the water as it passes the downstream opening of the pit, where its energy is that due to its mass and the fall. If the overfall on spillway crest is six inches deep, the volume per linear foot of spillway is approximately 1.2 cubic foot per second, which with a fall of 42 feet, that of the section shown, represents a theoretical energy at the toe of the spillway of about 3000 ft. pds., where it meets the tail water passing out, and, instead of exerting its force on the river bed material or the spillway apron, it is turned into the harmless but extremely useful work of accelerating the motion of the tail water, thereby lowering it below the draft tube and incidentally increasing the effective working head on the turbine. The conditions which give rise to this phenomenon would usually combine to cut down the effective head of the plant by raising the lower level in the tail-race or pit. This is not only based upon theory, which is sound enough, but has been actually observed, and the author hopes to find opportunities, before very long, to make tests and measurements of the actual work of the overfalling water expended on the escaping tail water.

No. 15 shows two waste flumes arranged close to the supply-pipe intakes, by which the accumulation of sediment near these intakes can be avoided. As already stated, there is no objection to the arrangement of the supply-pipe intake at a higher level. The intake entrance is protected by a trash rack operated from a platform on the spillway crest. Raking may also be arranged from the interior of the spillway.



POWER SPILLWAY.

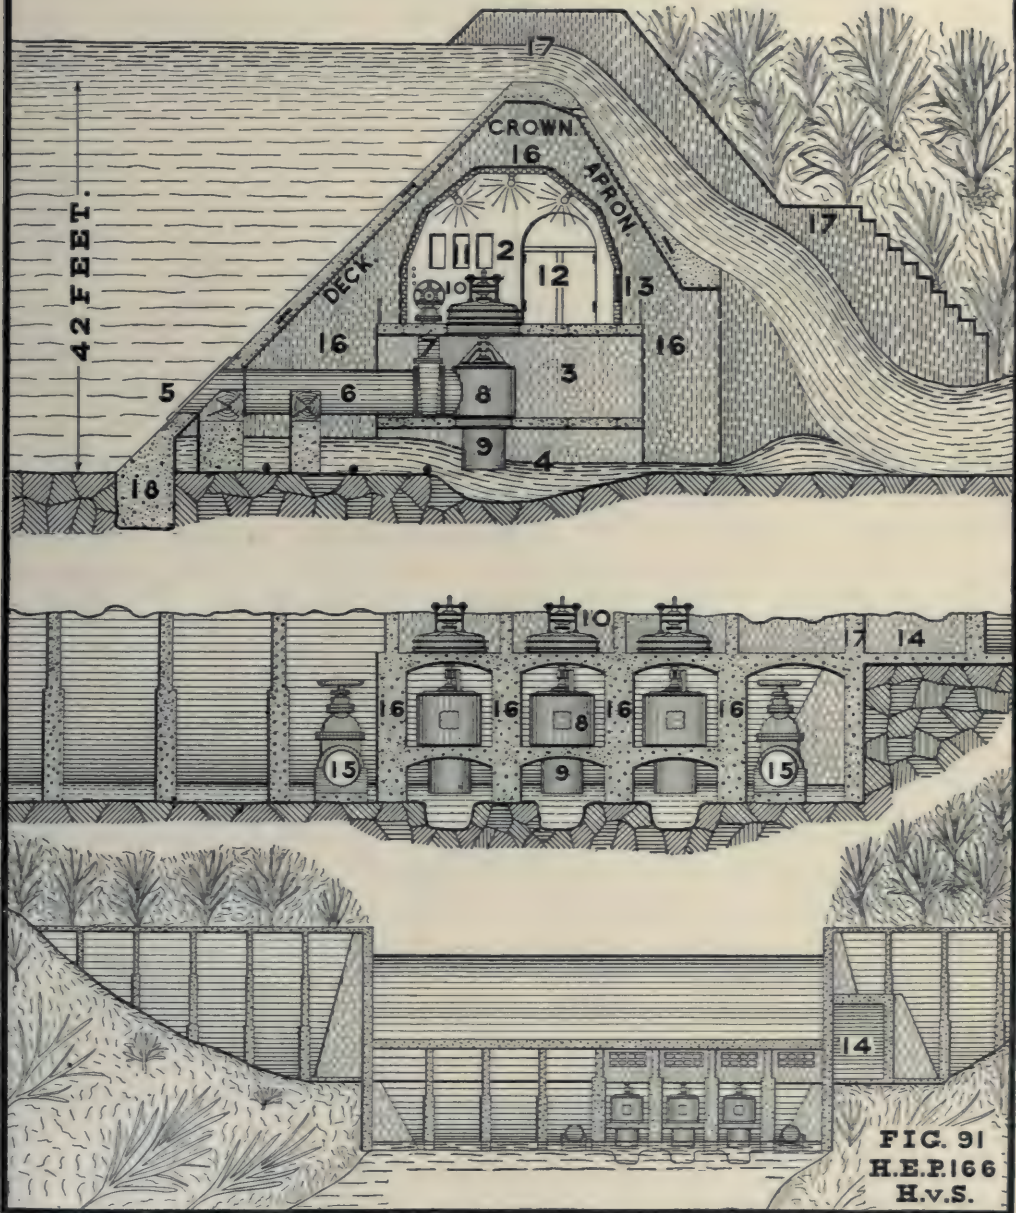



No. 14 shows the entrance to the submerged station, which is from the downstream side of the spillway through the abutment, entirely safe and as convenient as any transportation arrangement can make it; a railroad track may be brought to this entrance or carried into the station, a trainload of equipment may be taken into the station,—simply a question of available space.

No. 12 shows the end door and entrance into the operating room.

No. 13, the windows, in this case of ordinary rectangular dimensions, because the apron is of the partial type; were it full, the light would be supplied through ship lights; there need be no scarcity of light, daylight and artificial; when water overflows the spillway the refracted light, through the water, is plentiful and most beautiful.

Abundance of circulating air is secured in this chamber; if anything, too much of it when overflow sucks air through the vents under the crown from the interior of the spillway, thus creating a considerable air current.

The equipment as herein shown in No. 10 consists of a vertical or umbrella generator, an exceedingly economical machine both as regards material and dimensions, and of high efficiency; witness the equipment of the Niagara Falls plant and many of the most recent and complete of the European installations. The generator may be of the ordinary type coupled to the shaft of a horizontal turbine, or a pair; the vertical is somewhat more economical in space. There is plenty of room for the hydraulic governor, the exciter and switchboards, and the cable galleries which lead out to the abutments and thence to the transformer house or transmission line.

No. 3 shows the space available for the handling of the turbines in placing or removing them; they are passed through the floor and the draft tubes similarly through wells arranged in the lower floor.


No. 17 is the abutment which is designed to protect the entrance leading into the station on the other side of it against any of the over-falling water.

The advantages represented by the submerged power house may be enumerated as follows:

First, it secures the highest obtainable hydraulic efficiency of the available flow and fall, certainly exceeding that of any other arrangement, unless it be in a power house at the end of the spillway.

Second, it represents the greatest obtainable economy in power-house construction, and in this respect admits of no rival and no exceptions.

View 21

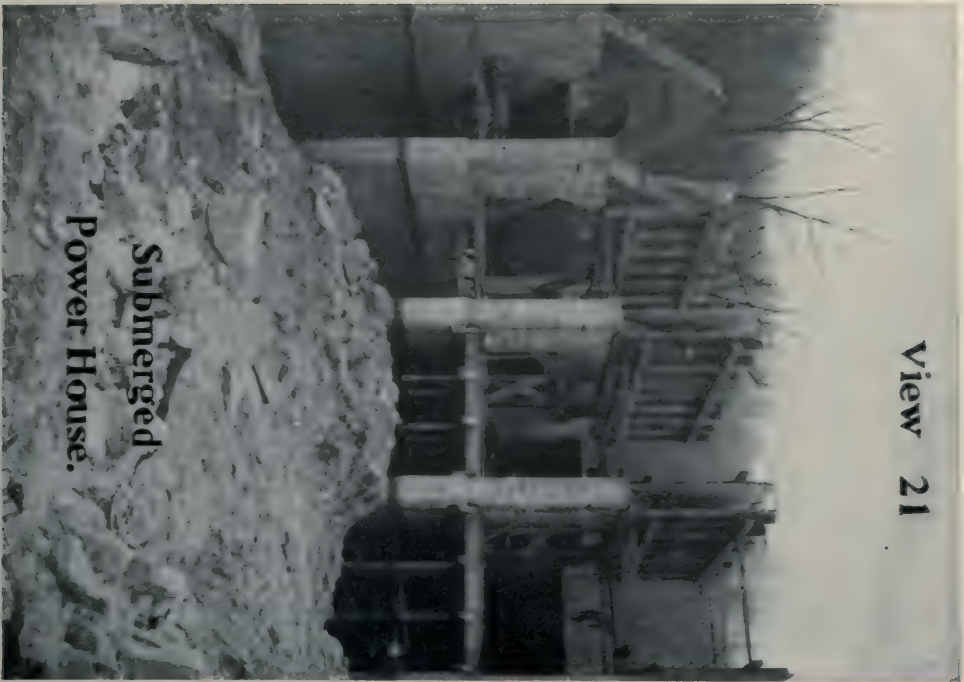


Submerged  
Power House.

View 22






Submerged  
Power House.



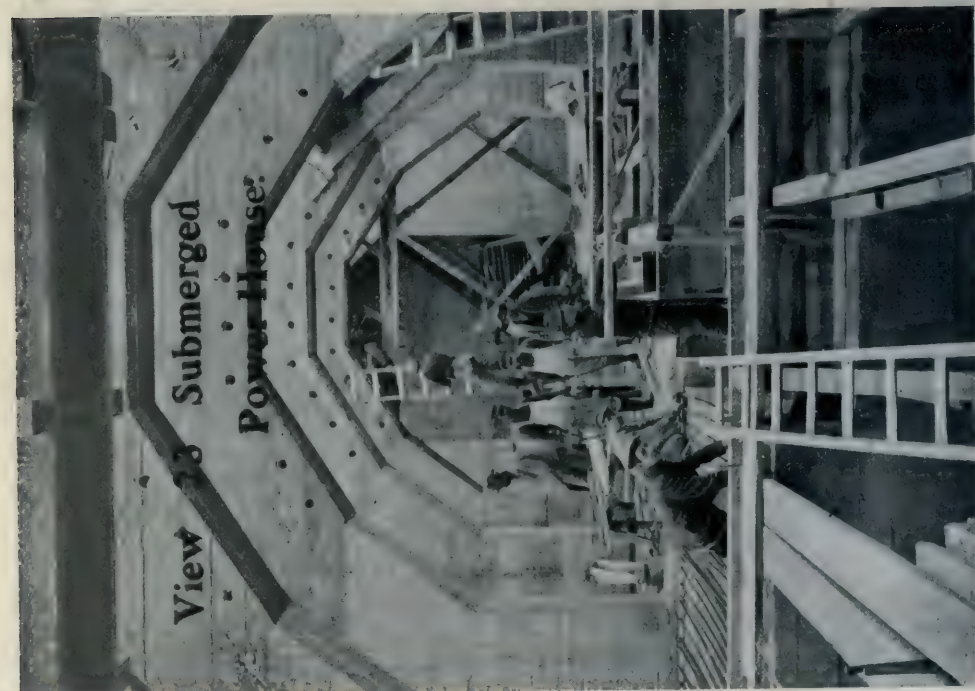



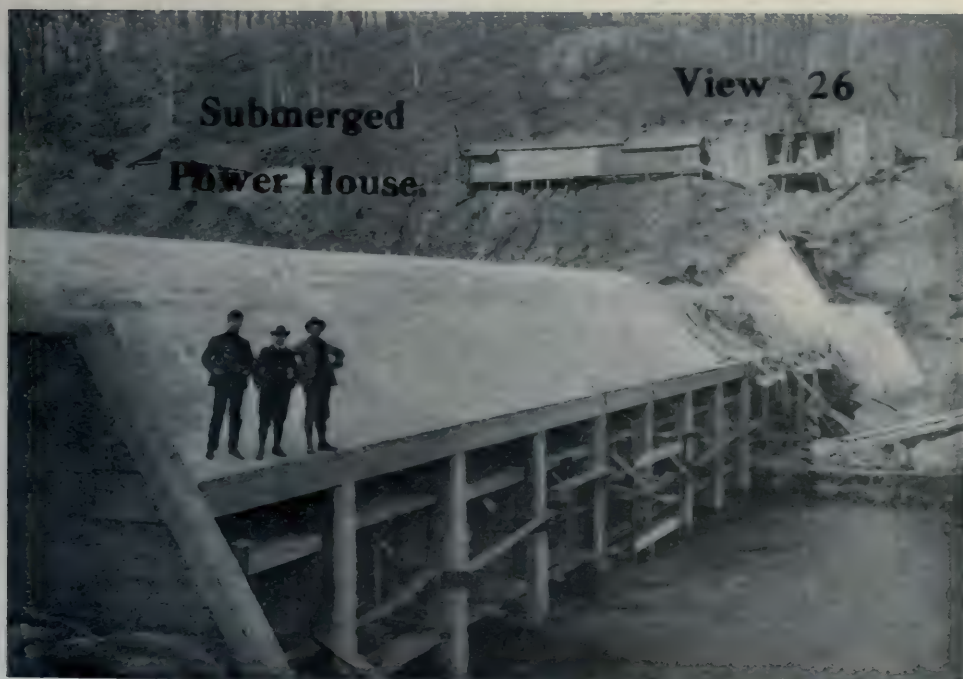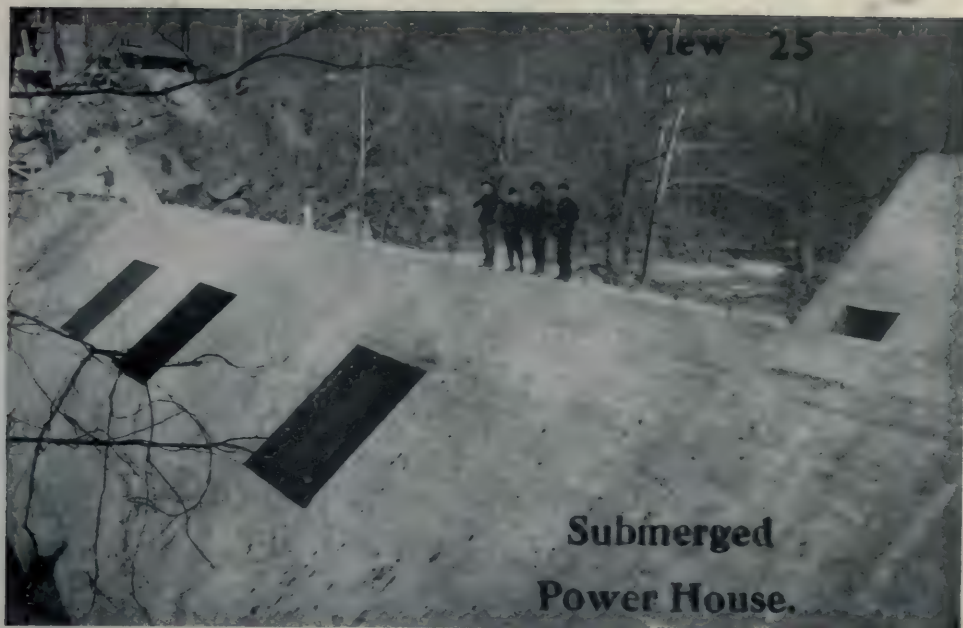

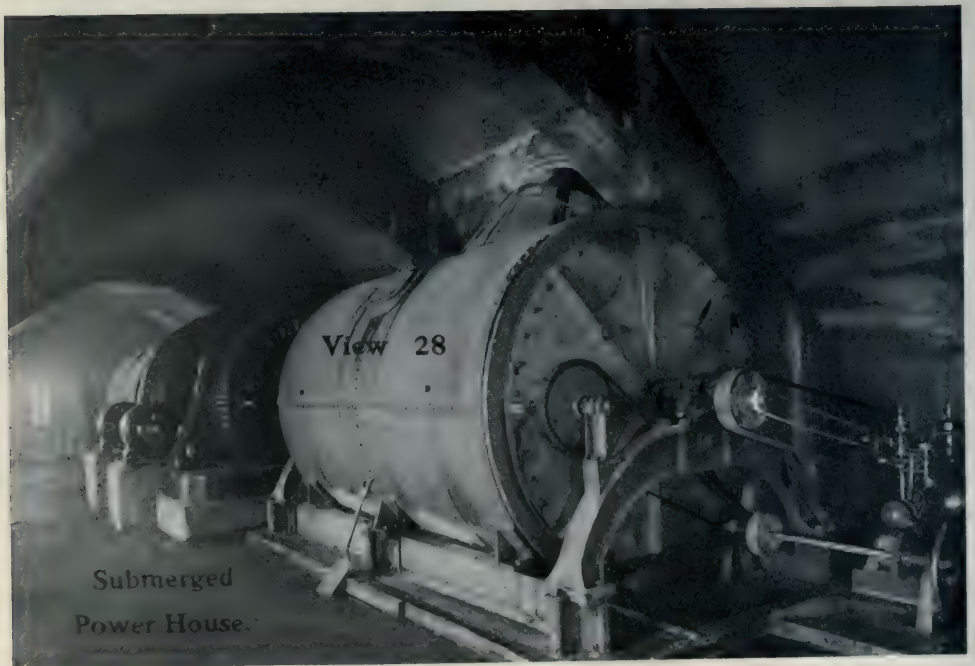



Even the power house at the end of the spillway requires a separate structure, unless the spillway proper is shortened for that purpose, when it represents a far more expensive arrangement than a separate power house, because the storm overflow will be much higher and flood more land, etc. The saving represented by the submerged power house should be considerable in any case as compared with the separate power house, but, even if the cost were the same, the advantages secured under the first item represent a substantial value.

Third, the submerged power house is absolutely safe from lightning danger; it cannot be struck, nor damaged by fire in any manner.

Fourth, the power installation may be of gradual growth without the necessity of erecting an unnecessarily large building at the first. This is frequently a very pertinent point, that, while the spillway must be completely built, the power house might be economized on until the market calls for the output; but the separate power house must, as a rule, be as completely constructed at the beginning as the spillway and dam, even though at first only a part of the power installation is to be placed. In the submerged power-house type, the power house is practically constructed when the spillway is in commission, the interior detail arrangement can be made just as conveniently and economically at any time thereafter, perhaps with considerable saving when electric power is later on available from one or more units.

Fifth, the submerged power house can be constructed—or, more appropriately speaking, arranged—irrespective of the condition of the river or the season of the year, which very frequently is an important matter when the completion of the plant has to go over a season because of high water or serious cold. It will be simply interior finishing.

At the time this publication goes to press, the first of this type of submerged power stations has been completed and is in operation. It is located on the Patapsco River some 15 miles from Baltimore, Md., and is easily reached from that city by the B. & O. R. R. going to Illichest, Md., or by the electric Interurban to Ellicott City, Md., the plant being only a short distance from either point.

The development is the project of the Patapsco Electric and Manufacturing Company, of which Mr. Victor G. Bloede, of Baltimore, is the President and Mr. Otto Wunder, of Ellicott City, Md., the Superintendent. The Patapsco River is one of the oldest water-power streams in this country, and one of the earliest developments at Ellicott City, consisting

of a spillway and diversion canal and constructed in the last century, is still in commission operating some large flour mills located at Ellicott City, and it seems peculiarly fitting that the latest development of hydro-electric plant types should find its cradle on this stream which is so full of water-power history.

The Patapsco Electric and Manufacturing Company now operate two hydro-electric plants on the Patapsco River, the one here referred to with the submerged power station, and an older plant some two miles above this on the same stream. Mr. Otto Wunder has charge of both of these plants, and is therefore well qualified from the view-point of the practical station operator, the man who finds or misses the faults and merits more readily than the designer and constructor, to draw comparisons between the usual type of the separate power house with this submerged station located in the interior of the spillway, and Mr. Wunder is a man whose talk is plain and convincing because he knows what he is talking about.

Views 21 to 32 are of the Patapsco plant.

View 21 shows the construction of the spillway, which was executed by the Ambursen Hydraulic Construction Company, of Boston, Mass., who make a specialty of this type of spillways and to whom the author is indebted for these construction views. In No. 21 the spillway partitions are being formed and the openings for the interior chamber are plainly visible.

No. 22 is an end view, showing the rock bank against which the abutment is placed and through which entrance is gained into the interior station.

No. 23 is a longitudinal view of the interior, giving a good idea of its dimensions; the floor of the station room is being placed.

No. 24 shows the placing of one of the turbine supply-pipe collars in the upstream face, the deck, of the spillway; it also reveals the waste flume, an underflow sluice, in the lower left-hand corner, by which part of the stream's flow is controlled during construction.

No. 25 is an upstream view of the completed spillway with the supply-pipe openings, which are covered with trash racks and gates.

No. 26 is a downstream view, showing the partial overfall apron and the openings in which the windows of the station are placed.

No. 27 contains a downstream view of the completed structure, showing the water passing through the underflow sluice; the windows





View 29

Submerged  
Power House.




View 30

Submerged  
Power House



Submerged  
Power House

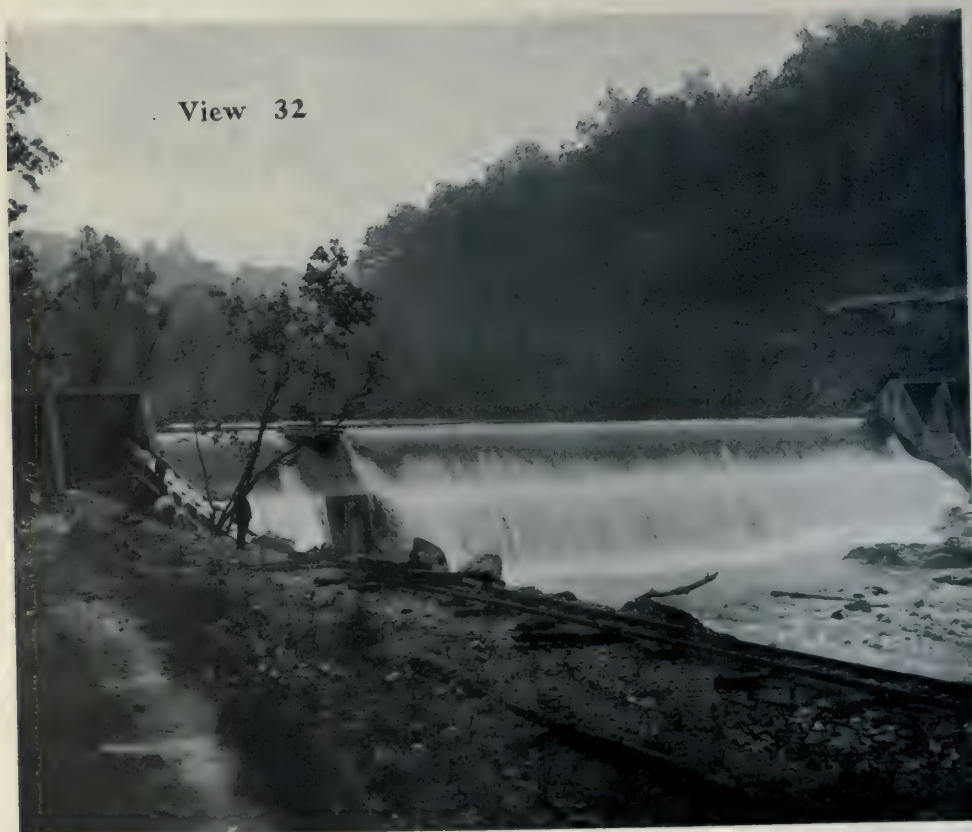

View 32



of the power station are plainly visible here; they are of ample size, making the interior station as bright as day.

No. 28 is of the interior, with two of the power units installed and operating; the double horizontal reaction turbines are in cases; the supply pipe enters the case at the top.

No. 29 is a similar view taken from the other end, and

No. 30 shows the two revolving field alternators and the exciters.

Views 31 and 32 are of the spillway with water flowing over its crest, this plant having already passed through two of the highest of the known flood rises on that stream. Under this condition the overfall is carried safely down the apron, the light shines through it, and the appearance of this spectacle from the interior chamber is not readily forgotten. The station is absolutely safe from leakage or any moisture whatever.

At the present time, November, 1907, two other plants of the submerged power station are being constructed, one at Delta, Pa., and the other on the Big Horn in Wyoming; these are both 60 feet high and will develop about 1500 kilowatts output. Arrangements are also about made for the construction in Canada of a similar plant, in which the dam will be 800 feet long and 45 feet high, the submerged station to contain probably twenty turbine units, to which will be coupled pulp grinders. This spillway will practically contain a mechanical pulp-mill, all the operations of preparing the pulp wood, grinding the same by direct connected pulp grinders, running the pulp through wet machines, and manufacturing it into pulp sheets ready for shipment, will be carried on in the interior of this spillway; and the cars will be switched and loaded in the submerged station, while it is likewise seriously intended to provide living quarters for the operatives in it, as the location is remote from any present settlement. All this is entirely feasible, and the realization of such a plan represents a very large saving as compared with the erection of a separate pulp-mill outside of the spillway, diverting the flow to a separate power house, and erecting lodging-houses, etc.

Pumping plants for water supply can be conveniently thus placed in the interior of the dam which creates the reservoir, and electro-chemical plants could be likewise thus arranged with a considerable saving in cost.

## CHAPTER IX

### EQUIPMENT

WHILE it is the purpose of the structures described in the previous chapter to collect and make available the natural forces for their ultimate utilization, the realization of it all is left to the agents by which the energy of falling water is made to do the work and light the way of man many miles away. The virgin power is hydraulic, which by hydraulic turbines is converted into *mechanical* energy, the latter by electric generators is changed into *electric current*, which is finally *transmitted* to the market; the equipment, therefore, is that representing these three stages of conversion, and will be treated in this chapter as that required for hydraulic, mechanical, electric, and transmission duties.

The presentation of this subject of equipment will be found analogous to that of the former topics,—that is, with and for the purpose of presenting the practical features, only so much of the fundamental theories being developed as seems essential to a clear understanding of the results to be sought by the employment of this equipment. Designing and construction of equipment are necessarily confined to the general outlines of modern types, and the same is true of the output. As a proper treatment of the different makes of equipment, even if confined to American usage, is beyond the desired scope of this work, reference to any specific type has been avoided; when this rule is apparently set aside, it is in the case of a special and patented device.

ARTICLE 79. *Hydraulic Equipment, Theory.* — Water-power is rendered serviceable as mechanical energy through the agency of hydraulic turbines. The energies of water are of position, *potential*, and of motion, *kinetic*; the first is expressed by gravity through the weight of the mass acting under pressure due to fall; the second by impact due to the velocity of flow; the sum of the two forms *hydro-dynamic energy*.

*Dynamic energy* is produced whenever the direction or the velocity of a flowing stream or jet is altered; it may find expression as *impulse*, which is pressure forward in the direction of the flow, or as *reaction*, the pressure backward in a direction opposite to that of the flow, both forces



being those existing in all bodies under stress, action and reaction, which when not restrained are equal in intensity.

*The potential energy* is expressed by the product of the weight of the mass and the height of its fall; this may be utilized to do work; one cubic foot of water falling ten feet represents 625 foot pounds, and in this form water-power energy was employed during the earlier periods of our civilization by letting water fall into the buckets of the overshot and breast or middleshot wheels, which rotated around a horizontal axis, from which the resultant power was taken by gear connections to mechanical drives; about fifty per cent. of the initial energy was thus realized for useful work.

*The kinetic energy* is that of impact due to the velocity of flow; it may be converted into useful work by the aid of undershot, paddle, and current water-wheels, in which the flowing water strikes the vanes secured to the hub of a wheel; not to exceed 45 per cent. of the original energy may be realized.

*The sum of potential and kinetic energies* represents the hydro-dynamic equation; the first is the pressure, the second the velocity; combined they represent the material energy created by water-power. While a stream passes as a continuous volume through confined channels, its dynamic energy remains intact; if the velocity increases, the pressure is diminished, and vice versa, the aggregate remains the same and available to perform work; if its free flow is altered in direction, without shock, the total energy passes into the new direction; but shock is overcome by impact, which is work done, entailing the expenditure of some of the available energy. If the obstruction to its free passage is of a movable device, energy, expressed as impulse or reaction or both, may, in overcoming the obstacle to its free flow, be transferred to the movable device, which takes up this energy, or so much of it as is not required to overcome mechanical resistances. This is the principle of the turbine; the direction of a stream is altered by interposing movable vanes, and the force of the stream which would resist such a change REACTS upon the vanes and through their motion is converted into mechanical work.

*Dynamic energy* finds its final expression in weight; the absolute unit is  $1 \div 32.16$ , being the force which will move one pound one foot in one second. Energy of water is its *mass*, the product of its weight and the absolute force unit. When water moves inertia is overcome and motion is created and maintained by the acceleration of gravity in

response to a certain fall and flow, expressed in feet per second. The *momentum* of the moving water is the product of its mass and the velocity with which it flows.

F represents the theoretical force of the momentum of flowing water;

W represents its mass;

w represents the weight of one cubic foot of water (= 62.5 lbs.);

g represents acceleration of gravity (= 32.16);

V represents velocity of flow in feet per second;

h represents fall in feet; and

A represents the cross-sectional area of the flowing stream or jet in cubic feet;

$$\begin{aligned} F &= \text{mass} \times \text{velocity} \\ &= w A V \div g \times V = w A V^2 \div g. \end{aligned}$$

Static pressure,  $P = w A h$ , and with  $V$  expressed in  $h$ , dynamic force  $F = 2 w A h$  or double that of static pressure.

In the following discussion dynamic force will be expressed by

$$F = \frac{W}{g} V.$$

A stream enters a plane, Fig. 92, A C, at A, without shock or change of flow section; its entry is in the direction of A B, but it is forced continuously away from this into a new direction, A C. At the point of entry the stream has no tendency to deflect, and it therefore requires some retarding force to cause this deflection, which in turn sets up an accelerating force in the stream acting continually in a direction at right angles to its original motion. At C, or at any other point along the plane A C, the deflection  $CB = AC \sin e$ , and the force which has caused it is represented by the product of  $CB$ , as the measure of velocity divided by the period of time, or  $AC \sin e \div t$ , and the pressure of the mass of water passing over AC per second.

If the plane AC, Fig. 93, is not fixed, theoretically the accelerating force  $AC \sin e$  will act upon the plane in direction CB, and AC will occupy the position DB when the stream arrives at C, and if another stream then enters at D, and so on, the plane will continue to move in the direction BE. Impact wheels representing the earliest turbine types were



designed on this principle, from 16 to 20 rectangular blades or paddles being fastened to a wheel at inclinations of  $50^\circ$  to  $60^\circ$ , the water striking the paddles at about a right angle.

AC, Fig. 94, is a curved vane; the stream enters at A without shock and leaves it at C; the force  $F$  in the stream's original direction equals the impulse less the reaction, or

$$F = I - R' \text{ (the component of } R),$$

$$R' = R \cos x, \text{ and, as}$$

$$I = R = \frac{W}{g} V,$$

$$F = \frac{W}{g} V (1 - \cos x).$$

In Fig. 95 the same conditions prevail as in the previous example, excepting that the angle at the exit exceeds  $90^\circ$  and

$$\begin{aligned} F &= I + R', \\ R' &= R \cos 180 - x, \\ &= R \cos x, \end{aligned}$$

and, as in the previous case,

$$F = \frac{W}{g} V (1 - \cos x).$$

This principle was utilized in the impact wheels with curved vanes, also called tub wheels, or the French *roues en curves*, and the German *Kuferraeder*, of which class the Burdin turbine realized probably the highest efficiency.

In Fig. 96 the vane is bent completely back, so that the direction of the exit flow parallels that of the entry and

$$F = I + R = 2 \frac{W}{g} V,$$

or double that of the normal value of  $F$ . It must be noted that  $F$  represents the force in the direction of the flow of entry and that the vanes considered have been fixed.

In Fig. 97 the vane has its individual motion  $U$ , and the velocity of the stream along the surface of the vane and relative to it becomes  $V - U$ , while the force of the stream in the direction of its flow is as before excepting as to the value of the velocity, or

$$F = \frac{W}{g} (1 - \cos x) (V - U).$$

Fig. 98 is an analysis of the theory of the entry and exit of the water in contact with a moving surface.

$V$  is the relative entry velocity;

$e$  is the entry angle between tangent to point of entry and normal to direction of the vane motion;

$V'$  is the absolute velocity of entry, and

$e'$  the angle of its direction with that of the vane's motion normal;

$U$  is the velocity of the vane;

$V - U$ , effective velocity of the water along the surface of the vane;

$V$ , the relative exit velocity;

$X$ , the exit angle of tangent to point of exit and normal to motion direction of the vane;

$V''$ , the absolute exit velocity.

Fig. 99 completes the consideration of the characteristics of flow along moving vanes (not rotary), exemplifying the determination of the total force acting in the direction of the motion of the vane, from the components of impulse and reaction.

$D$  marks the direction of the flow and

$U$  marks the direction of the vane's motion;

$e$  is the angle formed by these two;






$$\text{the available force is } F = \frac{W}{g} V,$$

$$\text{the impulse component} = \frac{W}{g} (V \cos e),$$

$$\text{the reaction component} = \frac{W}{g} (V \cos x'),$$

$$\text{and } F = \frac{W}{g} (V \cos e - V, \cos x').$$



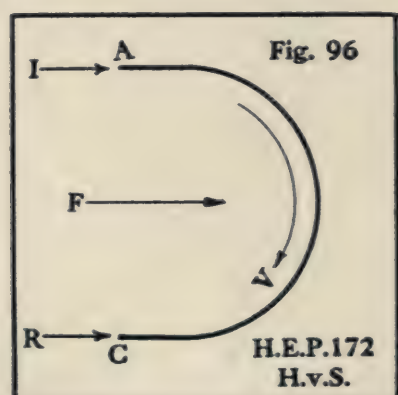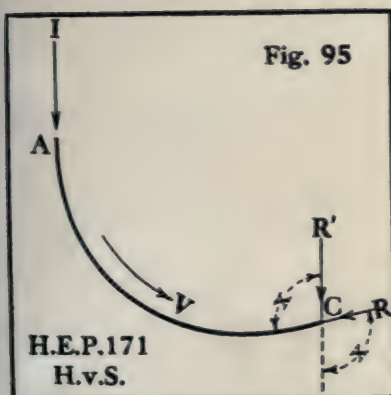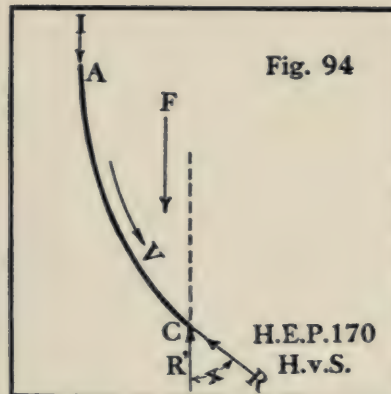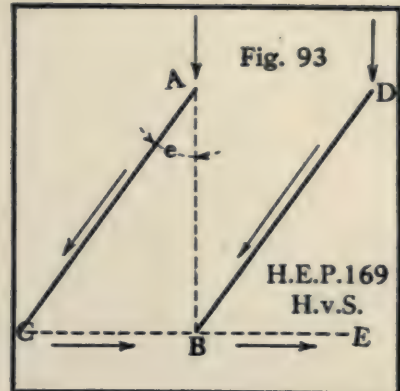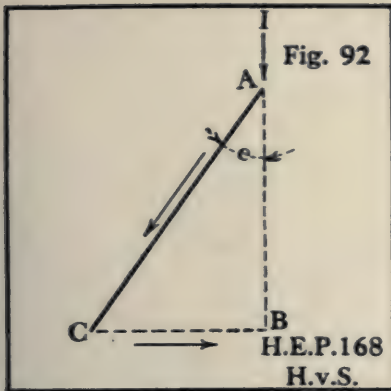

The theoretic work of the moving vane equals the product of the force exerted against its surface and the space traversed by the moving vane during a unit period of time, or, from Example Fig. 97,

$$k = F U = \frac{W}{g} (1 - \cos x) (V - U) U.$$

These deductions of the elementary characteristics of the force, velocities, and directions have been of surfaces moving in rectilinear directions, and, while not reflecting the exact conditions of the turbine, they gradually lead up to the practical utilization of these general principles by turbines in which the motion of the vane is rotary about a fixed point.

In Fig. 100 AC is a curved vane rotating around the fixed axis X; the stream enters at A;

$r$  is the radius of rotation of the point of entry A;

$U$  is the velocity of rotation or of revolution, its direction being normal to  $r$ ;

$V$  is the relative entry velocity;

A V V' U is the entry parallelogram;

$e$ , the angle formed by directions of flow and vane motion;

$V'$ , the absolute velocity of the stream.

The water leaves the vane at C;  $r'$  is the radius of this point;

$U'$  is the velocity of the vane at C, normal to  $r'$ ;

$V$ , the relative exit velocity of the water.

Completing the exit parallelogram C V,  $V''$ ,  $U'$ ,

$x$  is the angle between relative exit velocity and direction of the vane motion reversed;




$V''$ , the absolute exit velocity;

$U'$ , the vane velocity; and

$x'$ , the angle between absolute exit velocity and vane motion.

Heretofore, when the motion of the vanes was considered to be in rectilinear directions, the relative velocities of entry and exit water



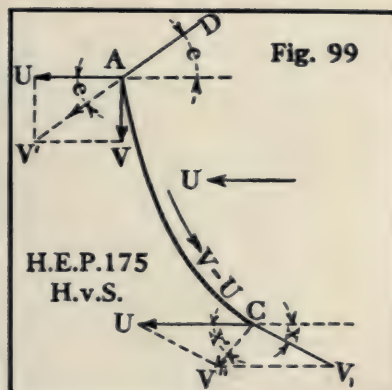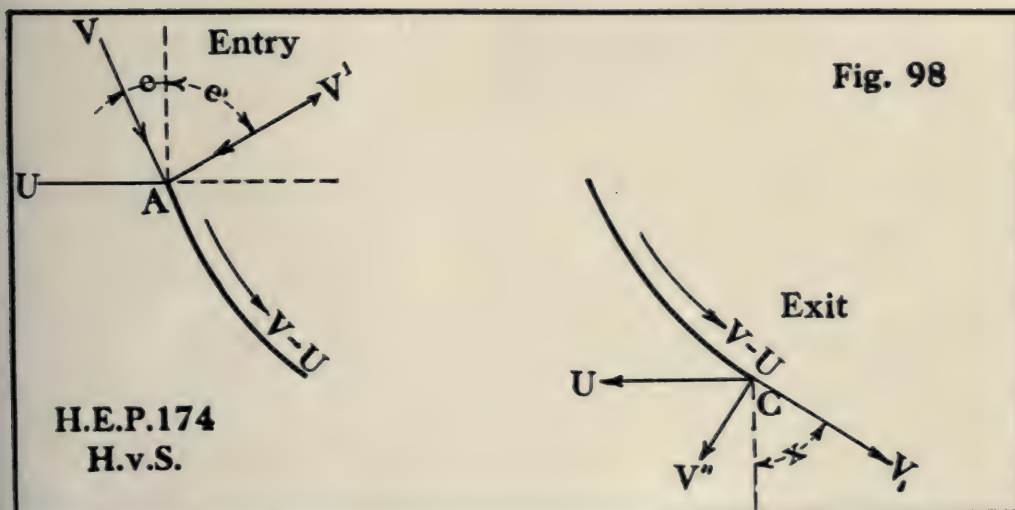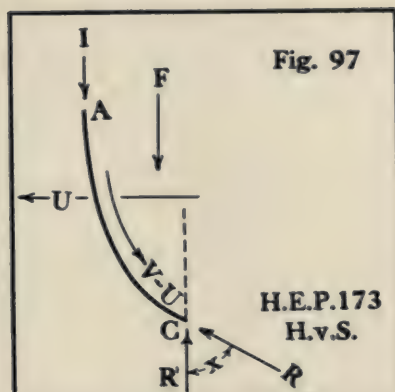

were assumed to be equal, because, presumably, the vane's motion was equal at both ends; in the case now discussed, where the vane's motion is a rotary one equal, say, to  $n$  revolutions per minute,

$$U = 2 r \pi n \text{ and } U' = 2 r' \pi n \text{ or } \frac{U}{U'} = \frac{r}{r'}.$$

The impulse and reaction forces exerted on the vane, as due to the absolute entry and exit of the water on and off the vane, or from

$$\begin{aligned} F &= \frac{W}{g} V' \text{ and } \frac{W}{g} V'', \text{ are} \\ \text{for the impulse } I &= \frac{W}{g} V' \cos e \text{ and} \\ \text{reaction } R &= \frac{W}{g} V'' \cos x', \end{aligned}$$

and the work produced on the vane or  $k$  = impulse - reaction,

$$k = \frac{W}{g} (U V' \cos e - U' V'' \cos x').$$



In Fig. 101 the vane has a rotary motion as in the last example, but the stream enters the vane at the extremity of its peripheral path and finds its exit nearer the axis, while these conditions of entry and exit were reversed in the previous example. These two represent inward and outward flow conditions as relating to the locus of the fixed axis around which the vane revolves; all the theories of one apply likewise to the other.

This completes the theory of hydraulic turbines as based upon the flow of water along the surfaces of moving vanes; as a matter of fact, the actual flow through the majority of turbines takes place in pipes rather than along surfaces, which, however, makes no difference in the theories expounded excepting that the static pressures are added and that the law of continuity of flow governs the water's progress while passing through the turbine.

Summarizing these theoretical fundamentals, it is found that the work of a turbine is caused by the dynamic energy of the water expressed by the product of its mass and motion acting through impulse and



reaction upon curved vanes of free rotary motion; that the degree of work thus imparted to the vane, or the wheel consisting of a system of such vanes, depends chiefly upon the relative values of the components of impulse and reaction force, which are influenced, if not entirely determined, by the designs of the vane or bucket, at the entry and exit points, whereby the velocities and directions of entry and exit flow are largely fixed; the

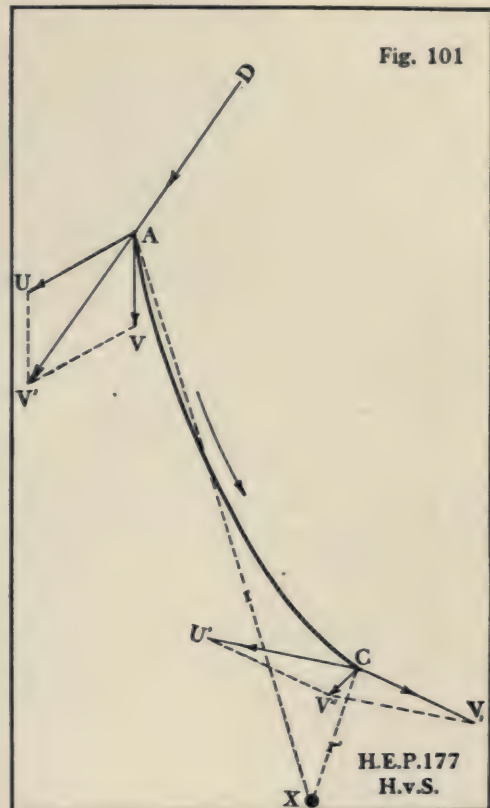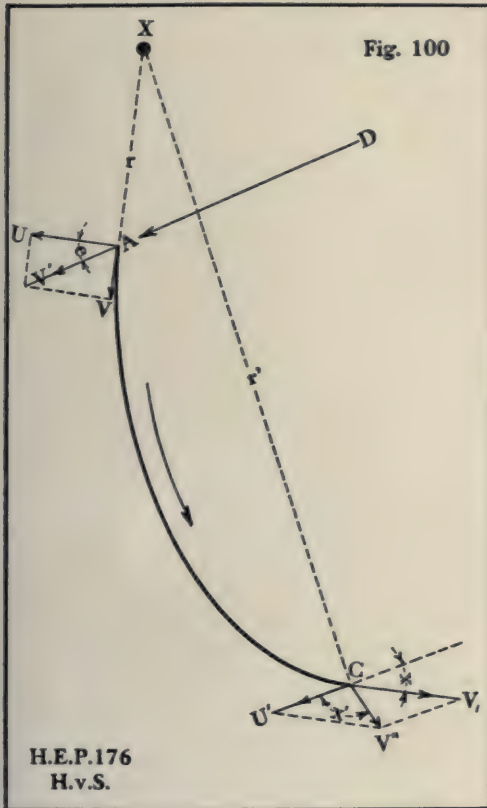

motion of the wheel or bucket becomes a factor in the work expression, while the shape of the vane between entry and exit is of lesser influence.

It is evident that turbine designs should aim at the ideal,—namely, *the greatest velocity of the moving vane with the highest value of work*,—and how this may be secured theoretically, and how far it is likely to be realized practically, under fixed conditions, will appear further on in this chapter.

ARTICLE 80. *Classifications of Turbines.*—Any mechanical device which whirls about a fixed point may be called a turbine. Applied to

hydraulic motors a turbine is a wheel which turns around a fixed shaft under the influence of flowing water by the force of impulse, pressure, and reaction, or a combination of these. Hydraulic motors are classified as water-wheels and turbines, which is descriptive of the older and modern types, the former comprising those which utilized the potential or the kinetic energy, while the turbine class includes all motors in which both of these forces unite in the production of the useful work. The water-wheel, in the above sense, need not be considered in connection with modern hydro-electric practice, as it is represented by the overshot, breast, and undershot wheels of the older mill practice which have been superseded by the modern turbine.

The primary classification of turbines is based upon the action of the water, which may be impulse, pressure, and reaction, but never weight only. It is by impulse when the water strikes buckets or vanes more or less perpendicularly and spreads out over the surfaces in all directions; by pressure when the water glides along the curved surfaces of vanes in one fixed direction, only partially filling the passages; and it is by reaction when water passes through closed passages formed by curved vanes in one fixed direction and completely fills these passages.

Turbines acting under pressure partake some of the impulse and some of the reaction characteristics, and therefore the classification with regard to the action of the water may be limited to impulse and reaction turbines, though even this is not absolutely correct, since a turbine of either class may, under certain conditions, partake of some of the characteristics of the other.

The theoretical differences between the impulse and the reaction turbines are expressed by the following paralleled conditions:

IMPULSE.	REACTION.
The flow is under atmospheric pressure through passages only partially filled;	The flow is free from atmospheric pressure through passages completely filled.
The velocity differs in all parts of the turbine without constancy of ratio;	The flow is subject to the law of continuity with a fixed ratio of velocity in all parts of the turbine.
The entry and exit being under atmospheric pressure, the energy at entry is kinetic only;	Entry and exit are under water and entry energy is potential.
The flow through the turbine is neither accelerated nor retarded;	The flow in passage is accelerated and retarded.
The effective head is that from upper pool level to the level of entry point;	The effective head is that from the upper pool level to the level of the point of exit.
The effective head cannot be made available to the level of the lower pool by means of draft tubes.	The head can be made available to the level of the lower pool by the aid of draft tubes within the limit of the atmospheric column.



The second important classification of turbines is based upon the direction of the entering and passing water as inward, outward, downward, or upward, or expressed in relation to the shaft as radial or axial or parallel, and for impulse wheels as tangential to the periphery of the wheel. Impulse turbines are therefore also called tangential turbines, while reaction turbines in this respect are defined as

Radial—outward flow, as in the Fourneyron type,

Axial—downward flow, as in the Jonval type,

Radial—inward flow, as in the Francis type,

Mixed flow, as represented by the modern American turbines.

A third turbine classification relates to the character of the control of the flow into the turbine by means of guide-wheels and gates, which are of cylinder, register, and wicket types, the details of which are explained further on; and the fourth and final classification is that based upon the method of installation as being on a vertical or a horizontal shaft.

Thus a turbine is properly designated as a vertical, wicket-gate, mixed-flow turbine, or a horizontal, cylinder-gate, radial inward flow turbine, or a tangential (impulse) turbine, which is always on a horizontal shaft.



Additional definitions to these quoted relate to manufacturer's special designs of shape, dimensions and spacing of buckets, gate devices, or particular structural features, or denoting the names of the originator of the type or of the maker.

ARTICLE 81. *Description of the Mixed-flow Reaction Turbine.*—A reaction turbine consists of the runner, guide-wheel, gates and rigging, and the case.



Fig. 102 shows a typical American reaction turbine runner, which, as compared with those used abroad, differs chiefly by the shape and dimensions of the buckets. The aim is to secure in the runner the largest possible discharge capacity with the smallest diameter and therefore the least quantity of metal, to utilize the largest ratio of the available reactionary force, and to obtain the highest speed of rotation.

The velocity of the runner, under a given head, is inversely as its diameter; therefore, to increase the velocity by the reduction of the diameter would defeat the other equally important desideratum of a large discharge capacity; this latter is secured in the American type runner, at some advantage over others, by the shape of the buckets and

the axial depth of the entry passages. These entry areas are made as large as possible not by an increase of the runner's diameter, but by deepening the vertical sections of the vanes, while the outflow sections

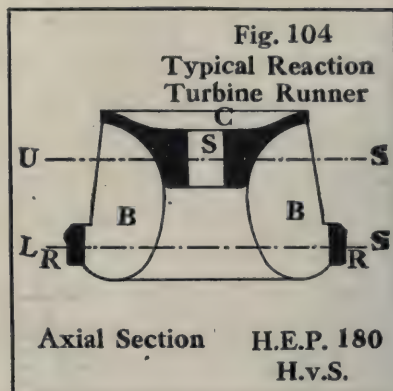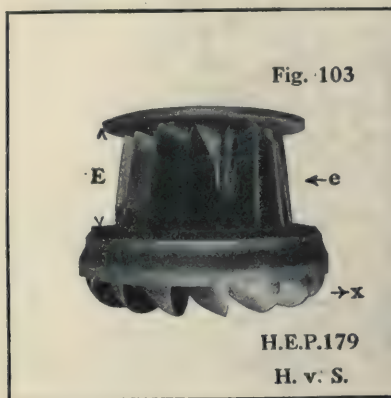

are enlarged by the broad dishing of the vanes. In this manner the runner is given, as compared to its diameter, an abnormally large entry and exit area, while the curvature of the vanes is such that the flow, entering inward radially, passes downward axially and leaves outward

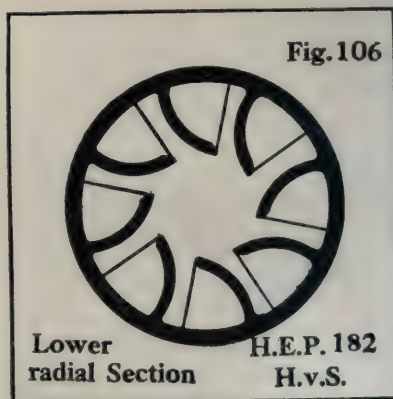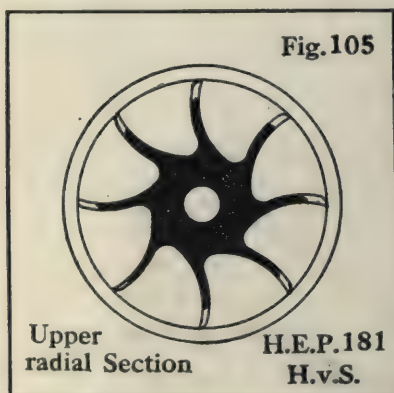


radially, and therefore its exit direction is nearly reversed from that of entry, which, as has been shown in Article 79, Fig. 96, results in the utilization of the greatest amount of the available reaction force.

Fig. 103 shows the runner in the upright position; E is the entry section, and the arrows e x indicate the reversal of the flow direction between entry and exit.

279



Reaction Runner.

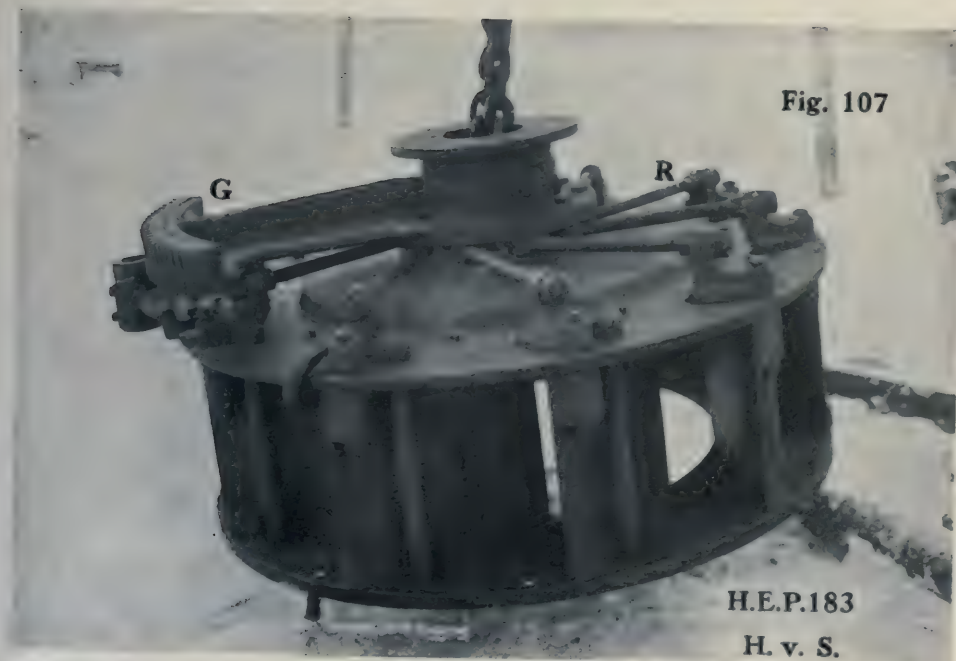

Wicket-Gate Guide-Wheel.



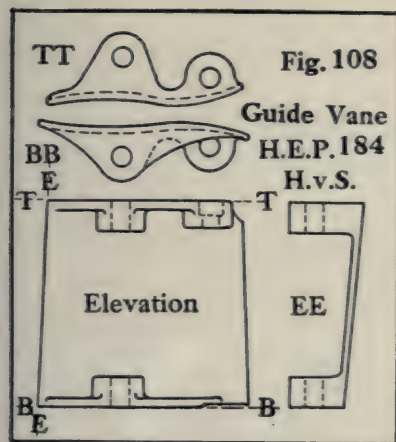


Fig. 104 shows an axial section of the runner and its parts, H being the hub, C being the crown, R being the rim, B being the bucket.

Fig. 105 is a radial section just below the crown plate, showing the shape of the top ends of the vanes, their connection to the hub, and the boring left for the shaft.

Fig. 106 is a radial section near the bottom of the runner through the rim band where the dishing out of the vanes first begins; the metal here is no thicker than at the upper section shown in Fig. 105.

Runners are usually made of one cast with the hub; only a few of the manufacturers in this country depart from this practice by casting all the vanes separately and then setting them in the mould of the hub cast and thus securing their fixed position around it.



*Guide-wheels* are designed to suit the different gate devices; they generally consist of two circular plates between which the *guide-vanes* are fixed stationary in positions diagonal to the axis of the wheel; this guide-wheel slides over the crown-plate and rim band of the runner.

Fig. 107 shows a guide-wheel in which the guide-vanes are the *gates*; it represents the general type of the American *wicket gate*, the movable shutters or gates performing also the office of guiding the water into the runner. The operation of the shutters is by means of a segmental spur gear, G, actuating the gate rods R, the ends of which are firmly secured to the bottom of the gear section.

Fig. 108 shows horizontal and vertical sections of the guide-vanes and shutters, the upper at TT being taken at the top of the shutter and BB at the bottom, while EE is a vertical cross section.

The guide-wheel with fixed guide-vanes is employed in connection with the other gate devices; cylinder and register type; the former consists of a cylinder sliding over the outside or inside periphery of the guide-wheel frame, while the second, as its name implies, resembles a hot-air register, being arranged in the crown-plate or periphery of the guide-wheel.

Fig. 109 is the complete plan of an American, mixed-flow, wicket-gate turbine, in which

- 1 represents the runner proper;
- 2 represents the guide-vanes and gates;
- 3 represents the guide bolts securing the gates to the guide or gate-wheel frame;
- 4 represents the column bolts which connect the circular plates of the guide or gate-wheel;
- 5 represents the draft tube secured to the bottom plate of the gate-wheel;
- 6 represents the lignum vitæ packing which surrounds the step of the turbine shaft;
- 7 represents the spider or frame in which the turbine shaft rests or is stepped;
- 8 represents the bottom plate of the gate-wheel;
- 9 represents the top plate of the gate-wheel;
- 10 represents the guide-pins;
- 11 represents the gate-rods by which the gates are operated;
- 12 represents the gate-operating device;
- 13 represents the spur-gear sector to which the gate-rods are secured;
- 14 represents the spur pinion which is operated by means of the shaft;
- 15 represents the gate shaft which is in practice connected to the turbine governor;
- 16 represents the coupling of the gate shaft to its upper or lateral connection, as the turbine may be placed on a vertical or horizontal shaft;
- 17 represents the turbine or wheel shaft;
- 18 represents the turbine or wheel shaft coupling;
- 19 represents the rim or runner band;
- 20 represents the runner bucket;
- 21 represents the runner hub.

Fig. 110 shows the complete plan of an American, mixed-flow, cylinder-gate turbine, in which the following are the detail parts and their nomenclature:

- 1 represents the runner;
- 2 represents the runner hub;





- 3 represents the runner rim band;
- 4 represents the cylinder-gate operating; in this case, on the inside of the gate-wheel;
- 5 represents the guide-vanes;
- 6 represents the bottom plate or ring of the guide-wheel;
- 7 represents the top plate;
- 8 represents the dome plate of the guide-wheel;
- 9 represents the box or lid containing lignum vitæ bearing;
- 10 represents the lignum vitæ blocks;
- 11 represents the lid or top cover of the bearing;
- 12 represents the draft tube;
- 13 represents the spider;
- 14 represents the lignum vitæ step;
- 15 represents the gate-rods connecting the cylinder gate to the upper operating device;
- 16 represents the spur racks;
- 17 represents the spur pinions by which the movement of the cylinder gate is controlled;
- 18 represents the brackets to which the gate rigging is secured;
- 19 represents the roller, shown in the horizontal section, confining the spur rack to the spur-gear pinion;
- 20 represents the bevel gear;
- 21 represents the bevel pinion actuating the spur pinion and rack;
- 22 represents the horizontal gate shaft;
- 23 represents the vertical gate shaft;
- 24 represents the cable wheel;
- 25 represents the turbine or wheel shaft;
- 26 represents the turbine or wheel-shaft coupling;
- 27 represents the vertical gate-shaft coupling;
- 28 represents the vertical gate-shaft stuffing-box located below the spur rack;
- 29 represents the vertical gate-shaft extension finally connected to the turbine governor or hand wheel;
- 30 represents the turbine-shaft extension.

The design of the *housing or casing* of the turbine depends upon the method of operation. When the water is supplied to the turbine by a feed pipe, the casing consists of a shell completely enclosing the turbine; when the turbine is placed in an open bay, the case or draft chest encloses



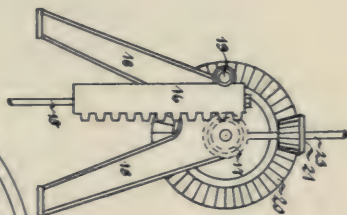


Fig. 110  
American  
Reaction Turbine  
low or medium head  
Cylinder Gate

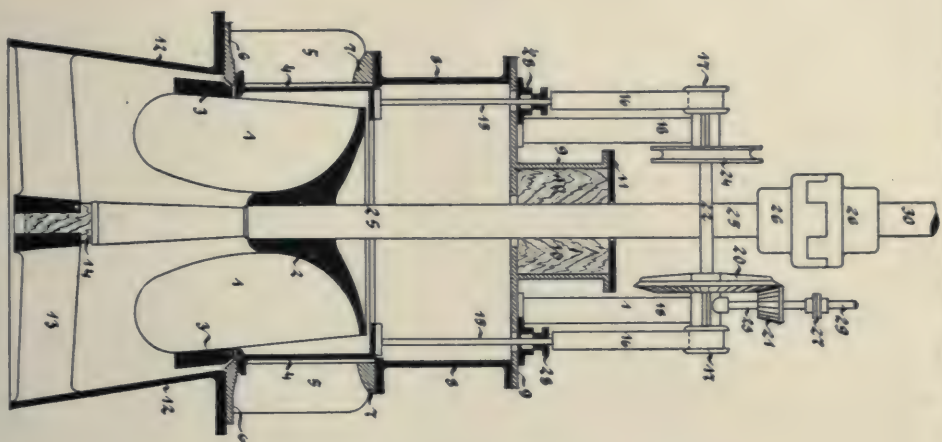

- List of parts.
- 1 ~ Runner Buckets
  - 2 ~ " Sub
  - 3 ~ " Bands
  - 4 ~ Cylinder Gate
  - 5 ~ Guide Vanes
  - 6 ~ " Bottom Ring
  - 7 ~ " Top
  - 8 ~ Dome
  - 9 ~ " Lid with Lignum Vitae
  - 10 ~ Lignum Vitae Blocks
  - 11 ~ Lid
  - 12 ~ Draft Tube
  - 13 ~ Spine
  - 14 ~ Lignum Vitae Ring
  - 15 ~ Gate Block
  - 16 ~ Spur Blocks
  - 17 ~ " Dividers
  - 18 ~ Blocks
  - 19 ~ Stator
  - 20 ~ Stator Gear
  - 21 ~ " Division
  - 22 ~ oblongated Gate Shaft
  - 23 ~ Vertical
  - 24 ~ Gate Wheel
  - 25 ~ Wheel Shaft
  - 26 ~ " Coupling
  - 27 ~ Gate
  - 28 ~ " Stuffing Box
  - 29 ~ " Extension
  - 30 ~ Wheel

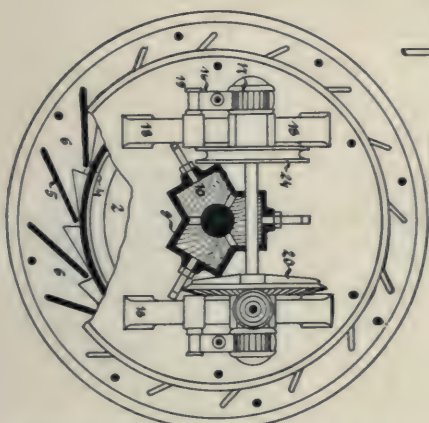

all but the guide-wheel passages through which the water finds its way into the runner.

Fig. 111 shows such a draft chest for a double turbine; it is a cast of two parts with a man-hole in the top or dome. The turbine runners are inserted at the ends EE and the case is secured to the floor structure by its bed flange F.

Fig. 112 shows the turbines, runners, and gate-wheels assembled and connected by one shaft, all ready to be placed in the casing or draft chest shown in Fig. 111.

ARTICLE 82. *Description of a Central-discharge Reaction Turbine.*—This type is of the general class of Fourneyron turbines; the runner is very shallow, as compared with that of the mixed-flow turbine; the guide passages are of little depth and the guide-vanes are curved; the water enters simultaneously into all guide passages from a scroll-shaped supply pipe which encircles the runner and has openings along its interior periphery through which the water spouts into the guide passages; this supply pipe gradually decreases in area, so that the velocity of the entering water is constant at all points of entry. This special supply feature has given to these turbines the French name of *volute*.


These turbines are especially adapted to high-entry velocities and therefore high heads; such plants as those at Trenton Falls, Niagara, and Shawinigan Falls are equipped with them; the largest turbine yet constructed operates at the latter plant and is of this type with a capacity of 10,500 horse-power.

Fig. 113 gives a complete plan of this type of turbines as they are constructed in this country.

- No. 1 represents the runner;
- No. 2 represents the guide-vanes;
- No. 3 represents the guide-vane plates;
- No. 4 represents the supply chamber passing around the runner;
- No. 5 represents the crown plate of the turbine casing;
- No. 6 represents the elbow of the discharge pipe;
- No. 7 represents the draft-tube ring;
- No. 8 represents the main-shaft bearing;
- No. 9 represents the thrust bearing;
- No. 10 represents the pedestals;
- No. 11 represents the shaft coupling;
- No. 12 represents the main shaft;



Double Turbine Draft Chest.

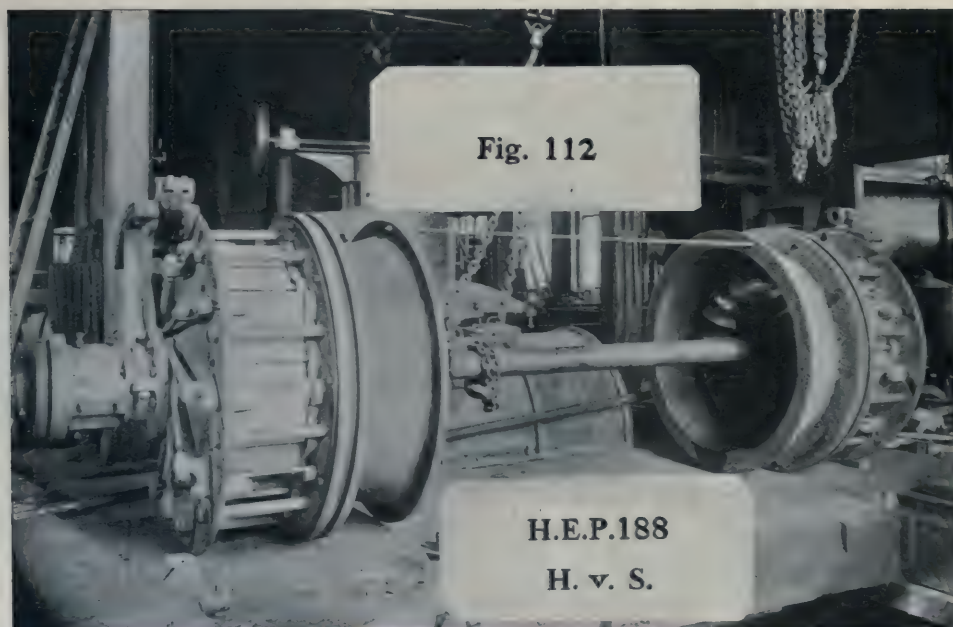

Assembled Twin Turbines.





- 1-Blunnes.
- 2-Guide Plates.
- 3-Plates.
- 4-E. El. casing.
- 5-Elcom Plate.
- 6-Elcom.
- 7-Draft Duke Ring.
- 8-Main Bearing.
- 9-Elumet.
- 10-Elumet.
- 11-Coupling.
- 12-Main Shaft.
- 13-Stuffing Boxes.
- 14-Plan Doors.
- 15-Supply Pipe.
- 16-Steel Draft Tube.
- 17-Governor Connections.
- 18-Governor.


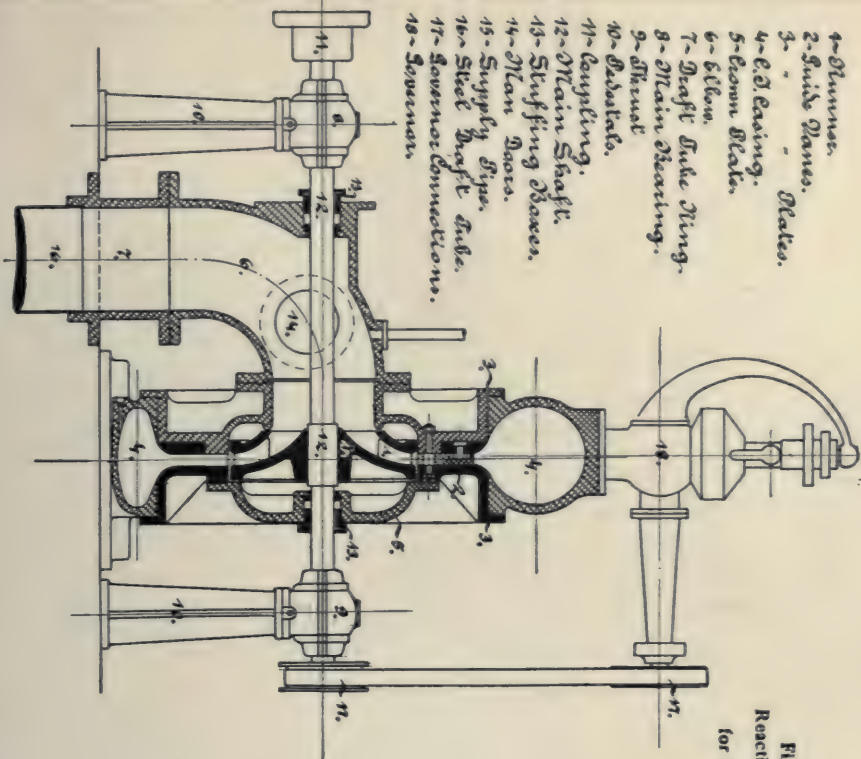


Fig. 113  
Reaction Turbine  
for high head

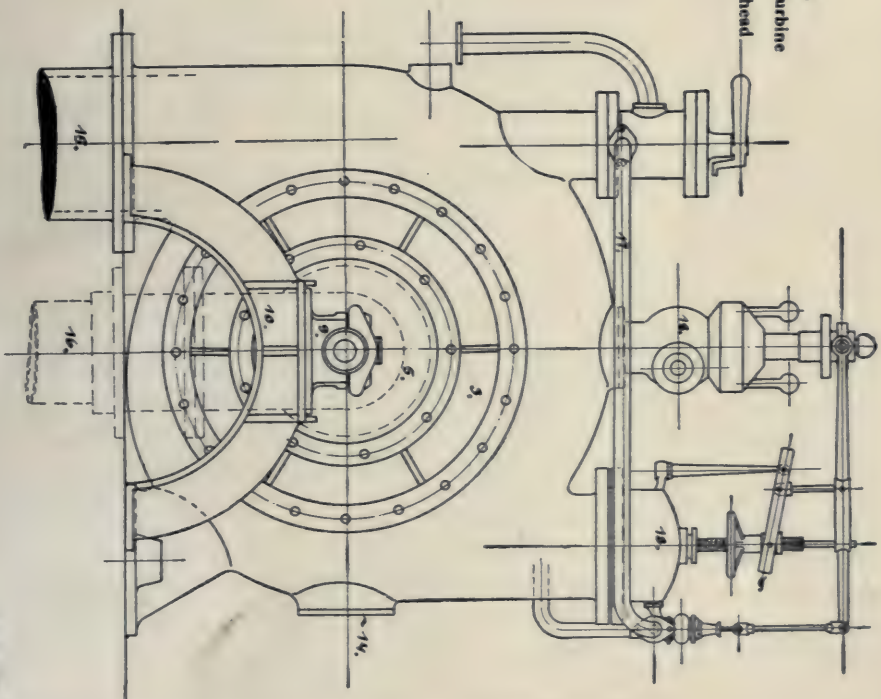

- No. 13 represents the shaft stuffing-boxes;
- No. 14 represents the man doors in the case;
- No. 15 represents the supply pipe;
- No. 16 represents the draft tube;
- No. 17 represents the governor connections;
- No. 18 represents the governor.

ARTICLE 83. *Description of an American Impulse Turbine.*—In this country the impulse turbines, as a distinct type, are represented by that shown in Fig. 114, consisting of a wheel or disk which carries on its periphery cup-shaped buckets, the whole being encased and operating on a horizontal shaft. The buckets are of double cups, the central partition splitting the striking jet in equal parts as to volume. The water spreads out all over the bucket surfaces and is deflected  $180^\circ$  from the entry direction when it drops from the buckets. This class of turbines is especially adapted to the highest heads and is commonly called the hurdy-gurdy wheel.

In the figure showing a plan of it

- No. 1 represents the wheel disk;
- No. 2 represents the wheel buckets;
- No. 3 represents the wheel shaft;
- No. 4 represents the ring oil bearings;
- No. 5 represents the base plates;
- No. 6 represents the nozzle;
- No. 7 represents the gate valve;
- No. 8 represents the supply pipe;
- No. 9 represents the hand-wheel stand;
- No. 10 represents the hand-wheel;
- No. 11 represents the wheel case;
- No. 12 represents the floor plate.

ARTICLE 84. *Theory of the Draft Tube.*—The draft tube is an air-tight cylindrical extension secured to the lower or discharge end of the runner. The theory of its service is based upon the atmospheric pressure of 14.72 pounds per square inch, which equals the weight of a column of water about 34 feet high; in other words, a column of water of this height, and *at rest*, is balanced and therefore held in equilibrium by the atmospheric pressure. When the water in this column is in motion, falls, the head represented by the velocity with which it falls at the point of exit from the lower end of the column must also be balanced by the





atmospheric pressure, and the theoretic height of the column held in equilibrium, or which can be maintained in a draft tube, is then reduced by this head.

If the exit velocity from a turbine runner is that due to a head of thirty feet, or approximately  $0.2 \sqrt{2gh} = 7.2$  ft., and the water continues with this velocity to the exit end of the draft tube, the head represented by this velocity is  $h = 7.2^2 \div 2g = 0.8$  ft., and the theoretic height of the column held in equilibrium in the draft tube is  $34 - 0.8$ .

If the velocity in the draft tube were 46.8 ft. per second, then the corresponding head would be  $h = 46.8^2 \div 64.4 = 34$  ft. (about), and the theoretic height of the column balanced by the atmospheric pressure would be zero.

Any other losses of head occurring during the water's passage through the draft tube, as well as that represented by the energy remaining in the finally escaping water, must be deducted from the theoretical 34 feet.

From the foregoing it is apparent that by the use of the draft tube the exit velocity from the runner may be materially reduced during its passage through the draft tube by gradually increasing the flow area in the latter, and that therefore otherwise lost head is conserved and available to produce useful work;

That the opportunity of gain from this source is greater with a long than a short draft tube;

That the use of the draft tube permits the placing of the turbine at a convenient height above the tail water, while without it the turbine must be placed at or below the lower level;

That the draft tube makes it feasible to place the turbine on a horizontal shaft at sufficient height above the lower pool to allow of directly connecting it to the electric generator or other machinery; and therefore it is true that the draft tube brought out the horizontal turbines.

It will also be understood from the theory presented that draft tubes cannot be used, as such, with impulse turbines, since the water column passing through the impulse turbine is not continuous.

The practical application of the draft tube, its most efficient design and length under differing conditions, is fully treated in a succeeding article.

ARTICLE 85. *Theory of Deducting Turbine Efficiencies.*—The useful work represented by the turbine output is the total available energy less

the losses occurring in the turbine; these losses are of three kinds, hydraulic, mechanical, and un-utilized residues. The first are of manifold origin, generally caused by friction, impact, and leakage; they are best identified by tracing the water's flow as it passes through the turbine.

- (a) *In passing through the guide-vanes* some loss is experienced due to the friction of the passing water against the walls of vanes; the best conditions exist when the walls of the vanes are parallel, thus avoiding contraction of the passing vein, and when the guide-vanes are made of hard metal and their surfaces are polished. It is especially important that the guide-vanes be frequently examined and repolished, as their surfaces are rapidly roughened, which is the common experience when the water carries considerable sand and other suspended matter.
- (b) *When passing from the guide passages into the runner* the probable losses are due to impact, to retardation, and to leakage through the clearance between the guide-wheel and the runner. If the water, upon entering the runner buckets, strikes the vanes tangentially, the only other cause of loss from impact is the striking of the edges of the buckets as they pass by the guide openings; of course this can not be avoided, but the effect may be minimized by reducing these bucket-vane edges to the sharpest practical shape and thus maintaining them. Some clearance must be left between the guide-wheel and the runner, as the former is stationary while the latter rotates, and therefore leakage will take place, particularly as the interior water pressure exceeds the exterior; the clearance should be a practical minimum, which necessitates accurate and true machining of the runner bands and guide-wheel plates. This loss from leakage through this clearance is one which increases with wear and cannot well be guarded against.
- (c) *Passing through the runner* the loss is chiefly that due to the friction against the walls of the bucket vanes, which should be of hard material and polished; in fact the conditions here are analogous to the passage through the guide-vanes.
- (d) *Passing out of the runner* the principal loss is caused by the change in the velocity, which may be kept at a minimum by the proper designing of the draft tube.
- (e) *Passing through the draft tube* losses are caused by friction against the tube's walls, which may be considerable, or very small, depending solely upon the proper design and construction of the tube with a view of avoiding joint, rivet, and other obstructions and maintaining the surfaces as smooth as practicable by frequently coating them.
- (f) *Passing out of the draft tube* losses may be caused by obstructions to the free escape of the water; the water cushion below the draft tube may be too shallow, the tail-flume dimensions insufficient or badly distributed.

These six may be summed as the hydraulic losses or inefficiencies; their aggregate depends upon the conditions pointed out; when design and construction are the most suitable for the purpose and the best, the



hydraulic losses may be taken to aggregate from 10 to 12 per cent., while they may be double of this where design is faulty or construction and finish are indifferent.

The losses due to *mechanical causes* are chiefly those of friction in shaft bearings, which with the best available appliances may be taken for each bearing at from 1 to 2 per cent., while it may be double or much greater when the true alignment of the shaft is permitted to be disturbed.

The last of the losses heretofore enumerated is that represented by the *unutilized energy* remaining in the escaping water; proper design should keep the exit velocity to 0.2 or 0.25 of the velocity of total available head, and beyond this no further reduction of this loss, with a proper use of the draft tube, can be secured. This last loss from unutilized energy will be from 5 to 6 per cent.

Summarizing these losses in reaction turbines:

hydraulic losses.....	11 to 12 per cent.
mechanical losses for two bearings.....	2 to 4 per cent.
unutilized.....	5 to 6 per cent.
	<hr/> 18 to 22 per cent.

representing the best theoretic conditions, and therefore obtainable efficiencies, of output of from 78 to 82 per cent.

It will be noted that two of the causes of losses grow out of the use of the draft tube, and these would not occur were no draft tube employed; the significance of this applies only to impulse turbines in which, for this and other reasons, a considerably higher efficiency of output can be realized, frequently reaching 90 per cent. and more.

ARTICLE 86. *Typical Turbine Installations*.—Reaction turbines may be installed

- (a) On vertical shaft,
- (b) On horizontal shaft,
- (c) Cased and supplied through penstock,
- (d) Drowned in open bay,
- (e) Cased in pairs,
- (f) Drowned in tandem,
- (g) Drowned side by side,
- (h) Drowned superposed.

Impulse turbines are always placed in cases and operated on a horizontal shaft.



The different installations of the reaction turbine are illustrated by succeeding figures, and the principal dimensions, such as are required in planning the power house, are given on diagrams; no particular make of turbine is herein referred to, but the information in these figures and diagrams applies generally to the reaction turbines manufactured in this country and may be safely accepted for the purpose above indicated.

Fig. 115 illustrates the *vertical turbine drowned*. The unit of this installation may consist of one or of several wheels; the generator may be coupled to the vertical shaft, a practice which is quite general abroad, in which case the generator operates horizontally and is sometimes called the umbrella type. The installation of the American Niagara plant is of this arrangement. More frequently the vertical turbine shaft is geared to a driving shaft, the generator being coupled to the latter, and in that case several turbines may be thus installed in one power unit, all being geared to a union shaft, so that each can be cut out separately. The turbines of the same unit may be placed in one or separate bays, the latter arrangement allowing of making repairs to any turbine of the multi-unit without stopping the operation of the remaining wheels.

The installation of vertical turbines drowned and geared to a driving shaft represents the oldest, the mill-power, practice in the utilization of water-power; it is also frequently chosen for hydro-electric plants, though it does not yield high output efficiency. Vertical turbines drowned, with generators coupled to the turbine shaft, constitute the latest developed installation, which is capable of yielding the highest obtainable output efficiency of reaction turbines.


This installation is suitable for the lowest and for high heads, the limitations being the length of shaft, the weight of shaft, and the cost of open-bay construction; the Niagara installation represents the high-head limit, to the present time, being 175 feet; the turbines, however, are not strictly of the type here illustrated, but are double Francis turbines. The lowest head utilized by a hydro-electric plant, to the author's knowledge, is that at Rechtenstein, Austria, being a trifle less than five feet; the turbines are vertical and drowned, the turbine shaft being geared to the driving shaft. This arrangement is peculiarly adapted to very low heads, on account of the smaller depth of the turbine compared to its diameter.

The power-house design suited for this installation is described in Article 76 and illustrated in Figs. 84 and 88. The guide-wheel rests upon

End elevation


Fig. 115

Vertical Turbines  
paired and drowned  
Geared connections

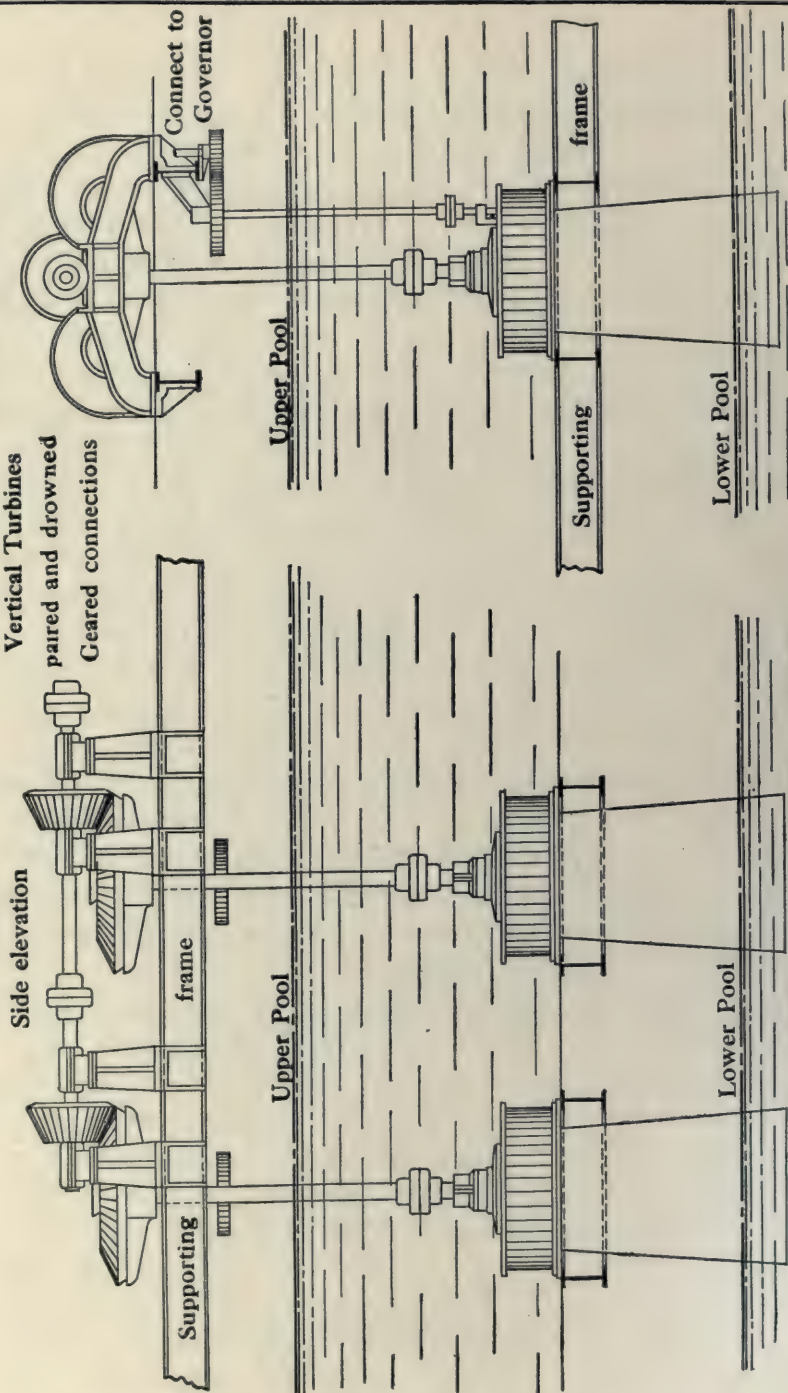

H.E.P. 191  
H.V.S.



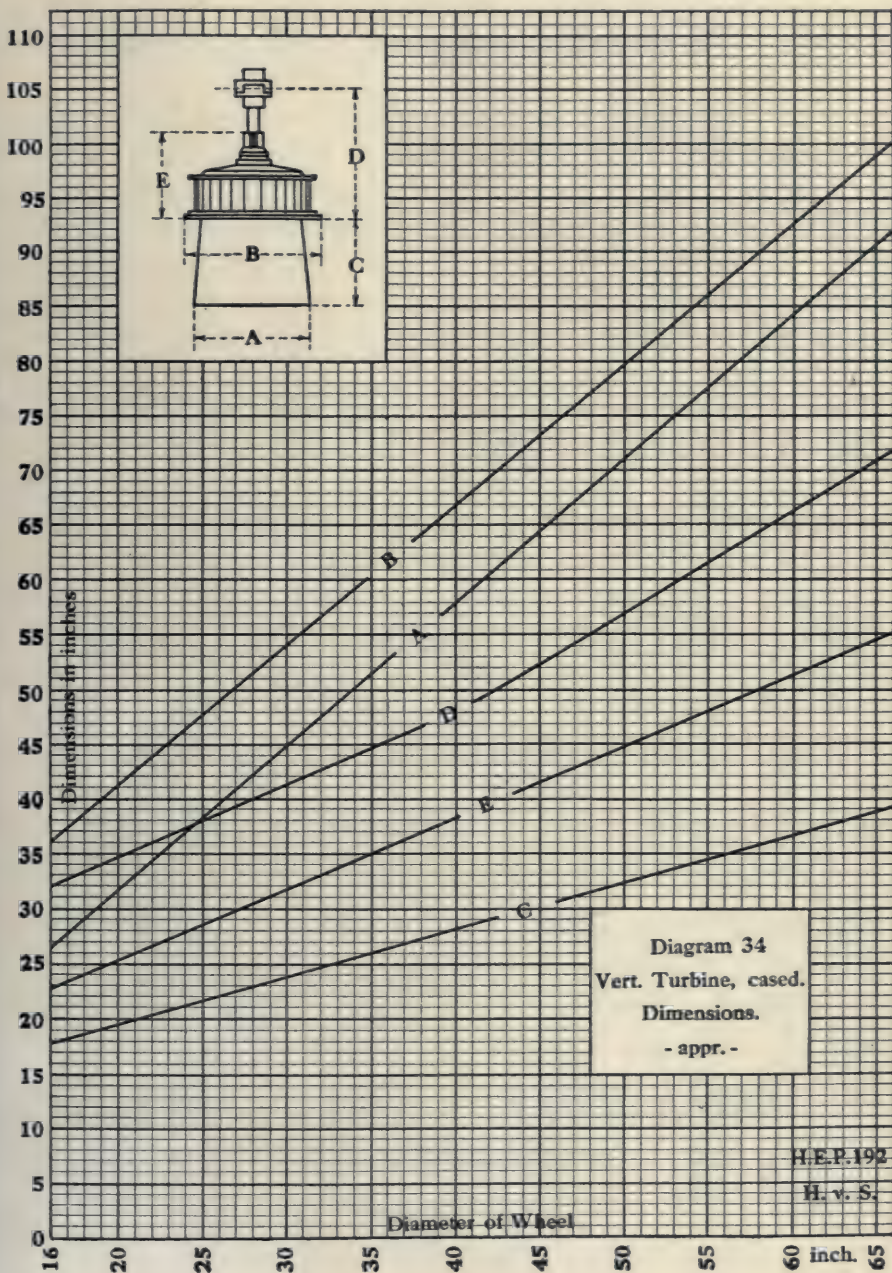



supporting frames of steel members secured to the pit structure; the gearing is similarly placed on an upper floor.

Diagram 34 gives the approximate exterior dimensions of a single vertical turbine drowned.

*Example.*—For a 40" turbine the height from the supporting frame to the shaft coupling, D in the diagram, is 48"; the diameter of the guide-wheel, B in the diagram, is 67"; the total height from the top of the thrust bearing to the lower end of the draft tube, E + C in the diagram, is 66"; the required width of the open bay in which this turbine is placed is 2 B or 11' 2"; the length of the bay for two such turbines is double the width or 22' 4".

In this manner the dimensions of the turbine bay for this installation, and therefore of the power house, can be readily determined from this diagram.

In this category of turbine installations falls that of serial turbines, illustrated in Fig. 87 of Article 76, which is specially adapted to fluctuations of head; in this, vertical turbines drowned are placed one above another, a separate tail-flume being provided for each, by which arrangement they are available to operate singly or jointly; this represents the only method at present known which solves the problem of utilizing excessive head fluctuations, and is deserving of far more attention than is now given it in the American practice.

Fig. 116 shows the installation of *vertical turbines cased*, the water being supplied through penstocks. The cases are placed upon and secured to supporting frames, the penstock or supply pipe entering the case at the side or top. The shaft connection and generator drive are similar to those described for the vertical turbine drowned. The determination between the drowned and cased installation of vertical turbines must be based upon the respective cost of open-bay construction and of turbine casing and penstocks; operation and output efficiencies are alike in both. This installation offers no special advantages with low heads; it is frequently met with in mill-power plants, the turbines being placed un-housed over the tail-race and geared to the driving shaft of the mill.

The dimensions of vertical turbine cases are, generally speaking, the same as those given for the open bay of drowned turbines.

Fig. 117 illustrates the installation of a *pair of horizontal turbines drowned*.

Fig. 116

Side elevation

Vertical Turbines  
paired and cased

End elevation

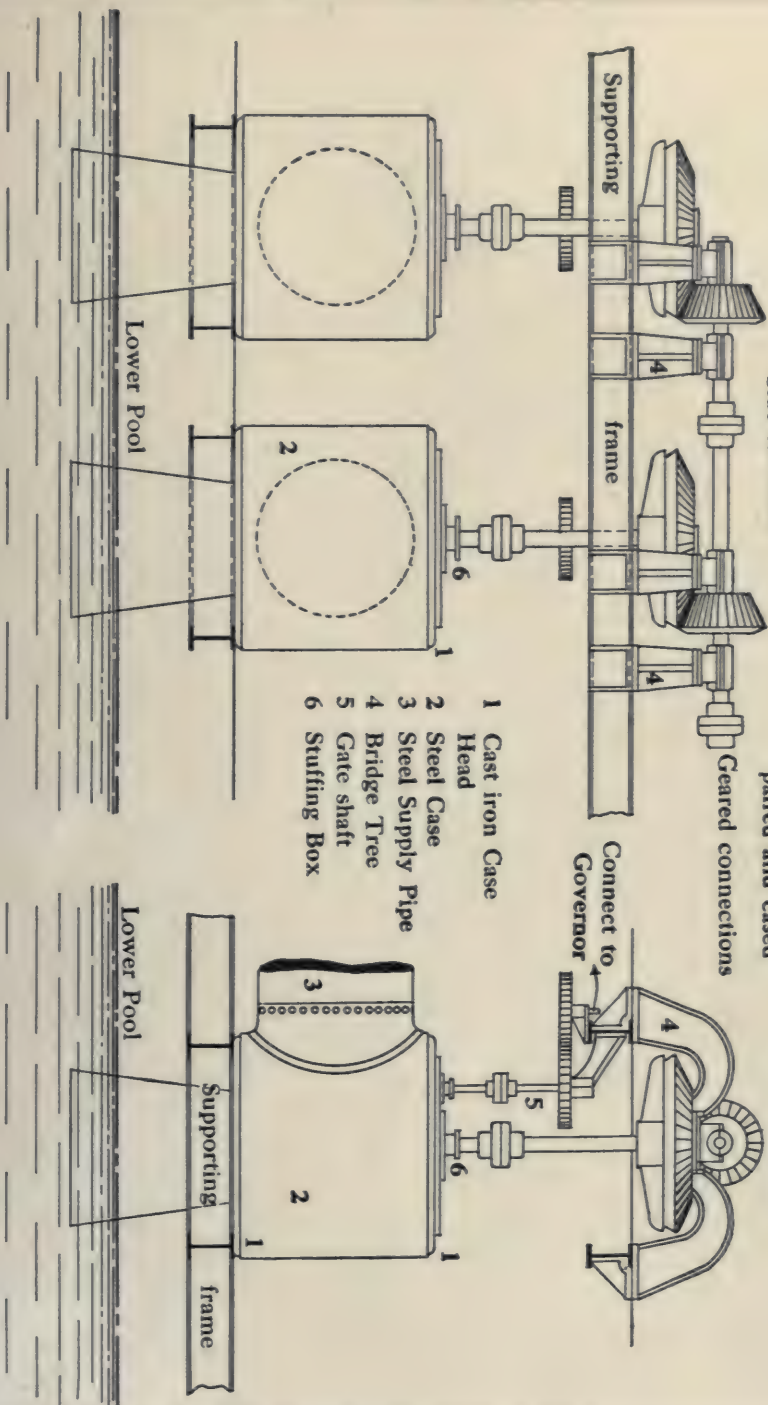


Fig. 117

Horizontal Turbines  
paired & drowned


Side elevation

Upper Pool


End elevation

Horizontal Turbines  
paired & drowned


Direct connection  
or belted

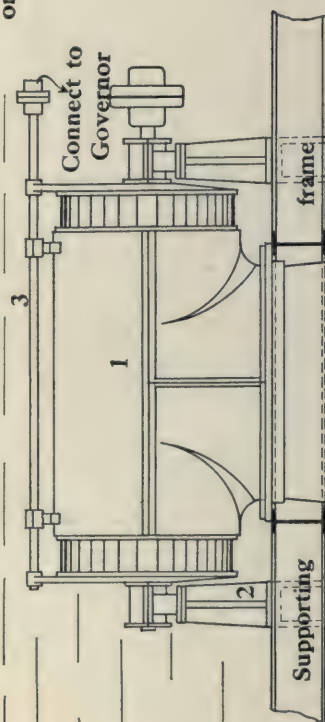

- 1 Draft Chest
- 2 Bridge Tree
- 3 Gate shaft
- 4 Gate rods

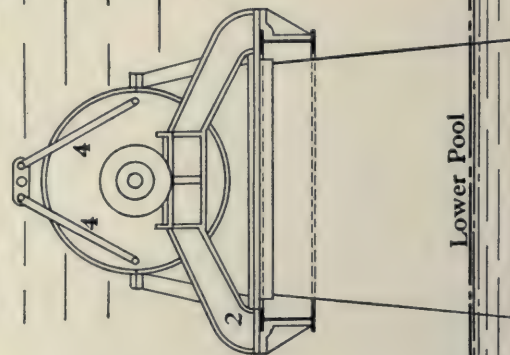



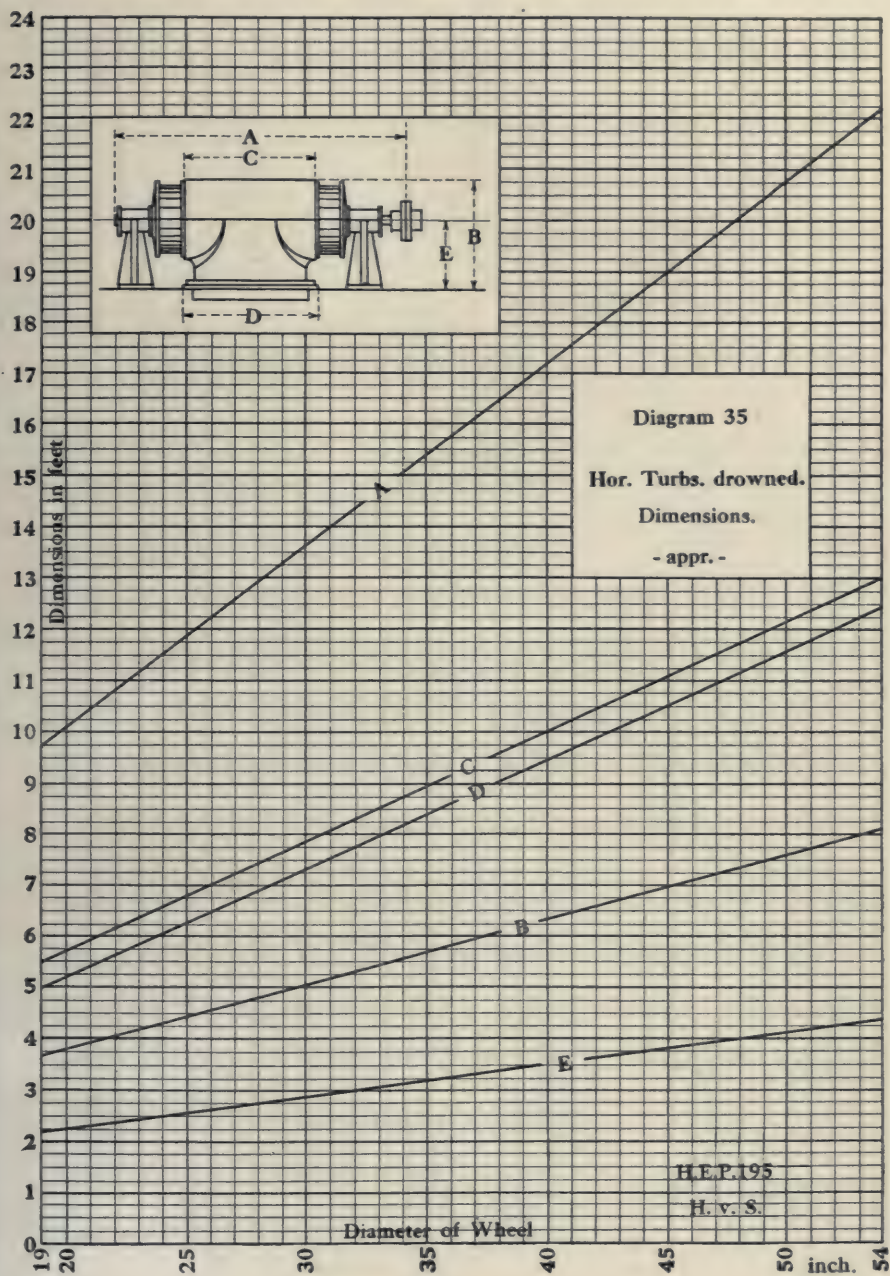

At the outset it may be stated that this represents that type of turbine installation best adapted to low and medium heads and is, next to the vertical drowned and umbrella generator plant, of highest practical efficiency.

The turbine runners are secured to the ends of a union draft chest, as was shown in Fig. 112 of Article 81, both connected to one shaft, to which the generator is coupled or belt driven from it if high speed is desired for it. The installation is placed in an open bay, the lower flange of the draft chest resting upon and being secured to a supporting frame of steel members, the shaft bearing on floor stands or bridge trees. The gate devices of both turbines are operated by a union gate shaft finally connected to the turbine governor. The economical limit of this installation is found from a comparison of the cost of the turbine bay construction and that of turbine casings and penstocks supplying the water to them. The efficiency obtainable from this arrangement, as compared with that of horizontal turbines cased and penstock fed, should be higher, because of the loss of head involved in supplying water through pipes.

The power-house design adapted to this turbine installation may be as shown in Figs. 85 and 86 of Article 76, with such variations in details as will be suggested by the local conditions and the power head.

Diagram 35 gives the approximate exterior dimensions of this installation for turbines of various sizes, from which the required bays can be planned.

*Example.*—For a pair of 35" turbines drowned, the height from the supporting frame to the centre shaft line, E in the diagram, is 3' 3"; the height from the supporting frame to the top of the draft chest, B in the diagram, is 5' 8"; the diameter of the draft tube collar, D in the diagram, is 8' 5"; the total length of the installation, A in the diagram, is 15' 5"; the required width of the turbine bay is 2 B or 11' 4"; the required length of the turbine bay is  $A + 5'$  or 20' 5".

Fig. 118 shows the installation of *three horizontal turbines drowned*.

This is the same arrangement as has just been described, with the addition of the third wheel, which discharges by separate draft tube. The draft chest of the single turbine is of the quarter-turn shape, the union shaft penetrating it by a stuffing-box. This arrangement is as efficient as that of one pair of turbines and frequently preferable in order to secure a higher generator speed.


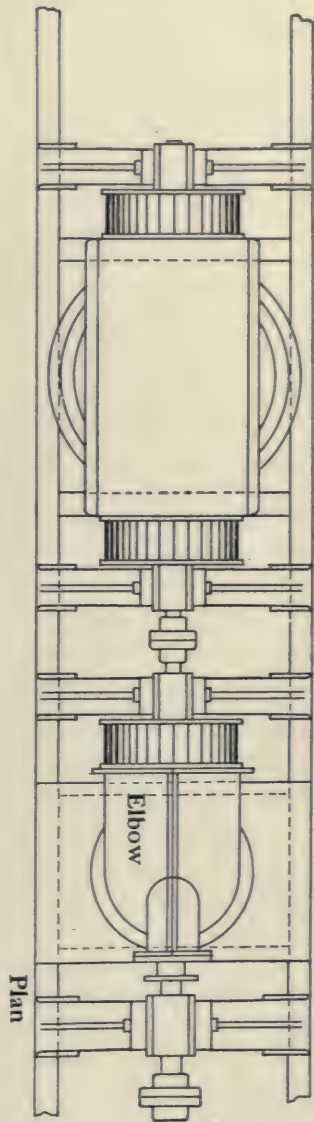


Fig. 118  
Horizontal Turbines  
Three in line  
drowned  
Direct connection  
or belted

Upper Pool



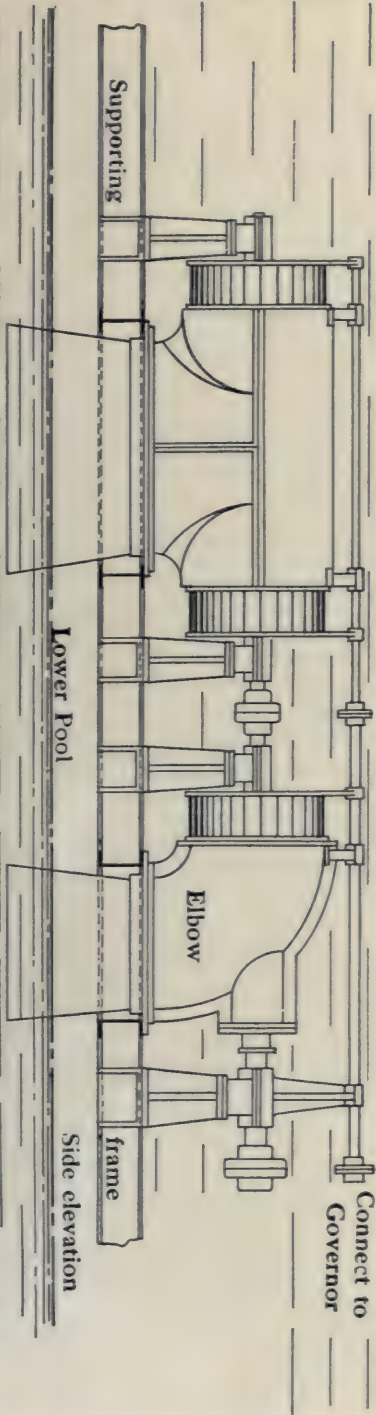

The dimensions for this installation are found from Diagram 35 for the pair and Diagram 36 for a single horizontal turbine drowned.

*Example.*—For three 30" turbines, the height from turbine supporting frame to the shaft and to the top of the draft chest is the same as that given for the double turbine on Diagram 35; the diameter of the draft tube collar for the single turbine, D in Diagram 36, is 4'; the total length is the sum of A on Diagram 35 and B on Diagram 36, or  $13' 7'' + 11' 11'' = 25' 6''$ ; the width of the required bay is the same as that for the double turbine; the length of the turbine bay is the length of the installation + 5', or 30' 6".

The installation may be of a single horizontal turbine drowned, as shown on Diagram 36. In this case the open bay need only be long enough to allow the water to enter the guide wheel as is indicated by the partial bulkhead in the figure on Diagram 36. The dimensions may be readily found from Diagram 36.

Fig. 119 illustrates the installation of *two pair of horizontal turbines drowned*.

The characteristics of this installation are the same as those of one pair or of three horizontal turbines drowned, the difference being one of dimensions only, and they change merely as to the length, which is double that given on Diagram 35.

In this manner any number of turbines can be united into one power unit. The plant on the Spring River, Kansas, recently constructed, consists of units containing four pairs of double horizontals drowned. The wisdom of such a long line of turbines operating one shaft may be questioned, on account of the many shaft bearings which must be free to line to avoid serious friction losses.

Figs. 120 and 121 show the installation of a *pair of horizontal turbines cased*.

As with vertical turbines, the installation of horizontals may be in cases, single or double, supplied through a penstock entering the case at the top or at the end, the discharge being by one or two draft tubes. This arrangement meets the requirements of heads which exceed the utilization of the drowned type and is available until the pressure head exceeds the economical limit of turbine-case strength. The power-house design for this installation is shown in Fig. 89, of Article 76.

The dimensions for this programme are given in Diagram 37.



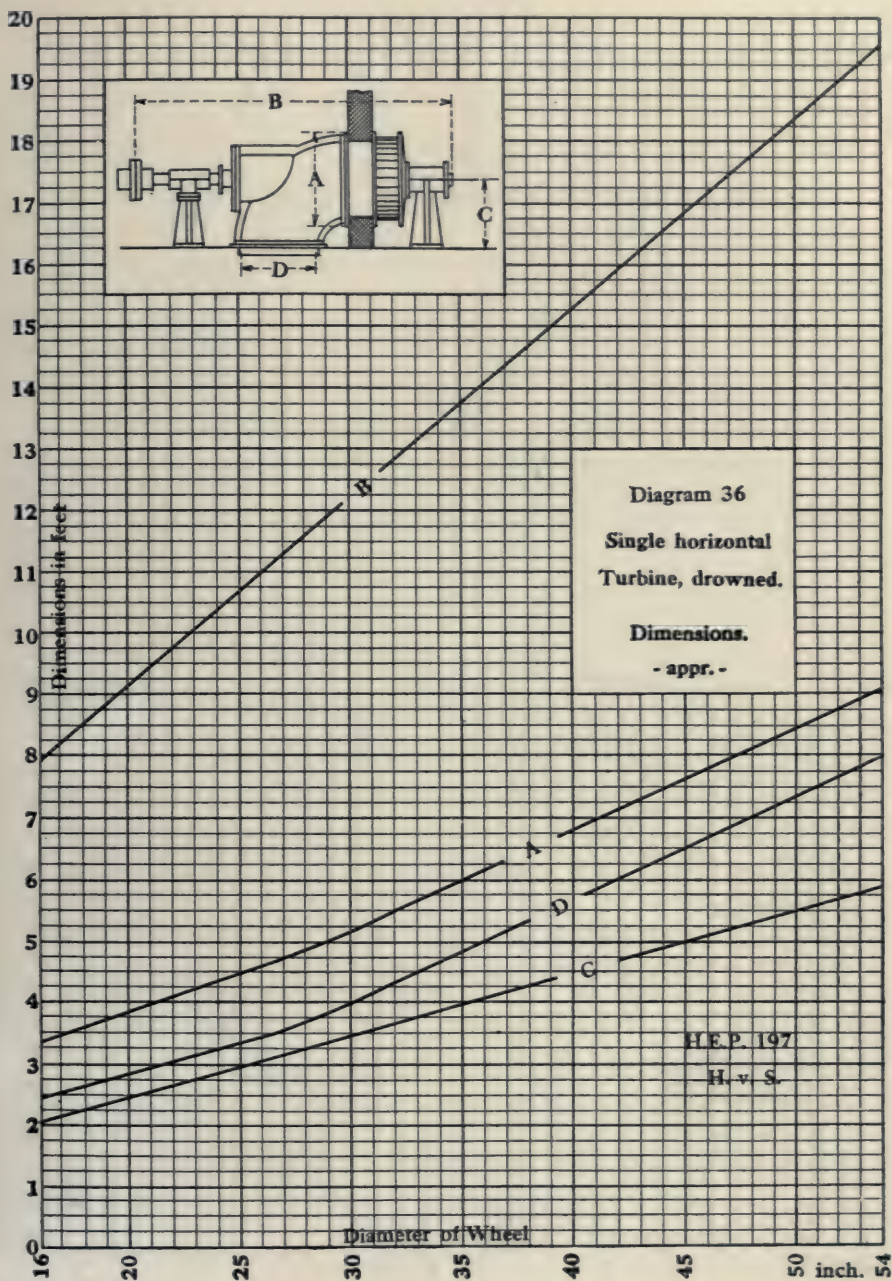




Fig. 119  
Horizontal Turbines  
Four in line  
drowned  
Direct connection  
or belted

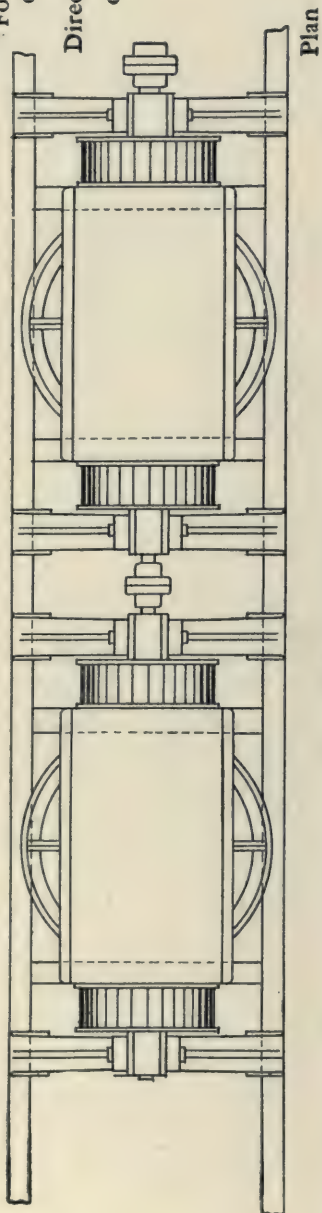


Upper Pool

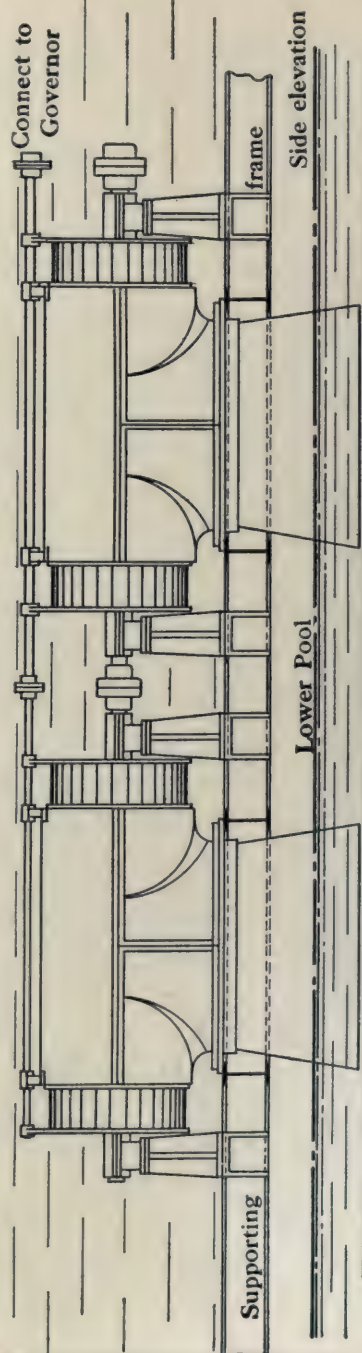

H.E.P. 198  
H.V.S.



Side elevation

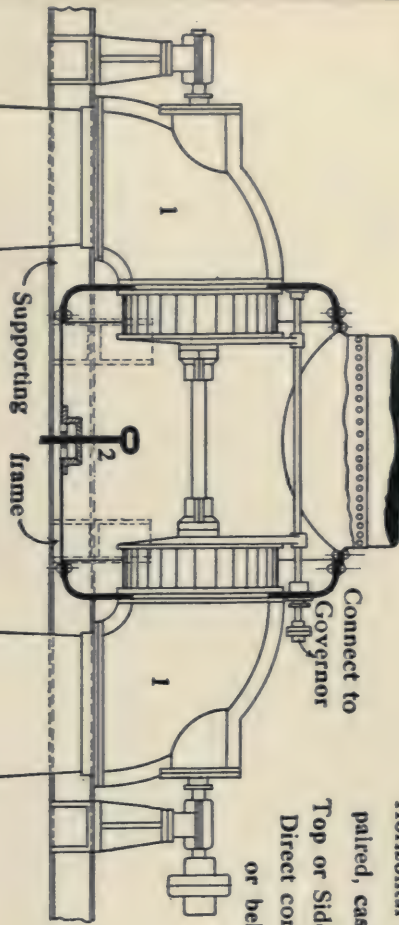


Horizontal Turbines  
palred, cased with  
Top or Side Supply  
Direct connection  
or belted

- 1 Elbow
- 2 Drain Valve

Lower Pool

Lower Pool

End elevation

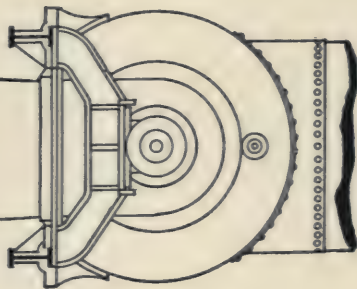

*Example.*—For two 40" turbines cased, the height from the supporting frame to the centre shaft line, G in the diagram, is 4' 2"; the diameter of the case, A in the diagram, is 10' 11"; the total length, F in the diagram, is 31' 8".

ARTICLE 87. *Reaction Turbine Output.*—The discussions of the theory of turbines in Article 79 and of turbine efficiency in Article 85 have paved the way for the presentation of this final turbine topic, "the output," a thorough understanding of which is highly essential to determine what is the most resourceful hydraulic equipment for a given case.

The turbine output here referred to is *the power yield at highest shaft speed with the least quantity of water at three-quarter gate opening*, which is the definition of the maximum efficiency output. The conditions of this output are rigid as to speed, which, in hydro-electric practice, represents the first essential, because the efficiency of the generator is largely based upon it; in other words, the power yield rises or falls as more or less water is passed through the turbine, while the speed remains approximately constant.

The three-quarter gate discharge basis is the most practical, lying midway between full and half, the latter being the low limit of resourceful efficiency, while it provides a reserve output, from three-quarter gate to full, which is especially valuable in meeting the frequent increase of the generator load. The discharge from three-quarter to full gate is practically proportionate to the gate opening, while that at half gate is somewhat in excess of the half full gate discharge.


The efficiency of this output is approximately 80 per cent., provided the conditions of design and construction on which it is based are met.

The power constants here given are those of *reaction turbines*, and the values are those for *one foot head*; they are distinguished from the output of the same turbine for more than one foot head by the prime mark, thus P', Q', S', representing the power, discharge, and speed output of the turbine under one foot head, while P, Q, and S represent the output of the same turbine for a greater head than one foot.

*Power*, in mechanical horse-power, for unit head, P', from

$$P' = \frac{Q' \times 62.5}{550} \times \text{efficiency} = Q' \times 0.1136 \times 0.80 = 0.09 Q'.$$

**Fig. 121**  
**Horizontal Turbine**  
**Cased with**  
**End Supply**

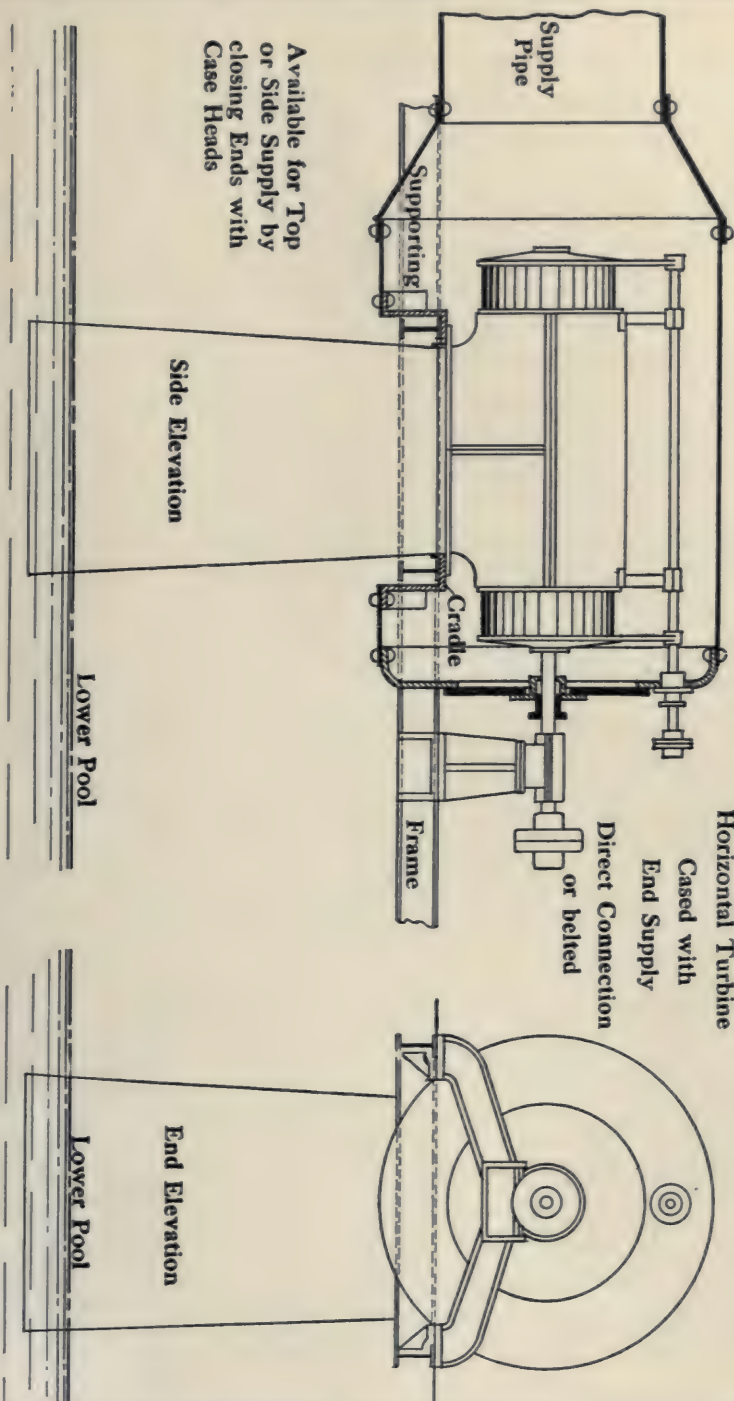



For any head greater than one foot the discharge of the same turbine increases with  $\sqrt{H}$ , and the power output for any head  $H$  therefore is

$$P = P' \times \sqrt{H^3} = 0.09 Q' \times \sqrt{H^3}.$$

*Discharge*, in cubic second feet, from power constant

$$Q' = \frac{P'}{0.09} = 11.1 P'.$$

For any head  $H$ ,  $Q = Q' \times \sqrt{H} = 11.1 P' \times \sqrt{H}$ .

*Speed*, in revolutions per minute,  $S'$ , for unit head, from the peripheral speed due to  $0.89 \sqrt{2g}$  = 7.1378 second feet,  
or = 428.268 minute feet,  
 and, as turbine diameters are expressed in inches, = 5,139 minute inches,

$$S' = \frac{5139}{3.1416} = \frac{1635}{\text{diam. in inches}}.$$

Diameter is expressed, as will be seen under Design Constants, as

$$D = 6.36 \sqrt{Q'} \text{ and inserting in above } S' = \frac{257}{\sqrt{Q'}}.$$

For any head  $H$ ,  $S = S' \times \sqrt{H} = 257 \sqrt{H} \div \sqrt{Q'}$ .

Diagram 38 gives the standard maximum efficiency output of American reaction turbines, which are designed and constructed on the general lines detailed further on.

*Example from Diagram 38.—For a 35-inch Turbine:*


Power constant is	2.8 mechanical horse-power,
Speed constant is	47 revolutions per minute,
Discharge constant is	31 cubic second feet.

The output of the same (35") turbine for a 16-foot head is:

Power, constant,	$\times \sqrt{16^3} = 179.2$ m.h.p.,
Speed, constant,	$\times \sqrt{16} = 188$ r.p.m.,
Discharge, constant,	$\times \sqrt{16} = 124$ c.s.f.

*For a 60-inch Turbine:*

Power constant is	8.28 m.h.p.,
Speed constant is	27 r.p.m.,
Discharge constant is	92 c.s.f.

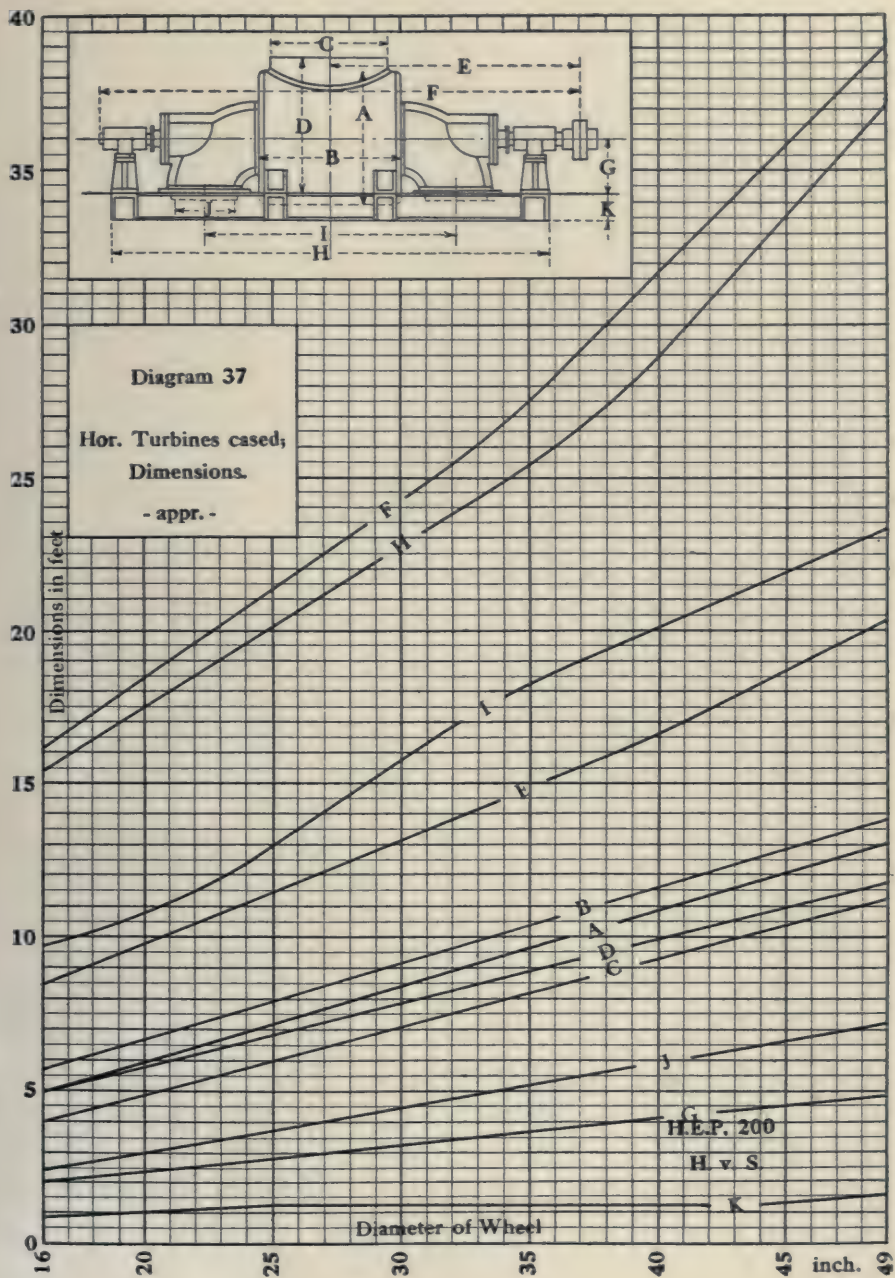

The output of the same (60") turbine with a head of 25 feet is:

$$\text{Power, constant} \quad \times \sqrt{25^3} = 1035 \text{ m.h.p.,}$$

$$\text{Speed, constant} \quad \times \sqrt{25} = 135 \text{ r.p.m.,}$$

$$\text{Discharge, constant} \quad \times \sqrt{25} = 460 \text{ c.s.f.}$$

The efficiency of this standard output is (for one-foot head)  
 from  $62.5 Q' \div 550$ , efficiency,  $E = 8.8 P' \div Q'$  (second feet)  
 or  $= 528 P' \div Q'$  (minute feet)  
 Applied to above examples, 35"  $E = 8.8 \times 2.8 \div 31 = 79.32$   
 Applied to above examples, 60"  $E = 8.8 \times 8.28 \div 92 = 79.20$   
 For the 35" turbine with 16' H,  $E = 8.8 \times 179.2 \div 124 \times 16 = 79.48$   
 For the 60" turbine with 25' H,  $E = 8.8 \times 1935 \div 460 \times 25 = 79.19$

This is representative of the degree of accuracy of deductions taken from Diagram 38, the standard efficiency being 80.

ARTICLE 88. *Reaction Turbine Design*.—The elements of the design of the reaction turbine yielding the standard maximum efficiency output are:

*The diameter in inches*, from the area required to pass the volume

$$\begin{aligned} \text{of water with one-foot head, } Q' \div \sqrt{2g} &= 0.1247 Q' \text{ (c. s. f.),} \\ \text{expressed in cubic second inches} &= 17.9568 Q' \text{ (c. s. f.).} \end{aligned}$$

The circular area which would pass this quantity (theoretically)

$$\begin{aligned} \text{is } D^2 \times 0.7854 \quad \text{and } D^2 &= 17.9568 Q' \div 0.7854 \\ &= 22.863 Q' \end{aligned}$$

$$\text{or } D \text{ (theoretical diameter of turbine in inches)} = 4.78 \sqrt{Q'}.$$


To compensate for the obstructions to the free passage of the water, the above theoretical value is increased by the coefficient of 1.33 and the turbine diameter  $= 1.33 \times 4.78 \sqrt{Q'}$ , or  $D = 6.36 \sqrt{Q'}$ .

*The vent area* is found from the theoretical velocity  $\sqrt{2g}$  and the coefficient 0.60, or for unit head and in minute feet velocity,  $V = 60 \times 0.60 \sqrt{2g} = 288.7$  minute feet.

The discharge through an opening of one square inch area is

$$\begin{aligned} 288.7 \div 144 &= 2 \text{ (appr.), and the required vent area} \\ \text{in square inches} &= 60 Q' \div 2 = 30 Q'. \end{aligned}$$



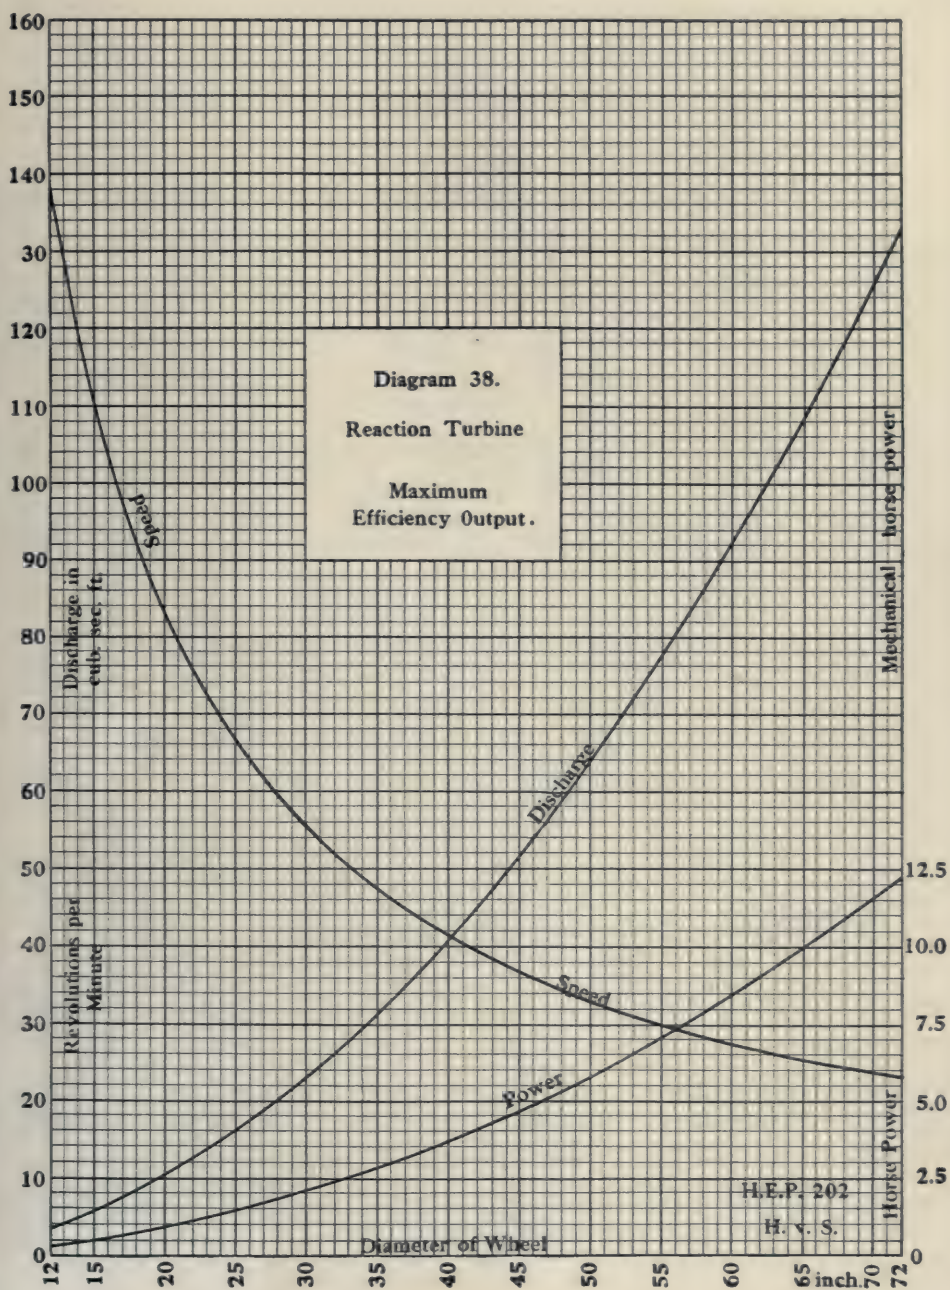

*Guide-wheel or gate openings* represent the total vent area, which is generally divided between 12 such openings, the area of each is therefore =  $2.5 Q'$  (square inches).

*The dimensions of the guide-wheel or gate openings* are generally one of width to four of height.

*The runner buckets* should be fewer in number than the guide-wheel or gate openings, so that anything which passes through the latter, like chips, ice, etc., is likely to pass through the turbine proper without becoming clogged in it.

*The entrance angle* to the runner buckets should be such as to avoid shock of the entering water.

*The clearance* between the guide wheel and the runner should not exceed one-eighth of an inch.

*The bucket vanes* are of a helical form, changing the direction of the flowing water nearly  $180^\circ$ ; their axial depth is fixed by the axial length of the guide openings, for the axially straight part, and the least additional length which is necessary to secure a true helical curve.

*The draft-tube diameter* at the entrance should be such that the velocity does not exceed five feet; the exit diameter should be 1.5 of the entrance diameter; the sum of the entrance diameter and the length above tail-water should be approximately

29 feet for diameters up to two feet,  
27 feet for diameters from two to three feet,  
25 feet for diameters from three to four feet,  
23 feet for diameters from four to six feet,  
22 feet for diameters from six to twelve feet.

*The structural finish* of the turbine parts should be as defined in Article 93.

ARTICLE 89. *Output of Tangential Impulse Turbines.*—The efficiency of this type of turbines is somewhat higher than that of reaction turbines, owing to the fact that the water does not pass through guides and buckets, but is jetted directly upon the bucket faces; the hydraulic losses are therefore much minimized, while those of unused energy and of mechanical origin are about the same as for the reaction turbines. Draft tubes are not of the same value with these turbines as they are with the reaction types, unless the turbine runner is housed in an air-tight casing,



and then the loss of head is that represented by the height between the elevation of the nozzle delivering the jet of water and the elevation of the tail water.

*The constants of the maximum efficiency output of tangential turbines are based upon the standard efficiency of 85. The deductions of these constants follow the same lines as detailed in Article 87.*

*Power, in mechanical horse-power, for unit head,  $P' = 0.0966 Q'$ .*

*Speed, in revolutions per minute, for unit head,  $S' = 10.6 \div \sqrt{Q'}$ .*

*Discharge, in cubic second feet, for unit head,  $Q' = 10.35 P'$ .*

Diagram 39 gives these constants for unit head for the standard size tangential turbines as manufactured in the United States.

*Example from Diagram 30.—For a 24-inch Tangential Turbine:*

Power constant is	0.0078	mechanical horse-power,
Speed constant is	38	revolutions per minute,
Discharge constant is	0.08	cubic second feet or
	4.8	cubic minute feet.

The output of this same 24-inch tang. turbine with a head of 900 feet is:

Power, constant	$\times \sqrt{900^3} =$	21.06 m.h.p.,
Speed, constant	$\times \sqrt{900} =$	1140 r.p.m.,
Discharge, constant	$\times \sqrt{900} =$	2.4 c.s.f.

*For a 60-inch Tangential Turbine:*

Power constant is	0.047	m.h.p.,
Speed constant is	15.3	r.p.m.,
Discharge constant is	0.49	c.s.f.

The output of this 60-inch tangential turbine with a head of 2500 feet:

Power, constant	$\times \sqrt{2500} =$	5875 m.h.p.,
Speed, constant	$\times \sqrt{2500} =$	765 r.p.m.,
Discharge, constant	$\times \sqrt{2500} =$	24.5 c.s.f.

*The chief elements of the design of tangential turbines to yield the output expressed by the foregoing constants are for*

*the diameter, in inches,  $D = 86.5 Q'$  (Q in cubic second feet),*

*the nozzle, in inches,  $N = D \div 18$ .*

Several nozzles may carry water to one wheel, as many as five being frequently used, whereby the same diameter tangential turbine dis-



charges about eight times the normal volume, the power output being increased correspondingly while the speed is slightly lower.

ARTICLE 90. *Summary of Turbine Output Constants.* — These constants represent the standard maximum efficiency output of American reaction and impulse turbines at efficiencies of 80 and 85 respectively; the expressions are for unit head, or a fall of one foot, being

power, in mechanical horse-power, with one foot head,  $P'$ ,  
 speed, in revolutions per minute, with one foot head  $S'$ ,  
 discharge, in cubic second feet, with one foot head,  $Q'$ .

Reaction Turbines.

0.09  $Q'$   
 $257 \div \sqrt{Q'}$   
 11.1  $P'$   
 $6.36 \sqrt{Q'}$

Power constant  
 Speed constant  
 Discharge constant  
 Diameter  
 Nozzle (single)

Tangential Impulse Turbines.


0.0966  $Q'$   
 $10.6 \div \sqrt{Q'}$   
 10.35  $P'$   
 $86.5 \sqrt{Q'}$   
 $4.75 \sqrt{Q'}$

For any head  $H$  the corresponding output is obtained for

Power, from power constant  $\times \sqrt{H^3}$  for reaction and impulse turbines.  
 Speed, from speed constant  $\times \sqrt{H}$  for reaction and impulse turbines.  
 Discharge, discharge constant  $\times \sqrt{H}$  for reaction and impulse turbines.

Diameter and nozzles remaining as per constants.

ARTICLE 91. *Determining the Turbine Equipment.* — As has been stated before, the chief criterion in selecting the turbine equipment for a hydro-electric plant is the speed. From the constants in Article 90 it will be noted that the ratio of speed of reaction and tangential turbines is about as 24 to one, and therefore the first will prove generally preferable for hydro-electric installations until the head, and therefore the speed, becomes too high both for the reasonable wear of the turbine and the speed standard of the best adapted electrical apparatus for the conditions. No demarcation line can, however, be drawn between the adaptability of the two types of turbines excepting the general limitation of the high head, as for heads above 300 feet reaction turbines will not prove preferable over the tangential; however, there may be conditions, with heads much lower than that stated, where the tangential type should be preferred, as it must not be overlooked that from it can be secured an increase of not less than five per cent. output in power, which may, in small plants, form the deciding argument.

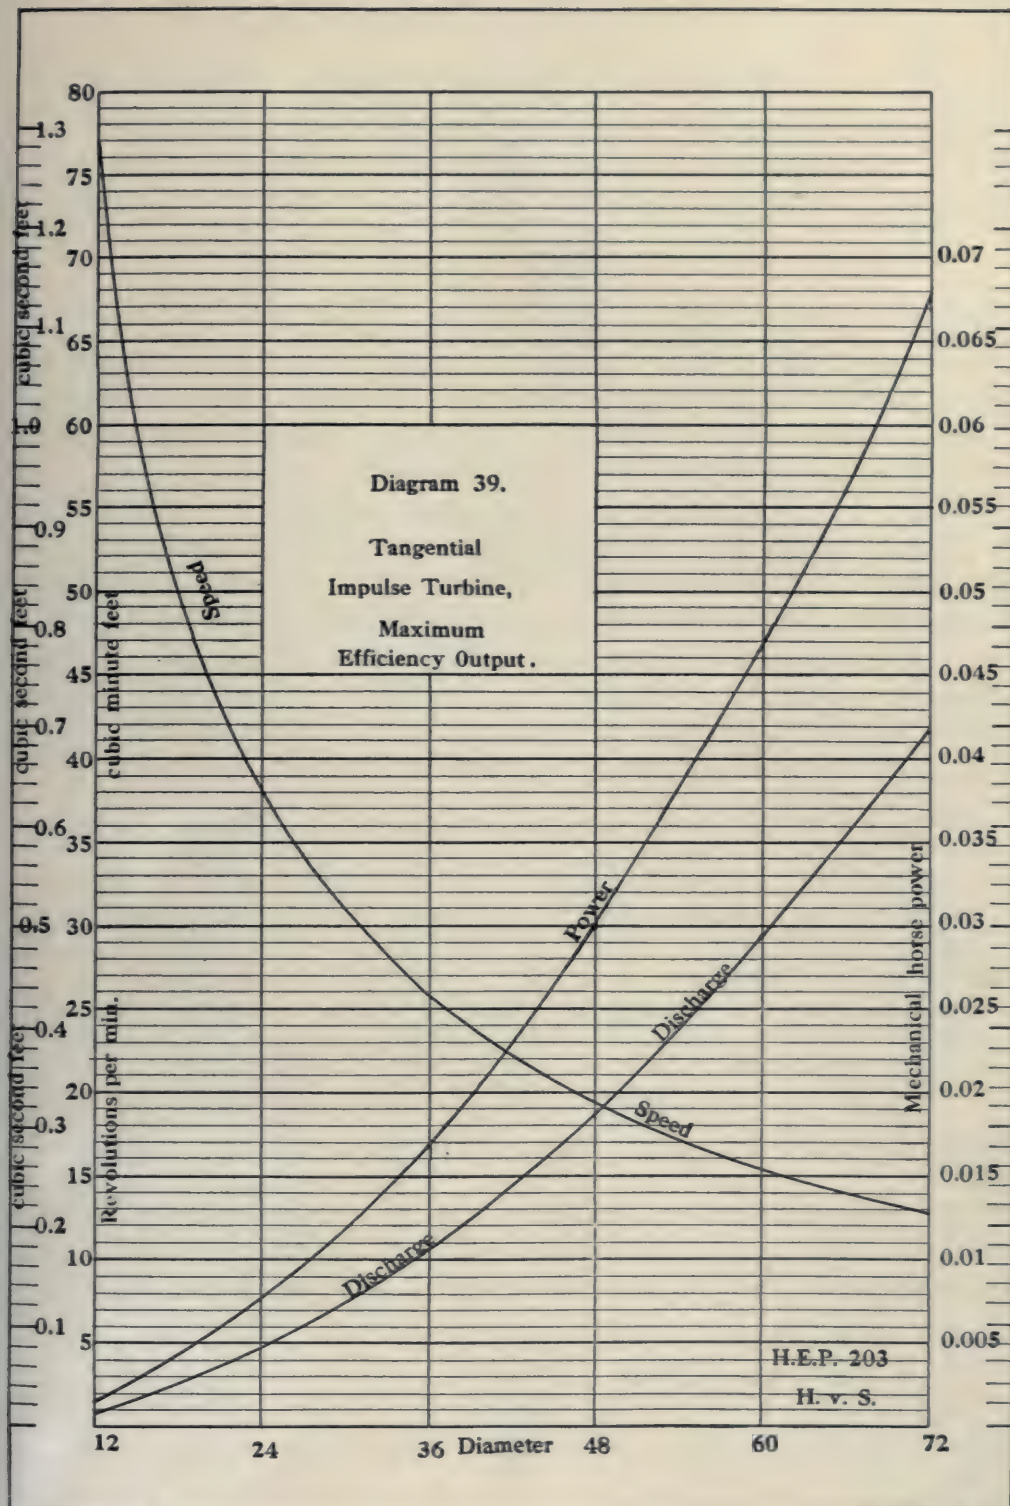

The power functions, available head and flow, being known, the constant output discharge volume is found by dividing available flow by  $\sqrt{H}$ ; this is the value of  $Q'$ , and the investigation is ready for consultation of Diagram 38 or 39, as the head may be low or medium or high.

*Example 1.*—Available flow is 460 c.s.f. and head is 16 ft.

$$Q' = 460 \div \sqrt{16} = 115.$$

If this quantity is outside of the diagram scope, it exceeds the discharge output of a commercially standard reaction turbine, and it must therefore be reduced by division into the least number of parts required to bring the unit quantity within the limit of the diagram.

Returning to Example 1, the unit discharge of 115 c. s. f. is found on the left-hand index and traced to the right until the discharge curve is intersected, thence leading downward to the lower index where the turbine size is found of which this quantity is the discharge constant, and from this to the intersections of the dimension index with the power and speed curves these constants are obtained, and from them the output for the available head of 16 feet. In this case a 67-inch turbine represents this discharge, and its constants are:

$$\begin{array}{lll} P' = 10.5 & S' = 24.5 & Q' = 115, \\ \text{and the 16-ft. output, } P = 672 & S = 98 & Q = 460; \end{array}$$

the speed is therefore 98 revolutions, which is too low for direct connected electric apparatus.

Taking half of the unit discharge, 58 c. s. f., Diagram 38 gives a 48-inch turbine which meets it; the output constants are:

$$\begin{array}{lll} P' = 5.25 & S' = 36 & Q' = 58, \\ \text{the 16-ft. output } P = 336 & S = 144 & Q = 232. \end{array}$$

If this speed of 144 r. p. m. is still too low, one-fourth of the flow constant is taken or 29 c. s. f., for this

Diagram 38 gives a 34-inch turbine; the output constants are:

$$\begin{array}{lll} P' = 2.6 & S' = 49 \text{ and } Q' = 29, \\ \text{the 16-ft. output is } P = 166.4 & S = 196 & Q = 116. \end{array}$$

Two 34" turbines in one unit yield 332.8 m. h. p.



The ratio of turbine diameters as above, 67, 48, and 34, is the constant representing the ratio of the diameter of one large turbine to the diameter of two smaller turbines with like power output, and vice versa, which is expressed approximately by

$$D = 1.42 d \quad \text{and} \quad d = 0.71 D.$$

*Example.*—The power yield of one 54-inch turbine is equalled by that of two 38-inch turbines from  $54 \times 0.71$ , and the power yield of two 23-inch turbines is equalled by that of one 33-inch turbine, from  $23 \times 1.42$ .

The final comparative factors are speed and output expressed in terms applied to the commercial standard types of generators, that is kilowatt, in accordance with the maximum efficiency output of turbines, which is higher than the water-power-electric power ratio given in Diagram 3 of the first part of this volume, where a lower turbine efficiency was adopted in order to secure safe conservative estimates for the preliminary investigation of a hydro-electric opportunity.

The following arrangement may be found convenient for the equipment determination.

Available Unit.	Q	H	D	P	S	K.W.	
	1200 200	36 1				Per unit.	Total.
One turbine .....	...	...	90"				
Two turbines @.....	600	36	64"	1,944	153	1,376	2,752
Three turbines @.....	400	36	52"	1,296	188	917	2,751
Four turbines @.....	300	36	45"	972	218	688	2,752
Five turbines @.....	240	36	40"	778	245	550	2,750
Six turbines @.....	200	36	37"	648	265	459	2,754
Seven turbines @.....	171	36	34"	561	294	397	2,779
Eight turbines @.....	150	36	31"	475	324	346	2,768
Nine turbines @.....	133	36	29"	432	336	305	2,752
Ten turbines @.....	120	36	28"	388	360	275	2,750
Eleven turbines @.....	109	36	27"	356	372	252	2,772
Twelve turbines @.....	100	36	25"	324	396	229	2,748

From this analysis of turbine output all feasible unit combinations can be drawn:

	Speed.	Unit output.
Twelve units of single.....	25"	396
Six units of double.....	25"	396
Five units of double.....	28"	360
Four units of double.....	31"	324
Four units of three.....	25"	396
Three units of four.....	25"	396
Three units of three.....	29"	336
Two units of three.....	37"	265
Two units of two.....	45"	218
Two units of single.....	64"	153



This represents all the practicable turbine combinations for this set of conditions, covering a range of speed from 153 to 396 and of generators from 229 to 1376 K.W. capacity, and it exhausts the investigation at the turbine end of the equipment, and is continued by the further examination of standard generator units and the final selection of such an arrangement as best harmonizes the three factors,—market requirements, turbine, and generator adaptability.

With high heads, of 300 feet and more, the same process is extended to tangential impulse turbines, in which Diagram 39 may be utilized; here the scope of possible combinations is somewhat narrower, unless the feasibility of supplying the water by more than one jet is taken into consideration, which leads into the volute or central discharge turbine, types more frequently employed abroad, but which may now also be procured in this country, and represents the high efficiency of the tangential turbines coupled with a large discharge capacity.

ARTICLE 92.—*Turbine governors* are required in connection with the operating of the turbine equipment of a hydro-electric plant when the head or the work to be done by the generated power, the load, fluctuates; one or both of these conditions prevail in probably every hydro-electric power plant. Like other governors, turbine governors are expected to regulate the volume of the power-generating substance, in this case the water, which regulation, in reaction turbines, must be applied at the turbine gates, controlling the gate openings, while in impulse turbines of the tangential type, where the water is supplied to the buckets by the way of a nozzle, the regulation by the governor must be of the nozzle's opening, which is generally secured by the axial movement of a plug or needle passing in the interior of the nozzle back or forth as actuated by the governor's movements. These conditions are widely different from those prevailing in the regulation of steam-engines, steam being elastic and compressible, while water is not; the steam valves to be operated by the governor being accurately fitting machinery parts easily moved and controlled, while the gates of turbines are large and heavy, and certainly not to be compared in fit and finish of motion to the valve; a turbine gate is exposed to the water pressure and when once set in motion is not readily stopped or controlled. All these conditions make it necessary that a turbine governor be supplied with some other source of energy, to be applied to the regulating of turbine gates, than that represented by the usual centrifugal balls of the steam governor, and all turbine

266

Figure 122

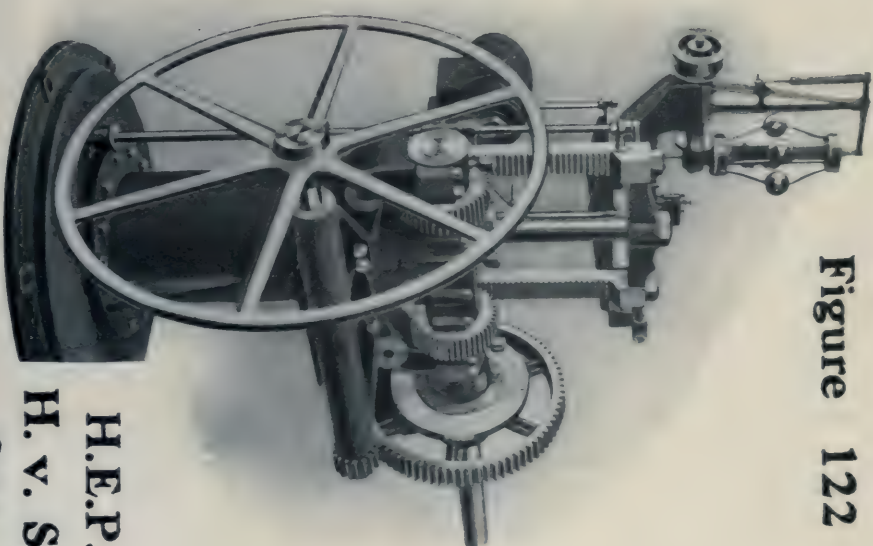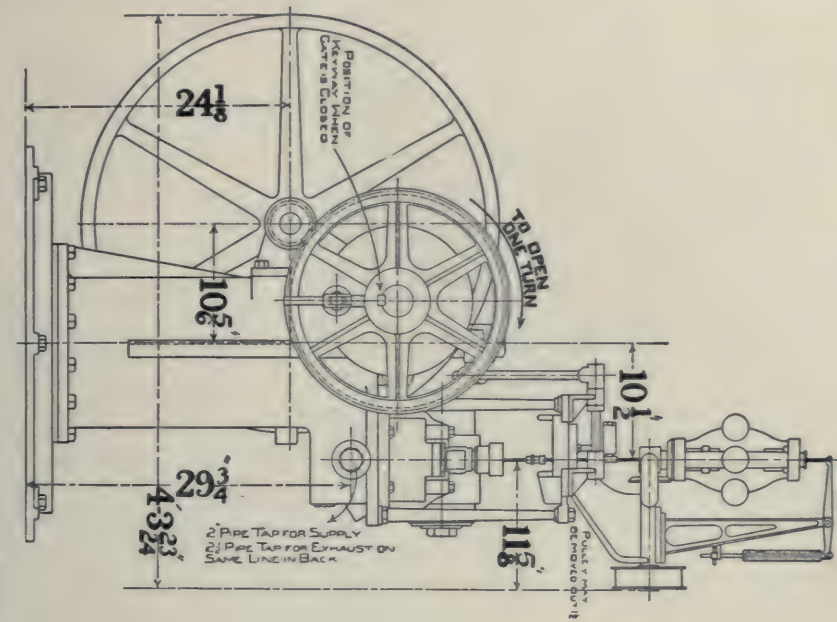


Lombard Governor

H.E.P.  
H. V. S.  
204



**Figure 123**

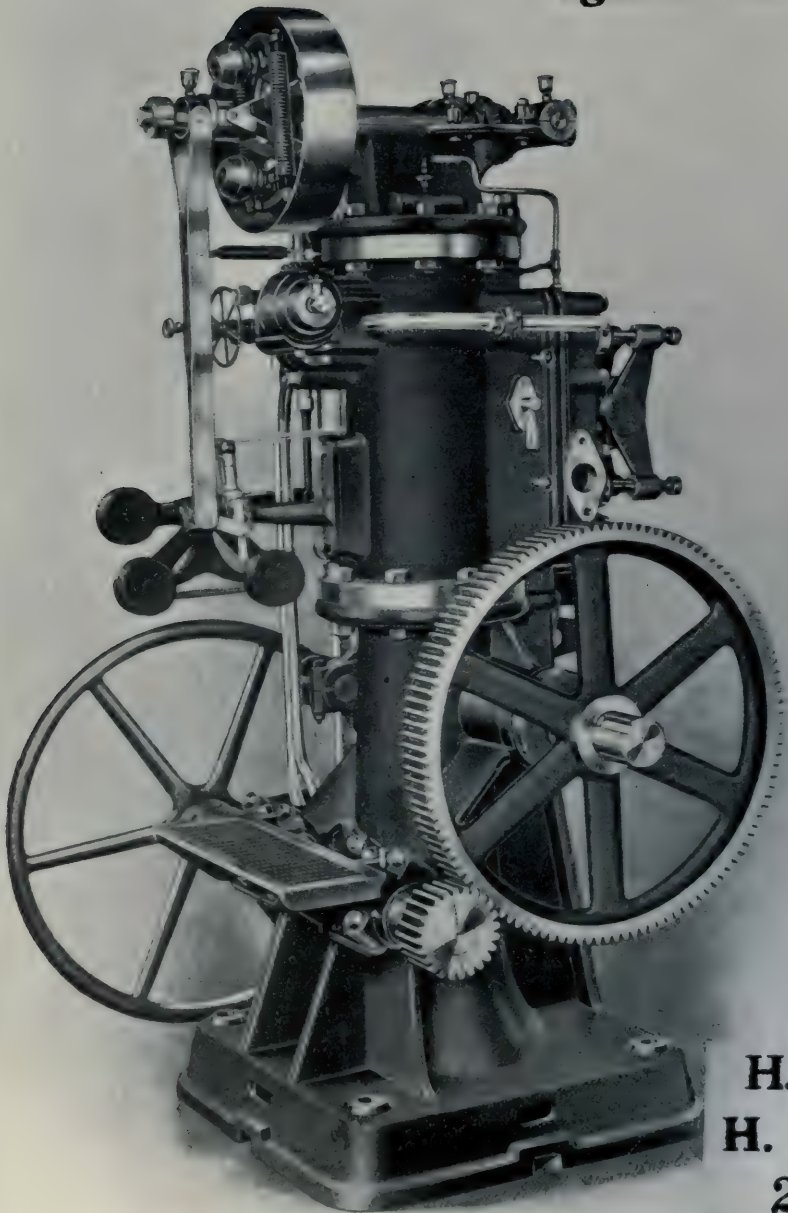

**H.E.P.  
H. v. S.  
205**

**Sturges Governor**

governors have such additional power source made available through the initiative of the centrifugal speed regulation. This is the *relay* energy source of the governor, and may be of mechanical, hydraulic, electric, or pneumatic origin, the first two being those applied in American practice.

The manufacture of governors of this class is restricted in this country to a few concerns, and it will serve the purpose best to describe, very briefly, the pertinent characteristics of the different types, which here follow; the illustrations of these governors have been furnished by the respective makers of the machines.

*The Lombard governor* is manufactured by the Lombard Governor Company, at Ashland, Mass.; it is of the hydraulic type.

Fig. 122 shows the elevation of one of the several types and a section with the dimensions of the important features.

This governor consists of the following parts: A centrifugal speed regulator, a regulating valve with adjustable valve stem, a pressure tank and receiver, a hydraulic cylinder, power pump, antiracing mechanism, and terminal connections of racks, pinions, clutch, and hand-wheel shaft.

The governor's operation is briefly described thus: The centrifugal head is connected to a regulating valve by a valve stem in two parts connected by a screw coupling, which is adjustable and whereby the normal governor speed may be fixed or altered. The fluctuation of the centrifugal head actuates the regulating valve, which permits fluid under pressure to pass from a pressure tank to the hydraulic cylinder which controls the gate operations. The oil is pumped into the pressure tank by a suitable force pump; where high pressure heads are available, water pressure may be utilized; the oil which is exhausted by the hydraulic cylinder passes back into the receiver from whence it is again returned by the pump to the compressor tank; in this manner the relay energy is practically maintained constant.

*The Sturgess governor* is also of the hydraulic type; it is manufactured by the Ludlow Valve Manufacturing Company, at Troy, N. Y.

Fig. 123 shows this type of governor in elevation. It consists of a centrifugal governor, a pilot valve operated by the centrifugal governor, an operating cylinder controlled by the pilot valve and operating puppet valves of the main cylinder, a system of floating levers between the operating cylinder and the puppet valves, puppet valves which control the pressure in the main cylinder, a main cylinder with piston, rack, and pinion operating the gate shaft, and a compensator to prevent racing.



The above outline of the principal parts practically describes the operating method. The centrifugal governor is belted to the turbine shaft, the pulleys being proportioned to secure the desired speed of the governor; when the governor operates at the normal speed, the pilot valve stands between the two ports of the operating cylinder, while the smallest deviation from normal speed raises or lowers the pilot valve and affords a passage, to the fluid under pressure, to the hydraulic cylinder connected to the turbine gate shaft.

*The Woodward governor* is manufactured by the Woodward Governor Company, of Rockford, Ill. It is a mechanical governor—that is, the relay energy is of mechanical source.

Fig. 124 shows the elevation of this governor, known as the compensating type. The power which operates the governor is taken from the turbine shaft by a belt to a pulley on the main governor shaft, to which a double bevelled friction wheel is keyed through which the power for the gate operation is applied. The friction wheel is made of compressed paper. On both sides of the friction wheel are friction pans whose faces are of the same bevel as those of the friction wheel; one of these friction pans effects the opening, the other the closing, of the turbine gates. The friction pans are pressed into the hubs of spur pinions which run free on the governor shaft and engage with gears of a back shaft, one direct and the other through an intermediate gear. Friction wheels and pans are cleared by adjusting rollers. The governor's regulating action is initiated by the centrifugal balls, their deviation from normal speed forcing the friction wheel against the respective friction pan and this in turn acting upon the gate operating shaft. The governor is self-contained, consisting of the following principal parts: a revolving double feed cam, a vertical rock shaft, a main friction shaft, a speed governor, a compensating device, a friction wheel, and the friction pans, with gears, pinions, and connections.

*The Lombard-Replogle governor* is manufactured at the Replogle Governor Works, at Akron, Ohio; it is a mechanical governor.

Fig. 125 shows the elevation of this governor, in which the speed governor is of the horizontal type, being placed in the main pulley which is driven from the turbine shaft. The action of the speed governor is to press friction wheels into contact at any deviation from the normal speed, when the power developed from these primary or tripping disks brings the secondary or main operating drive into action. The main



3221


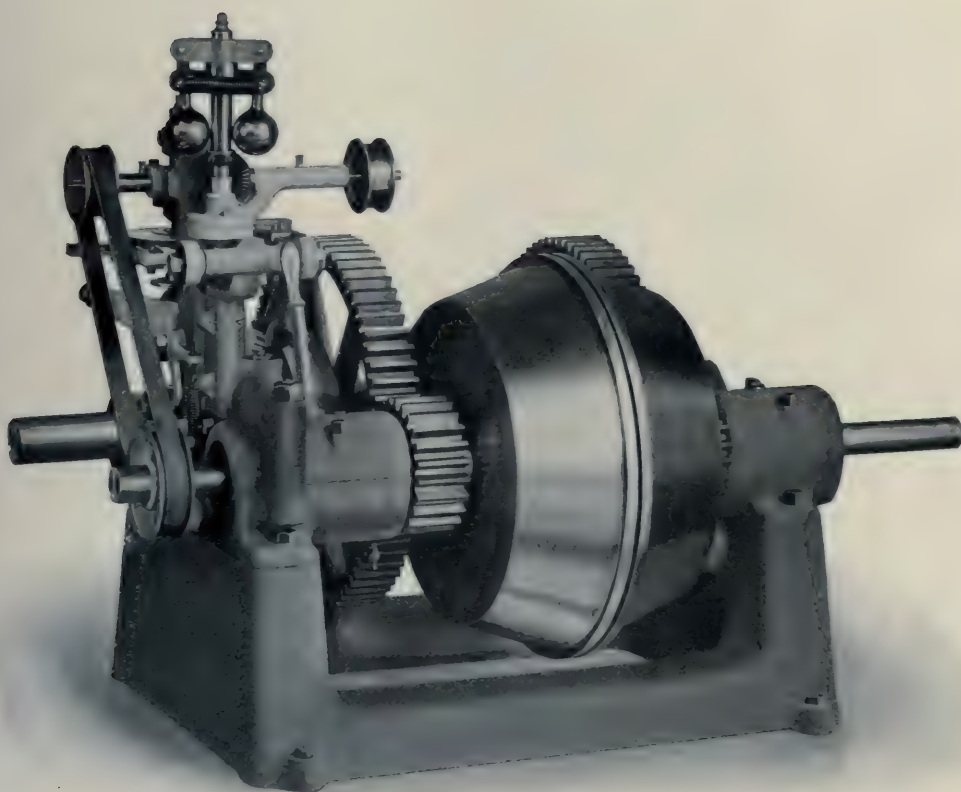


FIG. 124.—Woodward Governor.

Figure 125

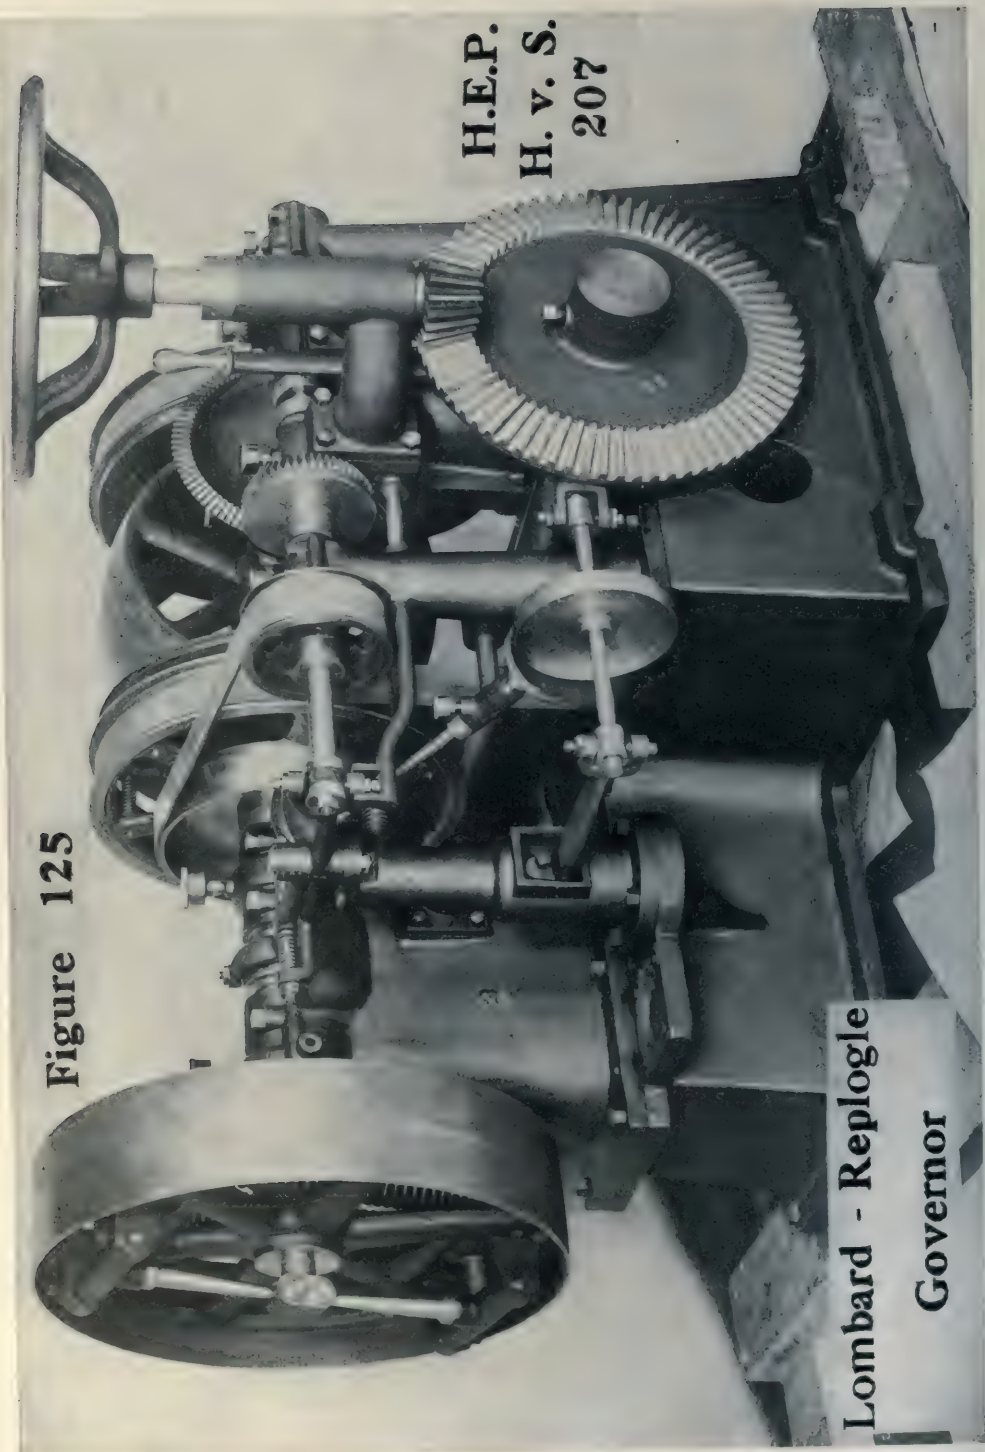

H.E.P.  
H. v. S.  
207

Lombard - Replogle  
Governor

drive consists of two concave disks which are lined with leather and which rotate in opposite directions and engage a spherical pulley placed concentrically between them. The tripping frictions force this spherical pulley out of the centres of the leather-lined friction disks, causing contact with the moving surfaces and imparting the power which operates the turbine gates. The movement of the spherical pulley in any direction returns it to its normal position at the centre of the friction disks, this being its position of rest. In addition to the effect of the primary disks in forcing the spherical pulley out of the centre of the friction disks, it also neutralizes the speed of the governor balls and, it is claimed, prevents hunting or racing.


This, like any of the other turbine governors, may be regulated, as to the standard speed of the governor element, by electric devices operated from the switchboard of the operating station.

*The power required to operate turbine gates* depends upon so many different conditions that a practical formula cannot be developed. From extensive experiments made with turbines fitted with balanced swinging or wicket gates, which were carried on under the supervision of the author, it was found that the power required to operate the gates of 33-inch reaction turbines under a head of 16 feet, from their closed to their full open position, was 500 foot pounds; with gates of the same type and correctly swung and balanced this power will vary directly as the head and as the cube of the gate's axial diameter. Cylinder gates require more power, and there are other styles of turbine gates which take still more, though these are becoming obsolete.

*Governing tangential impulse turbines* is now generally accomplished by regulating the area of the nozzle through the medium of a plug or needle operating axially in its interior. This may be accomplished by any of the governors described, or by a specially designed hydraulic or electric motor secured directly to the terminal of the supply pipe near the nozzle. Considerations of equally great importance in connection with the governing of these types of turbines relate to the necessary compensation in the supply pipe for the sudden changes and speeds of the volume of the water passing through it and which will be consequential of the governing method, that is the regulation of the volume supplied to the turbine buckets by the way of the jet issuing from the nozzle. It needs no specific discussion to point to the dangerous conditions which may be created for the safety of the supply pipe and its connections.



*Hydraulic relief valves* may be placed near the nozzle and connected to the supply pipe, or a *by-pass* actuated by a valve responding to an excess pressure; *stand-pipes* are also effective in protecting the supply system. Of all these the hydraulic relief valve is to be preferred; the by-pass incurs a considerable waste of water which, in high-head developments, needs to be conserved, and the stand-pipe will, as a rule, entail considerable expense.

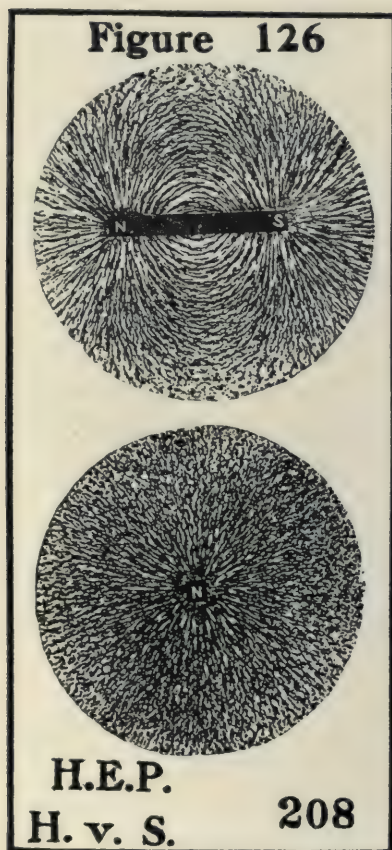

ARTICLE 93. *Electric Equipment; Magneto-dynamic Theory.*—*Electric power* is the measure of the useful dynamic work of magneto-electric energy, which is the product of electro-motive force and electric current. *Electro-motive force* is the expression of stress due to the difference in potentiality of the magnetic flux of separate bodies which are brought within each other's sphere of influence. *The magnetic flux* consists of the magnetic waves streaming from and surrounding the source and seat of magnetism; the sphere of this flux is *the magnetic field*.

Fig. 126 represents the field of a magnet; it shows the streaming forth of the magnetic flux from one pole, the north, spreading out over more or less space around the body of the magnet, *the core*, returning reassembled into the other pole, the south, and, presumably, passing through the core back to the

north pole. If the two poles are connected by a piece of metal, *the keeper*, no evidence of the flux can be traced.

Alessandro Volta, an Italian physicist (1745–1827), and Luigi Galvani, of Bologna (1737–1798), jointly discovered that two dissimilar metals, or a metal and a metalloid, are capable of forming an *electric source* when dipped into an electrolyte, or will produce a difference of electrical potential by mere contact. This is *voltaic electricity*. Many substances become electrified by friction, from which indeed the name, from *electrum*


or amber, a material especially susceptible to electrification by friction. Electricity thus created may be *conducted* through proper mediums—copper, silver, aluminum—and becomes the *electric current*.

Fig. 127 represents a conductor carrying an electric current, by which it becomes the source and core of a magnetic field surrounding it in a manner analogous to that of the magnet shown in Fig. 126, the flux taking the general shape and characteristic of circular whirls; in fact the electricity or current appears to reside largely in this flux, which, upon a rupture of the conductor, retreats into the core and manifests itself by the spark which escapes at the point of the conductor's break.

When a conductor, carrying an electric current, is wound about a piece of magnetizable metal, the latter becomes a magnet and displays all the characteristics above described; or, if such a piece of metal is pushed into the interior of a conducting coil carrying an electric current, the piece likewise becomes a magnet. From these phenomena it is deduced that the molecules of certain matter, especially metals, are individual magnets resting normally in an unharmonious state, that is their pole directions are not continuous, and that the influence of the electric current, and the accompanying magneto-electric flux, orders these molecules into a complete chain of magnets, thus opening the way for the flow of magnetic lines through the matter and, therefore, the appearance of the magnetic flux around and about the magnet. Michael Faraday, an English physicist (1791–1867), discovered that the moving of a conductor through a magnetic field and crossing the lines of force induces *electro-motive force* in the conductor in direction at right angles to that of the conductor's motion and to the lines of force cut by it.

This is the basic principle of electric generators and motors,—that is, converting mechanical energy into electric current, or vice versa, by means of magneto-electric energy induced by the moving, generally rotary, of a system of electric conductors through magnetic fields.

*Magneto-electric Units.*—The flux lines passing through the air space of a magnetic field are the *lines of force*, the magneto-electric energy

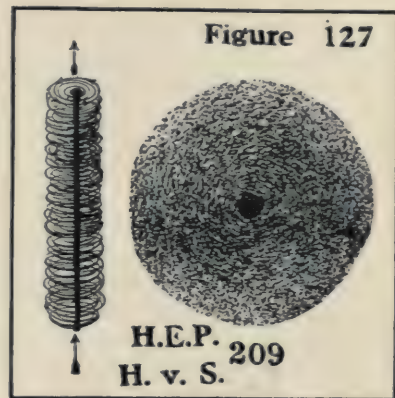



finds its origin in the influence of these lines, and the force they represent upon bodies susceptible to such influence and which cross their paths, their aggregate, *the magnetic flux*, is denoted by "N," being the measure of the total number of lines of force, which, as appears from Fig. 126, is the same along any direction across their path. The lines passing through the magnet proper are the *magnetic lines*, which are measured by the number in a unit cross-sectional area, one square centimetre, of the core, and are denoted by "B" or *flux density*. The magneto-motive force emanating from the magnetic flux is denoted by "H," and is measured by the C. G. S. (centimetre-gramme-second) work unit, *the dyne*, a force which imparts a velocity of one centimetre in one second to a mass of one gramme; a unit magnetic pole is one which repels a pole of equal strength, at a distance from it of one centimetre and in air, with the force of one dyne; a field of unit intensity exists therefore at a distance of one centimetre from a unit magnetic pole. The functions relating to the generating and conducting of electric currents are somewhat analogous to those concerned with the flow of water, pressure, volume, and friction of conduit being typified by (pressure) electro-motive force, (volume) current, and (friction) resistance in the conductor.

The unit measure of electro-motive force, or electric pressure, is *the volt* (after Volta), which represents that force induced in a conductor cutting 100,000,000 lines of force in one second; its symbol is E. M. F. or "E."

The unit measure of current is *the ampère*, named so by the International Electrical Congress at Paris in 1881, in honor of the celebrated French electrician André Marie Ampère; this unit represents a rate of flow, or transmission of electricity, which will pass, with the pressure of one volt, through a conductor whose resistance is unity; it is symbolized by "C."

For the resistance unit *the ohm* was adopted by the International Electric Congress in 1893, in honor of Dr. G. S. Ohm; this represents such a resistance of the conductor as will limit the flow of electricity under pressure of one volt to a current of one ampère; its sign is "R."

$$\text{Therefore} \quad E = C \times R, \quad C = E \div R, \quad R = E \div C.$$

The electric energy or power unit is *the watt*, named in honor of the Scottish engineer and inventor James Watt (1736-1819), which represents



that rate of work resulting from unit current flowing under unit pressure, therefore also called the volt-ampère.

One watt equals  $1 \div 746$  horse-power, or  
one electric horse-power,  $E_{hp} = 746$  watts and  
1000 watts are one kilowatt.

The electro-motive force represents the origin of the final output, its advent through induction, just as the head in hydraulics renders the flow, or the current, available; and, since its magnitude is proportional to the number of force lines cut in a given time, it is evident that it depends upon the three functions, force lines, conductor, and movement.

"N," the number of force lines cut in one second, depends upon the section, the magnetic permeability, and the magnetization of the magnet. The section may be any which adapts itself to the purpose; generally speaking, it is a good feature of a dynamo to have the field magnet or magnets of super-large section; the field may be that of several magnets of suitable form and conveniently placed for the economic and efficient design of the machine. The magnetic permeability of the materials used for dynamo magnets differs considerably; wrought iron probably is of the highest degree, followed by cast-iron and mild steel. The magnetization may be to any degree within the limit of saturation; it is provided by passing conductors around the magnet core, and its measure is expressed in *ampère-turns*, which represents the unit of magneto-motive force and is equal to that produced by a current of one ampère flowing around a single turn or spiral of the conductor and is denoted by "C S."

"Z," the second function of electro-motive force, is the number of conductors which cut the lines of force; they may be as numerous as the machine's arrangement will allow; Z represents the number of conductors connected in series.

The third function, "n," relates to the motion or movement of the conductor, and therefore is a question of speed and of mechanical consideration chiefly.

The theoretical magnitude of the electro-motive force is expressed by

$$E = n \times Z \times N \div 100,000,000, \text{ or } = n \times Z \times N \div 10^8.$$

ARTICLE 94. *Some Current Symptoms.—Alternations.*—As the electro-motive force, and therefore the current, finds its origin in magnetic

stresses, it follows that it will fluctuate in magnitude and change in direction as the number of force lines traversed by the conductor increases or decreases, and that therefore the generated current *alternates*.

Fig. 128 illustrates the simplest method of current generating by one conductor, being a loop, revolving axially between the two pole faces of a magnet. Reference to Fig. 126 of the general grouping of the lines of force makes it clear that when the loop is in the vertical position it embraces the least number of force lines; while turning through a right angle the number of lines cut by the conductor gradually increases, and they become greatest when the loop reaches the horizontal position; during this path the electro-motive force has constantly risen and has maintained the

same direction. Descending through the second quarter turn, the number of force lines cut by the conductor decreases until the vertical position is reached and with it the low point of magnitude. Rising through the third and fourth quarters the same process is repeated.


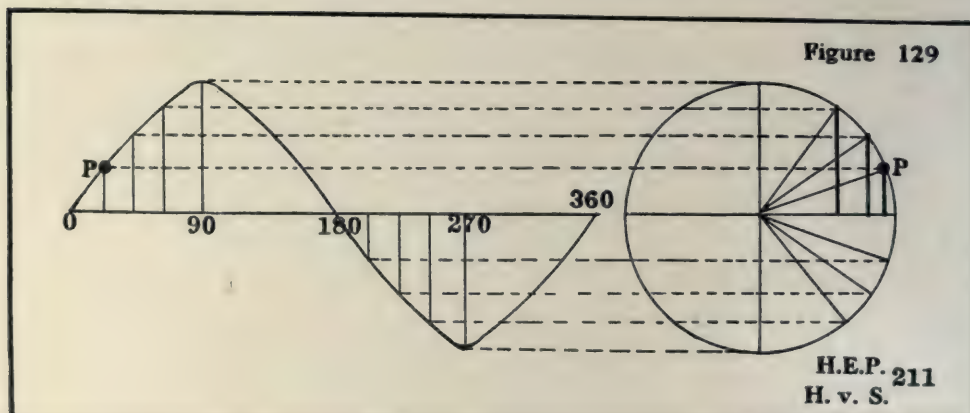


Fig. 129 shows diagrammatically the linear development of these alternations of the current in magnitude and direction during one complete revolution of the conductor; the horizontal line corresponds to the vertical position of the conductor as above described, the upper and lower points typify the horizontal position of the conductor. The

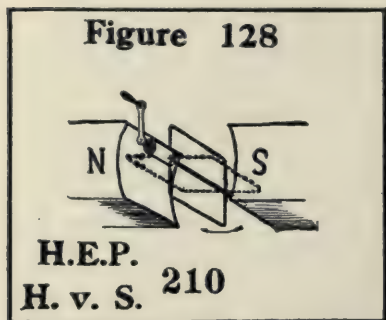

movement of any fixed point, "P," may be traced around the circumference of a circle the radius of which corresponds to the amplitude of the highest point which is reached by the current's magnitude, and from this it is apparent that the electro-motive force at any point, or at any period of time, in the path of the alternating current equals the sine of the angle through which the conductor has turned from its initial vertical position.


*Frequency.*—The current wave due to one complete revolution of the conductor is called a *period*, and the number of periods occurring in one second are denominated the *periodicity* or the *frequency*, or the *cycle* of alternations, and are symbolized by "n." The frequencies equal the product of conductor revolutions per second and the number of the field magnets passed by the conductor during one complete revolution.

*Example.*—With a speed of conductors of 240 revolutions per minute, or 6 per second, a six-pole (3 magnets) dynamo will generate current of 18 frequencies.

*Phase.*—When, as in Fig. 128, one conductor is provided for each magnet, being a group of conductors for each pole, the alternations of the current are *monophase*,—that is, there is one phase only in the complete period; if, however, the number of conductors is doubled, a *two-phase* current results, and *three-phase* when six groups of conductors are provided.

Fig. 130 shows the two- and three-phase current waves, the alternations in the first being of quarter periods, or the phase angle  $90^\circ$ , while in the three-phase current the alternations differ by  $60^\circ$ . Any alternating current other than single-phase is called *polyphase*.

*Inductance, Self-induction, Reaction.*—As has been shown in Fig. 127, a conductor carrying an electric current is surrounded by a magnetic field, and, according to the general theory of the origin of electro-motive force being due to magnetic stress, it is evident that the current carried by the conductor will, when brought into the sphere of another magnetic field, undergo changes corresponding to the relative stress conditions.

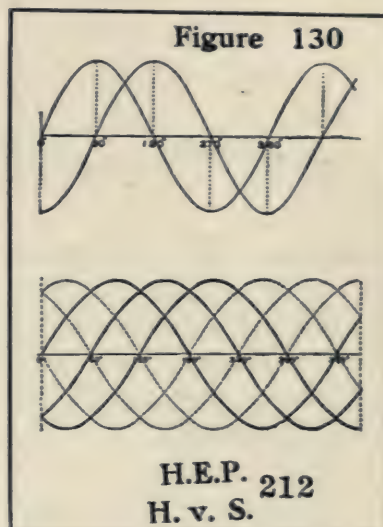



Such an influence upon a conductor is called *inductance*, and manifests itself in destroying the harmonious flow of volts and ampères by the *reaction* of the self-induced electro-motive force and its retardation of the current's phase, the ampères, which fall behind the volts, this condition being called *the lag*; the extent of this disturbance is expressed by the *angle of lag*, which is the measure of that portion of the angle of phase represented by the lagging of the ampère behind the volt wave.

*Impedance*.—Inductance must be overcome by increased electro-motive force,—that is, whereas the normal expression for “C” is  $E \div R$ , E being the impressed voltage and R the resistance of the circuit, in the presence of inductance C becomes, as illustrated in Fig. 131,

$$C = E \sqrt{R^2 + C^2 L},$$

in which L is a coefficient of self-induction. E of this value is the *impedance*, the impressed voltage or the ratio of produced volts to ampères. When there is no induction, that is in steady currents, impedance equals resistance.

*Capacity, Reactance*.—The opposite effect of inductance occurs in a current when charging a condenser; this causes the ampères *to lead* the volt phase, which condition is termed *capacity*, being caused by reactance of the condenser.

Inductance and capacity, being opposite in effect, may be created for the purpose of counteracting each other, when the current is said to be *non-inductive*, and in that event  $C = E \div R$ .

*Watt-less Current*.—When the phase of volts and current differs considerably by reason of lag or lead caused by self-induction or capacity, the actual watt output is less than what would be indicated by the product  $E \times C$ . Fig. 131 shows the two components, and these may be considered as representative of the working and the watt-less magnitudes.

*Continuous Current; Commutator*.—The alternate current (Fig. 132) may be made continuous in direction by connecting the terminals of the conductor to separate segments of a ring, the segments being insulated from each other, and by passing metallic brushes over the circular segment surfaces in such a manner that the gap between the two segments is closed by the brush contact at the period when the alternation of the current reversal takes place; the exterior circuit is connected to the brushes and the commuted current flows into it in continuous direction.



The apparatus through which the alternate current is changed into continuous current is called the *commutator*.

ARTICLE 95. *Dynamo Parts; their Purpose and Design.*—Electric dynamos serve the purpose of generating electric energy, the origin of which may be continuous or alternating current; electric energy may therefore be generated by continuous or alternating current dynamos commonly called D. C. generators and alternators. Any dynamo consists in general of the same parts,—the magnets, which are assembled in the field, and the conductors, which are grouped in an armature; one of these parts revolves, and then is the interior, the other is fixed, and is the exterior; both are concentric of each other. The fixed or exterior part becomes also the frame of the machine, terminating below in a base and frequently having connected to it shaft-bearing stands; the interior or revolving part is connected to the shaft. The variations of types and forms of parts are manifold, and it is not the purpose here to describe any particular make, but to give such an

outline of the purpose and theoretical design of the principal parts as to enable the investigator to recognize compliance with or any gross departure from these essentials.

*Continuous-Current Dynamos.*—The field consists of the magnets and their windings. The magnets are radial arms or shoes connected to a yoke; the extreme ends of the magnet shoes are the poles.

In dynamos of large output, such as are employed in the equipment of hydro-electric plants, the field is multipolar, as distinguished from that of small continuous-current dynamos, in which the field consists of one magnet or two poles, being termed bipolar; the multipolar dynamos have four, six, eight, or more poles arranged along the interior periphery of the fixed field, the frame part becoming the yoke, or to the exterior periphery of the rotating field in which the hub represents the yoke.

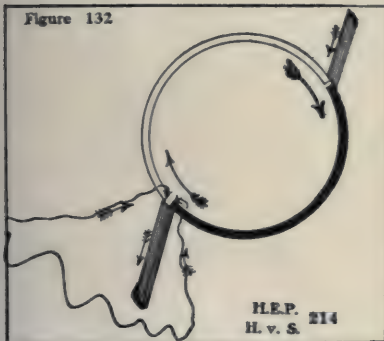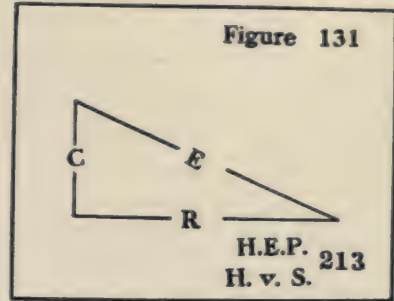



Magnet arms are generally built up of laminated (insulated) metal disks of wrought iron or mild steel, being of circular or other shape. The field of all large dynamos consists of electro-magnets,—that is, the magnetization is created by passing an electric current through conductors wound around the magnet limbs; this is called *excitation* of the field. The field of a continuous-current dynamo is *self-excited*; the electric current, in other words, carried by the field conductors is generated in the dynamo armature; this is not the case in alternators, as will be seen later on. The field winding may be of the continued armature conductors, which is called *series wound*; or it may be of a smaller conductor than the armature coils and connected with the armature winding as a sort of splice; this is called the *shunt-wound field*; and finally the field winding may consist of a combination of the series and shunt method, the latter overlying the former, and this is called a *compound wound field*. As will be seen later, the field excitation, and therefore its winding, forms one of the most important means of regulation of the output, and therefore this characteristic of the field winding practically conveys, in a large sense, a conception of the efficiency of the dynamo as to the regularity of its output. There are many reasons for the desirability of the compound winding of the field, and it is practically the general practice with dynamos of large output.

The section of the magnets and the amount of the winding depend upon the permeability of the material of which the magnet is formed and the required magnetization of the field, that is of the flux density as expressed by “N” in the formula of electro-motive force,  $E = n Z N \div 10^8$ .

The winding is measured by *ampère-turns*, which represent the product of the current, in ampères, carried by the wire and the number of turns around the magnet limb.

The permeability of magnets of wrought iron and cast iron is given in the following table, which is according to Prof. Sylvan B. Thompson, where

H is magnetic force, or the number of lines per square inch of the field;

B is the flux density, the number of lines per square inch of the magnet section; and

u is the magnetic permeability, or the specific conductivity, for magnetic lines, of the material in the magnet.



TABLE 30.

WROUGHT IRON.			CAST IRON.		
B	H	u	B	H	u
30,000	10.2	2926	25,000	30	843
40,000	14	2857	30,000	53.5	445
50,000	20.9	2392	40,000	163	245
60,000	27.7	2166	50,000	447	112
70,000	40	1750	60,000	940	64
80,000	63	1368	70,000	1750	40
90,000	105	856			
100,000	245	407			
110,000	686	161			
120,000	1850	64			
130,000	4500	28			
140,000	7630	18			

The required ampere turns for the field winding are obtained from different formulas; the result of the following equation, while not exact, will give practical useful values:

$$S C = (B \times L \div 2.02) \times 1.25, \text{ where}$$

$S C$  are ampère turns (current in spirals),

$L$  is the length of the air gap in inches, and

2.02 is the number of ampère turns required to produce unit flux density in an air space one inch long,

1.25 is a coefficient to compensate for the drop of magnetic potential.

It may also be stated, as a general excitation rule, that dynamos up to 200 kilowatts output require exciting currents of 0.05 to 0.025 of their ampère output, and of 1000 kilowatts, 0.015 and less.

*The magnet section* may be determined from  $N \div B$ ;  $N$  is the total number of lines of force and  $B$  the flux density as per Table 30. It is common practice to make the magnet section 1.66 of the armature core of ring and 1.25 of drum type.

*The size of the field magnet conductor* is determined from the ampère turns, available winding space, and considerations of the conductor's resistance; the usually adopted density of field-coil current is limited to 2000 ampères per square inch. A convenient formula for the finding of field coil wire is

$$S C = e \div r, \text{ where}$$

$S C$  is ampère turns;

$e$ , the voltage at the terminals of the field coils; and

$r$ , the resistance of one turn of the wire.

*Resistance in copper wire* is as per the following table.

TABLE 31.—TABLE OF COPPER WIRE, SIZE, DIMENSION, WEIGHT, AND RESISTANCE.

Gauge B. & S. Brown & Sharpe	Mils diam.	Circular mils c.m. = d <sup>2</sup> .	Resistance in ohms per M ft.	Weight in lbs. per 1000 feet bare.
0000.....	460	211,600	0.04904	640
000.....	410	167,800	0.06184	508
00.....	365	133,100	0.07797	403
0.....	325	105,600	0.09827	320
1.....	289	83,690	0.12398	253
2.....	258	66,370	0.15633	201
3.....	229	52,630	0.19714	159
4.....	204	41,740	0.24858	126
5.....	182	33,100	0.31346	121
6.....	162	26,250	0.39528	99
7.....	144.3	20,736	0.491	63
8.....	128.5	16,384	0.6214	50
9.....	114.4	12,966	0.7834	39
10.....	101.9	10,404	0.9785	32
11.....	90.74	8,281	1.229	25
12.....	80.81	6,561	1.552	20
13.....	71.96	5,184	1.964	15.7
14.....	64.08	4,096	2.485	12.4
15.....	57.07	3,249	3.133	9.8

*Wire Formulas.*—c.m. is circular mils; R is resistance; W is weight; L is length.

$R = 11 \times L \div \text{c.m.}; \text{c.m.} = 11 \times L \div R; W = L^2 \div 30,000 R;$   
 $L = \text{c.m.} \times R \div 11; R = L^2 \div 30,000 W; \text{c.m.} = 1,000,000 W \div 3.03 L;$   
 $L = W \times R \times 30,000.$

*The armature* consists of the core and the conductor. The cores may be of the ring or drum shape; they are built up of laminated sheet iron or steel disks, commonly from 25 to 50 mils in thickness, the ratio of external to internal diameter of ring disks being 5:3. Drum armature cores are generally greater in diameter than they are long. The exterior disk perimeter is shaped for the convenient and safe placing of the conductors, the forms for conductor seats, or beds, being generally of the tooth or slot type; sometimes they are circular holes near the exterior periphery.

*The armature winding* consists usually of closed rectangular copper bar coils; the schemes of windings are of many different kinds,—parallel, series, or mixed groupings,—and in either of them the winding may be

of lap or wave. *The number of armature conductors* is ascertained from  $Z$  in  $E = n Z N \div 10^8$ ;  $E$  is the sum of the volts required for the exterior circuit and those lost in the armature; the latter are expressed by  $r_a C_a$ , where  $r_a$  is the armature resistance and  $C_a$  the armature current. *The size of the armature conductors* is found from the wire table, the practice being to allow a current density of 3000 to 4000 ampères per square inch of conductor. *The core section* is found from the determination of the winding and size of the conductors.

*The commutator*, sometimes called the *collector*, consists of bars and brushes. *The commutator bars* are usually of copper drop forgings and of a length equal to 1.2 inches per 100 ampères; their number is proportionate to that of the number of armature coils. *Armature brushes* are of woven copper wire gauze, or of spring copper strips, or they may be of carbons, but the use of the latter requires longer commutator bars. Mica is most generally used for the insulation of the commutator bars from the armature hub and from each other. *Brush holders* are the device by which commutator brushes are maintained in position; they are of various designs.

*Alternators* for large output, as required for the equipment of hydro-electric plants, are generally polyphase, of 25 to 60 cycles and of high voltage; owing to the greater economy and safety with which insulation for high voltage can be secured in a stationary rather than a moving mechanism, the high-voltage alternators for transmission service are of the revolving-field type, the armature being the stationary or fixed part.

*The field* is of the drum type, the magnet yoke being the hub and core, the limbs are secured to it radially; the poles are more numerous than in the continuous-current dynamo. The magnets are of like material and construction as described for the D. C. generators, but the flux density of the magnets is taken at a considerably lower constant, approximately 42,000.

*Excitation* is not practicable by the alternating current, and therefore is generally provided from a separate continuous-current dynamo; a larger inductive drop, due to the choking in armature coils and the demagnetization effect of the armature current, must be allowed than in the D. C. dynamo in determining the ampère turns of the field winding which is always compounded.

The relation of speed, number of poles and of frequency has already been noted; it is expressed by  $n = 0.5 p \times (N \div 60)$ , where  $n$  is the



frequency of alternations, the cycles or periodicity,  $p$  is the number of poles (not of magnets), and  $N$  the revolutions per minute, which is the usual measure of speed.

*The armature* of the revolving-field alternator is a cast-iron ring into which the laminated armature disks are dovetailed along the interior periphery; armature disks are somewhat thinner than those used in continuous-current dynamo armatures because of the higher voltage, usually from 0.012 to 0.008 inch. *The armature winding* is determined in like manner as that for D. C. generators, with proper consideration of the difference between the impressed and the actual volts which was presented in Article 94; the lap winding is preferable for high voltage.

ARTICLE 96. *Current Reorganization*.—The generated current is, as has been shown in Article 94, continuous or alternating, and the latter is monophasic or polyphasic; to change the generated current into any other kind of current, for the purpose of service, is characterized as reorganization of the current.

The generated continuous current may be changed to alternate current by the aid of a *motor-generator*, being a composite machine consisting of a motor supplied and operated by the generated continuous current, which in turn operates an alternator connected to it, its output being alternating current of mono- or polyphase. The generated alternating current may be rectified into continuous current by means of the same device, in which case the motor, of the induction type, is supplied with and operated by the generated alternating current and itself operates the continuous-current dynamo.

The same result may be obtained through the agency of a *rotary converter*, and by a shorter process, this machine being a continuous-current dynamo fitted with *collecting rings* in addition to the commutator. The alternate current passes by way of these rings into the armature coils and thence through the rotary and its commutator, and therefore issues as continuous current. The general design of these reorganizing machines is similar to that of generators, as presented in Article 95.


The phase of the current may be changed from mono- to polyphase, and *vice versa*, by the aid of a *phase transformer*, being of the type of a motor generator, in which the phase reorganization is brought about by the addition to the commutator of *slip rings* and by their appropriate connection to the armature conductors.

ARTICLE 97. *Current Transformation*.—When the voltage (E. M. F.) of any current is raised or lowered, it is said to be *transformed*. As may be inferred from the origin and characteristics of continuous current, as briefly presented in Article 94, this type of current can be transformed only by means of moving apparatus.

Continuous-current dynamos may be connected in series, in which case the voltage in the exterior circuit is the aggregate of the voltages of the D. C. dynamos thus connected; the only other process of transforming continuous current is by the agency of the *motor generator* mentioned in the previous article.

Alternating-current voltage may be raised or lowered by the aid of *static transformers*, in accordance with the following theory. It has been noted in Article 93 that when a conductor carrying current is passed around a closed magnetizable core, magneto-electric force is set up in the core; when the current in the coil is of the alternating kind, the induced magnetic force retains the characteristics of alternations both in direction and flux density, and by virtue of this condition magnetic stress is set up which becomes the source of an electro-motive force other than that of the current in the circuit which passes around the core. This induced electro-motive force acts in opposition to that of the magnetizing circuit and thus incites the latter to increased activity. If another conductor circuit is passed around the same core and is not connected with the magnetizing circuit, the increase of E. M. F. in the latter finds an outlet, or overflow so to speak, into this other conductor, and, under the constant pressure from its source, and the continued conflict between it and the back E. M. F. due to the magnetic stress set up in the core, it continues to pass into the second conductor.

This is the principle of alternating current transformation illustrated by Fig. 133, in which C is the core above mentioned, P is the magnetizing circuit called *the primary*, and S is the second circuit, being *the secondary*.

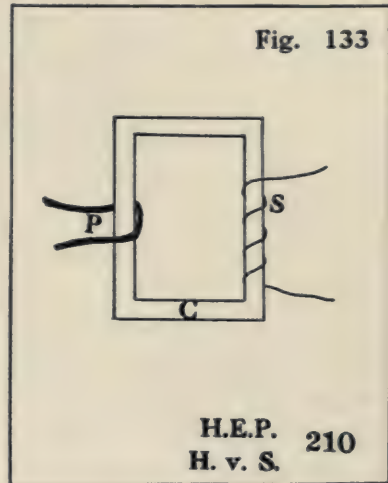



It may be pointed out that this current phenomenon may be likened to what transpires in the operation of a generator, that the primary is like the field and the secondary the armature, while mechanical motion is represented by the alternations, that is the continuous coming and going of flux density and direction, which is practically of the same effect, as far as cutting of magnetic lines in a space of time is concerned, as when the armature revolves and passes through the field in that manner; and from this it will at once be clear that no such phenomenon can occur with continuous current that, though the core would be magnetized, there would be no current in the secondary.

*Static Transformer Analysis.*—When the secondary is an open circuit, there is no transformation of E. M. F.; the magnetization of the core originates a back electro-motive force of practically the same value as that of the primary, being diminished only by the voltage required to overcome the resistance of the primary coil.

When the secondary is closed, a current is set up in it opposing that in the primary, its first effort being to demagnetize the core, and, since it is the expressed purpose of the primary to magnetize the core, a conflict or stress is set up which calls forth greater efforts of the primary to overcome the opposition of the demagnetizing influences, with the result that a distinct current passes into the secondary, being of like frequency and other characteristics as the primary excepting as to the E. M. F., as it is the purpose of the process to alter or transform this by raising or lowering the voltage of the primary to any desired in the secondary. The E. M. F. in these two circuits is proportional to the number of turns in each which pass around the core, which is analogous to the principle of field excitation explained in Article 95. In Fig. 133 the primary is shown of one turn while the secondary has four turns around the core; the voltage of the secondary will therefore be four times that of the primary, while the current, ampères, in the secondary will be one-fourth of those of the primary. In this case the voltage is raised by a *step-up transformer*, the lowering of the voltage would be secured through a *step-down transformer*, both being of the same design and construction excepting as to the respective winding of the primary and secondary coils, which represents the *ratio of transformation*. In this connection it should be noted that with like current density per conductor section unit (square inch) the ratio of transformation must be accompanied by



a corresponding adaptation of conductor cross-section; thus the conductor in the secondary of a step-down transformer must have an increased copper section over that of the primary which is inversely to the voltage drop.

*Static transformers* consist of the core, the windings, and the shell. The cores are of many different shapes, being generally formed of laminated iron disks; the windings are of insulated copper wire. There is no particular limit to the transformation ratio, the principal consideration in this regard being the heat which is generated in the transformer and may rise to a degree at which the insulations would suffer destruction; high-voltage transformers are therefore especially designed to keep this feature well insured by employing different methods of cooling the transformer and its various parts. Transformer coils are often placed in oil, which receives the heat and transmits it to the shell where it is readily radiated; the oil is also separately cooled by passing water through pipe coils immersed in it; again cooling is effected by passing cold air through the transformers, either by a blower or fan system.

*The losses in static transformers* may be kept very low by proper design and construction; they are due to the resistance of the secondary coils, to magnetic flux friction in the core, and to idle or *eddy currents* which are set up in the core; the aggregate need not exceed 2 per cent.

ARTICLE 98. *Current Transmission.—Theory.*—Electric energy may be conducted to any distance, as its flow will always continue from a high to a lower potential, but, as in transmission of energy of any form, work is constantly being performed during its passage through the conductor, and, at some point or other, the energy thus expended may become so great a part of the impressed volume that its transmission, under such conditions, represents a waste rather than a gain.

The work of the current during its transmission is that of overcoming the conductor's resistance to its free passage; just as the flow of water through a pipe is impeded by the roughness of the pipe's perimeter or its change of section, which is overcome by the expenditure of head, so the transmission of electric energy is made possible only by the overcoming of the conductor's resistance, which is accomplished by the expenditure of E. M. F. By Ohm's law  $C = E \div R$  and  $E = C R$  and

$R = E \div C$ , from which  $R$ , the resistance in any length of a certain conductor, may be ascertained from  $l \times r \div cm$ , where

$l$  is the length of the conductor in feet;

$r$  is the resistance unit, being the resistance of one foot of copper wire of one mil section (one mil foot), which = 10.8 ohms, but is taken as 11 ohms, whereby the irregularities of the wire's section and the faults of joints are compensated for;

$cm$  stands for the area of the conductor's section in circular mils; therefore

$R = 11 \times l \div cm$ , and, inserting this in above equation for  $R$ ,

$R = E \div C$ , it becomes  $11 \times l \div cm = E \div C$ , in which

$C$  is the current (ampères) which is to be delivered for service,

$E$  is the electro-motive force to be expended in overcoming the resistance of the conductor, being termed the transmission *loss* or the *voltage drop*.

*Aluminum wire* is well adapted for the purpose of transmission conductors; the ohmic resistance coefficient of aluminum is 17 per mil foot instead of 11, the coefficient for copper, and this value must be inserted in above formula when aluminum wire is being investigated instead of copper wire.

Since, from above formula, the resistance may be found for any size of conductor, so may the size be determined from it to transmit a fixed current at a given line voltage over a known distance; that is, from above

$$cm = l \times 11 \times C \div E \text{ for copper and}$$

$$cm = l \times 17 \times C \div E \text{ for aluminum.}$$

The weight of 1000 feet of 1000 cm copper wire is approximately 3 lbs. The weight of 1000 feet of 1000 cm aluminum wire is approximately 1.5 lbs. By symbolizing 1000 feet of the conductor's length as  $L$ , the weight of the conductor may be expressed from the foregoing formula by

$$W = L^2 \times 33 \times C \div E \text{ for copper conductors, and}$$

$$W = L^2 \times 23.5 \times C \div E \text{ for aluminum conductors.}$$

This refers to a single conductor.



From these expressions and from formerly discussed current characteristics, it is apparent that  $E$  is the principal factor controlling the value of  $W$ , for instance when the ratio of percentage of line drop from the impressed electro-motive force is fixed, the doubling of the impressed voltage will halve  $C$ , double  $E$ , and reduce  $W$  to one-fourth; therefore, *the weight of the transmission conductor for given length, current, and drop varies inversely as the square of the impressed voltage*, and for given current and drop and impressed voltage in direct proportion to length of transmission, *the weight remains constant*; while for given current and drop *the weight increases as the square of the length*.

For the purpose of hydro-electric practice all current transmission factors may be determined from these formulæ with sufficient accuracy to estimate the transmission conductors and their cost, but many refinements enter the problem when considered from a scientific stand-point. Diagram 16, appearing in connection with Article 28 in Part I. of this book, has been calculated for copper wire from above formula and is correct, within its scope, for the purpose of estimating the wire quantity.

*Transmission of continuous* and of single and two-phase alternating currents is by two wires, all the current passing over every part, while three-phase alternating current may be transmitted by three conductors, each of which carries the current of its particular phase. In the above formulæ, for determining  $cm$  or  $W$  of transmission-line conductors, the length, when considering continuous and single and two-phase alternating currents, or in two-conductor circuits, is the developed length of the conductors or double the transmission distance, while for three-phase alternating current transmission the length is equal to the transmission distance. In finding the weight, therefore,  $L$  is multiplied by four for two-conductor lines and by three for three-conductor lines; for this reason a three-conductor transmission line (of three-phase current) requires only 75 per cent. of the weight of copper needed in a two-conductor line of the same energy.

Of the current symptoms briefly outlined in Article 94 those specially applying to current transmission are: *inductance*, which is the absorption of electric energy while producing a magnetic field around the conductor, or the setting up of an electro-motive force opposite to that impressed in the alternate current conductor, resulting in voltage drop at the line terminal; *capacity*, being the reactance of the transformation of alter-



nating current and resulting in an increase of current in the circuit; and *resonance*, which is the neutralization of inductance and capacity with the effect of a considerable rise in the line voltage. The effects of all these in transmission are best met by an addition of not less than five per cent. to the cm or W of the transmission conductor as found from the quoted formulæ.

ARTICLE 99. *Current Regulation*.—This subject, like the preceding electrical topics, will be treated herein only to the extent of presenting the apparatus and the purpose which it serves, as it may have to be considered in connection with the planning of the hydro-electric operating plant and its equipment and for the preparing of the estimate covering these.

Regulation of current generating is, as has been pointed out in Articles 94 and 95, first secured by the turbine governor and second by field excitation, the first maintaining, as near as practicable, constancy of mechanical speed, the second of electro-motive force or pressure. The former is practically automatic, but the latter needs more or less personal attention, depending upon the current reorganization and transformation methods and means, the character of the current service, and the fluctuations of the loads. At any rate certain apparatus is required to indicate output characteristics and detect irregularities, while others are needed to furnish ready correction for these.

The purpose of regulation is generally to maintain constancy of pressure, voltage, in the exterior circuit, which, in the case of hydro-electric plant output, is the transmission line. At the generator, as has been noted, this is principally accomplished by regulating the exciting current, as this is the origin of the electro-motive force; on the line, regulation may be secured through static transformers with alternating current. Transformation is generally effected through *a bank of* transformers of equal units connected in series, but, as the cause of the fluctuations is mainly to be found at the service end of the line, regulation is best arranged for at this terminal, the substation.

*Regulating apparatus* may be classified into switches, testing instruments, and correctors, most of which are collected on the *switchboard*, which consist of marble or slate tablets or *panels* placed against a suitable frame in the generating room and in the substation. The circuit conductors are led to the back of the switchboard panels, the latter being

perforated at the places where the switches or apparatus are to be secured so that they can be connected with the conductor circuits.

*Switches*, or circuit breakers and closers, are devices by which conductor circuits are closed or opened; they are of various designs, all aiming to *make or break* the current by avoiding any arcing across. High-voltage switches are therefore necessarily of special designs and construction, and wherever practicable the switching of such currents is arranged for on the low-voltage side of the circuit. Circuit breakers may be of air or *oil break* type, the latter being always employed in high-voltage practice, and, when the voltage is very high, 20,000 and more, oil circuit breakers are operated by secondary pneumatic or electric power devices and are removed from the vicinity of any of the other electric equipment.

Testing instruments comprise *ammeters* (ampèremeters), which are of the galvanometer type, indicating the current strength by the deflection of a magnetic needle placed inside or over a coil of insulated wire through which the current to be measured is passed. *Voltmeter* is an instrument similar to the ammeter, of electro-magnetic type, its purpose being to indicate the voltage of the current.

*Wattmeter* is the third of this class of testing instruments, indicating the watts; though voltage and ampères are indicative of the watt output of the continuous current, this is not necessarily the case with the alternating current, where the product of the volts and amps represents the *apparent watts*, while the wattmeter indicates the *effective watts*.

*Phasemeters* indicate the *power factor* of the current, which is the ratio of effective and apparent watts, or the *phase difference*. *Synchronizers* or *phase indicators*, as their name implies, indicate when synchronism, that is union of frequencies in the alternating current, exists between different alternators which are to be operated in parallel.

*Pilot lamps* are connected across the dynamo terminals for the ready indication of the approximate pressure by the degree of their incandescence.

*Ground detectors* are required for detecting and measuring grounds and leaks.

*Correctors* are *lightning arresters*, which may be placed at the generating plant, along the transmission line, and at the substation, for the purpose of diverting lightning charges. There are various types of these;



one in common use consists of a number of air gaps between conductor plugs set in a porcelain block. *Guard wires* are also employed for lightning diversion from transmission lines; they are metallic circuits (iron) grounded at intervals of 1000 feet.

*Choking coils* are of copper wire so wound on or around iron core pieces as to possess high self-induction when used on alternating circuits; their purpose is to obstruct or *cut off* alternating current with a smaller loss of energy than if it were used as ohmic resistance.

*Booster* is a dynamo connected to a separate circuit for the purpose of raising its voltage above that of the other system of which it forms a part.

*Rheostats* are adjustable resistance coils.

ARTICLE 100. *Electric Generating Plant*.—The character of the generating equipment is to be determined with a view of securing high efficiency of resourceful output at reasonable first and lowest practicable maintenance, depreciation, and operating cost.

The matters to be determined are:

- (a) the kind of current to be generated,
- (b) the generator voltage,
- (c) the generator units,
- (d) the mechanical power application to generators and exciters,
- (e) the types of generators, exciters, and governors,
- (f) the arrangement of the apparatus;

the controlling features in this quest are:

- (g) the distance to the current market,
- (h) the character of the current service,
- (i) the available hydraulic and mechanical factors, and
- (j) the output efficiency, time delivery, and cost of apparatus.

*The current to be generated* must be determined from the character of the current service and from the market distance. Continuous current is largely employed for arc lighting, exclusively for electrolithic operations and accumulator charging, and is preferable, at the present state of the practice, for power service in which the fluctuations of the load are sudden and excessive, such as electric traction and lifting. The alternating current is largely used for incandescent lighting and mechanical



power application for factory and shop machinery and tools, pumps and elevators.

The influence of the distance to the market is most potent with a transmission system, and, as far as it has a bearing upon the choice of the kind of current to be generated, it is largely a question of economics. The principal items in the cost of the transmission plant are the conductors, and the weight of these, as has been noted, with fixed output, distance and line drop, depends entirely upon the impressed or generating voltage. The voltage of continuous-current generators is limited, by reason of the commutator device, to approximately 2000 volts; if several D. C. generators are connected in series the voltage sent into the exterior circuit will be the aggregate of all the generators thus connected. Alternators may be designed to generate at high voltages, 200,000 being now altogether practicable. Transformation of continuous-current voltage is practicable only by the aid of motor generators, while that of alternating current is accomplished through static transformers. All these limitations of the continuous current point to the alternating current as preferable when transmission to a considerable distance is required, even though the service calls for continuous current only.

*Example 1.*—An electrolytic plant is to be furnished 1000 kilowatts of continuous current at a voltage of 250 from a hydro-electric power plant one mile distant; the drop or loss of pressure in transmission is to be kept within 5 per cent. If continuous current is generated at a voltage of 275 and transmitted at this voltage to the electrolytic plant, the generating plant will consist of one or two D. C. generators and the transmission line; the conductors for the latter are two strands of wire of aggregate weight found from  $W = 4 L^2 \times 33 \times C \div E$ .

L is in 1000 feet units, the length of a transmission mile of conductors being taken at 5400 feet to compensate for the sag between supports;

C is the current in amperes to be delivered at the electrolytic plant, being  $= 1,000,000 \div 250 = 4000$ ;

E is the line voltage drop  $= 275 \times 0.05 = 14$ ; therefore

$W = 156.64 \times 33 \times 4000 \div 14 = 1,470,857$  lbs.

If alternating current is generated at 2300 volts, which is a standard type alternator, and transmitted at this voltage to the customer in ques-

tion, one mile distant, with a line drop of 5 per cent., the generating plant will consist of one or two alternators, the transmission line, and a rotary converter by which the current is reorganized to the required continuous current. The conductors for this line will consist of three strands of wire, the current being of the three-phase type, and the weight of the line wire is found from  $W = 3 \times L^2 \times 33 \times C \div E$ , in which

$C = 1,000,000 \div 2185$  and  $E = 2300 \times 0.05$ ; therefore

$W = 3 \times 29.16 \times 458 \div 115 = 11,500$  lbs., to which should be added for induction 5 per cent., making the total weight = 12,075 lbs.

The alternator may generate at a higher voltage without the necessity of raising the line voltage, and thus the weight of the required conductors may be still further reduced; however, it is clear that this plant should generate alternating current.

*Example 2.*—An electric power crane unloading iron ore and fuel from vessels is to be supplied with 500 kilowatts of continuous current at a voltage of 400 from a hydro-electric power plant half a mile distant. For continuous current the generating plant would consist of one D. C. generator and the transmission line, and the weight of the required conductors is again found from

$$W = 4 \times 2.600^2 \times 33 \times 1259 \div 20 = 55,688 \text{ lbs.}$$

If alternating current is generated for this service, the plant will consist of the alternator, the line, and a rotary converter; the current may be generated at a voltage of 2300 and thus transmitted without step-up transformers being added; the line would consist of three strands of wire and the weight from

$$W = 3 \times 2.600^2 \times 33 \times 234 \div 115 = 1364 \text{ lbs.,}$$

to which should be added 5 per cent., making the total conductor weight approximately 1432 lbs., being 54,256 lbs. less than required for the continuous-current line. The question to be decided is, the comparative cost of this quantity of conductor and that of the rotary, to which the operating and maintenance cost of the rotary may have to be added



unless the customer will take over its operation. From this it appears that the distance limit at which continuous-current generation, for continuous-current service taking up the entire output, is to be preferred to alternating-current generating and current reorganization, lies inside of the one mile for outputs of less than 1000 kilowatts, and that for greater distances or larger outputs the alternating current proves the more economical for the generating plant.

With the current decided, the next question is as to the *phase* and the *frequency*. A great deal might be said on this topic as having a bearing one way or the other, but, after all, the safest guide may be found in practice, which, in this country at least, at present is largely in favor of the three-phase current at the generating end. The important influence of phase characteristic on the transmission-line conductor has already been noted and distinctly points to the preference of the three-phase current.

The question of frequency is not so positively settled, as it depends largely upon the character of the current service. When the bulk of the current is intended for power service, the lower frequency of 25 cycles lays claim to several advantages over a higher one. The cost of rotary converters rises with the frequency, as it requires more poles and more costly armature construction than for low frequencies; on the other hand, the cost and weight of static transformers is greater for low than for higher frequencies, and therefore as far as the cost item is concerned the most economical mean between transformers and reorganizers should readily offer the solution. When the service load is fairly distributed between lighting and power production, the 60-cycle current appears to be preferable over that of lower frequencies.

The next current characteristic to be decided is the *generator voltage*, and for transmission duty there is little doubt that every desideratum points to the highest practicable. Alternators of high voltage should be less costly than low-voltage generators plus step-up transformers, though their depreciation and maintenance may be somewhat greater. However, the factor of transformer loss, which with high-generator voltage may be avoided, carries considerable weight in the summing up. For transmission distances up to ten miles it will generally be found more economical to generate at a sufficiently high voltage to make step-up transformers unnecessary, and this distance may even be doubled if the alternator voltage comes up correspondingly.



*Generator units* are more largely to be determined by the hydraulic conditions than any other factor. It will now be fully realized that high generator speed is much to be desired, and if the drive is to be by direct coupling to the turbine shaft the choice of the generator unit will generally not be doubtful. As a rule, it is advisable to have duplicate units of like capacity to meet unforeseen emergencies by which any of them may be put temporarily out of commission, and, with this important proviso and the desideratum of high speed, the units are preferably of the largest practicable output, that is within the limits of economical standard designs.

This leads to the fourth point to be determined in connection with the composition and character of the generating equipment, *the mechanical power application* for generators and exciters. There exists at the present day a certain almost hysterical clamor for direct-connected apparatus; ostensibly it is influenced by the desire to make the greatest showing of economical energy utilization, to avoid the loss due to other than direct drives, while frequently the stickling for this arrangement results in far greater energy waste, because the most suitable generating equipment is barred out, and in this manner a rational study and analysis of the opportunity is overshadowed by the desire to have things "up to date," at least as far as appearances go. There are quite a number of the present important hydro-electric plants which might have been bettered by several per cent. of output if equipment were belt driven instead of being direct connected. At any rate direct-connected apparatus may not always be the most economical (or, rather, efficient) solution of this problem. Speed lies at the root of it all, and by this the size, voltage, and cost of apparatus are fixed; a balancing of the value of the lost energy through belt drive, as compared with direct connection, against the difference in cost of the generating and transmission plant which is required for either programme, will, as a rule, plainly point to the one to be preferred. There is much less to be said in favor of gear-driven equipment, which, however, comes under consideration with low-head developments and may then be the only solution of this question of mechanical power application.

*Exciters* are preferably driven by separate turbine units. *The type of the generator equipment* should generally be decided in favor of that offered by the lowest competitive tender who guarantees prompt delivery of the specified apparatus. All of the leading American manufacturers of electric dynamos produce equally reliable and efficient machines, and,

when the desired characteristics and output efficiencies are clearly specified, as will be outlined in the last chapter dealing with specifications, this question should be satisfactorily solved by adopting approved business methods.

*The arrangement of the equipment* in the power station must be made with ample allowance of operating space around every machine and accessory apparatus, good light should be available for switchboards, and the station should be planned not merely to hold the outfit but also to move it about, in and out, without interfering with operations, and, finally, possible additions must be taken into consideration, as a paying plant is also a growing one. Diagram 40 gives the approximate dimensions of alternators of different output and speeds at 2300 volts, which is standard and well adapted to most conditions.

The following table gives a list of generators, their capacity and speed, which are of standard types with American manufacturers, and can therefore be obtained within reasonable delivery periods and on competitive tenders.

TABLE 32.—STANDARD GENERATORS, ALTERNATORS, 2 AND 3 PHASE, 2300 VOLTS AND UP.


Drive.	K.W.	Frequency.	Poles.	Speed.	Drive.	K.W.	Frequency.	Poles.	Speed.
Coupled.....	100	69	24	300	Coupled.....	225	60	12	600
Coupled.....	100	60	8	900	Coupled.....	250	60	36	200
Coupled.....	105	60	28	257	Coupled.....	250	60	32	225
Coupled.....	110	60	6	600	Coupled.....	250	60	28	257
Coupled.....	115	60	8	900	Coupled.....	250	60	24	300
Coupled.....	125	60	32	225	Coupled.....	250	60	16	450
Coupled.....	125	60	26	277	Coupled.....	250	60	12	600
Coupled.....	120	25	6	500	Coupled.....	275	60	16	450
Coupled.....	120	25	4	750	Coupled.....	275	60	12	600
Coupled.....	150	60	32	225	Coupled.....	300	60	72	100
Coupled.....	150	60	26	227	Coupled.....	300	60	48	150
Coupled.....	150	60	20	360	Coupled.....	300	60	36	200
Coupled.....	150	60	14	514	Coupled.....	300	60	32	225
Coupled.....	150	60	12	600	Coupled.....	300	60	28	257
Coupled.....	150	60	8	900	Coupled.....	300	60	24	300
Coupled.....	175	60	36	200	Coupled.....	300	60	18	400
Coupled.....	175	60	12	600	Coupled.....	300	60	16	450
Coupled.....	180	60	8	900	Coupled.....	300	60	12	600
Coupled.....	200	60	36	200	Coupled.....	325	60	36	200
Coupled.....	200	60	32	225	Coupled.....	330	50	16	375
Coupled.....	200	25	6	500	Coupled.....	350	60	16	450
Coupled.....	200	50	12	500	Coupled.....	350	60	12	600
Coupled.....	200	60	14	514	Coupled.....	360	25	8	375
Coupled.....	200	60	12	600	Coupled.....	360	25	6	500



TABLE 32.—STANDARD GENERATORS, ALTERNATORS, 2 AND 3 PHASE, 2300 VOLTS  
AND UP.—*Continued.*

Drive	K.W.	Frequency.	Poles.	Speed.	Drive.	K.W.	Frequency.	Poles.	Speed.
Coupled.....	360	25	4	750	Coupled.....	700	60	18	400
Coupled.....	375	60	30	240	Coupled.....	720	25	8	375
Coupled.....	380	60	16	450	Coupled.....	750	60	60	120
Coupled.....	380	60	12	600	Coupled.....	750	60	48	150
Coupled.....	400	25	20	150	Coupled.....	750	60	40	180
Coupled.....	400	60	36	200	Coupled.....	750	60	36	200
Coupled.....	400	60	28	257	Coupled.....	750	60	24	300
Coupled.....	400	60	24	300	Coupled.....	750	60	20	360
Coupled.....	400	60	16	450	Coupled.....	750	60	18	400
Coupled.....	420	60	24	300	Coupled.....	800	60	36	200
Coupled.....	420	25	18	167	Coupled.....	800	60	24	300
Coupled.....	420	25	6	500	Coupled.....	900	60	56	150
Coupled.....	425	60	30	240	Coupled.....	900	60	48	128
Coupled.....	425	50	16	370	Coupled.....	900	60	40	180
Coupled.....	450	60	60	120	Coupled.....	900	60	20	300
Coupled.....	450	60	48	150	Coupled.....	900	60	16	450
Coupled.....	450	60	40	180	Coupled.....	1000	60	44	163
Coupled.....	450	60	24	300	Coupled.....	1000	60	36	200
Coupled.....	450	60	20	360	Coupled.....	1000	60	28	257
Coupled.....	450	60	36	200	Coupled.....	1000	60	24	300
Coupled.....	450	60	16	450	Coupled.....	1000	60	20	360
Coupled.....	450	60	12	600	Coupled.....	1000	60	18	400
Coupled.....	500	25	24	125	Coupled.....	1000	60	16	450
Coupled.....	500	30	20	180	Belted.....	100	60	8	900
Coupled.....	500	60	32	225	Belted.....	110	30	6	600
Coupled.....	500	60	26	257	Belted.....	125	25	6	500
Coupled.....	500	60	20	360	Belted.....	150	60	12	600
Coupled.....	500	60	16	450	Belted.....	200	25	6	500
Coupled.....	500	60	12	600	Belted.....	150	60	12	600
Coupled.....	500	60	6	1200	Belted.....	200	25	6	500
Coupled.....	540	60	36	200	Belted.....	200	50	12	500
Coupled.....	540	25	12	250	Belted.....	200	60	12	600
Coupled.....	540	25	10	300	Belted.....	250	60	20	300
Coupled.....	540	60	20	360	Belted.....	300	60	16	450
Coupled.....	540	25	8	375	Belted.....	300	25	6	500
Coupled.....	540	25	4	750	Belted.....	330	50	16	375
Coupled.....	550	40	10	480	Belted.....	425	50	16	375
Coupled.....	550	60	12	600	Belted.....	450	60	20	360
Coupled.....	600	60	36	200	Belted.....	540	25	8	375
Coupled.....	600	60	32	225	Belted.....	540	60	20	360
Coupled.....	600	60	20	360	Belted.....	550	40	10	480
Coupled.....	600	25	8	375	Belted.....	600	33	10	400
Coupled.....	600	50	16	375	Belted.....	600	25	8	375
Coupled.....	600	33	10	400	Belted.....	600	50	16	375
Coupled.....	600	60	18	400	Belted.....	690	60	20	375
Coupled.....	600	60	16	450	Belted.....	650	60	20	360
Coupled.....	600	60	12	600	Belted.....	750	60	24	300
Coupled.....	650	60	20	360					
Coupled.....	700	60	20	360					



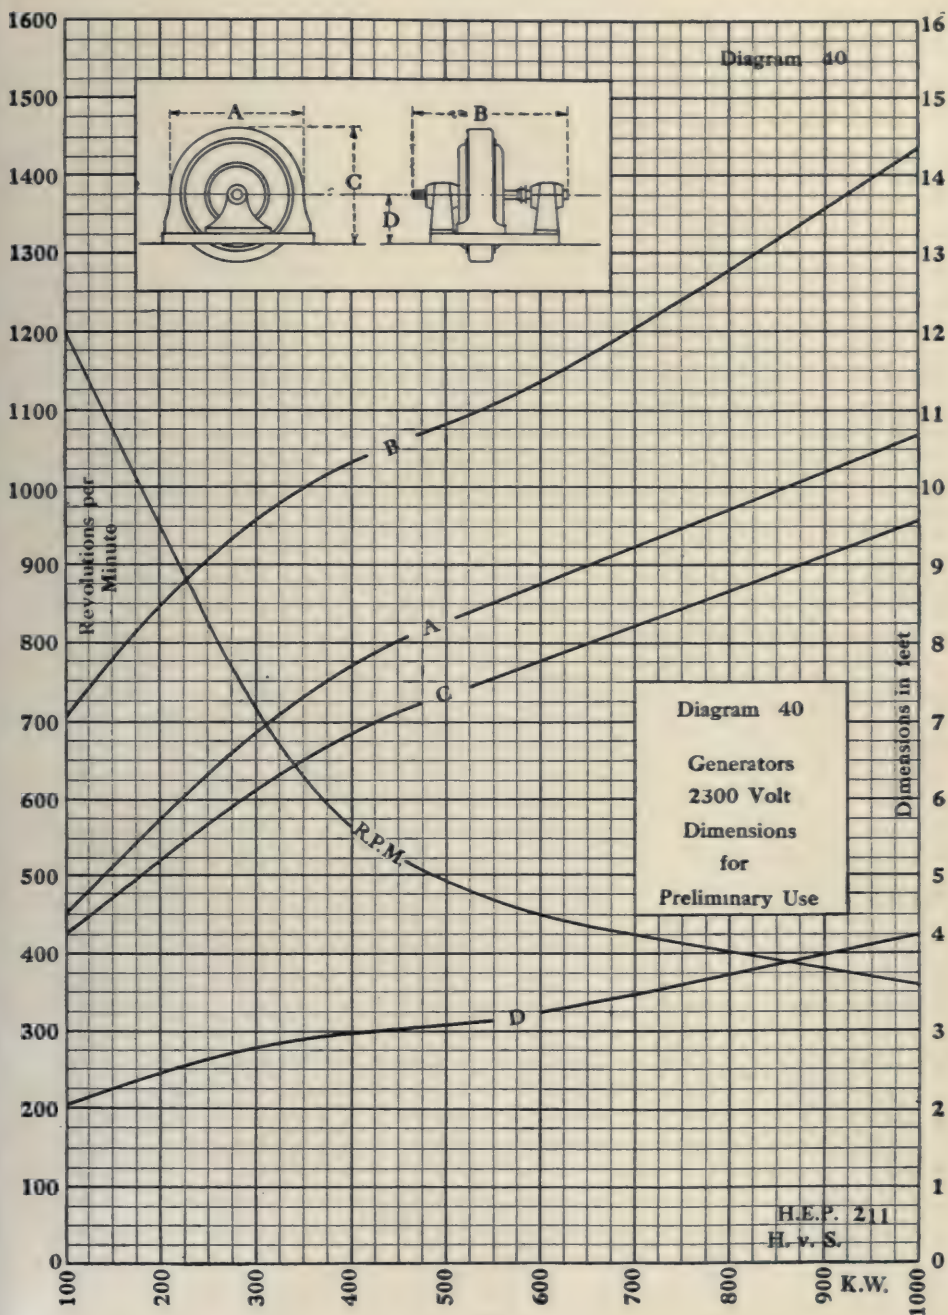

ARTICLE 101.—*The transmission plant equipment* consists of transformers, the line, and its terminal, the substation.

When the transmission voltage is to exceed that of the generator, which is generally the case with transmission distances exceeding fifteen miles, step-up transformers are required at or near the generating plant, since it is preferable to locate them in a separate room or even building from that where the generators are operating; and if the line voltage exceeds that at which the current is to be served, which will almost always be the case, step-down transformers become necessary at the terminal of the line, and the place where they are located is called the substation. It may be noted here that current service contracts are frequently made for the delivery of the current at line voltage to the customer's step-down transformer; this is especially probable when such delivery is of a large or major portion of all of the transmitted current, and if all of it is disposed of in this manner there is no need of a substation.

It is understood therefore that the transformer equipment may consist of step-up and step-down installations, or of the latter only, or that none may be required as a part of the power-plant equipment.

Transformers are of the same design and construction for either service, differing only as to the winding of the primaries and secondaries, as has been explained in Article 97.

*The line* consists of the supports, conductors, and fastenings.

*The supports* may be timber, concrete, or iron poles or posts, or steel-framed towers, their choice depending upon (a) the height of the conductors above the surface, (b) the length of the spans between supports, and (c) the cost of available material.

The line *conductor* may be of copper or aluminum. The weight of aluminum wire is about 0.47 that of copper wire of the same length and resistance, and when the cost of aluminum is therefore  $1 \div 0.47 = 2.13$  that of copper wire or less the aluminum conductor will cost no more than copper conductor. The resistance of one mil foot aluminum wire is 17.0 ohms.

Some of the advantages of aluminum wire for the use of transmission line conductors are that sleet will not readily adhere to it, on account of its greasy surface; it is more economically transported and handled, on account of its lesser unit weight. Some of the disadvantages are that it cannot be readily soldered, on account of the greasiness of the surface,



and therefore joints are less conveniently made than with copper wire; also its surface is more easily injured in handling, dragging over rough ground or stones, because of its greater softness than that of hard drawn copper wire; and, as the melting point of aluminum is much lower than that of copper, there is more danger of its being fused by arcing across conductors.

The following table gives some of the characteristics of aluminum wire which are to be considered in connection with its use for electric transmission line conductors.

TABLE 33.—ALUMINUM WIRE.

Elastic limit 14,000 lbs. per square inch. Ultimate strength 26,000 lbs. per square inch. Resistance quoted is at 75° F. Resistance per mil foot = 16.949 ohms.

Size.	Area in sq. inch.	Lbs. per 1000 ft.	Feet per pound.	Ohms per 1000 feet.	Ultimate strength in pounds.
500,000 cm. ....	0.3930	460	2.041	0.03082	10,210
450,000 cm. ....	0.3540	414	2.415	0.03766	9,190
400,000 cm. ....	0.3141	368	2.718	0.04237	8,170
350,000 cm. ....	0.2750	322	3.106	0.04843	7,150
300,000 cm. ....	0.2360	276	3.623	0.05652	6,130
250,000 cm. ....	0.1965	230	4.348	0.06780	5,110
0000 B. & S. ....	0.1661	194.7	5.733	0.08010	4,320
000 B. & S. ....	0.1317	154.4	6.477	0.10100	3,430
00 B. & S. ....	0.1045	122.4	8.165	0.12740	2,720
0 B. & S. ....	0.0829	97.1	10.300	0.16050	2,150
1 B. & S. ....	0.0657	77.0	12.990	0.20250	1,710
2 B. & S. ....	0.0521	61.0	16.400	0.25540	1,355
3 B. & S. ....	0.0413	48.5	20.620	0.32200	1,075
4 B. & S. ....	0.0327	38.5	25.970	0.40600	852

*The height* at which line conductors should be strung will principally be determined by legal requirements, the general provisions being from 30 to 35 feet high when paralleling highways or crossing other aerial wire lines, and 20 to 25 feet when strung across country. It is therefore not always an economical programme to secure transmission line locations along public highways, as the cost of the higher supports may be much greater than the cost of private right of way across country, the latter affording the additional important advantage of guaranteeing control over the line and therefore making it practicable to protect it against interference from the public.

*The length of the span* is determined from the weight of the conductor and the consequential tension which is developed in its section, and the effects due to the temperature, wind, and sleet. Theoretically the sus-



pended wire takes the form of a catenary between supports, but it is altogether permissible to discuss the subject by considering it a parabola, whereby it is much simplified without the introduction of any considerable error.

If  $L$  is the length of the span,  $s$  the sag of the wire, its deflection from the horizontal,  $w$  the weight of the wire per foot length, then  $T$  the tension  $= L^2 \times w \div 8s$  or  $s = L^2 \times w \div 8T$ ; therefore the tension of a given wire varies inversely as the sag for the fixed span length, and for given tension and wire the sag increases as the square of the span length.

To prevent collision of the wires of a multiconductor line the sag should not be greater than twice the lateral distance between conductors.

*The tensile strength* of hard drawn copper is 17 tons.

*The tensile strength* of aluminum is 16 tons.

The expansion coefficient for copper wire is 0.0000096 per degree F.

The expansion coefficient for aluminum wire is 0.0000128 per degree F.

*The sag* of the span may be found from these values.

*Example.*—0000 copper wire is to be strung in spans of 120 feet length; then from above formula

$s = L^2 \times w \div 8T$ , where  $L = 120$ , and  $w$  from copper wire table  $= 0.64$  lb.  
 $s = 120^2 \times 0.64 \div (8 \times 5460) \times 4$ ; this latter factor represents the safety factor for normal conditions.

$s = 0.81$  foot or 9.75 inches.

This represents the minimum admissible sag in order to avoid raising the tensile stress above the basic safety factor of four, and from this the sag which is necessary to compensate for contraction due to low temperatures must be found.

If this line is to be constructed in the Northern latitudes, in Michigan, Wisconsin, or Canada, a low temperature—minus  $20^\circ$  F. or lower—must be provided for, and for this condition the proper sag is to be found from the actual length of the conductor in the span which is based upon the minimum sag as shown above. Thus,

$$\begin{aligned} Lw \text{ (the length of the conductor in the span)} &= L + 8s^2 \div 3L, \\ \text{or } Lw \text{ for above example} &= 120 + 8(0.81^2) \div 360 \\ &= 120.0146 \text{ feet.} \end{aligned}$$

If we assume the normal summer temperature at 65° F., then the difference in temperature to be compensated for by increased sag will be 85°, and the contraction of the copper wire will be

$= 85 \times 0.0000096 \times 120.0146 = 0.098$  foot, which must be added to the length  $L_w = 120.0146 + 0.098 = 120.1026$  feet.

The sag will be, from  $L_w = L \times 8 s^2 \div 3 L$  or  $s = \sqrt{3 L (L_w - L) \div 8}$ , for this case  $s = \sqrt{360 (120.1026 - 120) \div 8} = 30$  inches.

*The safety factor* in transmission line wire calculations should be adjusted to the climatic condition of the locality; if the prevalent wind movements are ordinary and no sleet storms to be expected, the factor of four above used is sufficient for practical purposes; where high winds prevail, such as should be credited with pressures of 40 and 50 lbs. per square foot, or if sleet storms are of yearly occurrence, the factor must be raised to six, and, in specially exposed locations, as for instance along the shores of the ocean or the Great Lakes, the factor should be taken at eight.

For aluminum wire the same method of calculating the span length and the sag applies, provided the proper values of weight, tensile strength, and expansion coefficient are substituted.

The ordinary practice is to make spans of a timber-pole line from 90 to 150 feet long; 106 feet is taken very commonly, requiring fifty poles to the mile.

Steel-framed towers are chiefly used when the transmission line is of double conductor circuits, which is always recommendable with high line voltage and large output plants; such towers are fifty feet and higher and the spans correspondingly longer.

Watercourses or wide swamps may have to be crossed on trestles. Submarine cables are rarely applicable in high-voltage transmission; they require an extra set of step-up and step-down transformers, as they are not reliable for any higher pressure than about 3000 volts.

*Supports* for a height of line conductors up to 35 feet may be of timber poles; they should be set one-seventh of their length into the ground, the buried portion and one foot above the surface being well tarred, and the top wedge shaped and painted. *Concrete poles* are now being constructed economically and make excellent line supports.



*Steel-framed towers* may be of various designs; some are shown on Fig. 134.

*Conductor fastenings* consist of cross-arms, insulator pins, and insulators.

*Cross-arms* (Fig. 134) are rectangular pieces of timber  $3\frac{1}{4} \times 4\frac{1}{4} \times 4$  to 5 feet long, or  $3\frac{3}{4} \times 4\frac{3}{4} \times 6$  to 8 feet long. They are preferably of yellow pine which is kiln dried and well boiled in linseed oil, and they are slightly rounded on top the better to shed the rain. Cross-arms are secured to the poles by being gained  $1\frac{1}{2}$  inches and fastened with a  $\frac{3}{4}$ -inch round wrought-iron screw bolt passing through the cross-arm and the pole. The longer cross-arms should be further secured to the pole by two diagonal braces, which, for high voltage lines, should be of hard wood instead of iron straps. The upper cross-arm is placed about two feet below the pole top, and the others are spaced in accordance with the distance required between conductors, being from two to three feet.


*Insulator pins* (Fig. 135) form a very important part of the line. They carry the insulators, to which the conductors are secured, and are fastened to the cross-arms; they have to take up and resist all the lateral strain to which the conductors are exposed, and they also form the only available path for current leakage. Therefore they must be of suitable material, sufficient section, securely connected to their supports, the cross-arms, and should be well insulated. Insulator pins are preferably of oak or locust; they should not be of iron where high voltages are to be transmitted. Small section pins are to be avoided; they should be not less than  $2\frac{1}{2}$  inches in diameter and 10 inches long, and as much heavier in section and longer as the weight of the conductor, which is to be secured to the pin, requires. Insulator pins must be thoroughly dried and well boiled in linseed oil. Pins are set into holes bored in the top faces of cross-arms and secured by a treenail driven through the shank of the pin and the cross-arm; spikes should not be used for this purpose. The top end of the insulator pin is threaded for about three inches to receive the insulator.

*Insulators* (Fig. 135) carry the conductor. They are made of glass, porcelain, or earthen-ware, consisting of one or more superposed bells (petticoats so called), their purpose being to shed the rain away from the insulator pin. Insulators should be tested for the voltage to be transmitted and for their breaking strength. The conductor passes over the



Fig. 134

Transmission line  
Towers & Poles

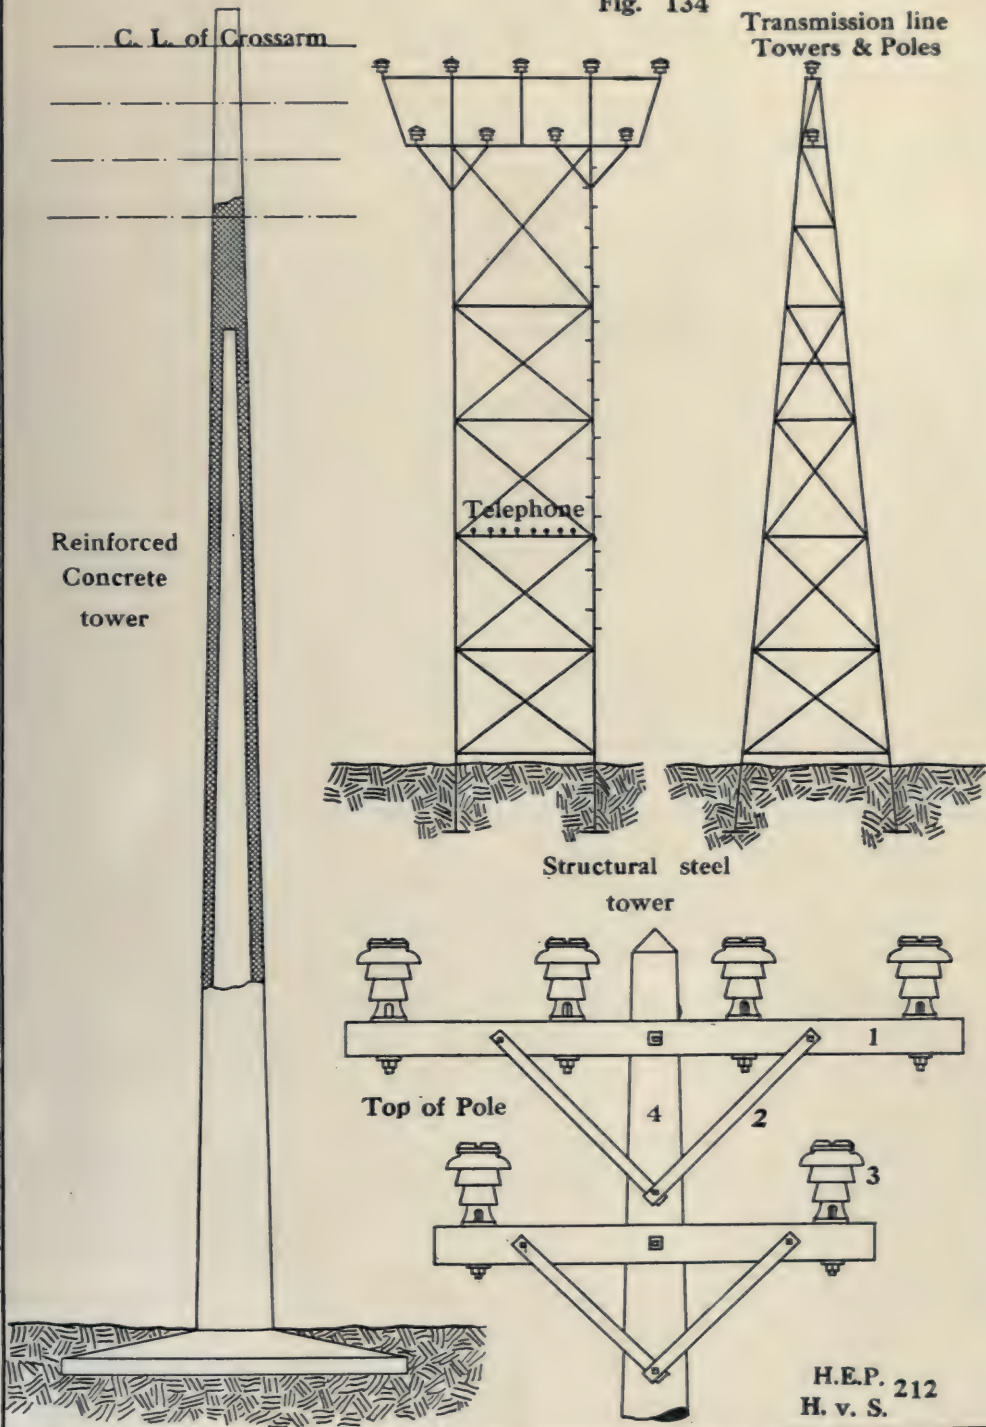

H.E.P. 212  
H. v. S.

top of the insulator, lying in a groove, and is secured to the insulator by a wire binding.

*The substation* is a suitable structure where the line terminates, and contains the required switchboard, the reorganizing and transforming equipment.

*The entry* of the line conductors into the substation must be carefully planned. It is generally effected by passing the conductors through insulator disks set into circular openings, of 12 inches or larger diameter, in the wall of the substation building, with some shelter over the point of entry to protect the conductors at the entry from rain and snow.

This closes the treatment of the electrical equipment of a hydro-electric plant, which has been necessarily very brief, as its detail discussion would assume the proportions of a separate volume.


Figs. 136 to 140 give some general views of the partial installation of electrical equipment of the hydro-electric plant at Sault Ste. Marie, Mich.; the output capacity is about 32,000 kilowatts in 80 units of 400 kilowatts. Both continuous and alternating currents are being generated; the speed of all direct-connected generators is 180 revolutions per minute. This plant was designed by the author and constructed under his charge as chief engineer.

Fig. 136 shows the sectional armature of a 400-kilowatt 3-phase 30-cycle alternator, and Fig. 137 the revolving field of the same machine.


Fig. 138 presents a fine modern specimen of a continuous-current 400-kilowatt dynamo coupled to the turbine shaft, and Figs. 139 and 140 give a general view of the partial generator installation. In Fig. 139 the first three machines are D. C. dynamos, the others are alternators; the switchboard panels are on the left, which was a temporary arrangement, as they were finally placed along the wall on the right upon elevated platforms; in the foreground of Fig. 140 stands a rotary converter.

ARTICLE 102. *Auxiliary Power Plant*.—A very good and learned friend of the author remarked once that he could always find a hydro-electric plant by looking for a smoke-stack near a river, and this is as it generally should be if the development is a complete utilization of the opportunity. It is only exceptionally that the net earning capacity of a hydro-electric plant cannot be materially enhanced by the addition of a supplementary plant; this indeed is only the case when nature has provided a well-balanced ratio of power functions by furnishing a con-

Fig. 135

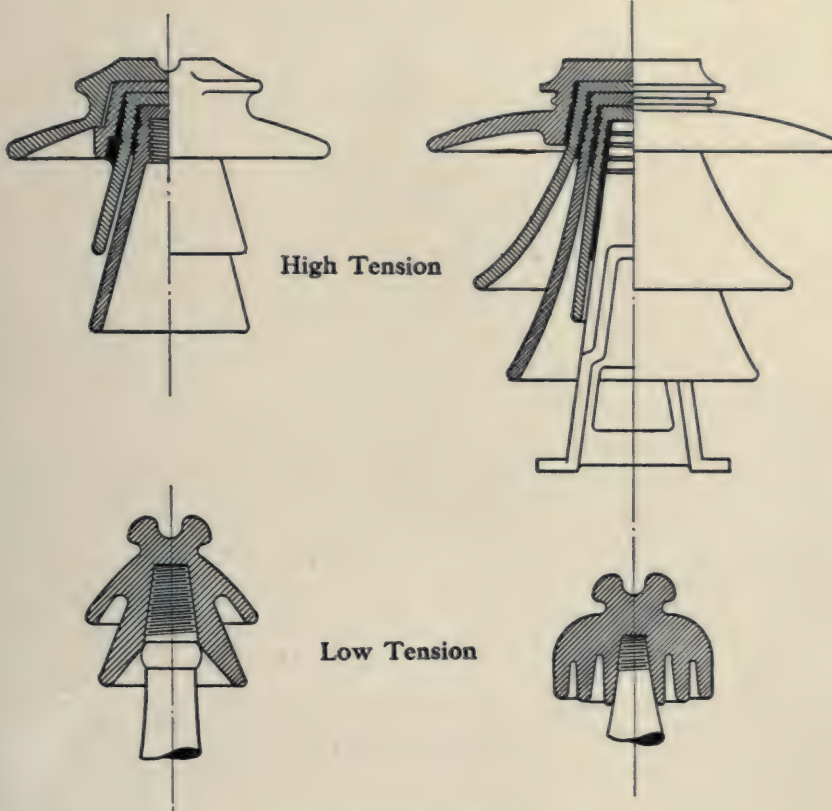

Insulators & Pins

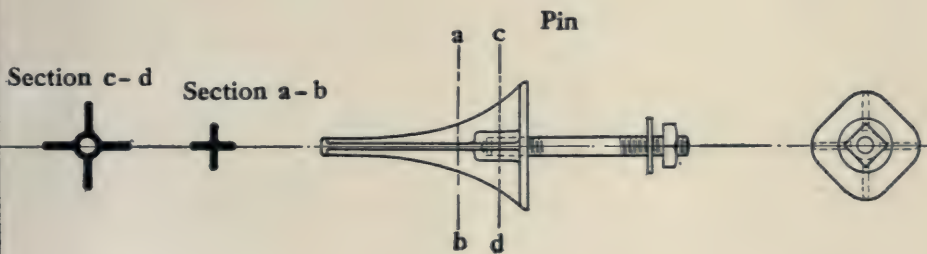



H.E.P. 213  
H. v. S.





stant volume of flow and non-fluctuating head, or by supplying the means to maintain such an equilibrium in the shape of sufficient reservoir capacity. It is precisely the degree of deficiency of the natural supply, or of facilities to accomplish this, which represents the utility of the auxiliary plant, provided always that a demand for the current exists.

It is not the intention to go into any of the details of this topic here, as to the character and the make-up of the auxiliary power plant, whether it should be a plant of steam boilers and engine or steam turbine, or whether oil or gas engine, this forming a topic of operation rather than equipment. Here it must suffice to remind the investigator that the design and estimate of a hydro-electric plant is generally incomplete without taking into consideration this feature of an auxiliary power plant. Therefore the power station should be located and designed with this probable future requirement in view. The capacity of the auxiliary should be *prima facie* of at least one generator unit, and in this respect may influence the determination of the unit question. The auxiliary plant will be rarely called for until the hydro-electric plant has been in operation some years, but in estimating upon the whole project and deducing the net earning capacity of the proposed enterprise this factor must be included as an item of investment, of maintenance and depreciation charge, and of operating cost.

*The storage battery or accumulator* should also be considered as an auxiliary power plant factor. It consists of two inert metal plates, or of metallic oxides, which are placed in glass, earthen-ware, or wooden receptacles holding an electrolyte, which is a compound liquid separable into its constituent *ions* by the passage of electric currents through it. A storage battery is a collection of such *elements* chargeable by continuous current, which produces decomposition of the inert electrolyte between plates, whereby *cathions*, electro-positive radicals, are deposited on the plate which is connected with the negative pole of the charging generator, and *anions*, the electro-negative radicals, on the plate which is connected to the positive pole of the charging source. When the terminals of such a storage battery which is charged are connected outside of the electrolyte, an electric current is set up, flowing from the plate on which the positive radicals are deposited to that of the negative radicals, which is in direction opposite to that of the charging current. It may be noted here that it is erroneous to speak of the storing of the electric current, since the charging current is simply the means of and initiates

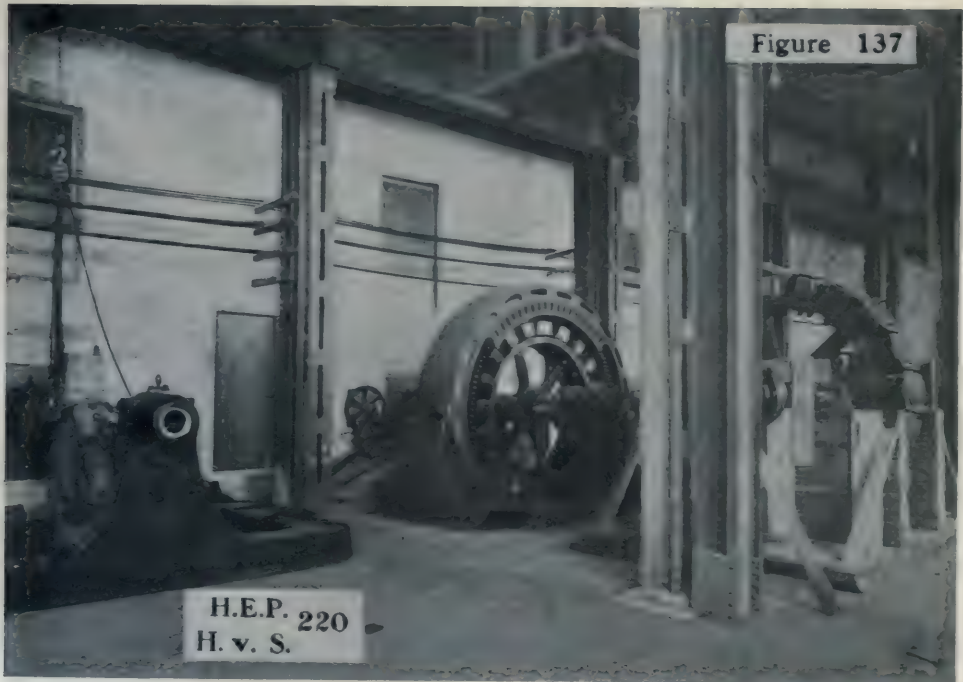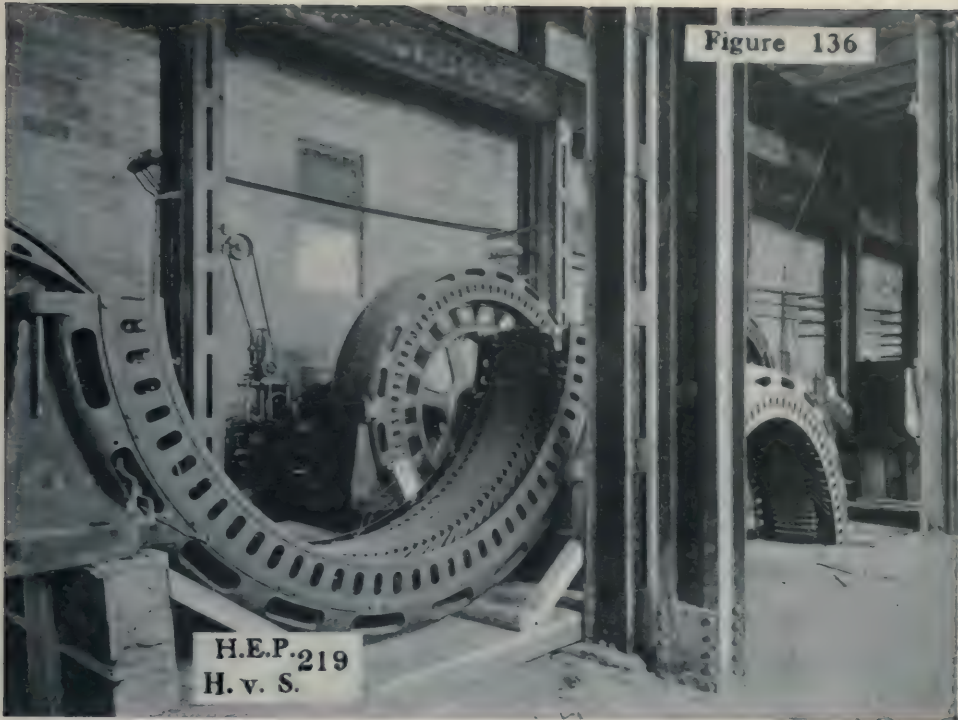



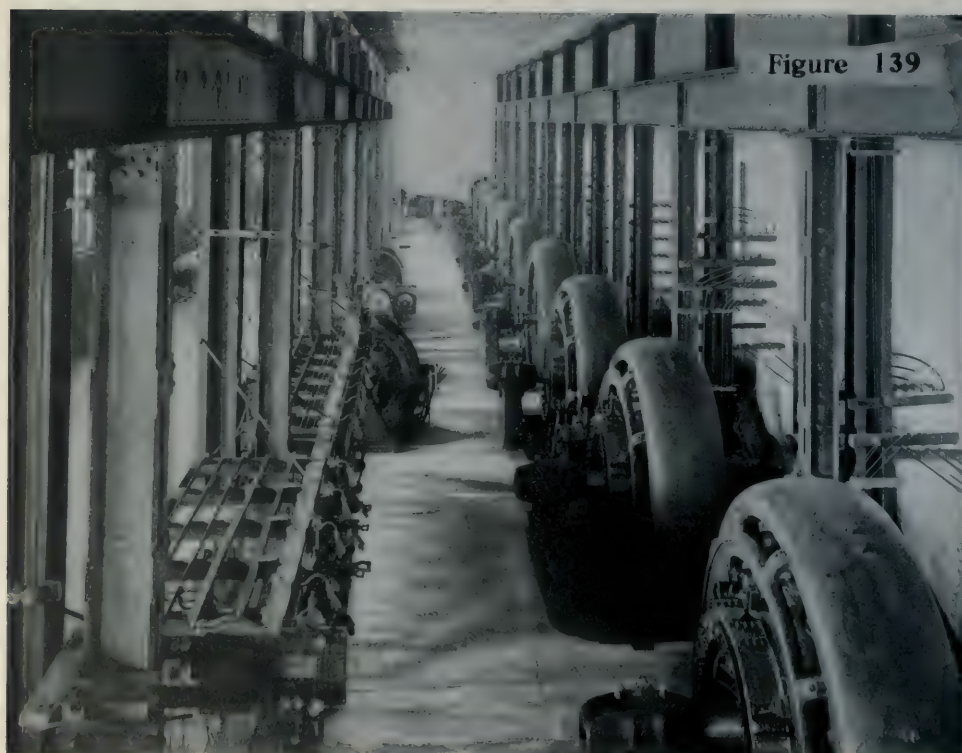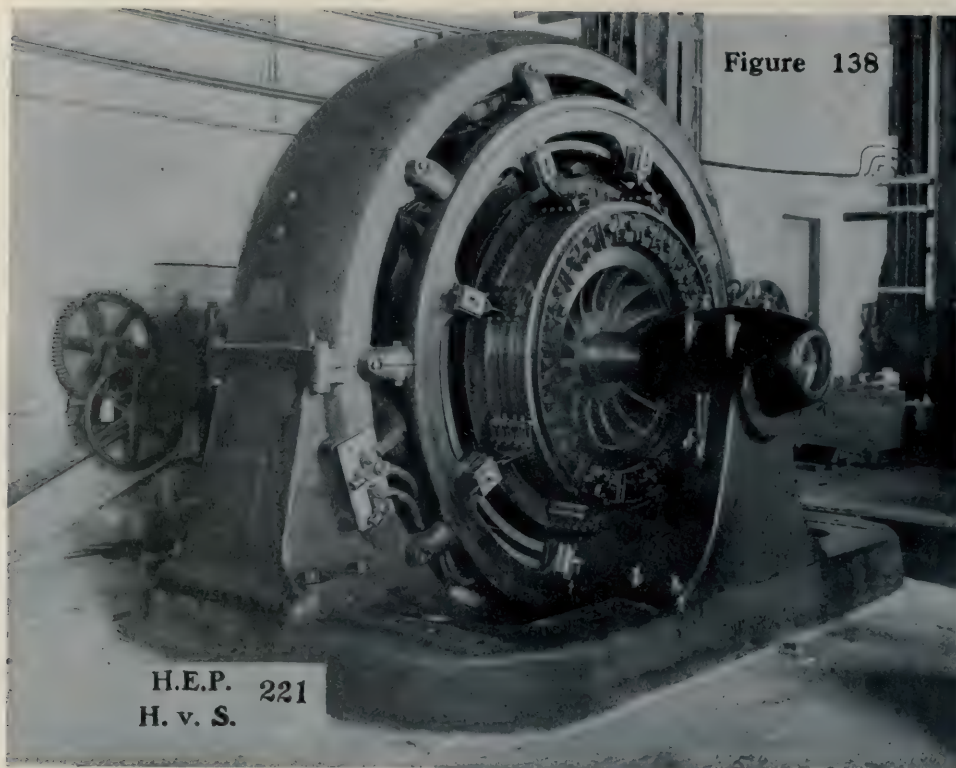







the setting up of the battery current caused by the decomposition of the electrolyte, as above briefly outlined. Storage battery elements ordinarily represent electro-motive force of from  $2\frac{1}{2}$  volts up, but their range is very limited. They may be charged by the surplus output of the hydro-electric plant and discharged to add to the generating plant output in supplying additional current to carry the maximum, *the peak*, loads, and in small installations, when night water storage is necessary during low-flow seasons to accumulate the necessary day-load water supply, accumulators of this type can frequently be utilized to take care of the part night current loads made up of lighting business. Storage plants are also used for regulation purposes, and may then be located at the generating plant or along the transmission line; when they are to carry part loads they are preferably placed at the substation.



## CHAPTER X

### CONSTRUCTING THE PLANT

THE burden of all that has gone before is encompassed in the topic of this chapter, the realization of the development, and it does not seem essential to the treatment of the subject of hydro-electric practice to go very far either into the generalities or the details of this topic, which for hydro-electric plants does not necessarily present features which may not be found in the construction of other works. However, something, the author feels, should be said of the preparations for this final step, the construction, and of some features which are perhaps peculiar to this particular class of structures.

ARTICLE 103. *Plans*.—The proper plans for a hydro-electric plant are perhaps much more complex than those of any other single engineering undertaking, as they cover the wide range represented by hydraulics, hydrostatics, structures of timber, earth, rock, masonry, concrete, reinforced concrete, steel, hydrodynamics, mechanics, and electrical theories and practice; and they must necessarily be elaborate in details based upon calculations of functions, factors, dimensions, sections, etc., pertaining to all these various branches. Every pertinent detail should be designed to a sufficiently large scale readily to detect errors and, wherever practicable, algebraic calculations should be checked diagrammatically.

All calculations should be made in a computation book devoted to that particular project, and in a clear and precise manner, preferably in ink, each separate calculation of importance should be given a separate page, and when this book is completed with a comprehensive index it will prove a great labor and trouble saver in the future checking and even during the construction progress. All sheets containing plans should be of uniform size; dimensions should be given in figures and identified by dimension lines; the lettering should be plain; the author uses stamping machines for this purpose wherever practicable. Every structural feature should be shown in location, plan, longitudinal and transverse sections, followed by each important detail, and these latter should be numbered consecutively throughout the entire set of plans.

Originals should be inked before any of them are traced, which will obviate errors caused by the misinterpretation of pencil designs on the part of the tracer.

ARTICLE 104.—*Estimates* should never be made until the designs are completed and checked, and their original form should take the shape of a comprehensive detail tabulation, giving title of structure, number of detail and sheet, dimensions, quantities, and unit price of cost of material and of operation. The delivery cost of the material must be fully covered, as well as the insurance of construction plant, material, and of the personnel employed. A net profit of at least 15 per cent. should be added, and finally ten per cent. must be allowed for engineering and control.

Estimates should be analytical, as, for instance,

*Concrete of 1 : 2 : 4 mixture:*

1½ bbl. Portland cement, deld., @ 2.25 per bbl. ....	\$3.38
½ cub. yd. sand, deld., @ 1.00 per cub. yd. ....	0.50
1 cub. yd. broken stone, deld., @ 0.75. ....	0.75
Mixing by machine .....	0.30
Conveying to site by barrows	
Placing concrete, monolithic, or	
Placing concrete in forms, at respective price	
Timber forms, used three times, cost of lumber deld., \$30.00 per 1000 ft. b. m. per cub. yd.	
Removing forms per cub. yd., according to dimensions of structure	
Finishing, if outside wall floor or facing.	

Every item should be treated this way in estimating its cost. And finally the estimate should be concluded by a summing up of all the different material required and grouped in accordance with proper classifications as to its character and cost.

ARTICLE 105. *Specifications*.—The practice in this respect is so chaotically diversified that it may almost be called an individual business. The author believes this subject should be approached as far as practicable from the view-point of the constructor, with a full realization of his position, if he is seriously inclined to make a proper tender. The principal purpose, it seems, therefore, is to convey clearly the ideas and intentions of the designer of the plant. The structures of a hydro-electric plant differ considerably from those of like general character for other purposes. For instance, a diversion canal appears to many constructors not at all different from any other kind of water way, merely to pass the water, while it is, or should be, designed in accordance with definite scientific principles, and must be constructed in strict conformity to these in order



that the desired results be fully realized. So it is with the power station, which appears to be simply an ordinary kind of building, while in fact it is one of very peculiar and important details not met with in other building structures of even much heavier masonry sections. Earth embankments seem so much like those so common in railroad construction that it is an exceedingly difficult task to create the proper impression of their absolute specific purpose and therefore their entirely different construction. And so on along the line from the first to the last, and for these reasons the specifications for a hydro-electric plant cannot be too specific in clearly conveying their purpose, followed by the explicitly definite detailing of the structural methods by which these results are to be secured.

It is also well to bear in mind, when one prepares specifications, that the main purpose is to get this plant constructed, and to have this done as expeditiously and economically as can be, and have it done well, and that such results can only be hoped to be secured by a complete co-operation between the constructor and the engineer looking after the interests of the owners. It is absolutely useless in this respect, in the author's judgment, to burden the specifications with restrictions of the constructor's freest latitude of utilizing his own experience and ingenuity for the purpose of securing the best, speediest, and most economical realization wherever practicable. Methods so specified, but made applicable or not solely upon the dictum of the engineer, or elastic conditions depending upon the future interpretation or decision of the engineer, are calculated only to inject costly uncertainties into the undertaking,—that is, costly to the owners of the plant, not to the contractor, who is forced by all considerations of self-protection to discount them heavily, as it is not his province to take chances.

Quantities should always be quoted in positive figures; if they are uncertain the specifications should so state, and the probable fluctuations should be provided for upon a fixed and equitable basis of values.

The majority of specifications contain severe penalties for default in completing the works within a specified or agreed-upon time limit; few, however, provide any reward for anticipation of such a limit. Again, it is not to be expected that the enterprise is to be financed by the contractor, who should receive such a percentage of his earnings that they will meet his actual outlay.



These are generalities, nor can the subject be treated in any other manner,—that is, no hard-and-fast form can be defined as adapted to any certain range of conditions.

As to details, the author's meaning is best illustrated by an example.

*Specifications of the Anchoring of a Spillway in Rock Location.*

1. The site of the spillway is shown on Plan 3 and the dimensions are as thereon given.
2. All elevations are referred to Bench mark "D," being the top of an iron bolt 2 inches in diameter, which is set and leaded in the top of a granite boulder on the west side of the river on the north line of the spillway location, as shown on Plan 3, and about 15 feet from the crest of the natural bank; the elevation of this bench is 654.76 ft. above mean tide, New York.
3. So much of this area as can be conveniently coffered against the water at one time is to be entirely freed from all water, and is to be maintained in this condition at all times until the constructions described in this article, "Anchoring the Spillway," are fully completed, inspected, and accepted by the engineer.
4. The methods of coffering and of maintaining the dry condition may be as elected by the contractor.
5. The area is to be cleaned of all vegetable and earthy substances, and all loose rock or such as can be dislodged from the ledge by the ordinary use of a 12-lb. miner's pick, which is to be removed, and the material thus taken up may be disposed of as the contractor elects.
6. Anchor holes of the size and to the depth shown in Detail 22 on Sheet 11 are to be drilled into the rock bed and freed from all loose stone: they are to be spaced as shown in location Plan 3.
7. Anchor bolts of 3-inch round wrought iron 4 feet long are to be set in the anchor holes, the bottom six inches of the bolts being split open by one cut and spread to a diameter of  $3\frac{1}{2}$  inches. Grouting, consisting of one part Portland cement, two parts of sand, and three parts of fine gravel, is to be poured into the hole while the anchor bolt is being held at the bottom and in the centre of it.
8. The anchor bolts, cement, sand, and gravel, and the mixing of the grouting are to conform to the specified material and method as given in the second article of these specifications.

In other words, there is no operation so unimportant but that it deserves to be clearly analyzed and so described in the specifications.

ARTICLE 106.—*Engineering control* of the construction of this kind of a plant cannot be any too thorough; short-sighted economy in this respect may be exceedingly expensive in the end.

All material should be inspected and tested; each operation should be carefully overseen; and, no matter how small the plant, the author has always found it justifiable to keep a daily progress record of each separate construction feature on specially prepared forms, of the time performance and therefore the cost; such a record is as valuable to the contractor as it is to the owner and certainly to the engineer. Nor should the camera be omitted in chronicling progress stages. Such a plant well constructed is a monument to all the parties concerned, and to the engineer who conceives and brings it into activity it should be a source of pride and satisfaction.

If the man who makes two blades of grass grow where formerly was only one is entitled to the plaudits of mankind, how much more is he who harnesses the now wasting energy of falling water!

# GENERAL INDEX

	PAGE		PAGE
Abutment, quantities for, Diagram 12...	66	Canal intake.....	246
Abutment, spillway, described.....	209	Capacity, current, definition.....	336-347
Accumulator (see Storage battery)		Case of reaction turbine.....	292
Air vents in spillways.....	235	Cement, Portland, specifications of.....	139
Alluvials, characteristics of.....	132	Central discharge reaction turbine, descrip- tion of.....	294
Alternate current, definition.....	333	Central discharge reaction turbine, design of, Fig. 113.....	295
Aluminum wire.....	346-358	Channels, curved, slope in.....	242
Aluminum wire, characteristics, Table 33..	359	Channels, open, flow in, theory of.....	236
Ammeters .....	349	Channels, open, slope in, Tables 16-19..	238-239
Ampère, definition of.....	331	Channels, open, velocity in, Tables 20-24..	240-241
Ampère turns, definition of.....	333-338	Charges, fixed, for plants 500-1000 H. P., Diagram 5.....	57
Analysis of current market.....	4	Charges, fixed, for plants 1000-5000 H. P., Diagram 6.....	58
Analysis of hydro-electric project.....	1	Charges, fixed, for plants 5000-10,000 H. P., Diagram 7.....	59
Apron of solid spillway, form of.....	186	Choking coil, definition.....	350
Arc lights, service.....	1	Circular mil measurement of aluminum wire, Table 33.....	359
Armature, dynamo, description.....	340-342	Circular mil measurement of copper wire, Table 31.....	340
Armature winding, description.....	340-342	Classification of turbines.....	285
Auxiliary power, definition.....	42	Clay, characteristics of.....	133
Auxiliary power plant.....	364	Clay for earth dam.....	226
Auxiliary power, value of.....	44	Coefficient of perimeter roughness.....	103-237
		Coffering, definition of.....	135
Backswell above dam, analyzed.....	149	Coffering, description of.....	143
Backswell above dam, definition of.....	149	Coffer structures, quantities for, Table 8...	144
Backswell slope, Diagrams 20-25.....	152-156	Collector (see Commutator)	
Backswell slope, formula for.....	149	Commutator, description of.....	336-341
Base benches (survey), Fig. 1.....	92	Compound winding of field magnets.....	338
Bearing piles, capacity.....	138	Concrete, block, definition of.....	140
Bearing piles, description of.....	138	Concrete, characteristics of, Table 4.....	140
Bear-traps, described.....	198	Concretè, cost of, Diagram 11.....	65
Benches, base, for survey, Fig. 1.....	92	Concrete, cyclopean, definition of.....	140
Block concrete, definition of.....	140	Concrete, monolithic, definition of.....	140
Boom, floating.....	230	Concrete, reinforced, definition of.....	140
Booster, definition.....	350	Concrete-steel beams, constants of, Table 6.	141
Borings, Figs. 7 and 8.....	99-100	Concrete-steel beams, designs, Table 7.....	141
Brackets, supporting, for survey, Fig. 1....	92	Concrete-steel bulkhead.....	226
Breakwater, description of.....	142		
Bulkheads, concrete steel.....	226		
Bulkheads, reservoir, quantities, Diagram 15	72		
B. & S. (Brown & Sharpe) gauge of wire, Table 31.....	340		
Canal, designs of bed and sides.....	244		
Canal headgates.....	246		



	PAGE		PAGE
Concrete-steel dam, quantities for, Diagram 10 .....	64	Cost of transmission line.....	70
Concrete-steel, definition and description of .....	139, 140	Cribs, log, description of.....	136
Concrete-steel piles, description of.....	138	Cribs, timber, description of.....	137
Concrete-steel pipe, cost of.....	67	Cross-arms, transmission line.....	361
Concrete-steel retaining walls, described....	214	Crushing of spillway, theory of.....	170
Congressional act for power project.....	47	Current, alternate.....	333
Constants for concrete-steel beams, Table 6.	141	Current alternations, definition of.....	333
Constants of flow over flat-crested weirs, Diagram 2.....	39	Current capacity.....	336-347
Constants of flow in open channels, Tables 16, 24.....	238, 241	Current, continuous.....	336
Constants of flow through overflow sluices..	195	Current frequencies, definition of.....	335
Constants of flow in pipes, Tables 27-29.....	250, 251	Current to be generated, determined.....	350
Constants of flow through underflow sluices.	195	Current impedance.....	336
Constants for gravity spillway sections, Tables 10-14.....	191-194	Current inductance.....	335
Constants of impulse wheel output, Diagram 39.....	323	Current market, analysis of.....	4
Constants of reaction turbine output, Diagram 38.....	319	Current market, canvass for.....	5
Constants for normal solid spillway sections, Table 10.....	185	Current, monophasic.....	331
Constructing the plant.....	90	Current phase.....	335
Constructing the plant, engineering control.	371	Current, polyphase.....	335
Constructing the plant, estimates.....	369	Current rates, H. P. and K. W., Diagram 8.	60
Constructing the plant, plans.....	368	Current reactance.....	336
Constructing the plant, specifications.....	369	Current reaction.....	335
Continuous current, definition.....	336	Current regulation.....	348
Continuous current dynamos.....	337	Current reorganization.....	342
Continuous current transmission.....	346	Current, self-induction of.....	335
Control of Government over rivers.....	47	Current service, industrial.....	2
Control of rivers by War Dept., Table 3....	50	Current service, lighting.....	1
Control of rivers by States.....	53	Current service, special.....	2
Copper wire, characteristics of, Table 31....	340	Current service, traction.....	4
Copper wire, resistance of, Table 31.....	340	Current, single-phase.....	335
Copper wire, weight of, Table 31.....	340	Current transformation.....	343
Core wall, description of.....	139	Current transmission.....	345
Correctors (see Lightning arresters)		Current, three-phase.....	335
Cost, comparative, of timber and concrete spillways, Diagram 30.....	211	Current, two-phase.....	335
Cost of concrete, Diagram 11.....	65	Current, wattless.....	336
Cost of dam.....	61	Curtain, steel, description of.....	139-146
Cost of development.....	61	Curtain, timber, description of.....	139-146
Cost of diversion works.....	67	Curved channels, slope in.....	242
Cost of pipe, concrete steel.....	67	Cut-off wall, description of.....	139
Cost of pipe, steel plate.....	67	Cut-off wall, quantities for, Table 9.....	147
Cost of pipe, wood stave.....	67	Cyclopean concrete, definition of.....	140
Cost of power equipment.....	70	Cylinder gate of turbine.....	289
Cost of substation.....	70		
Cost of transformers.....	70	Dam, concrete-steel.....	64
		Dam, cost.....	61
		Dam, description, general.....	131
		Dam, earth and rockfill.....	222
		Dam, foundation, detail description....	144-147
		Dam foundation, functions of.....	131
		Dam, height of, analyzed.....	149
		Dam, hydraulic-fill.....	226
		Dam, length analyzed.....	149
		Dam, masonry, dimensions, Diagram 9....	63

	PAGE		PAGE
Dam, masonry, quantities, Diagram 9.....	63	Development programme, distant.....	117
Dam, reservoir, described.....	221	Development programme, scope.....	129
Dam and spillway appurtenances.....	227	Development programme, short diversion... 117	
Dam, superstructure of.....	148	Dike, description of.....	135
Design of canal bed and sides.....	244	Dike, sheet pile, description of.....	142
Design of central discharge turbine, Fig. 113	295	Dike, steel pile, description of.....	142
Design for foundation, Fig. 18.....	145	Dimensions for concrete-steel beams, Table 7	141
Design for foundations.....	144	Dimensions of dams, masonry, Diagram 9..	63
Design of gravity spillway, Tables 11-14	191-194	Dimensions of generators, Diagram 40.....	357
Design of gravity spillway, characteristics,		Dimensions of gravity spillways, Table 12..	192
Table 14.....	194	Dimensions of horizontal turbines, cased,	
Design of horizontal turbines, four, paired		Diagram 37.....	317
and drowned, Fig. 119.....	312	Dimensions of horizontal turbines, drowned,	
Design of horizontal turbines, paired and		Diagram 35.....	307
cased, Figs. 120, 121.....	313, 315	Dimensions of single horizontal turbine,	
Design of horizontal turbines, paired and		drowned, Diagram 36.....	311
drowned, Fig. 117.....	306	Dimensions of solid spillways, Table 10....	185
Design of horizontal turbines, three paired		Dimensions of turbine draft tubes.....	319
and drowned, Fig. 118.....	309	Dimensions of turbine guide-wheel openings	319
Design of impulse wheel, Fig. 114.....	297	Dimensions of turbine runners, theory....	318
Design of power house for fluctuating head,		Dimensions of turbine runners vent area... 318	
Fig. 87.....	263	Direct development programme.....	116
Design of power-house foundation.....	254	Discharge, central reaction turbine, descrip-	
Design of power house for high head, Fig.		tion of.....	294
89.....	267	Discharge curve of stream.....	103
Design of power house for low head, Figs.		Discharge curve of stream, Diagram 19....	106
84-86-88.....	259-262, 265	Diversion programme, distant.....	117
Design of power house for medium head,		Diversion programme, short.....	117
Fig. 89.....	267	Diversion works.....	235
Design of power house, submerged.....	266	Diversion works, cost of.....	67
Design of power-house substructure.....	255	Draft tube, turbine, dimensions.....	319
Design of power-house superstructure.....	256	Draft tube, turbine, theory of.....	296
Design of reaction turbine, Figs. 109, 110.		Drainage area, characteristics.....	111
	291, 293	Drainage area, definition.....	9
Design of reaction turbine, theory.....	318	Drainage area, geology of.....	27
Design of sluice.....	201	Drainage areas of rivers, Table 1.....	10
Design for solid spillway apron.....	186	Drainage areas, topography of.....	26
Design for solid spillway, characteristics,		Dynamic energy, definition.....	276-277
Table 107.....	185	Dynamo armatures.....	340
Design for solid spillway crest.....	185	Dynamo commutators, collectors.....	341
Design for solid spillway, practical.....	180	Dynamo, continuous current.....	337
Design for solid spillway, theoretical.....	176	Dynamo excitation.....	338-341
Design for solid spillway toe.....	186	Dynamo field.....	341
Design of stop-log section, theory.....	201	Dynamo parts, description.....	337
Design of timber spillway, analysis of....	206	Dynamo poles, definition.....	337
Design of vertical turbines, paired and		Dynamo winding.....	338-340
drowned, Fig. 115.....	302		
Design of vertical turbines, paired and		Earth embankments, quantities, Diagram 14	71
cased, Fig. 116.....	305	Earth and rockfill dams.....	222
Designing and constructing the plant.....	90	Earth and rockfill excavation from canal... 243	
Development cost.....	61-74	Efficiencies, maximum, of impulse wheel, out-	
Development programme, direct.....	116	put, Diagram 39.....	323



	PAGE		PAGE
Efficiencies, maximum, of impulse wheel, theory .....	320	Flow deduced from precipitation and evaporation .....	108
Efficiencies, maximum, output constants of all turbines.....	322	Flow deductions.....	36
Efficiencies, maximum, of reaction turbine output, Diagram 38.....	319	Flow, definition of.....	8
Efficiencies of turbines, theory of.....	298	Flow, determination, Ex.....	109
Electric equipment.....	330	Flow over flat-crested weirs, Diagram 2....	39
Electric generating plant, character of....	350	Flow, flood, determination of.....	159
Electric and water power, Diagram 3.....	43	Flow, low monthly, of rivers, Table 1.....	10
Electro-motive force.....	330-331	Flow measurements.....	37
Electro-motive force, magnitude of.....	333	Flow measurements by weir, Fig. 11.....	107
Elevations (survey).....	93	Flow measurements, rod to mean velocity, Diagram 18.....	105
Embankments, reservoir, cost of.....	68	Flow measurements, surface to mean velocity, Diagram 17.....	104
Embankments, reservoir, quantities, Diagram 14.....	71	Flow in open channels, constants, Tables 16-24 .....	238-241
Energy, dynamic, definition of.....	276	Flow in open channels, theory.....	236
Energy, hydro-dynamic, definition of.....	276	Flow through overflow sluice, theory of....	195
Energy, mechanical, defined.....	276	Flow in pipes, constants, Tables 25-29. ....	249-251
Energy of water.....	276	Flow in pipes, discharge volume, Table 26..	249
Engineering control of construction.....	371	Flow in pipes, theory.....	249
Equipment, electric.....	330	Flow in pipes, velocity of, Tables 27-29 ....	250-251
Equipment, hydraulic, theory.....	276	Flow, power, definition.....	41
Equipment, power.....	276	Flow from reservoirs, Diagram 4.....	45
Equipment, power, general cost of.....	70	Flow, stream, deductions.....	36
Equipment of transmission plant.....	358	Flow, stream, determination.....	30
Equipment, turbine, determination of.....	322	Flow through turbines, definition.....	287
Estimates of plant.....	369	Flow through turbines, theory of.....	278
Evaporation, definition.....	9	Flumes, diversion.....	246
Evaporation and precipitation, flow deduced from .....	108	Flux, magnetic, density.....	331
Evaporation records.....	34-109	Forebay .....	246
Examinations of maps.....	90	Forms, concrete, definition.....	140
Excavation of earth and rock from canals..	242-243	Foundation floor, description of.....	148
Excavation quantity for canal prisms.....	243	Foundation of power house.....	254
Excitation of dynamos, definition.....	338-341	Foundations, dam, functions of.....	131
Fall, available.....	40	Foundations, design.....	144-147
Feasibility of hydro-electric project.....	47	Foundations, quantities for, Diagram 12... ..	66
Field, dynamo, description.....	341	Frequencies of current.....	335
Fishladders, design of.....	231	Galleries through spillways.....	235
Fixed charges of plants, 500-1000 H. P., Diagram 5.....	57	Gate, cylinder, of turbine.....	289
Fixed charges of plants, 1000-5000 H. P., Diagram 6.....	58	Gate, register, of turbine.....	289
Fixed charges of plants, 5000-10,000 H. P., Diagram 7.....	59	Gates, described.....	198
Flashboards, design of.....	231	Gates, operation.....	230
Floats, surface, subsurface, and rod.....	102	Gates, reaction turbines.....	289
Flood flow, determination of.....	159	Gate valve.....	252
Flora and culture of drainage area.....	28	Gauge, B. & S. (Brown & Sharpe), of wire, Table 31.....	340
		Gaugings of stream, Figs. 9 and 10....	100-102
		Generator, dimensions of, Diagram 40.....	357
		Generator, how driven, determined.....	354
		Generator (see Dynamo)	



	PAGE		PAGE
Generator, standard sizes, Table 32.....	355	Hydraulic losses of energy in turbines.....	299
Generator, type of, determined.....	354	Hydraulic radius, definition.....	237
Generator, units, determined.....	354	Hydraulic radius of pipes, Table 25.....	249
Geology of drainage area.....	27	Hydraulic relief valves.....	330
Gneiss, characteristics of.....	131	Hydro-dynamic energy, definition.....	276-277
Governing tangential impulse wheels.....	329	Hydro-electric project, analysis of.....	1
Government control over rivers.....	47, 50		
Governors, turbine.....	326	Ice fenders, design of.....	231
Governors, turbine, Lombard.....	327	Impedance in current, definition.....	236
Governors, turbine, Lombard-Replogle.....	328	Impulse, definition.....	276
Governors, turbine, Sturgess.....	327	Impulse turbine, defined.....	286
Governors, turbine, Woodward.....	328	Impulse turbine, description.....	296
Gradient, hydraulic, definition.....	251	Impulse wheel, design of, Fig. 114.....	297
Granite, characteristics of.....	131	Impulse wheel, governing.....	329
Gravel, characteristics of.....	133	Impulse wheel, maximum efficiency output, Diagram 39.....	323
Gravity spillway, design of, Table 10-14	191-194	Impulse wheel, output, theory.....	320
Gravity spillway, theory of.....	187	Incandescent light service.....	2
Ground detectors.....	349	Inductance, current, definition of.....	335-347
Ground flow diagrams.....	113	Installations, turbine, typical.....	300
Ground storage, definition.....	111	Insulator pins, transmission line.....	361
Ground water, definition.....	8	Insulators, transmission line.....	361
Guard wires.....	350	Intake to canal.....	246
Guide passages of reaction turbine, described	289	Investment balance, Ex.....	55
Guide passages of reaction turbine, dimen- sions.....	319		
Guide vanes of reaction turbine, described..	289	Kilowatts and horse-power, Diagram 1.....	3
Guide wheel of reaction turbine, described..	289	Kilowatts and horse-power rates, Dia- gram 8.....	60
		Kinetic energy of water.....	276-277
Headgates of canal.....	246		
Height of dam, analyzed.....	149	Lease from War Department.....	48
Horizontal turbines, cased, described.....	310	Length of spillway, analyzed.....	159
Horizontal turbines, cased, dimensions.....	317	Levels (survey).....	93
Horizontal turbines, drowned, described....	304	License from War Department.....	49
Horizontal turbines, drowned, dimensions, Diagram 35.....	307	Lighting, current service.....	1
Horizontal turbines, four, drowned, design, Fig. 119.....	312	Lighting, power for, Diagram 1.....	3
Horizontal turbines, paired and cased, de- sign, Fig. 120.....	313	Lightning arresters.....	349
Horizontal turbines, paired and cased, de- sign, Fig. 121.....	315	Lights, arc.....	1
Horizontal turbines, single drowned, dimen- sions, Diagram 36.....	311	Lights, incandescent.....	2
Horizontal turbines, three drowned, design, Fig. 118.....	309	Limestones, characteristics of.....	132
Horse-power, definition.....	8	Lining of canal bed and sides.....	244
Horse-power, electric.....	8	Loam, characteristics of.....	133
Horse-power and kilowatt, Diagram 1.....	3	Location of canal.....	242
Horse-power and kilowatt rates, Diagram 8.	60	Location of pipe line.....	251
Hydraulic equipment, theory.....	276	Location of power house.....	254
Hydraulic-fill dam.....	226	Log chutes.....	230
Hydraulic gradient, definition.....	251	Log cribs, description of.....	136
		Lombard governor.....	327
		Lombard-Replogle governor.....	328
		Losses of energy in turbines.....	299-300
		Magnet, field, conductor, size of.....	339

	PAGE		PAGE
Magnet, field, section of.....	339	Perimeter of channel, definition.....	236
Magnetic field.....	330	Perimeter of channel, roughness coefficient.	237
Magnetic flux.....	330-331	Permeability of magnets, Table 30.....	339
Magnetic lines.....	331	Phase, current, definition of.....	335
Magneto-dynamic theory.....	330	Phase indicators.....	349
Magneto-electric units.....	331	Phasemeters .....	349
Magnets, permeability of, Table 30.....	339	Phase transformer, definition.....	342
Maps, examination of.....	90	Phototopographic survey, Figs. 3 to 6....	94-97
Market, current, analysis of.....	4	Pile, sheet, dike, description of.....	142
Market, current, canvass.....	5	Pile, steel, dike, description of.....	142
Market for electric current.....	1	Piles, bearing capacity.....	138
Marl, characteristics of.....	133	Piles, bearing, description of.....	138
Mean and rod velocity, Diagram 18.....	105	Piles, concrete, description of.....	138
Mean and surface velocity, Diagram 17....	104	Pilot lamps.....	349
Mechanical energy, defined.....	276	Pins, insulator, for transmission line.....	361
Mechanical losses of energy in turbines.	299-300	Pipe areas, Table 25.....	248
Mixing concrete, description of.....	140	Pipe, concrete-steel, cost of.....	67
Moment of moving water, defined.....	278	Pipe, diversion, location of.....	251
Moment, pressure, retaining walls, Diagrams		Pipe, recommendable size of.....	252
31-33 .....	215-217	Pipe, steel plate, cost of.....	67
Moment, pressure, solid spillways, Diagrams		Pipe, wood stave, cost of.....	67
26-29 .....	165-168	Pipes, discharge, volume of, Table 26.....	248
Monolithic concrete, definition of.....	140	Pipes, flow in, constants for, Tables 25-29..	248-251
Monophase current, definition.....	335-342	Pipes, flow in, theory.....	248
Motor generator, description.....	342	Plans for construction.....	368
Movable weir, described.....	198	Platform, operating.....	230
Mud, characteristics of.....	133	Poles of dynamos, definition.....	337
Needles, described.....	197	Poles for transmission line.....	358
Ohm, definition.....	331	Polyphase current, definition.....	335-342
Open channels, flow in, theory of.....	236	Pondage, definition.....	41
Open channels, slope, Tables 16-19....	238-239	Portland cement, specifications of.....	139
Open channels, velocity, Tables 20-24..	240-241	Potential energy of water.....	276-277
Open spillway, description of.....	194	Power auxiliary, definition.....	42
Orifices, submerged, discharge theory.....	195	Power equipment.....	276
Output of impulse turbine, theory of.....	320	Power flow.....	41
Output of impulse wheel, maximum effi-		Power house, appurtenances.....	264
ciency, Diagram 39.....	323	Power house, equipment, general cost.....	70
Output of maximum efficiency, constants for		Power house for fluctuating head, Fig. 87..	263
all turbines.....	320	Power house, foundation.....	254
Output, power, definition.....	40	Power house, general.....	67
Output of reaction turbine, theory of.....	314	Power house for high head, Fig. 89.....	267
Output of reaction turbines, maximum effi-		Power house, location.....	254
ciency, Diagram 38.....	319	Power house for low head, Figs. 84-86, 88..	259-262, 265
Overflow sluice, described.....	196	Power house for medium head, Fig. 89.....	267
Overflow sluice, discharge, theory of.....	195	Power house, quantities, Diagram 13.....	69
Overturning of spillway, theory of.....	170	Power house, submerged, design.....	266
Paving, description of.....	142	Power house, substructure.....	255
Peat, characteristics of.....	133	Power, lighting, Diagram 1.....	3
Perimeter, coefficient of roughness.....	103	Power opportunity.....	8
		Power output, definition.....	40



	PAGE		PAGE
Power plant, auxiliary.....	364	Reaction turbine, mixed flow, described....	287
Power required to operate turbine gates....	329	Reaction turbine output, theory of.....	314
Power, water and electric, Diagram 3.....	43	Reaction turbine runner, described.....	287
Practicability of hydro-electric project... 47-54		Reconnaissance .....	91
Precipitation, definition.....	8	Records of evaporation.....	33
Precipitation and evaporation, flow deduced from .....	108	Records of precipitation.....	28
Precipitation profiles.....	35	Records of precipitation, Ex.....	31
Precipitation records.....	28	Register gate of turbine.....	289
Presentation of project.....	75	Reinforcing steel, characteristics of, Table 3	144
Pressure moments on retaining walls, Dia- grams 31-33.....	215-217	Report on hydro-electric project, Ex.....	75
Pressure moments in solid spillways, Dia- grams 26-29.....	165-168	Reservoir bulkheads, quantities, Diagram 15	72
Pressure and resistance, theory of.....	160	Reservoir dams, described.....	221
Privileges (see Control, Title)		Reservoir embankments, cost of.....	68
Puddle, definition.....	139	Reservoir, flow from, Diagram 4.....	45
		Reservoir sites.....	115
Quantities for coffer structures, Table 8....	144	Reservoir storage, value of.....	44
Quantities for cut-off walls, Table 9.....	147	Resistance of aluminum wire, Table 33....	350
Quantities for dam abutments, Diagram 12.	66	Resistance of copper wire, Table 31.....	340
Quantities for dam, concrete-steel, Diagram 10 .....	64	Resistance and pressure, theory of.....	160
Quantities for dam, earth embankments, Diagram 14.....	71	Retaining wall, concrete-steel, described... 214	
Quantities for dam foundations, Diagram 12	66	Retaining wall, pressure moments, Diagrams 31-33 .....	215-217
Quantities for dam masonry, Diagram 9....	63	Retaining wall, theory of.....	210
Quantities for dam, reservoir bulkheads, Diagram 15.....	72	Rheostat, described.....	350
Quantities of excavation from canal prisms.	243	Rights (see Control, Title)	
Quantities for gravity spillway, Table 13....	192	Riparian title.....	53
Quantities for power house, Diagram 13....	69	Riprap, description of.....	142
Quantities for timber spillway, Table 15....	208	Rock, characteristics of.....	131
Quicksand, characteristics of.....	133	Rock, drilling.....	242
		Rock and earth excavation from canals.	242-243
Rack, trash, for pipe intakes.....	252	Rock and earth fill dams.....	222
Radius, hydraulic, definition.....	249	Rod floats, stream gauging.....	102
Rates, current, H. P. and K. W., Diagram 8.	60	Rod to mean velocity, Diagram 18.....	105
Reactance, current, definition of.....	336	Rotary convertor, description.....	342
Reaction, current, definition of.....	335	Roughness of perimeter, coefficient....	103-237
Reaction, definition.....	276	Runner of reaction turbine, described....	287
Reaction turbine case.....	292	Runner of reaction turbine, vent areas....	318
Reaction turbine, central discharge, descrip- tion of.....	294	Run-off, monthly, profile.....	35
Reaction turbine, defined.....	286	Run-off, ordinary dry year, Ex.....	114
Reaction turbine, design, Figs. 109, 110... 291, 293		Run-off, storm, definition.....	8
Reaction turbine, design, theory.....	318		
Reaction turbine, gates of.....	289	Safety factor for spillway.....	174
Reaction turbine, guide wheel, described... 289		Safety factor for transmission line.....	360
Reaction turbine, maximum efficiency out- put, Diagram 38.....	319	Sand, characteristics of.....	133
		Sand for earth dam.....	226
		Sand, specifications of.....	139
		Sandstone, characteristics of.....	132
		Self-induction current, definition.....	335
		Series winding of field magnets.....	338
		Service, current, industrial.....	2
		Service, current, lighting.....	1
		Service, current, special.....	2



	PAGE		PAGE
Service, current, traction.....	4	Spillway, solid, practical design.....	180
Sheet pile dike, description of.....	142	Spillway, solid, pressure moments, Diagrams 26-29 .....	165-168
Sheet, steel, description of.....	136	Spillway, solid, theoretical design.....	176
Sheet, timber, description of.....	136	Spillway superstructure.....	148
Short diversion programme.....	117	Spillway, timber and concrete, comparative cost, Diagram 30.....	211
Shunt winding of field magnets.....	338	Spillway, timber, described.....	205
Shutters, described.....	198	Spillway, timber, design, analysis of.....	206
Sienite, characteristics of.....	131	Spillway, timber, quantities for, Table 15..	208
Silt, characteristics of.....	133	Spillway toe, shaping, theory.....	186
Single phase current, definition.....	335	Spillway wells.....	235
Sliding of spillways, theory.....	169	Stand pipes.....	330
Slip rings, dynamo.....	342	State control of rivers.....	53
Slope of backswell above dam.....	149	Static transformers.....	343
Slope of backswell, Diagrams 20-25....	152-156	Steel concrete, definition of.....	140
Slope in curved channels.....	242	Steel concrete beams, constants of, Table 6.	141
Slope in open channels, Tables 16-19....	238-239	Steel concrete beams, Table 7.....	141
Sluice design.....	201	Steel curtain, description of.....	139
Sluice, overflow, described.....	196	Steel pile dike, description of.....	142
Sluice, overflow, theory of discharge through	195	Steel plate pipe, cost of.....	67
Sluice, underflow, design.....	230	Steel, reinforcing, characteristic of, Table 5.	141
Soil, characteristics of.....	133	Steel sheet, description of.....	136
Span, length of transmission.....	359	Stop-logs, described.....	196
Specifications for construction.....	369	Stop-logs, section, theory.....	201
Speed of standard generators, Table 32....	355	Storage battery, described.....	366
Spillway abutments, quantities for, Diagram 12 .....	66	Storage, definition.....	42
Spillway air vents.....	235	Storage, ground, definition.....	111
Spillway apron, shaping, theory.....	186	Storage, ground, depletion.....	112
Spillway, concrete-steel, quantities for, Dia- gram 10.....	64	Storage reservoir, value of.....	44
Spillway crest, shaping, theory.....	185	Storm run-off, definition.....	8
Spillway crushing, theory of.....	170	Stream discharge curve.....	103
Spillway and dam appurtenances.....	227	Stream discharge curve, Ex., Diagram 19..	106
Spillway foundation.....	131, 144, 147	Stream flow, determination of.....	30
Spillway foundation, quantities for, Dia- gram 12.....	66	Stream gaugings, Figs. 9 and 10.....	100-102
Spillway galleries.....	235	Stream gaugings, reductions.....	103
Spillway, gravity, design, characteristics of, Table 14.....	194	Structural types.....	131
Spillway, gravity, design of, Tables 11-14..	191-194	Sturgess governor.....	327
Spillway, gravity type, theory.....	187	Submerged orifice, theory of discharge through .....	227
Spillway, height of.....	149	Submerged power house, design of.....	266
Spillway, length of.....	159	Substation .....	364
Spillway, masonry, quantities for, Dia- gram 9.....	63	Substation, general cost of.....	70
Spillway, open, description of.....	194	Subsurface floats, stream gauging.....	102
Spillway, pressure and resistance, theory of	160	Superstructure of dam, description of....	148
Spillway, safety factor for.....	174	Superstructure of power house.....	255-264
Spillway sliding, theory of.....	169	Surface floats, stream gauging.....	102
Spillway, solid, design characteristics, Table 10 .....	185	Surface to mean velocity, Diagram 17.....	104
		Survey .....	90
		Switchboard .....	348
		Switches .....	349
		Synchronizers (see Phase indicators).....	349

	PAGE		PAGE
Theory of crushing of Spillway.....	170	Transmission line wire, weight, Diagram 16	73
Theory of current transmission.....	345	Transmission plant equipment.....	358
Theory of deducting turbine efficiencies....	298	Trash rack for pipe intake.....	252
Theory of design of reaction turbine.....	318	Trenching for cut-off.....	146
Theory for design of stop-log section.....	201	Triangulation .....	92
Theory for design of timber spillway.....	206	Tripod and target (survey), Fig. 2.....	93
Theory of discharge through overflow sluice.	195	Turbine, central discharge, design of.....	295
Theory of discharge through submerged ori- fices .....	227	Turbine draft tubes, dimensions.....	319
Theory of flow in open channels.....	236	Turbine draft tube, theory of.....	296
Theory of flow in pipes.....	249	Turbine efficiencies, theory of.....	298
Theory of flow through turbines.....	278	Turbine equipment, determination of.....	322
Theory of gravity spillway.....	187	Turbine, flow through, definition of.....	287
Theory of hydraulic equipment.....	276	Turbine, flow through, theory of.....	278
Theory of impulse wheel output.....	320	Turbine gates, power required to operate...	329
Theory of magneto-dynamic energy.....	330	Turbine governor.....	326
Theory of overturning of spillway.....	170	Turbine governor, Lombard.....	327
Theory of pressure and resistance.....	160	Turbine governor, Lombard-Replogle.....	328
Theory of reaction turbine output.....	314	Turbine governor, Sturgess.....	327
Theory of retaining wall design.....	210	Turbine governor, Woodward.....	328
Theory of shaping spillway apron.....	186	Turbine guide-wheel openings, dimensions..	319
Theory of shaping spillway crest.....	185	Turbine, horizontal cased, described.....	310
Theory of shaping spillway toe.....	186	Turbine, horizontal cased, dimensions, Dia- gram 37.....	317
Theory of sliding of spillway.....	169	Turbine, horizontal drowned, described....	304
Theory of solid spillway design.....	176	Turbine, horizontal drowned, dimensions, Diameter 35.....	307
Theory of static transformers.....	344	Turbine, horizontal, four drowned, design, Fig. 119.....	312
Theory of transmission line span length....	360	Turbine, horizontal, paired and cased, de- sign, Figs. 120, 121.....	313, 315
Theory of turbine draft tube effect.....	296	Turbine, horizontal, paired and drowned, de- sign, Fig. 117.....	306
Theory of weir flow measurement.....	107	Turbine, horizontal, single, drowned, dimen- sions, Diagram 36.....	311
Three-phase current, definition.....	335	Turbine, horizontal, three drowned, design, Fig. 118.....	309
Timber and concrete spillways, comparative cost, Diagram 30.....	211	Turbine, impulse.....	286
Timber cribs, description of.....	137	Turbine, impulse, description.....	296
Timber curtain, description of.....	139	Turbine, impulse, design of, Fig. 114.....	297
Timber, definition of terms.....	137	Turbine installations, typical.....	300
Timber sheet, description of.....	136	Turbine, losses of energy in.....	299-300
Timber spillway, description of.....	205	Turbine, reaction.....	286
Timber spillway, design, analysis.....	206	Turbine, reaction, case.....	292
Timber spillway, quantities for, Table 15..	208	Turbine, reaction, central discharge, descrip- tion of.....	294
Title, riparian.....	53	Turbine, reaction, design of, Figs. 109, 110. .....	291, 293
Toe of solid spillway, shape of.....	186	Turbine, reaction, design of, theory.....	318
Topography of drainage area.....	26	Turbine, reaction, gates.....	289
Topography (survey).....	94	Turbine, reaction, guide wheel, described..	289
Traction current service.....	4	Turbine, reaction, maximum efficiency out- put, Diagram 38.....	319
Transformers, cost of.....	70		
Transformers, static.....	343		
Transmission of continuous current.....	346		
Transmission of current.....	345		
Transmission, general cost of.....	70		
Transmission line conductors.....	358		
Transmission line fastenings.....	358		
Transmission line supports.....	358		



	PAGE		PAGE
Turbine, reaction, mixed flow, described....	287	Voltaic electricity.....	330
Turbine, reaction, output, theory of.....	314	Wall, core, description of.....	139
Turbine runner, dimensions.....	318	Wall, cut-off, description of.....	139
Turbine, tangential impulse, maximum efficiency output, Diagram 39.....	323	Wall, cut-off, quantities for, Table 9.....	147
Turbine, vertical, cased, described.....	304	War Department, control of rivers, Table 3..	50
Turbine, vertical, cased, dimensions, Diagram 34.....	303	War Department, lease from.....	48
Turbine, vertical, paired and cased, design, Fig. 116.....	305	War Department, license from.....	49
Turbine, vertical, paired and drowned, design, Fig. 115.....	302	Waste weir in canals.....	246
Turbines, classification of.....	285	Water power and electric power, Diagram 3	43
Two-phase current, definition.....	335	Water-shed, definition.....	9
		Watt, definition of.....	331
Underflow sluice, design of.....	230	Wattless current, definition.....	336
Value of project.....	75	Wattmeters, described.....	349
Valve gate.....	252	Weight of aluminum wire, Table 33.....	359
Valves, described.....	197	Weight of copper wire, Table 31.....	340
Valves, hydraulic relief.....	330	Weight of transmission line wire, Diagram 16 .....	73
Vanes, guide, of reaction turbines.....	289	Weir, flow over flat-crested, Diagram 2.....	39
Velocity in open channels, Tables 20-24, 240-241		Weir, flow measurement, Fig. 11.....	107
Velocity in pipes, Tables 27-29.....	250-251	Weir, movable, described.....	198
Velocity, rod to mean, Diagram 18.....	105	Weir, waste, in canals.....	248
Velocity, surface to mean, Diagram 17.....	104	Wells in spillways.....	235
Vents, air, in spillways.....	235	Wicket gate of reaction turbine.....	289
Vertical turbine cased, described.....	304	Winding of armature, described.....	340
Vertical turbine cased, dimensions, Diagram 34 .....	303	Winding, compound, of field magnets.....	338
Vertical turbine drowned, described.....	301	Winding, series, of field magnets.....	338
Vertical turbine paired and cased, design, Fig. 116.....	305	Winding, shunt, of field magnets.....	338
Vertical turbine paired and drowned, design, Fig. 115.....	302	Wire, aluminum.....	346
Volt, definition of.....	331	Wire, aluminum, characteristics of, Table 33	359
Voltage drop (loss).....	346	Wire, copper, characteristics of, Table 31...	340
Voltage of standard generators, Table 32..	355	Wire formula.....	340
		Wire gauge, B. & S. (Brown & Sharpe), Table 31.....	340
		Wire, transmission line, weight of, Diagram 16 .....	73
		Wood-stave pipe, cost of.....	67
		Woodward governor.....	328















2011.11.11



94

PLEASE DO NOT REMOVE  
CARDS OR SLIPS FROM THIS POCKET

---

UNIVERSITY OF TORONTO LIBRARY

---

TEH  
S

Schon, H. A. E. C. von  
Hydro-electric practice

P&AS



